

V7-USD4

V7 Option Switch Settings: 1 (Pulse/ICT004/MDB)

Supported bill USD 1, 5, 10, 20 4bills.

V7 dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
Reject USD 1	ON											
★ Accept USD 1	OFF											
Reject USD 5		ON										
★ Accept USD 5		OFF										
Reject USD 10			ON									
★ Accept USD 10			OFF									
Reject USD 20				ON								
★ Accept USD 20				OFF								
Reserved					ON							
★ Reserved					OFF							
Reserved						ON						
★ Reserved						OFF						
Harness Disable							ON					
★ Harness Enable							OFF					
Inhibit Active High								ON				
★ Inhibit Active Low								OFF				
★ 1 Pulse / USD 1									OFF	OFF		
2 Pulses / USD 1									ON	OFF		
4 Pulses / USD 1									OFF	ON		
20 Pulses / USD 1									ON	ON		
★ Pulse Speed		50ms LO / 50ms HI								OFF	OFF	
		60ms LO / 300ms HI								ON	OFF	
		30ms LO / 50ms HI								OFF	ON	
		150ms LO / 150ms HI								ON	ON	

◆ Factory configuration has all switches in the OFF position.

★ Manufacture setting

V7-USD4(Pulse/ICT004/MDB)

V7 Interface Settings: 3 (ICT004)

V7 Interface Settings: 3 (Pulse)

INTERFACE	SW1	SW2	SW3	SW4
Reserved	ON			
	OFF			
Pulse Mode		ON	OFF	
MDB Interface		OFF	OFF	
★ ICT004 Interface		OFF	ON	
Reserved		ON	ON	
Reserved				ON
				OFF

★ Manufacture setting

INTERFACE	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal High	ON			
Credit-Pulse Normal Low	OFF			
★ Pulse Mode		ON	OFF	
MDB Interface		OFF	OFF	
ICT004 Interface		OFF	ON	
Reserved		ON	ON	
Reserved				ON
				OFF

★ Manufacture setting

V7 Interface Settings: 3 (MDB)

Currency Assign Data

INTERFACE	SW1	SW2	SW3	SW4
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
Pulse Mode		ON	OFF	
★ MDB Interface		OFF	OFF	
ICT004 Interface		OFF	ON	
Reserved		ON	ON	
Reserved				ON
				OFF

★ Manufacture setting

Interface Bill value	ICT004	Pulse	MDB
BV1	USD 1	USD 1	USD 1
BV2	USD 5	USD 5	Reserved
BV3	USD 10	USD 10	USD 5
BV4	USD 20	USD 20	USD 10
BV5			USD 20

Note: 1.Default setting.

2.Use 2nd and 3rd dip of the internal dip-switch to change different interface protocol.

3.Remove the front cover and the dip-switch in on the CPU board.

(Please refer to "Sw1" setting.)