


Exploded View & Parts List

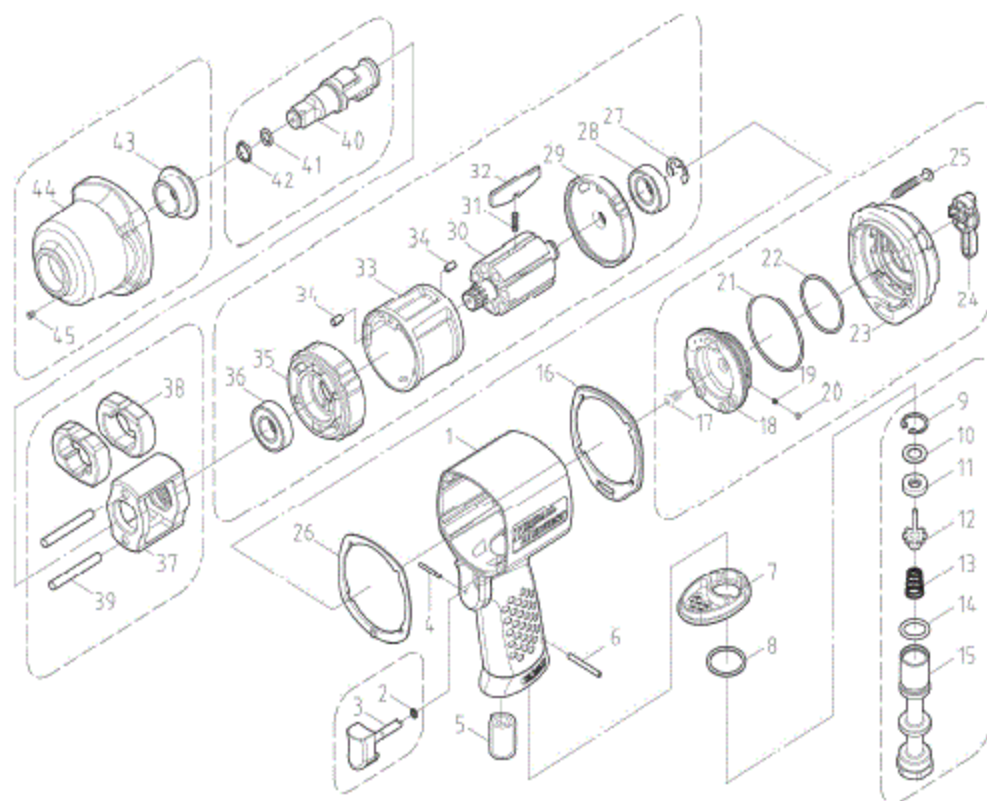

No.	Description	Qty	No.	Description	Qty	No.	Description	Qty
1	Housing	1	16	Packing	1	31	Spring	7
2	O-Ring	1	17	Screw	1	32	Blade	7
3	Trigger	1	18	Reverse Lever	1	33	Cylinder	1
4	Spring Pin	1	19	Spring	1	34	Spring Pin	2
5	Muffler Filter	1	20	Steel Ball	1	35	Front Plate	1
6	Spring Pin	1	21	O-Ring	1	36	Ball Bearing	1
7	Exhaust Deflector	1	22	O-Ring	1	37	Hammer Cage	1
8	Washer	1	23	Cover	1	38	Hammer	2
9	Retaining Ring	1	24	Reverse Lever	1	39	Hammer Pin	2
10	Washer	1	25	Screw	4	40	Anvil	1
11	Oil Seal	1	26	Packing	1	41	O-Ring	1
12	Pin Valve Rod	1	27	E-Ring	1	42	Anvil Collar	1
13	Cone Spring	1	28	Ball Bearing	1	43	Bushing	1
14	O-Ring	1	29	Rear Plate	1	44	Front Casing	1
15	Air Inlet	1	30	Rotor	1	45	Oil Drop	1