



Ref #	Part Number	Description	Qty
1	511-001	Collect Nut	1
2	511-002B	Collect	1
3	514-003-B	Spindle	1
4	514-008	Wooly Muffer	1
5	514-009	Front Cover	1
6	00-2408	Needle Bearing	1
7	514-007	Washer	1
8	00-0407	Screw	1
9	544F-001	Spindle Housing	1
10	216-040	Gasket	1
11	00-2314	Ball Bearing	2
12	514-021	Copper Washer	1
13	00-3109	Snap Ring	1
14	514-002-B	Shaft	1
15	514-005-B	Washer	1
16	514-006	Nut	2
17	514-004-B	Coupling	1
18	516-003	Spacer	1
19	216-015	Idler Gear Housing	1
20	00-3325	Spring Pin	2
21	511-019	Front End Plate	1
22	00-3328	Spring Pin	1
23	511-006	Spacer	1
24	541F-021	Rotor Blade	4
25	541F-020	Rotor	1
26	541F-022	Cylinder	1
27	218F-023	Rear End Plate	1

Ref #	Part Number	Description	Qty.
28	00-2323	Ball Bearing	1
29	00-3505	Snap Ring	1
30	218F-045-C	Rear Gasket	1
31	216-037	Seal Lump	1
32	541F-025	Motor Housing	1
33	00-41121	O-Ring	2
34	218F-026	Bushing	1
35	00-41133	O-Ring	1
36	00-41132	O-Ring	1
37	218F-027	Valve Stem	1
38	218F-029	Spring	1
39	551F-038	Regulator	1
40	00-4102	O-Ring	1
41	00-41134	O-Ring	1
42	551F-030	Valve Plug	1
43	218F-043	Throttle Lever	1
44	541F-038	Muffer	1
45	218F-039	Muffer Tube	1
46	541F-038B	Muffer	1
47	00-4159	O-Ring	1
48	218F-042	Exhaust Deflector	1
49	218F-050	Bushing	1
50	218F-034A	Air Inlet (1/4" BSP)	1
	218F-034C	Air Inlet (1/4" NPT)	1
51	511-007	Spanner	2
52	514-010	Spanner	1