


MODEL UT 8930A Screwdriver

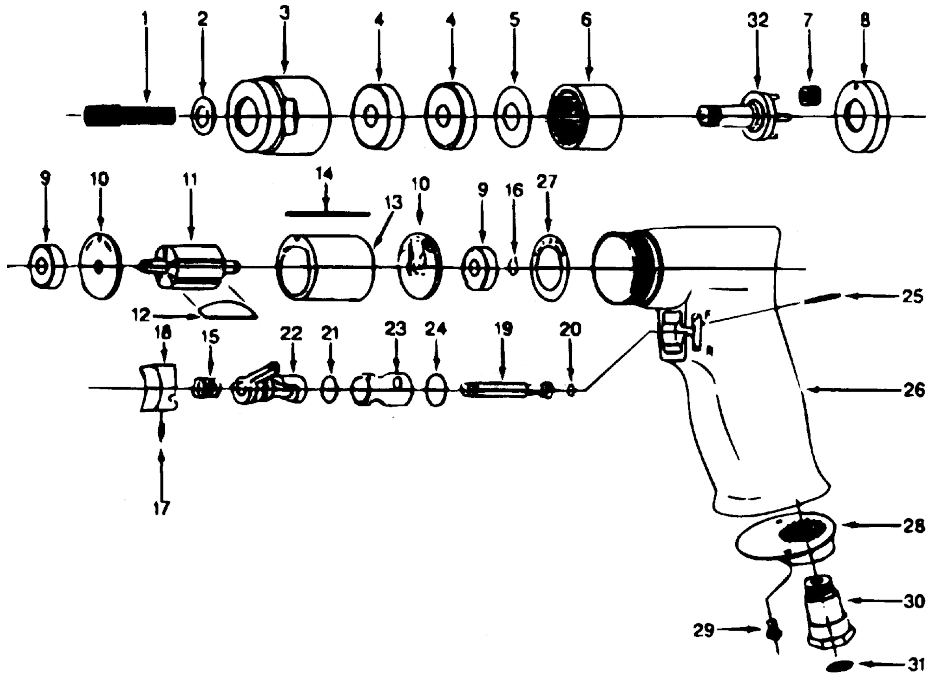

Parts List

Ref. No.	Description	Part No.
1	Quick change chuck	899005
2	Chuck spacer	8730229
3	Clamp nut	8900098
4	Ball bearing (2)	8732081
5	Phenolic washer	8730231
6	Gear housing	8732078
7	Planet gear (3)	8732079
8	Collar	8900101
9	Ball bearing (2)	81010183
10	End plate (2)	8900102
11	Rotor	8900103
12	Rotor blade (5)	8732074
13	Cylinder	8900104
14	Pin	8900105
15	Valve spring	8731925
16	Retaining ring	8729180

Ref. No.	Description	Part No.
17	Set screw	8731928
18	Trigger	8731929
19	Throttle valve	8900106
20	O-Ring	8729591
21	O-Ring	8900107
22	Reverse valve	8900108
23	Reverse valve bushing	8900109
24	O-Ring	8900110
25	Pin	8900111
26	Motor housing	8900112
27	Motor gasket	8900113
28	Exhaust diffuser	8731922
29	Screw (2)	8731921
30	Air inlet	8731920
31	Screen	81005726
32	Planet carrier	8900099