




EXPLODED TOOL PARTS DIAGRAM



PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.

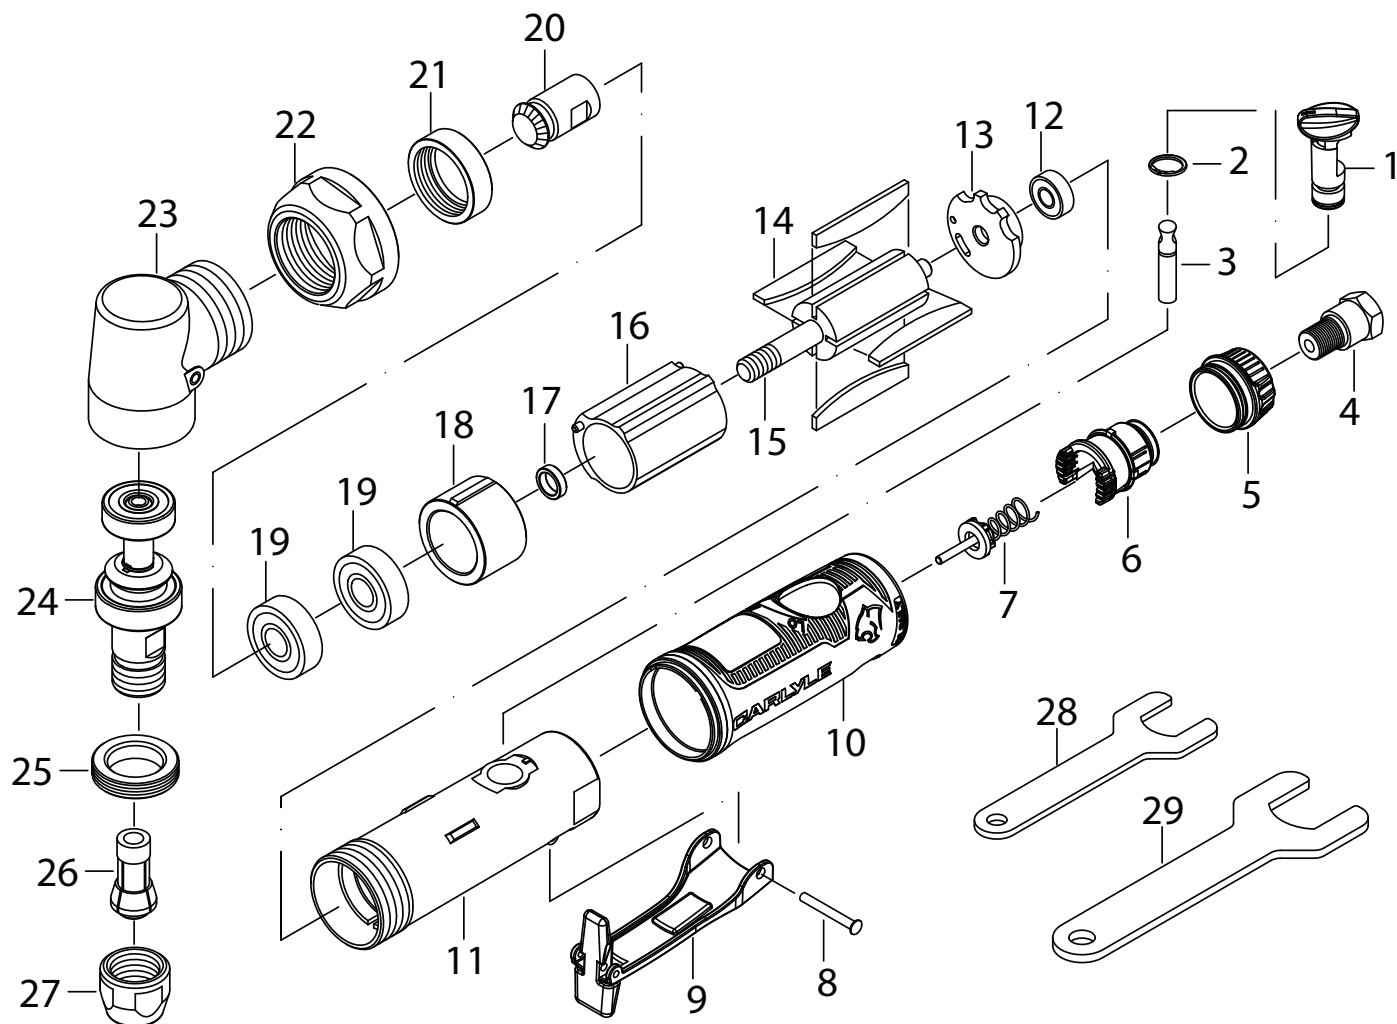

TOOL PARTS LIST

REF#	PART#	DESCRIPTION	QTY
1	RS103001	REGULATOR SET	1
2	RS288304	SNAP RING	1
3	RS103002	VALVE STEM SET	1
4	RS54004	AIR INLET	1
5	RSC0305	EXHAUST SLEEVE SET	1
6	RS103004	CONE MUFFLER	1
7	RS103005	VALVE SET	1
8	RS621011	SPRING PIN	1
9	RS120040	LEVER	1
10	RS260010	PROTECTING RUBBER	1
11	RS710109	HOUSING	1
12	RS30516	BEARING	1
13	RS710113	REAR PLATE	1
14	RS288320	ROTOR BLADE (EACH)	4
15	RS61016	ROTOR	1
16	RS103007	CYLINDER SET	1
17	RSC0317	BEARING SPACER	1
18	RS61019	FRONT PLATE	1
19	RS30524	BEARING (EACH)	2
20	RS288327	BEVEL GEAR	1
21	RS54021	NUT	1
22	RS54022	CLAMP NUT	1
23	RS75501	ANGLE HOUSING SET	1
24	RS75502	SHAFT SET	1
25	RS288338	CLAMP NUT	1
26	RS520129	COLLET	1
27	RS20636	COLLET NUT	1
28	RS31535	STOP SPANNER (14MM)	1
29	RS20639	STOP SPANNER (19MM)	1
NS	RSCPTDGMRA14PWL	PRODUCT WARNING LABEL	1

PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.