


// EXPLODED TOOL PARTS DIAGRAM

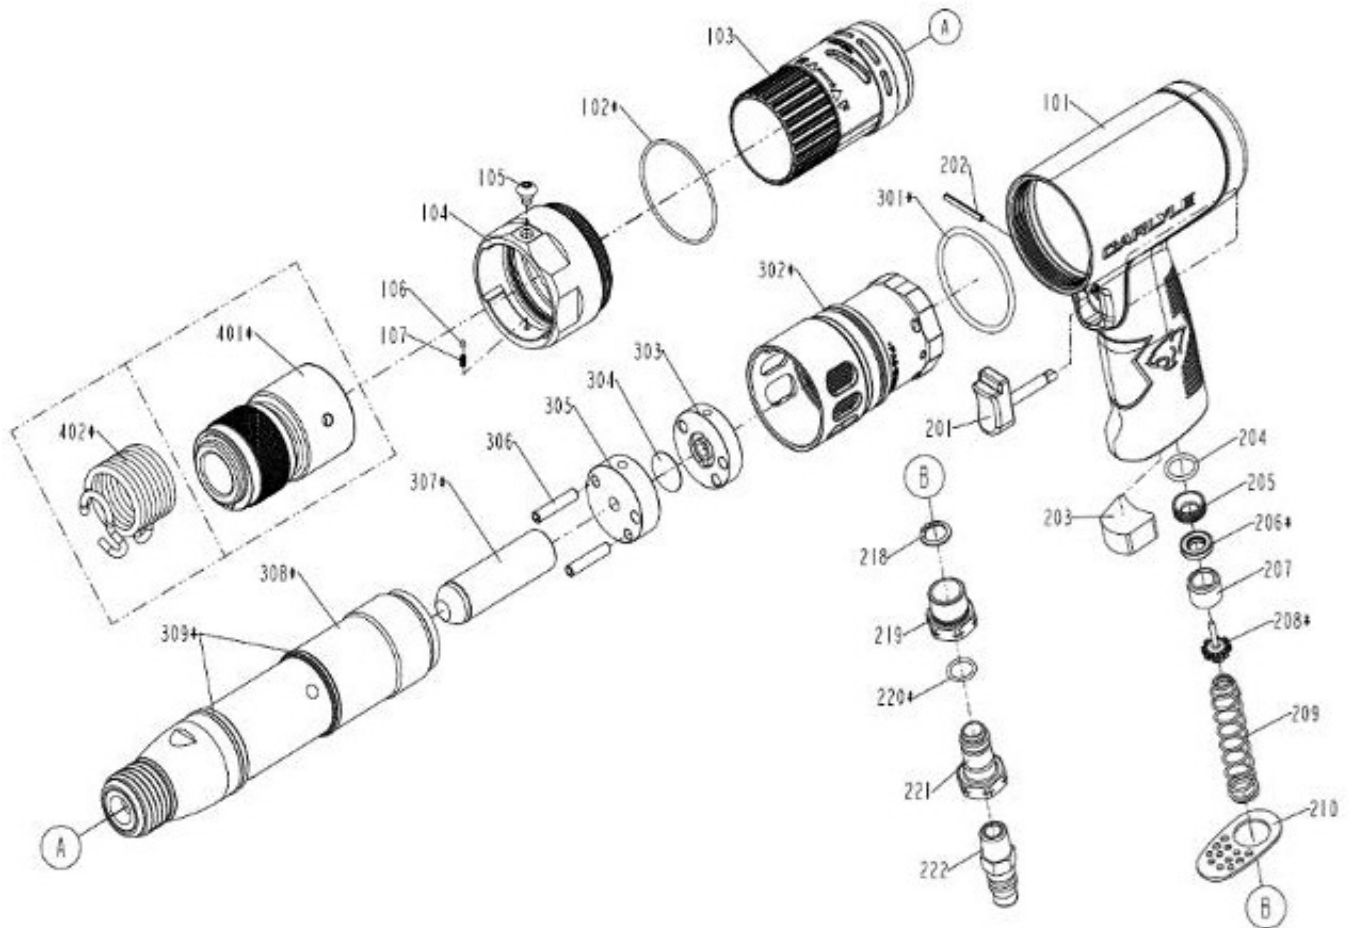

PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.



TOOL PARTS LIST

REF#	PART#	DESCRIPTION	QTY
101	RS1080101A	HOUSING	1
102	RS2638202	O - RING	1
103	RS1080103A	ADJUST AXLE	1
104	RS1719104	FRONT CAP	1
105	RS1719105	REVERSE VALVE BOLT	1
106	RS735313	BALL	1
107	RS2250409	POSITIONING SPRING	1
201	RS1080201	TRIGGER UNIT	1
202	RS1719202	SPRING PIN	1
203	RS1719203	MUFFLER	1
204	RS1080208	O - RING	1
205	RS1735401	INSERT BUSHING	1
206	RS1735403	SEAL	1
207	RS2250427	BUSHING	1
208	RS1735405	TIP VALVE	1
209	RS76640	SPRING	1
210	RS1719214	DEFLECTOR	1
218	RS1719204	SNAP RING	1
219	RS1719206	AIR INLET	1
220	RS1719205	O - RING	1
221	RS1719207	AIR INLET	1
301	RS1719301	O - RING	1
302	RS1080302A	REAR CUSHION	1
303	RS1080303	VALVE UNIT	1
304	RS1080304	VALVE SEAL	1
305	RS1080305	VALVE UNIT	1
306	RS1080306	SPRING PIN (EACH)	2
307	RS1719304	MAIN PISTON	1
308	RS1719308	CYLINDER	1
309	RS1719309	O - RING (EACH)	2
401	RS1080401A	QUICK CHANGE RETAINER	1
402	RS1080401B	RETAINER SPRING	1
NS	RSCPTVSHDAHPWL	PRODUCT WARNING LABEL	1

PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.