

Models:**57500 – 5,000 RPM****57501 – Versatility Kit****57502 – 7,500 RPM****57503 – 5,000 RPM****57504 – 7,500 RPM**

Mini-Dynorbital® Supreme

Air Motor and Machine Parts


⚠ WARNING

Always operate, inspect and maintain this tool in accordance with the Safety Code for portable air tools (ANSI B186.1) and any other applicable safety codes and regulations. Please refer to Dynabrade's Warning/Safety Operating Instructions for more complete safety information.

KEY	
A	Adhesive: A ₂ = Loctite #271 A ₈ = Loctite #567
O	Oil: O ₁ = Air Lube
T	Torque: N•m x 8.85 = In. - lbs.

Index Key

No.	Part #	Description
1	54033	Pad (For 54035 Assy.)
	54018	Pad (For 54034 Assy.)
2	Mini-Orbital Head Assemblies	
	54034	1/4"-20 Tread-Type
	54035	Locking-Type
3	95613	Retaining Ring
4	54145	Roloc Sub Assembly
5	95612	Bearing Shield
6	50722	Balancer Bearing (2)
7	95558	Retaining Ring
8	54036	Counterweight
9	54124	Balancer Shaft
10	57528	Motor Shaft
11	56047	Key
12	57059	Lock Ring
13	95973	Washer
14	57055	Front Ring
15	57088	Bearing
16	57057	Front Bearing Plate
17	57113	Rotor/Blade Set
18	57058	Cylinder (Incl. 95971 Pin)
19	95971	Pin
20	57056	Rear Bearing Plate
21	01206	Bearing
22	57054	Rear Ring
23	95626	Retaining Ring
24	95979	Pin
25	56846	Lever
26	57529	Housing - Model 57500
	57523	Housing - Model 57502
	57533	Housing - Model 57503
	57520	Housing - Model 57504
27	95697	Retaining Ring
28	01025	O-Ring (2)
29	01477	Valve Stem
30	Speed Regulators Plugs	
	57531	Non Reg. Plug
	57064	Regulator Plug (Optional)
	57053	Recessed Plug (Optional)
31	56027	Muffler Insert (3)
32	69359	Muffler Body
33	01464	Seal
34	01472	Tip Valve
35	01468	Conical Spring
36	01494	Inlet Bushing

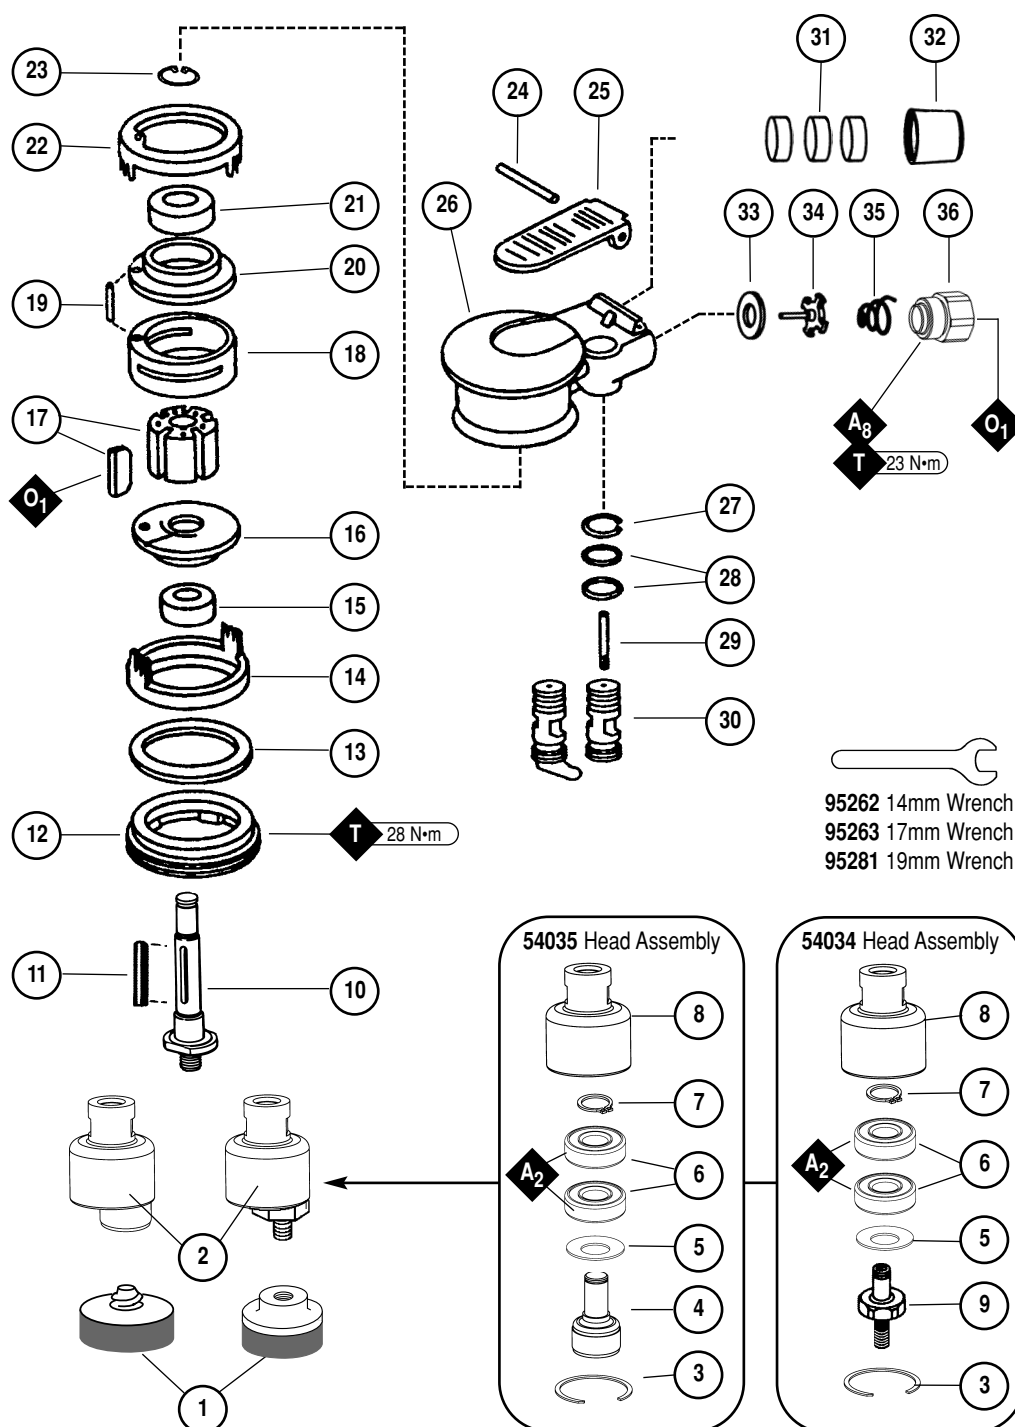

Note: To order replacement parts specify the model and serial number of your machine.