


Complete Motor Assembly

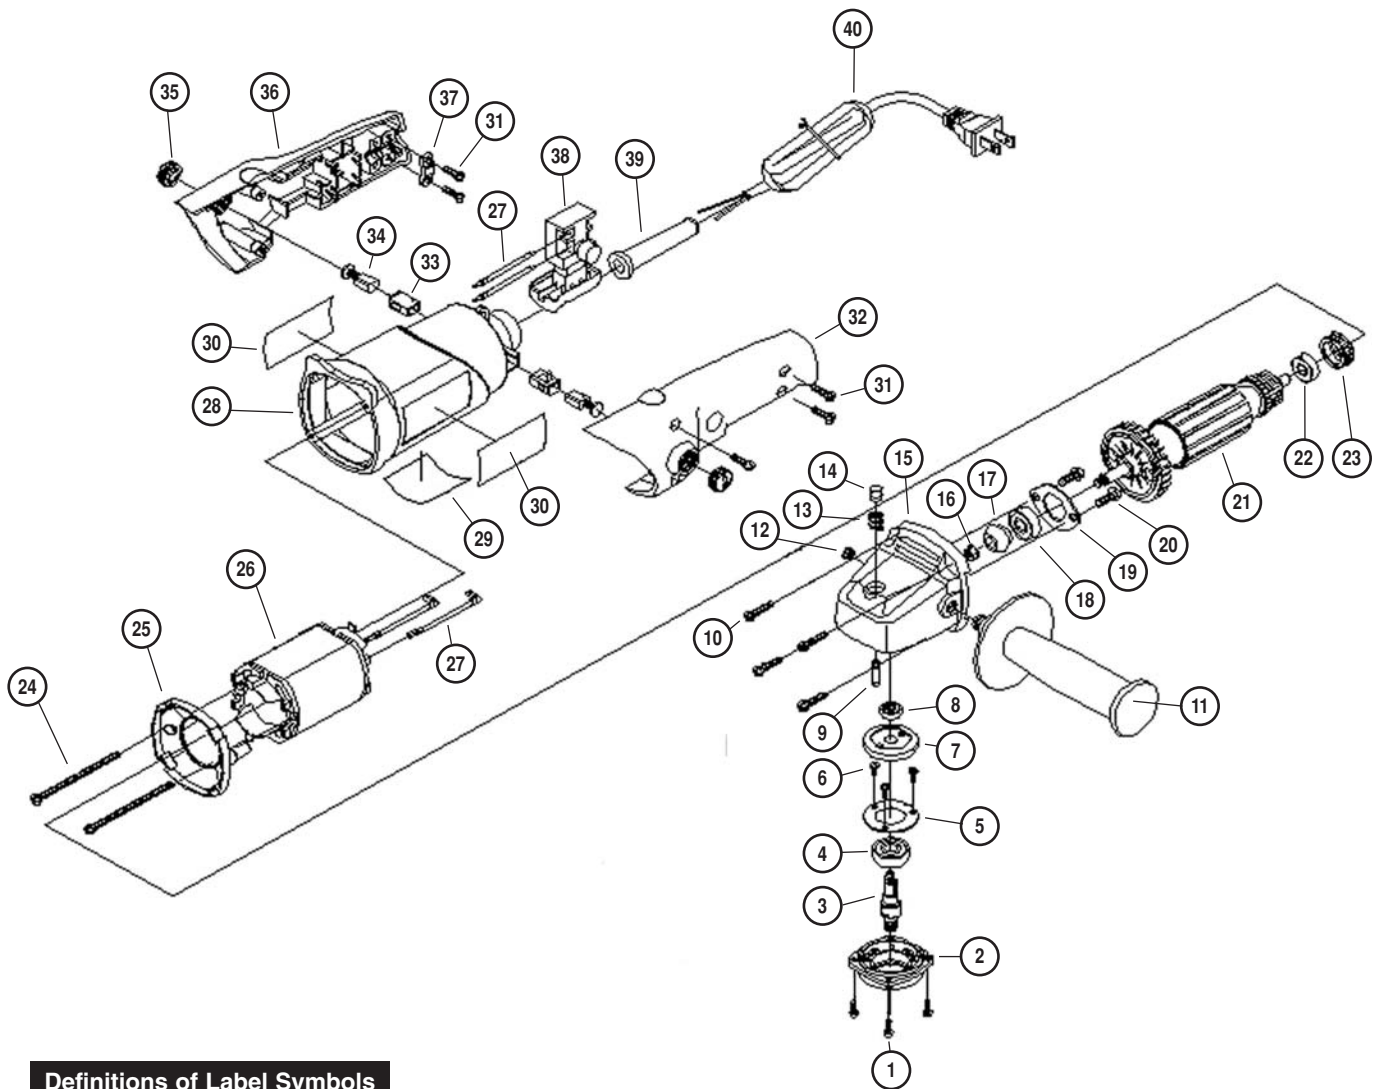

Definitions of Label Symbols

Symbol	Description
A	amperes
Hz	hertz
□	Class II Construction
n_0	no load speed
.../min	revolutions per min.

Index Key

No.	Part #	Description	No.	Part #	Description	No.	Part #	Description
1	89300	Screw (3)	11	89351	Side Handle	21	89417	Armature
2	89301	Bearing Box	12	89312	Thread Plug	22	89324	Bearing
3	89333	Spindle	13	89315	Spring	23	89325	Bearing Holder
4	50677	Bearing	14	89316	Button	24	89409	Field Screw (2)
5	89306	Bearing Retainer	15	89314	Gear Box	25	89408	Fan Baffle
6	89307	Screw (3)	16	89317	Nut	26	89407	Field
7	89432	Gear	17	89318	Gear	27	89406	Field Lead (4)
8	01015	Bearing	18	89319	Bearing	28	89405	Field Case
9	89311	Shaft Lock Pin	19	89320	Bearing Retainer	29	42617	Specification Label
10	89313	Screw (4)	20	89321	Screw	30	40404	Logo Label (2)
						31	89403	Screw (6)
						32	89416	Left Rear Cover
						33	89404	Brush Holder (2)
						34	89414	Brush (2)
						35	89400	Brush Cap (2)
						36	89401	Right Rear Cover
						37	89402	Strain Relief
						38	89418	Switch
						39	89346	Cord Protector
						40	89419	Power Cord

To order replacement parts, specify model number and serial number of your machine.