

IRC9200, Air Impact Wrench - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Housing Assembly	TA-IRC9200-A040	29	Button Kit	TK-2236-075BK
2	Housing	---	30	Forward Button	---
22	Gasket, Motor	---	30	Reverse Button	---
25	Reverse Valve Assembly	---	30	Anvil Assembly (replaceable)	A41H
29	Button Kit	---	30A	Anvil	---
2	Screw, Hammer Case (4 required)	2135-638	30A	Anvil Retainer Kit (all Spalled Anvils)	TK-2236-716
3	Power Regulator Assembly	TD-2236-249BK	† 30B	Socket Retainer Kit (1 1/2" Ring-type)	2125QTI-K425
4	O-Ring, Power Regulator	---	† 30C	Socket Retainer Kit (1 1/2" Pin-type)	---
5	Retaining Ring	2131-6	30	Tune-up Kit	TK-2236-GTK
6	Ball Bearing (Cylinder)	2131-97	4	O-Ring, Power Regulator	---
7	Cylinder	TP-2236-003	5	Retaining Ring	---
18	Vane Pack (set of 7)	2235-42-7	6	Ball Bearing (Cylinder)	---
9	Rotor	2235-53	8	Vane Pack (set of 7)	---
10	Wear Plate	TP-2236-011X	12	Ball Bearing (End Plate)	---
11	End Plate	TP-2236-011	13	Hammer Case Gasket	---
12	Hammer Case Gasket	TP-2236-036BK	22	Gasket, Motor	---
† 13	Hammer Mechanism Kit	2235-THK1	24	O-Ring, Trigger	---
14	Hammer Frame	---	25B	O-Ring, Reverse Valve (top-black)	---
15	Hammer (2 required)	2235-724	25C	O-Ring, Reverse Valve (bottom-blue)	---
16	Hammer Pins	---	28	Inlet Parts Kit	---
17	Anvil Assembly (Internal)	TD-2236-526SD	30	Grease	---
18	Anvil	---	30	Inlet Clip Removal Tool	2131-322
19	Grease Fitting	131-188	30	Socket Retainer Kit (1 1/2" Ring-type)	2125QTI-K425-10
20	Hammer Case Assembly	TD-2236-727BK-AL	30	- 10 Pack	---
21	Bushing, Hammer Case	TP-2236-641SD	30	Air Care Kit (grease gun, grease, oil)	105-LBK1
22	Retaining Pin Guard	TP-2236-961	30	Grease (replacement tube for - LBK1)	105-4T
23	Gasket, Motor	TP-2236-283	30	Air Tool Oil (4 oz. bottle)	105-1L8
24	Trigger	2135-D93B	30	Grease (1 lb can)	105-8LB
25	O-Ring, Trigger	---	30	Grease Gun	RO00A2-228
25A	Reverse Valve	---	30	Indicates not illustrated.	---
25B	O-Ring, Reverse Valve (top - black)	---	30	To keep downtime to a minimum, it's desirable to have certain repair parts on hand. We recommend that you stock one (pair or set) of each part indicated by a (†) for every four tools in service.	---
25C	O-Ring, Reverse Valve (bottom - blue)	---			
26	Inlet Bushing Assembly	2135-D565A			
27	Inlet Bushing	---			
28	Inlet Clip	2131-57			
28A	Inlet Parts Kit	2135-K303			
28B	Washer	---			
28C	O-Ring, Seal	---			
28D	Throttle Spring	---			
28E	Throttle Valve	---			
28F	Valve Seat	---			
28G	Seat Support	---			
28H	Retainer	---			

Parts and Maintenance

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling. Repair and maintenance should only be carried out by an Authorized Service Center. For all communications to the nearest Cornwell office or distributor.

Related Documentation

Manuals can be downloaded from cornwelltools.com

For additional information, refer to:


Duct Safety Information Manual 04581104
Duct Information Manual TL-IRC9200-PLM



cornwelltools.com
© 2024 Cornwell Quality Tools

TL-IRC9200-PLM
Edition 1
April 2024

IRC9200, Air Impact Wrench - Exploded View

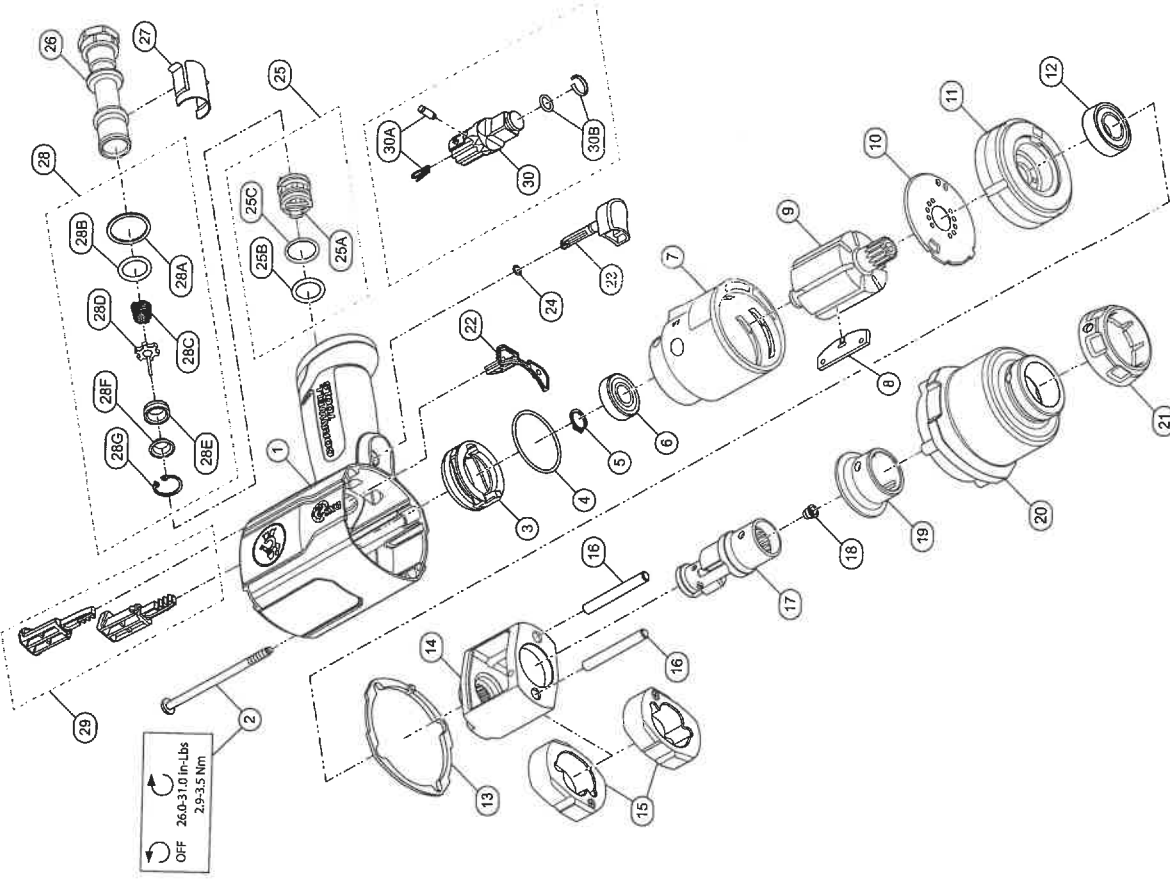

(Dwg. TL-IRC9200-PLM-1)



CORNWELL
QUALITY TOOLS



TL-IRC9200-PLM
Edition 1
April 2024