

PC Card Quick Start

NOTICE

This document contains proprietary information protected by copyright, and this Quick Start and all the accompanying hardware, software, and documentation are copyrighted. All rights are reserved. No part of this document may be photocopied or reproduced by mechanical, electronic, or other means in any form.

The manufacturer does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose of the software or documentation. The manufacturer reserves the right to make changes to the hardware and Quick Start content without obligation to notify any person or organization of the revision or change.

All brand and product names are the trademarks of their respective owners.
© Copyright 2001 All rights reserved.

This Quick Start includes all the information you should need to install and use your modem. If you need additional help, your modem package also includes a full-length User's Guide with more detailed information.

The PC Card modem that you have purchased conforms to the PC Card (PCMCIA) Type II standard. In addition, we've designed this PC Card so that it is compatible with the telephone systems in over 185 countries. This is important if you travel internationally with your laptop computer. Our World Traveler™ software allows you to change the country-specific configuration almost instantaneously.

For Windows 95/98/Me/2000 or later: Begin with **Installing the Drivers** below.

For Windows NT 4.0: Turn to **Installing the PC Card** on page 4, and then follow the steps below.

Installing the Drivers

- 1** Your computer should be turned on. Close any open applications.

Insert the CD-ROM disc that came with your modem into your CD-ROM drive. The CD should start automatically after a few seconds and display an installation screen. If the CD does not auto-run:

- Click **My Computer** on your desktop; then double-click the icon for your CD-ROM drive.
- If the installation program doesn't start right away, double-click **setup.exe**.

- 2** When the installation interface screen appears, click the **Install Modem Drivers** button. The installation program will automatically copy driver files to your hard drive.

3 Windows NT 4.0 only:

A **Select Components** dialog box will display. Make sure the **Install new modem driver and components** choice is selected. Click **Next**. A **Setup Complete** dialog box will display. Click **Finish**.

4 Shut down your computer and turn the power off.

5 *For Windows 95/98/Me/2000:* Follow the instructions for **Installing the PC Card** below.

For Windows NT 4.0: Go to **Verifying the Installation** on page 6. (Note: You should have already installed the modem according to the steps on page 4 and installed the drivers according to the instructions above.)

Installing the PC Card

Note To Users of Computers Running Windows 95/98/Me/2000:

If you haven't already run the modem installation program on the CD-ROM disc, do so now, before you install the PC Card modem. See **Installing the Drivers** on page 3.


Note to Users of Windows NT:

Before you can use a PC Card in a computer running Windows NT, you must enable PCMCIA. If this is your first PC Card, go to **Control Panel | Devices**, scroll down to the **PCMCIA** entry, and highlight it. Click the **Startup** button and then select either **Boot** or **Automatic**.

1 Before you start the hardware installation, close all running programs and shut down Windows if you have not already done so. Then turn your computer off and unplug it. Don't plug it back in or turn it on until you finish the modem hardware installation.

2 With the top of the modem card facing up, insert the modem into the PC Card Type II, Type III, or Toshiba 16mm card slot in your computer. Push the modem *firmly, but gently* until it is seated inside the slot and you can't push it any further.

3 **Connect the phone cable to the modem card as shown.** You should feel the connector snap into place. If the cable's connector still doesn't fit easily into the card, turn the connector over and try again.

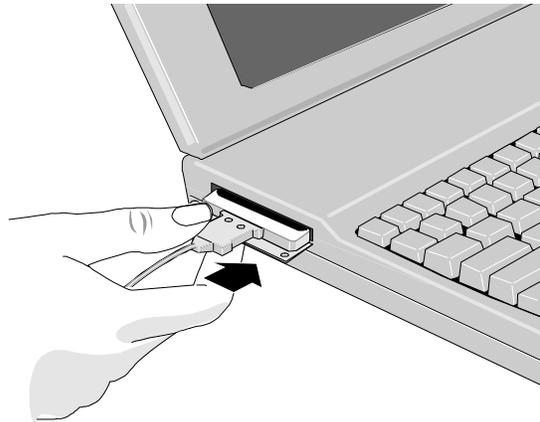

4 Plug the other end of the cable into the modular telephone jack on your wall. You may need to use an adapter plug between the cable's jack and your wall jack.

If you want to plug both the modem cable and a telephone cable into one wall jack, you may be able to use a phone line splitter, which is available through electronics supply stores.

5 Turn the computer back on.

Windows 95/98/Me/2000 users: Go to **Verifying the Installation** below.

Windows NT 4.0 users: Go to **Installing the Drivers** on page 3.

Note: Windows has a power management feature that powers down the PC Card completely when it is not in use. This feature may cause problems with some communications software. For advice, consult your full-length User's Guide.

Verifying the Installation

Windows 95/98/Me/2000 users:

Windows PC Card support must be installed before you can use a PCMCIA-compatible card of any type. If you are unsure if you have this support, click **Start | Settings | Control Panel**. If there is a PC Card icon (such as the one shown here) in the **Control Panel** folder, you can proceed. If not, consult your Windows documentation for installation instructions.



PC Card
(PCMCIA)

Windows NT 4.0 users:

To check that your system has detected the PC Card, open the **Control Panel** and select **PC Card (PCMCIA)**. This modem should be listed under the **Socket Status** tab. Select **Properties**. Under **Device Status**, "The device is working properly" should be listed along with a COM port number. Click **OK** to exit the **PC Card** dialog box.

Notes to Users of Windows NT:

1. Windows NT does not permit hot-swapping of PC Cards.
2. You must be running Windows NT 4.0 with Service Pack 4 or higher (6 is recommended). If the native PC Card services are not already installed, please see your Windows NT user documentation for PC Card modem installation.

Changing Your Country Setting

Our World Traveler™ country select software, included on the accompanying CD, provides configuration information so that your modem automatically works with the telephone system in your country.

To change your country setting, follow these steps:

- 1 Click **Start | Programs**. Select **World Traveler** to launch the application.
- 2 A dialog box will display. Select the country of your choice from the drop-down list and click **Set**.

That's it! If you have problems with your modem or if you require additional information, please consult your full-length User's Guide, the printed version or the electronic version located on the CD.

