


**OM-2092**  
4-3-00

**HOBART**<sup>®</sup>  
GROUND POWER

# Operation and Maintenance Manual

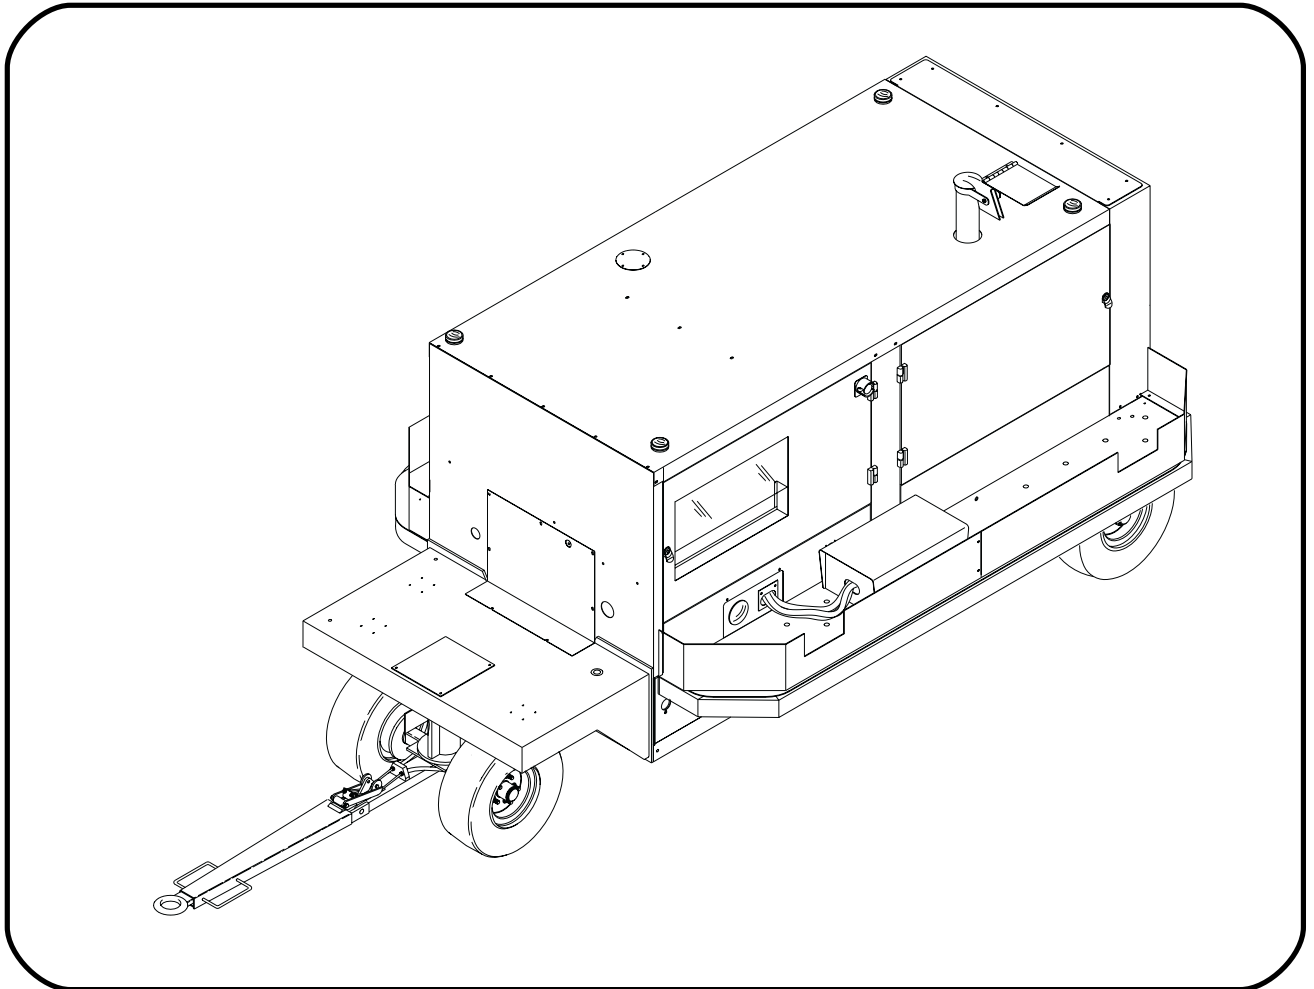

## Model 120CH24-416 Generator Sets Series 500240

**Hobart Brothers Company**  
Ground Power Division  
Troy, OH 45373  
U.S.A.

# WARRANTY

HOBART BROTHERS COMPANY TROY, OHIO 45373  
GROUND POWER DIVISION

1. Hobart Brothers Company (hereinafter called **HOBART**) warrants that each new and unused Hobart Ground Power Equipment, (hereinafter called the **PRODUCT**) is of good workmanship and is free from mechanical defects, provided that (1) the **PRODUCT** is installed and operated in accordance with the printed instructions of **HOBART**, (2) the **PRODUCT** is used under the normal operating conditions for which it is designed, (3) the **PRODUCT** is not subjected to misuse, negligence or accident, and (4) the **PRODUCT** receives proper care, lubrication, protection, and maintenance under the supervision of trained personnel.
2. This warranty expires 15 months after shipment by **HOBART** to the first user, or 12 months after installation, whichever first occurs.
3. This warranty does not apply to: primary and secondary switch contacts, cable connectors, carbon brushes, fuses, bulbs, and filters unless found to be defective prior to use.
4. Hobart **DOES NOT WARRANT THE FOLLOWING COMPONENTS:** Engines (gasoline or diesel), storage batteries, engine starters generators, alternators, regulators, governors, tires, axles, transmissions, and cable retrieving devices. Many of the foregoing components are warranted directly by the manufacturer to the first user and serviced by a worldwide network of distributors and others authorized to handle claims for component manufacturers. A first user's claim should be presented directly to such an authorized component service outlet. In the event any component manufacturer has warranted its component to **HOBART** and will not deal directly with a first user then **HOBART** will cooperate with the first user in the presentation of a claim to such manufacturer. Under **NO** circumstances does **HOBART** assume any liability for any warranty claim against or warranty work done by or in behalf of any manufacturer of the foregoing components.
5. This warranty is extended by **HOBART** only to the purchaser of new **PRODUCTS** from **HOBART** or one of its authorized distributors. The **PRODUCTS** purchased under this warranty are intended for use exclusively by the buyer and his employees and by no other persons and, therefore, there shall be no third party beneficiary to this warranty.
6. A claim of defects in any **PRODUCT** covered by this warranty is subject to **HOBART** factory inspection and judgment. **HOBART'S** liability is limited to repair of any defects found by **HOBART** to exist, or at **HOBART'S** option the replacement of the defective product, F.O.B. factory, after the defective product has been returned by the purchaser at its expense to **HOBART'S** shipping place. Replacement and exchange parts will be warranted for the remainder of the original Warranty, or for a period of ninety (90) days, whichever is greater.
7. **UNDER NO CIRCUMSTANCES** whatsoever shall **HOBART** and its authorized distributors be liable for any special or consequential damages, whether based on lost goodwill, lost resale profits, work stoppage impairment of other goods or otherwise, and whether arising out of breach of any express or implied warranty, breach of contract, negligence or otherwise, except only in the case of personal injury as may be required by applicable law.
8. Continued use of the **PRODUCT(S)** after discovery of a defect **VOIDS ALL WARRANTIES**.
9. Except as authorized in writing, this warranty does not cover any equipment that has been altered by any party other than **HOBART**.
10. **THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HERE OF. HOBART MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**
11. **HOBART** neither assumes nor authorizes any person to assume for **HOBART** any liability in connection with the **PRODUCTS** sold, and there are no oral agreements or warranties collateral to or affecting this written Warranty. This warranty and all undertakings of **HOBART** thereunder shall be governed by the laws of the State of Ohio, United States of America.

## WARNING

**AT ALL TIMES, SAFETY MUST BE CONSIDERED AN IMPORTANT FACTOR IN THE INSTALLATION, SERVICING AND OPERATION OF THE PRODUCT, AND SKILLED, TECHNICALLY QUALIFIED PERSONNEL SHOULD ALWAYS BE EMPLOYED FOR SUCH TASKS.**

---

## Safety Warnings and Cautions

---

### WARNING

**CALIFORNIA PROPOSITION 65 - DIESEL ENGINES.** Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

### WARNING

**ELECTRIC SHOCK** can KILL. Do not touch live electrical parts.

**ELECTRIC ARC FLASH** can injure eyes, burn skin, cause equipment damage, and ignite combustible material. **DO NOT** use power cables to break load and prevent tools from causing short circuits.

**IMPROPER PHASE CONNECTION, PARALLELING, OR USE** can damage this and attached equipment.

### IMPORTANT

Protect all operating personnel. Read, understand, and follow all instructions in the Operating/Instruction Manual before installing, operating, or servicing the equipment. Keep the manual available for future use by all operators.

#### 1. General

Equipment that supplies electrical power can cause serious injury or death, or damage to other equipment or property. The operator must strictly observe all safety rules and take precautionary actions. Safe practices have been developed from past experience in the use of power source equipment. While certain practices below apply only to electrically-powered equipment, other practices apply to engine-driven equipment, and some practices to both.

#### 2. Shock Prevention

Bare conductors, or terminals in the output circuit, or ungrounded, electrically-live equipment can fatally shock a person. Have a certified electrician verify that the equipment is adequately grounded and learn what terminals and parts are electrically **HOT**. Avoid hot spots on machine. Use proper safety clothing, procedures, and test equipment.

The electrical resistance of the body is decreased when wet, permitting dangerous currents to flow through it. When inspecting or servicing equipment, do not work in damp areas. Stand on a dry rubber mat or dry wood, use insulating gloves when dampness or sweat cannot be avoided. Keep clothing dry, and never work alone

##### a. Installation and Grounding of Electrically Powered Equipment

Equipment driven by electric motors (*rather than by diesel or gasoline engines*) must be installed and maintained in accordance with the National Electrical Code, ANSI/NFPA 70, or other applicable codes. A power disconnect switch or circuit breaker must be located at the equipment. Check the nameplate for voltage, frequency, and phase requirements. If only 3-phase power is available, connect any single-phase rated equipment to only two wires of the 3-phase line. **DO NOT CONNECT** the equipment grounding conductor (lead) to the third live wire of the 3-phase line, as this makes the equipment frame electrically **HOT**, which can cause a fatal shock.

Always connect the grounding lead, if supplied in a power line cable, to the grounded switch box or building ground. If not provided, use a separate grounding lead. Ensure that the current (*amperage*) capacity of the grounding lead will be adequate for the worst fault current situation. Refer to the National Electrical Code ANSI/NFPA 70 for details. Do not remove plug ground prongs. Use correctly mating receptacles.

**b. Output Cables and Terminals**

Inspect cables frequently for damage to the insulation and the connectors. Replace or repair cracked or worn cables immediately. Do not overload cables. Do not touch output terminal while equipment is energized.

**3. Service and Maintenance**

This equipment must be maintained in good electrical and mechanical condition to avoid hazards stemming from disrepair. Report any equipment defect or safety hazard to the supervisor and discontinue use of the equipment until its safety has been assured. Repairs should be made by qualified personnel only.

Before inspecting or servicing electrically-powered equipment, take the following precautions:

- a. Shut OFF all power at the disconnecting switch or line breaker before inspecting or servicing the equipment.**
- b. Lock switch OPEN (or remove line fuses) so that power cannot be turned on accidentally.**
- c. Disconnect power to equipment if it is out of service.**
- d. If troubleshooting must be done with the unit energized, have another person present who is trained in turning off the equipment and providing or calling for first aid.**

**4. Fire And Explosion Prevention**

Fire and explosion are caused by electrical short circuits, combustible material near engine exhaust piping, misuse of batteries and fuel, or unsafe operating or fueling conditions.

**a. Electrical Short Circuits and Overloads**

Overloaded or shorted equipment can become hot enough to cause fires by self destruction or by causing nearby combustibles to ignite. For electrically-powered equipment, provide primary input protection to remove short circuited or heavily overloaded equipment from the line.

**b. Batteries**

Batteries may explode and/or give off flammable hydrogen gas. Acid and arcing from a ruptured battery can cause fires and additional failures. When servicing, do not smoke, cause sparking, or use open flame near the battery.

**c. Engine Fuel**

Use only approved fuel container or fueling system. Fires and explosions can occur if the fuel tank is not grounded prior to or during fuel transfer. Shut unit **DOWN** before removing fuel tank cap. **DO NOT** completely fill tank, because heat from the equipment may cause fuel expansion overflow. Remove all spilled fuel **IMMEDIATELY**, including any that penetrates the unit. After clean-up, open equipment doors and blow fumes away with compressed air.

**5. Toxic Fume Prevention**

Carbon monoxide - Engine exhaust fumes can kill and cause health problems. Pipe or vent the exhaust fumes to a suitable exhaust duct or outdoors. Never locate engine exhausts near intake ducts of air conditioners.

**6. Bodily Injury Prevention**

Serious injury can result from contact with fans inside some equipment. Shut **DOWN** such equipment for inspection and routine maintenance. When equipment is in operation, use extreme care in doing necessary trouble-shooting and adjustment. Do not remove guards while equipment is operating.

## 7. Medical and First Aid Treatment

First aid facilities and a qualified first aid person should be available for each shift for immediate treatment of all injury victims. Electric shock victims should be checked by a physician and taken to a hospital immediately if any abnormal signs are observed.

### **EMERGENCY FIRST AID**

**Call physician immediately. Seek additional assistance. Use First Aid techniques recommended by American Red Cross until medical help arrives.**

**IF BREATHING IS DIFFICULT, give oxygen, if available, and have victim lie down. FOR ELECTRICAL SHOCK, turn off power. Remove victim; if not breathing, begin artificial respiration, preferably mouth-to-mouth. If no detectable pulse, begin external heart massage. CALL EMERGENCY RESCUE SQUAD IMMEDIATELY.**

## 8. Equipment Precautionary Labels

Inspect all precautionary labels on the equipment monthly. Order and inspect all labels that cannot be easily read.

*This page intentionally left blank.*

---

## Introduction

---

This manual contains operation and maintenance information for a Hobart generator set manufactured by Hobart Brothers Company, Ground Power Division, Troy, Ohio 45373.

This manual is not intended to be a textbook on electricity or electronics. Its primary purpose is to provide information and instructions to experienced operators, electricians, and mechanics who have never operated this equipment. It is the intent of this manual to guide and assist operators and maintenance people in the proper use and care of the equipment.

Use of the manual should not be put off until a trouble or need for help develops. Read the instructions before starting the unit. Learn to use the manual and to locate information contained in it. Its style and arrangement are very similar to commercial aircraft manuals. The manual is divided into five chapters. Each chapter is divided into as many sections as required. Each new section starts with page 1. Each page is identified by chapter, section and page number, which are located in the lower, outside corner. When information located in another portion of the manual is referred to, its location is identified by a chapter, section, and paragraph or figure number.

For example: “(see Section 2-3, Paragraph 1.a.)” refers to information located in Chapter 2, Section 3, Paragraph 1.a. If a chapter and section are not indicated in a reference, the referenced material is located in the same section as the reference, for example: “(see Paragraph 1.a.)”

In addition to operation and maintenance instructions, the manual contains an illustrated parts list in Chapter 4, and a collection of manufacturer’s literature and supplemental information in Chapter 5.

Appendix A contains a list of options and corresponding TO documents. If the machine purchased contains one of these options, the corresponding TO will be inserted in this section.

Content of the manual is arranged as follows:

**Chapter 1. Description/Operation**

**Chapter 2. Servicing/Troubleshooting**

**Chapter 3. Overhaul/Major Repair**

**Chapter 4. Illustrated Parts List**

**Chapter 5. Manufacturer’s Literature**

**Appendix A. Options / Features**

*This page intentionally left blank.*



# Table of Contents

.....	Chapter-Section	Page
<b>Chapter 1. Description / Operation</b>		
<b>Section 1. Description</b>	<b>1-1</b>	<b>1</b>
General	1-1	1
Orientation	1-1	1
Optional Equipment	1-1	1
Special Features	1-1	1
Protective Monitor .....	1-1	1
Voltage Regulator .....	1-1	1
Electric Governor .....	1-1	1
Canopy	1-1	1
Engine, Generator, and Control Box	1-1	4
Basic Engine .....	1-1	4
Engine Manufacturer's Equipment .....	1-1	4
Engine Cooling Fan .....	1-1	6
Occasional Engine Faults .....	1-1	6
Hobart Installed Engine Equipment .....	1-1	6
Generator .....	1-1	8
Control Box Assembly	1-1	9
Power Module Panel Assembly .....	1-1	18
Cold Weather Starting System .....	1-1	20
<b>Section 2. Preparation for Use, Storage or Shipping</b>	<b>1-2</b>	<b>1</b>
Preparation for Use	1-2	1
Inspection/Check .....	1-2	1
Tips on Cold Weather Starting	1-2	2
Battery and Cables .....	1-2	2
Fuel .....	1-2	2
Lube Oil .....	1-2	3
Preparation for Storage	1-2	3
General .....	1-2	3
Temporary Storage .....	1-2	3
Long Time Storage (Over 30 Days) .....	1-2	3
Preparation for Shipment .....	1-2	4

<b>Section 3. Operation</b>	<b>1-3</b>	<b>1</b>
General	1-3	1
Operating the Unit	1-3	1
Pre-start inspection.....	1-3	1
Normal Engine Starting Procedures .....	1-3	1
Failed Starting Procedures .....	1-3	4
Power Delivery.....	1-3	4
Discontinue Power Delivery with Unit Shutdown.....	1-3	5

## Chapter 2. Servicing

---

<b>Section 1. Maintenance Inspection/Check</b>	<b>2-1</b>	<b>1</b>
General	2-1	1
Maintenance Schedule	2-1	1
General .....	2-1	1
Maintenance Schedule Check Sheet.....	2-1	1
Time Intervals .....	2-1	1
Identification of Interval Periods .....	2-1	1
Inspection/Check	2-1	4
General .....	2-1	4
“AR” Checks and Operations (As Required) .....	2-1	4
“BR” Checks and Operations (Break-In Period).....	2-1	4
“A” Checks and Operations (10 Hours or Daily) .....	2-1	5
“B” Check and Operations (250 Hours or 3 Months).....	2-1	7
“C” Checks and Operations (500 Hours or 6 Months).....	2-1	7
“D” Checks and Operations (1000 Hours or 1 Year) .....	2-1	8
“E” Checks and Operations (1500 Hours or 1 ½ Years) .....	2-1	9
“F” Checks and Operations (2000 Hours or 2 Years) .....	2-1	10
Seasonal Maintenance Checks (Engine).....	2-1	11
Lamps and Circuit Breakers.....	2-1	11
Cold Weather Start Servicing and Troubleshooting	2-1	12
Check Fluid Cylinder Contents and Valve Gasket.....	2-1	12
Check of Electrical System.....	2-1	13
Check for Clogging of Flow Metering Orifice Fitting .....	2-1	13
<b>Section 2. Maintenance Procedures</b>	<b>2-2</b>	<b>1</b>
General	2-2	1
Lubrication	2-2	1
General .....	2-2	1
AC Generator .....	2-2	1
Generator Controls .....	2-2	1
Engine.....	2-2	1
Engine Accessories Lubrication .....	2-2	6
Servicing the Air Cleaner	2-2	6
Inspecting the Air Cleaner .....	2-2	6

Cleaning the Air Filter .....	2-2	6
Disposal .....	2-2	7
<b>Engine Fuel</b> .....	<b>2-2</b>	<b>7</b>
How to Select Fuel—Quality .....	2-2	7
Fuel Filter .....	2-2	7
<b>Engine Cooling System</b> .....	<b>2-2</b>	<b>8</b>
General .....	2-2	8
Radiator Cap .....	2-2	8
Coolant .....	2-2	9
Draining the Cooling System .....	2-2	10
Cleaning the Cooling System .....	2-2	10
Cleaning the Radiator Core .....	2-2	10
Filling the Cooling System .....	2-2	10
Thermostat .....	2-2	10
<b>Drive Belts</b> .....	<b>2-2</b>	<b>11</b>
General .....	2-2	11
Preparation for Belt Check and Adjustment .....	2-2	11
Check Fan Belt Tension .....	2-2	11
Check Fan Belt .....	2-2	11
<b>Generator Maintenance</b> .....	<b>2-2</b>	<b>11</b>
Cleaning .....	2-2	11
Adjustment .....	2-2	11
<b>Voltage Regulator Maintenance /Repair</b> .....	<b>2-2</b>	<b>13</b>
<b>Cold Weather Starting Aid Servicing &amp; Troubleshooting</b> .....	<b>2-2</b>	<b>13</b>
Check Fluid Cylinder Contents and Valve Gasket .....	2-2	13
Check of Electrical System .....	2-2	13
Check For Clogging of Flow Metering Orifice Fitting .....	2-2	14
 <b>Section 3. Adjustment/Test</b> .....	 <b>2-3</b>	 <b>1</b>
<b>General</b> .....	<b>2-3</b>	<b>1</b>
<b>Testing the Generator Set</b> .....	<b>2-3</b>	<b>1</b>
Pre-operational Test Procedures .....	2-3	1
Operational Test Procedures .....	2-3	4
Testing the No. 1 output circuit .....	2-3	5
Testing and checking meters, switches, relays, and indicating lights .....	2-3	6
Re-checking the entire unit after testing .....	2-3	8
<b>Generator Set Adjustment</b> .....	<b>2-3</b>	<b>8</b>
Generator Adjustment .....	2-3	8
Adjust 400 Hz voltage regulator .....	2-3	8
Basic Engine Adjustments .....	2-3	9
Engine Accessories Adjustment .....	2-3	9
Electric Governor System Adjustment .....	2-3	10
<b>Generator and Exciter Test</b> .....	<b>2-3</b>	<b>16</b>
<b>Diode Test</b> .....	<b>2-3</b>	<b>16</b>

<b>Section 4. Troubleshooting Procedures</b>	<b>2-4</b>	<b>1</b>
General	2-4	1
Equipment for Troubleshooting	2-4	1
Parts Replacement	2-4	1
Test Values	2-4	2
Check Connections and Leads	2-4	2
Electric Governor Troubleshooting	2-4	2
Engine Troubleshooting	2-4	3
Illustrations	2-4	3
Connection and Schematic Diagrams	2-4	3
Engine Controls	2-4	7
Generator Excitation Circuits	2-4	13
No. 1 Load Contactor Operating Circuit	2-4	15
Protective Circuit	2-4	18
Generator	2-4	20

## Chapter 3. Overhaul/Major Repair

---

<b>Section 1. Exciter Armature</b>	<b>3-1</b>	<b>1</b>
General	3-1	1
Exciter Armature	3-1	2
Exciter Armature Replacement	3-1	2
General . . . . .	3-1	2
Tools Needed for Exciter Armature		
Removal and Installation . . . . .	3-1	3
Conditions for Exciter Removal . . . . .	3-1	3
Preparation for Exciter Armature Removal . . . . .	3-1	4
Exciter Armature Removal . . . . .	3-1	4

<b>Installing the Exciter Armature</b>	<b>3-1</b>	<b>6</b>
Preparation for Exciter Armature Installation . . . . .	3-1	6
Exciter Armature Installation . . . . .	3-1	6
<b>Section 2. Dual Bearing Flexible Coupling</b>		
<b>General</b>	<b>3-2</b>	<b>1</b>
Coupling Bolts . . . . .	3-2	1
<b>Disassembly</b>	<b>3-2</b>	<b>1</b>
Separate Engine and Generator . . . . .	3-2	1
Remove Coupling Assembly . . . . .	3-2	2
<b>Coupling Service</b>	<b>3-2</b>	<b>3</b>
Coupling Kit . . . . .	3-2	4
Bushing Kits . . . . .	3-2	4
Bushing Replacement . . . . .	3-2	4
<b>Coupling Installation</b>	<b>3-2</b>	<b>5</b>
Cleaning . . . . .	3-2	5
Assembly . . . . .	3-2	5
<b>Reassemble Engine and Generator</b>	<b>3-2</b>	<b>10</b>
<b>Run-in and Periodic Check</b>	<b>3-2</b>	<b>10</b>
<b>Section 3. Generator Assembly</b>	<b>3-3</b>	<b>1</b>
<b>General</b>	<b>3-3</b>	<b>1</b>
<b>Procedure for Generator Assembly Removal</b>	<b>3-3</b>	<b>1</b>
Procedure for Gaining Access to the Generator . . . . .	3-3	1
Removing the generator Assembly . . . . .	3-3	3
<b>Installing a Generator Assembly</b>	<b>3-3</b>	<b>4</b>
Remounting the Generator Assembly . . . . .	3-3	4
Remounting the Previously Removed Assemblies . . . . .	3-3	4

<b>Chapter 4. Illustrated Parts List</b>	<b>4-1</b>	<b>1</b>
<hr/>		
<b>Section 1. Introduction</b>	<b>4-1</b>	<b>1</b>
General	4-1	1
Purpose	4-1	1
Arrangement	4-1	1
Explanation of Parts List	4-1	1
Contents .....	4-1	1
Parts List Form .....	4-1	1
<b>Section 2. Manufacturer's Codes</b>	<b>4-2</b>	<b>1</b>
Explanation of Manufacturer's (Vendor) Code List	4-2	1
<b>Section 3. Illustrated Parts List</b>	<b>4-3</b>	<b>1</b>
Explanation of Parts List Arrangement	4-3	1
Symbols and Abbreviations	4-3	1
<b>Section 4. Numerical Index</b>	<b>4-4</b>	<b>1</b>
Explanation of Numerical Index	4-4	1
Numerical Index	4-4	1
<b>Chapter 5. Manufacturer's Literature</b>	<b>5-1</b>	<b>1</b>
<hr/>		
<b>Appendix A. Options/Features</b>	<b>Appendix A</b>	<b>1</b>
<hr/>		
<b>Unusual Service Conditions</b>		
<hr/>		
<b>Wet Stacking</b>		
<hr/>		

# Chapter 1. Description / Operation

---

---

---

## Section 1. Description

---

### 1. General

The basic generator set covered in this manual is manufactured by Hobart Ground Power, in Troy, Ohio. It is rated at 120 KVA and is designed to produce and deliver 240/416-volt, 400 Hz, 3-phase AC power. Series 500240 consists of the following part number:

Part Number 500240-001 identifies a single output

### 2. Orientation

For purpose of orientation, the radiator is considered to be at the REAR of the unit. The generator and controls are at the FRONT. RIGHT and LEFT are determined by standing at the REAR end facing the machine. Thus, the control box is mounted on the LEFT side at the FRONT of the unit.

### 3. Optional Equipment

Chapters 1 through 5 of this Operation and Maintenance Manual identifies only the “strip down” version of the 120CH24-416 generator set. A list of optional equipment which make this manual unique to the generator set that you have purchased, appears in Appendix A. A few items included in Appendix A are cable trays, trailers, fuel lights, etc.

### 4. Special Features

The generator set has special features in which are described more fully under assemblies in which they appear. Three features, protective monitor, voltage regulator, and electric governor are mentioned here and described briefly.

#### a. Protective Monitor

The protective monitoring system receives signals from the fault sensing units in the generator output circuit and functions to cause the load to be disconnected from the generator if an abnormal condition of voltage, frequency, or load develops.

#### b. Voltage Regulator


A microprocessor-type, adjustable voltage regulator provides automatic voltage regulation at the aircraft. The regulator is also adjustable for a variety of output cable sizes and lengths.

#### c. Electric Governor

The engine is equipped with an electric governor kit and other special equipment more fully described under the engine description.

### 5. Canopy

A sheet metal enclosure, identified as a canopy, provides protection for the engine, generator, and electrical controls. The canopy is designed to reduce the operational noise level in the immediate area of the machine.

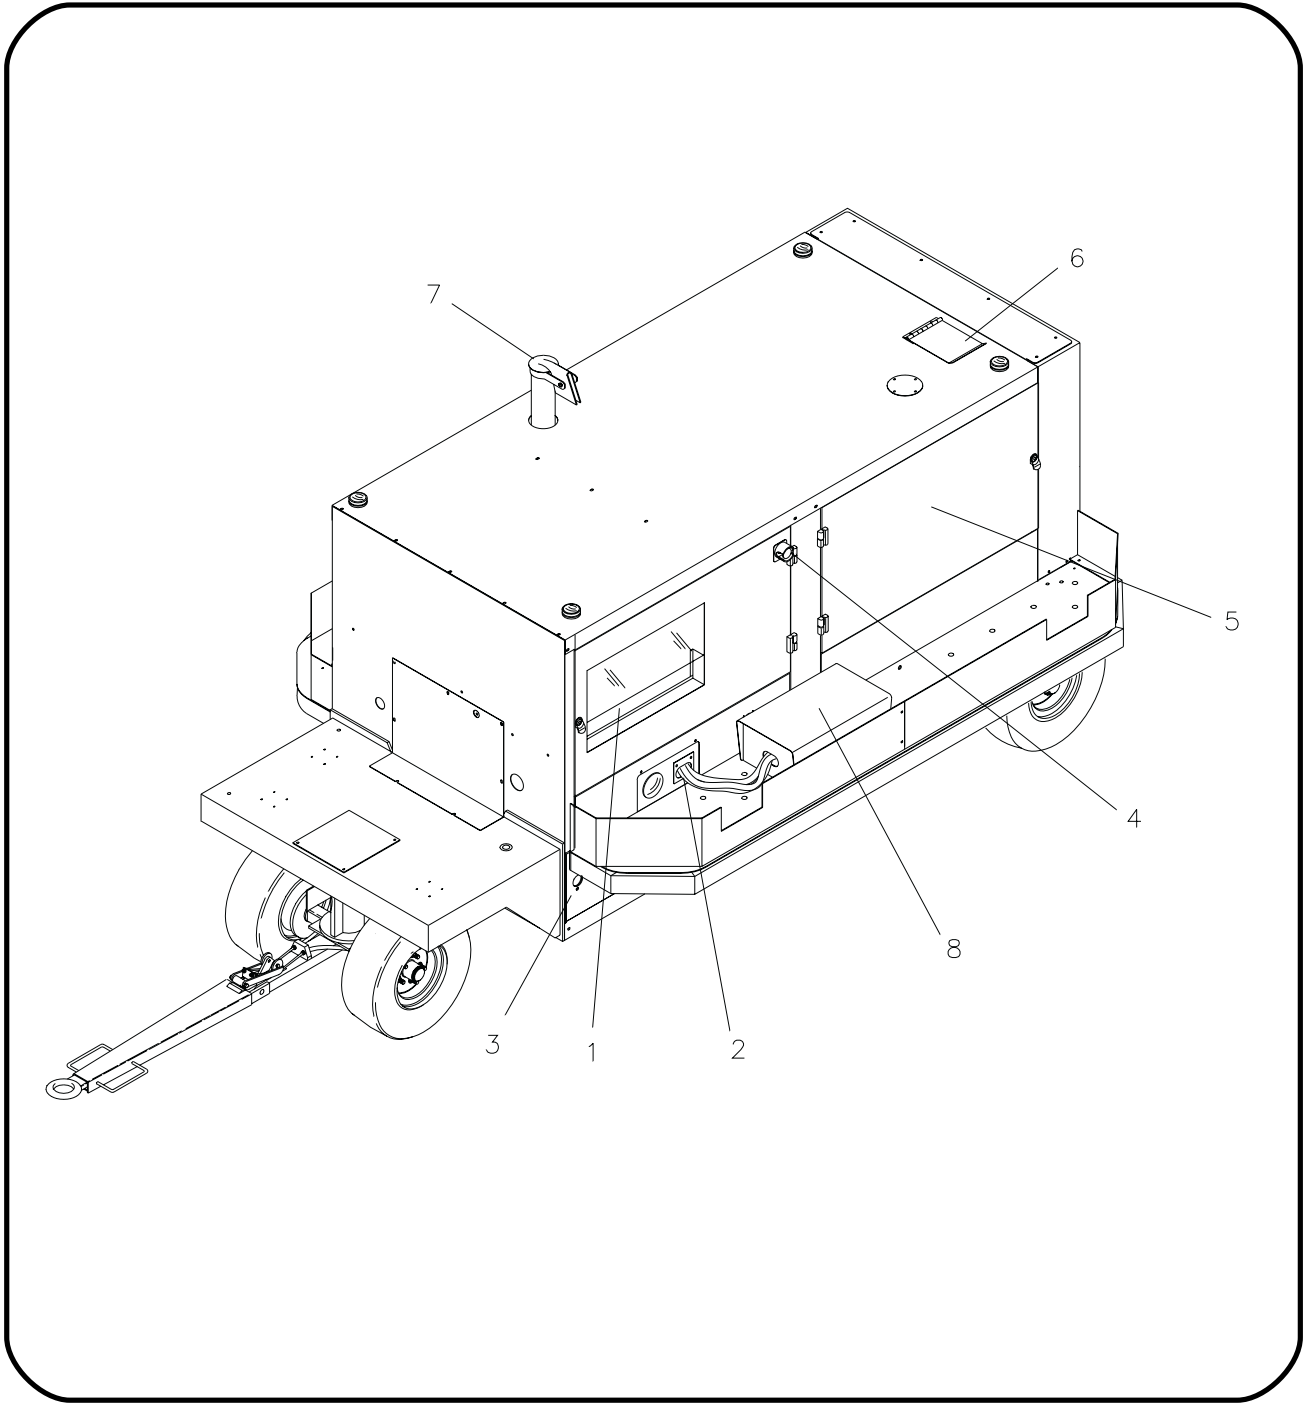

- |                          |                                      |
|--------------------------|--------------------------------------|
| 1. Control Panel         | 5. Canopy                            |
| 2. Output Cable Clamp    | 6. Radiator Access Door              |
| 3. Frame                 | 7. Exhaust Rain Cap                  |
| 4. Emergency Stop Switch | 8. Output Power Connectors Enclosure |

**Generator Set  
Figure 1**



Physical	Basic Unit	With Trailer
Length	100 in. (2540 mm)	148 in. (3759 mm)
Width	45 in. (1143 mm)	77 in. (1956 mm)
Height	47.5 in. (1203 mm)	61 in. (1549mm)

Generator	
Output power rating (kVA)	120 kVA
Output Voltage	240/416 Volts
Rated load capacity (Amps)	166 Amps
Frequency (Hz)	400 Hz
Output kilowatts	96
Power factor	0.8
Duty cycle	100%
Operating speed (RPM)	2400 RPM
Overload capacity 125% rated load (Amps)	208
Generator Protective System	
Over voltage	Trips at 252 volts after a 1-second time delay Trips at 280 volts in 160 milliseconds. Trips at 360 volts in 50 milliseconds.
Under voltage	Trips at any voltage below 200 volts after 7 seconds.
Over frequency	Trips at any value between 420-Hz and 480-Hz after a 5-second time delay. Trips immediately at any frequency exceeding 480-Hz.
Under frequency	Trips at 380-Hz or less after a 7-second time delay.
Overload time delay	Trips in approximately 5 minutes at 125% load.

**Specifications and Capabilities**  
**Figure 2 (Sheet 1 of 2)**

<b>Engine</b>	
Manufacturer	Cummins Engine Company, Inc. Columbus, Ohio 47201
Model No.	6B5.9C165
Type	In-line 6 cylinder 4 Cycle Diesel
Bore and Stroke	4.02 x 4.72 inches (10.2 x 11.9 cm)
Displacement	359 c.i. (5.9 liters)
Compression Ratio	17.5 : 1
Horsepower	165
Idle speed	850+/-50 RPM
High speed limiting	Approx. 2750 +/-75 RPM
Normal governed speed	2400 RPM
Electrical system	12-V DC
Ground	Negative
Firing order (RH rotation)	1-5-3-6-2-4
Lubricating oil capacity (w/filter)	16 quarts (15.1 liters)
Coolant capacity system	38 quarts (36 liters)

**Specifications and Capabilities**

**Figure 2 (Sheet 2 of 2)**

**6. Engine and Generator**

The engine and generator comprise the principal components of the generator set. They are mounted on the welded steel frame of the chassis. The engine coolant radiator is also mounted on the frame just forward of the engine-generator combination. Figure 3 is an illustration showing the location of all major components and sub-assemblies.

**a. Basic Engine.**

The basic engine is an in-line 6-cylinder diesel rated at 165 horsepower. See Fig. 2 for general specifications.

**b. Engine Manufacturer's Equipment**

As received from the engine manufacturer, the engine includes the following equipment which is more fully described in the Cummins Operation and Maintenance Manual.

(1) Electrical System

The 12-V DC electrical generating and starting system includes an alternator, voltage regulator, and starter with solenoid switch.

(2) Fuel Filter


The fuel filter is a spin-on disposable, vacuum type connected between the fuel lift pump and injector pump

(3) Oil Filter

The engine oil filter is a spin-on, full-flow type. It is mounted on the right side of the engine.

(4) Engine over-speed protection

The engine is protected against over-speed by a speed-limiting mechanism in the mechanical governor.

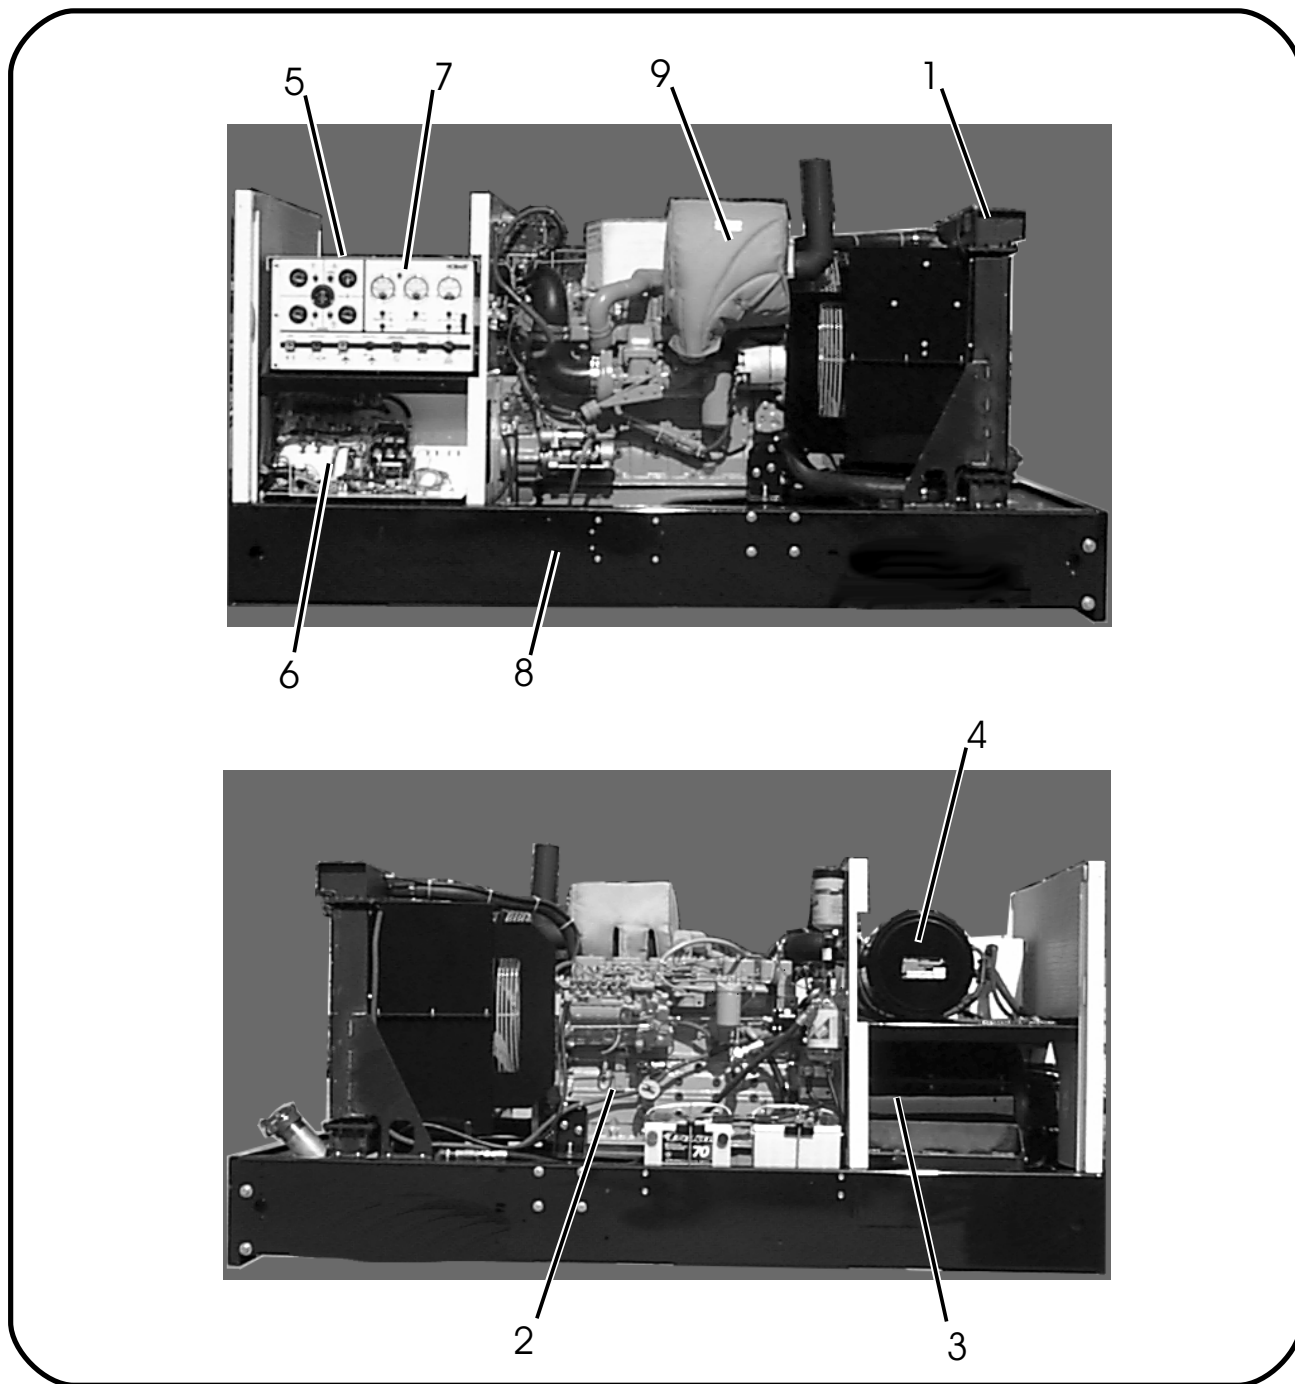

- |                |                                   |
|----------------|-----------------------------------|
| 1. Radiator    | 6. Output Module Panel            |
| 2. Engine      | 7. Engine-Generator Control Panel |
| 3. Generator   | 8. Mounting Frame                 |
| 4. Air Cleaner | 9. Muffler                        |
| 5. Control Box |                                   |

**Generator Set Components**  
**Figure 3**

**c. Engine-cooling fan**

The engine fan is designed to blow air outward through the radiator, rather than pull the air inward as a conventional fan does.

Refer to the engine Operation and Maintenance Manual in Chapter 5 for more engine details.

**d. Engine faults**

The following is a table listing faults which may occasionally occur. Column two of the table explains what happens in the engine's circuitry when the fault occurs, and column three tells how to return the generator set to service.

ENGINE FAULTS		
Engine Fault Condition	What This Fault Condition Does	To Put the Generator Set Back into Service:
Over temperature or low oil pressure	Automatically removes power from the electric governor controller, shuts down the engine, and turns on the applicable indicating light.	a) Press the engine stop button (20, Fig. 5) to turn off the indicating light and reset the protective system. b) Or use E-STOP (4, fig. 1) button for immediate reset.
Low fuel	Turns on the low fuel indicating light (27, Fig. 5). Depending on the position of JP2 and JP3 on the control PC board, a low fuel fault may cause the engine to idle, shut down, or continue to run at rated speed.	a) The low fuel fault indicating function must be reset by pressing the engine stop button (20, Fig. 5). Fuel must be added prior to attempting another engine start. b) Or use E-STOP (4, fig. 1) button for immediate reset.
Clogged air cleaner or other restriction in the combustion air inlet.	Turns on the air cleaner restriction indicating light (6, Fig. 5)	a) Press the engine stop button (20, Fig. 5). The restriction must be removed prior to attempting another engine start. b) Or use E-STOP (4, fig. 1) button for immediate reset.

**e. Hobart Installed Equipment**

This generator set is modified at Hobart Brothers by the addition of the following equipment:

(1) Shut Down/Reset device

In addition to the other devices provided by the engine manufacturer, an engine shutdown/reset feature is added by Hobart Brothers.


a. **EMERGENCY SHUTDOWN/RESET SWITCH** (mushroom button).

The emergency shutdown switch has two purposes. One is to **Reset** the starting circuit following a failed starting sequence. The other is to provide instant **shut off** of the generator set by disconnecting power to the governor circuit through the control box. It is located on the left side of the generator set on the door near the control box.

To operate the **EMERGENCY SHUTDOWN/RESET SWITCH**:

Push button in until engine stops or until button travel stops

Pull the button back out to reset

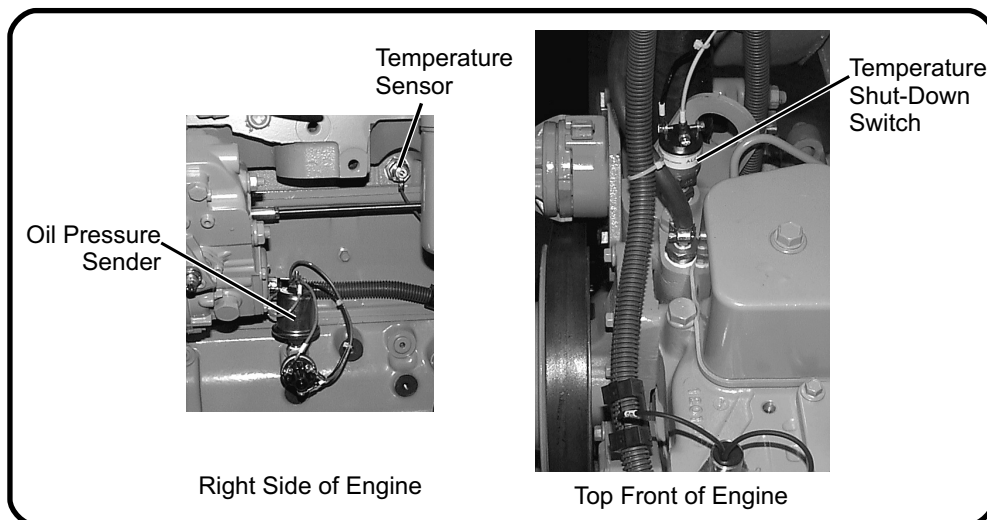

**Temperature Shut-Down  
Switch and Oil Sender  
Figure 3a**

## (2) Engine Safety Devices

In addition to the safety devices provided by the engine manufacturer, other engine shutdown features are added by Hobart Brothers

### a. Coolant high temperature shutdown system

The coolant temperature shutdown system consists of a Hobart supplied temperature switch. This switch controls a relay in the control box, which is in series with the governor system. This relay will stop the engine if the temperature reaches 205° F (96° C).

### b. Oil pressure shutdown system

The oil pressure shutdown system consists of a Hobart supplied oil pressure switch. This switch is diaphragm operated and held in closed position by any normal oil pressure above 12 PSI (83 kPA). It is connected in series with the fuel shutoff valve and will open the holding circuit if the oil pressure drops to 12 PSI (83 kPA) or below.

## (3) Electric governor system

An electric governor kit is installed on the engine to replace a conventional mechanical type. The electric governor was selected for control of engine speed (and generator output frequency) because it provides faster engine response to changes in load conditions. This fast response results in very close frequency control. A brief description is given below:

The governor system consists of the following main components:

### a. Magnetic pickup

The magnetic pickup is a device for detecting the speed of the engine. It is mounted in the flywheel housing directly over the ring gear. It produces an AC signal to the control unit when the ferrous flywheel teeth pass through the magnetic field at the end of the pickup.

### b. Control unit

The control unit is a box containing a compact assembly of solid state components. It receives an AC signal from the magnetic pickup and senses speed changes in the engine. It provides a voltage signal to the actuator which causes the actuator to move the fuel control lever as required to maintain a predetermined engine speed. Its power is received from the 12-V DC battery system.

### c. Actuator

The actuator supplies the force needed to move and position the fuel lever as required to maintain a constant engine speed. The actuator is operated by a DC signal from the control unit.


(4) Radiator

The radiator is a one-piece type designed for long periods of operation without servicing. Refer to Section 2-1 for servicing procedure.

(5) Air cleaner

The diesel-engine air cleaner (fig. 4) is so constructed that air enters through its cylindrical body, and then is filtered in the process before being passed onto the engine turbo-charge assembly.

An air cleaner service indicator device is mounted on the air cleaner assembly to monitor air flow in the air cleaner. As the air cleaner becomes filled with dust, dirt, and carbon, the intake system air flow becomes increasingly restricted. This restriction causes a diaphragm inside the indicator to move toward an electrical contact. When the maximum allowable restriction level is reached, the circuit closes and the air cleaner indicator light (6, Fig. 5) on the engine-generator control panel is illuminated to warn the operator that the air cleaner must be changed. The electrical indicator automatically resets after a new air cleaner is installed.

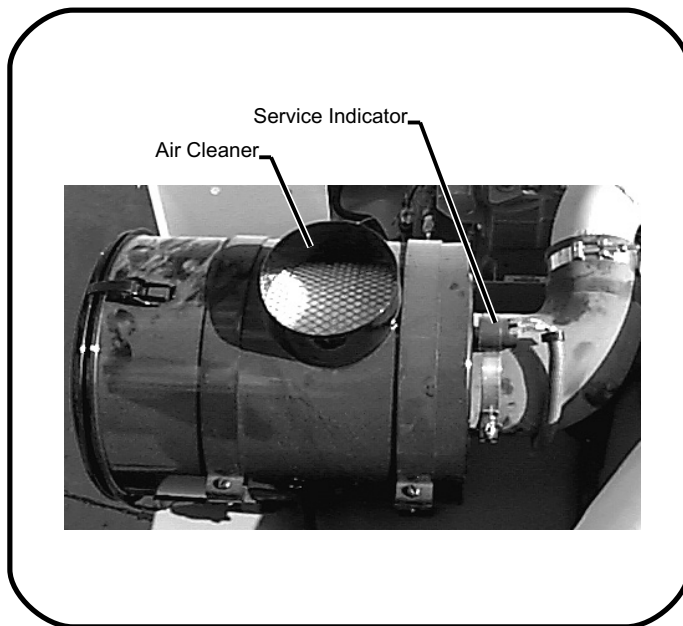

**Air Cleaner and  
Service Indicator  
Figure 4**

**f. Generator**

The 400 Hz generator is a brushless, revolving field, three-phase, alternating current type. The generator set covered by this manual is a dual-bearing type. The front end of the rotor shaft extends forward beyond the front bearing and is attached to the engine flywheel by a flexible coupling assembly. The rear end of the rotor shaft extends rearward beyond the rear bearing and into the exciter stator housing. The exciter rotor is mounted on this shaft extension with a key and is secured by a washer and 1/2"-13 thread cap screw. A rectifier with three diodes is mounted on the exciter rotor and converts exciter AC output to DC for excitation of the generator revolving fields. The exciter DC output to the generator fields, and consequently the generator output, is controlled by the amount of DC voltage supplied to exciter fields by the voltage regulator. A centrifugal, radial-blade fan which is part of the flexible coupling assembly, draws cooling air over all internal windings. Air enters at the exciter end and is discharged at the drive end. The complete generator is bolted to the engine flywheel housing.

## 7. Control Box Assembly

The control box is a sheet metal enclosure which houses and provides mounting facilities for engine and generator controls and monitoring equipment.

### a. Control Panel (Fig. 5)

On the door of this control box is the control panel. The control panel is divided into three sections. On the left side of the control panel, as one faces it, are engine meters and indicating lights. On the right side of the control panel are generator meters and indicating lights. At the bottom of the control panel are push-button switches for operating the engine and generator.

#### (1) Panel lights and panel light push-button switch

Meters are lighted from inside the control panel. They are controlled by a push-button switch (28) at the bottom left on the control panel.

#### (2) Engine hour meter

The hour meter (5) is electrically driven from the 12-V DC battery system. The hour meter measures and records engine running time and will record up to 9999.9 hours on five revolving drums. It is only functional when the engine is running and the oil pressure safety shutdown switch, mounted on the engine block, is closed.

#### (3) Engine oil pressure gage

The oil pressure gage (7) is an electrical type which is connected by a wire to an oil pressure sensor installed in the engine lubricating system. The range is 0 to 125 PSI (0 to 862 KPA).

#### (4) Engine ON indicating light

When the engine control push-button switch (26) is pressed to start the engine, a green indicating light within the push-button switch glows.

#### (5) Engine coolant temperature gage

The temperature gage (3) is an electrical type which is connected by a wire to a water temperature sensor installed in the engine cooling system. The gage indicates engine coolant temperature in the range of 100 to 280 ° F (38 to 137° C).

#### (6) Engine start push-button switch


This push-button switch (26), when pressed, connects 12-V DC power to the starter solenoid coil which actuates the solenoid switch to connect power to the engine starting motor. 12-V DC power is supplied directly to the governor controller and the oil pressure safety shutdown switch is bypassed. This bypass is necessary for engine starting because the low oil pressure switch is CLOSED until the engine is running normally.

When pressed a second time, this push-button switch provides a 12-V DC signal to the speed adjust PC board on the governor controller, which causes the governor actuator to adjust the engine speed to 2400 RPM. At the same time, a ground signal is provided to the regulator, enabling the generator to build up voltage for 400-Hz generator output.

Pressing the push-button switch once more removes these signals and the engine reverts to idle speed.

#### (7) Engine stop push-button switch

When the engine stop push-button switch (20) is pressed once, the indicator within the switch will glow (red). Then a 3 - 5 minute delay will occur to permit the turbo and other engine components to cool evenly. After the delay, power is disconnected from the governor controller. This governor actuator will then close and shut off fuel to the engine so the engine can shut down.

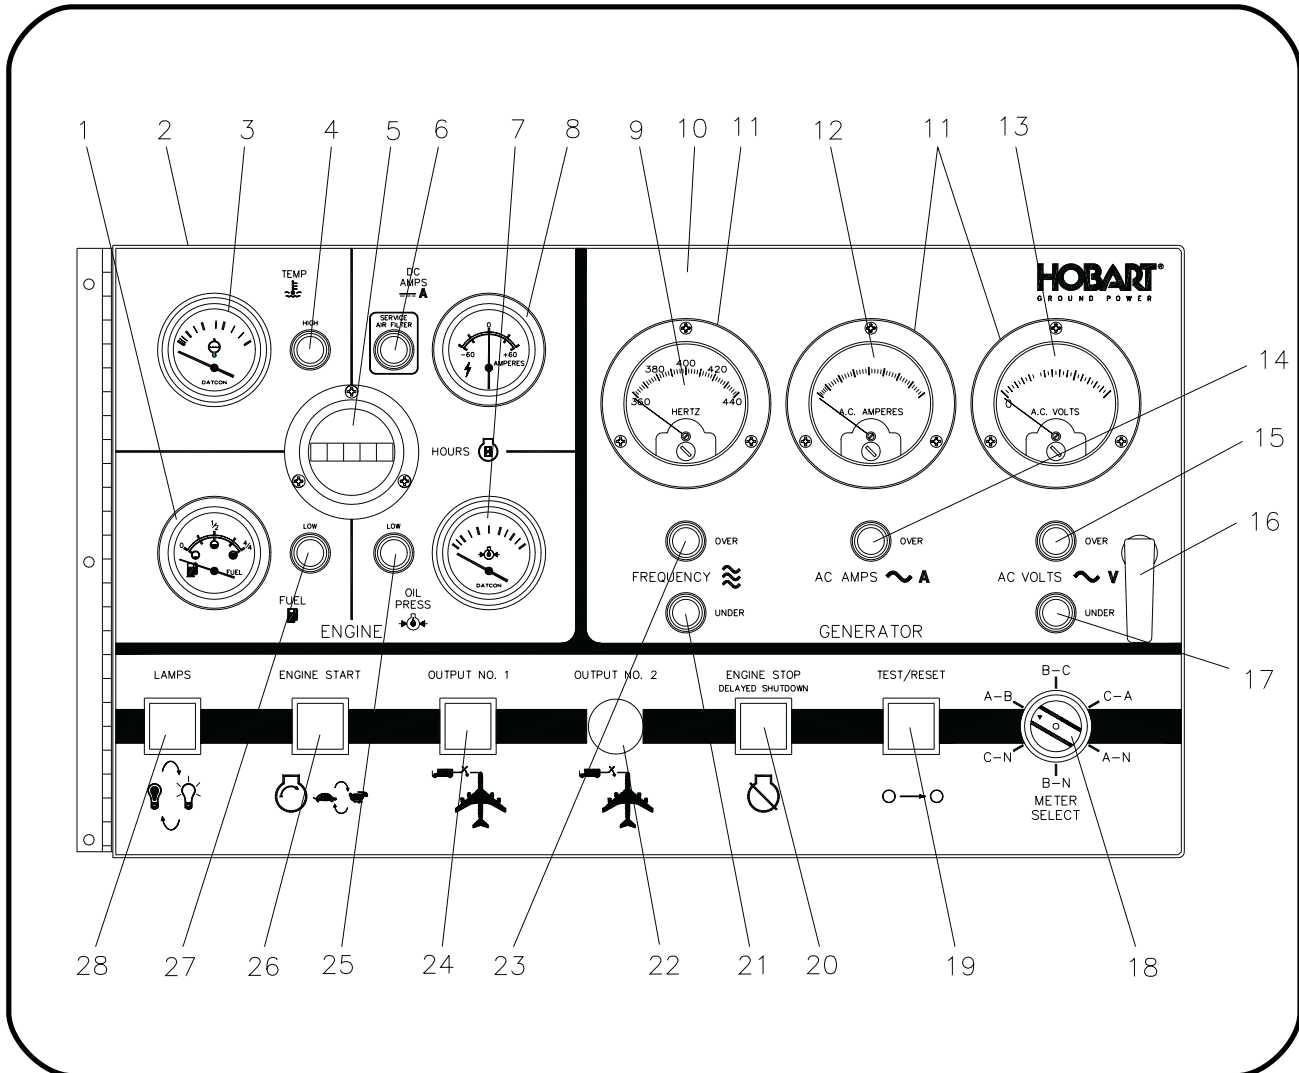

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>1. Fuel Gage</li> <li>2. Front Panel</li> <li>3. Engine Coolant Temperature Meter</li> <li>4. Over Temperature Indicator Light (Red)</li> <li>5. Engine Hour Meter</li> <li>6. Indicating Light, Air Cleaner Restriction (Red)</li> <li>7. Oil Pressure Gage</li> <li>8. Engine Ammeter</li> <li>9. Frequency Meter</li> <li>10. Control Box Label</li> <li>11. Strip Lights (3)</li> <li>12. Generator Ammeter</li> <li>13. Voltmeter</li> <li>14. Overload Indicator Light (Red)</li> <li>15. Over Voltage Indicator Light (Red)</li> </ul> | <ul style="list-style-type: none"> <li>16. Adjustable Grip Latch</li> <li>17. Under Voltage Indicator Light (Red)</li> <li>18. Meter Selector Switch</li> <li>19. Test-Reset Push-Button Switch (Red)</li> <li>20. Engine Stop Push-Button Switch (Red)</li> <li>21. Under Frequency Indicator Light (Red)</li> <li>22. Hole Plug</li> <li>23. Over Frequency Indicator Light (Red)</li> <li>24. No. 1 Contactor Push-Button Switch (Yellow)</li> <li>25. Low Oil Pressure Indicator Light (Red)</li> <li>26. Engine Start Push-Button Switch (Green)</li> <li>27. Low Fuel Indicator Light (Red)</li> <li>28. Panel Light Push-Button Switch (Yellow)</li> </ul> |
|--|---|

**Engine Generator Control Panel**  
**Figure 5**



(8) Engine ammeter

The ammeter(8) indicates the direction and value of current flow from or to the 12-V DC battery. Its graduated range is from -60 A through 0 A to + 60 A.

(9) Engine fuel gage

An electric fuel gauge(1) receives its controlling signal from a sending unit in the fuel tank. Twelve volt DC operating power is supplied to the fuel gauge when the green engine start push-button switch(26) is pressed. The fuel level can be checked when the unit isn't running by pressing the yellow lamps push-button switch (28).

(10) Protective system Indicating lights, test and reset push-button switches

The function of this set of five lights (14, 15, 17, 21 and 23)is to indicate, to the operator, the abnormal condition of over voltage, under frequency, etc., which caused the protective monitor system to function. Each of the five lights is connected to an actuating circuit within the memory and time delay module. When one of the circuits is activated, it turns on the applicable indicating light. The light will remain on until the test/reset push-button switch (19) is pushed. All lamps in indicating lights may be tested by pressing the test/reset push-button switch. A lamps test should be performed only when disconnected from a load, as the contactor(s) will open during the test cycle.

(11) Engine systems warning lights (red)

Four red indicator lights are illuminated to warn the operator of abnormal engine operations which must be corrected. These indicators are: The over temperature indicator light (4), air cleaner restriction indicator (6), low oil pressure indicator light (25), and low fuel indicator light (27). The function of the air cleaner indicator circuit is explained in detail in Para. 6, E, (4).

(12) Generator output monitors (*meters*)


The generator output is monitored by three instruments; a frequency meter (9), a voltmeter (13) , and an ammeter (12). The frequency meter is an analog type, and indicates the frequency of the generator output alternating current in the range of 360 to 440 Hz (*cycles per second*). The voltmeter indicates the generator output voltage in each phase-to-neutral (A-N, B-N and C-N) or phase-to-phase (A-B, B-C and C-A) as selected by the meter selector switch (18). The voltmeter has a 3-1/2-inch face and the scale is graduated 0 to 600 V. The ammeter is also 3-1/2-inch size and is graduated 0 to 250 A. The amperage value in each of the three phases may be read on the ammeter by selecting the desired phase with meter selector switch (18). Three ammeter current transformers, located on the output module (Fig. 9), lower the output load current to a lesser value, of definite ratio, which will operate the ammeter movement without damage. The ammeter dial scale is graduated and numbered so that the pointer will indicate the true load current value rather than the meter movement current.

(13) Voltmeter-ammeter selector switch

This switch provides a means of selecting and determining which phase of voltage and current is indicated on the voltmeter and ammeter and whether the voltage is line-to-neutral or line-to-line. The meter switch (18) is a six-position, rotary type. A nameplate, located under the switch knob, is marked and lettered to indicate the six functional positions of the meter switch.

(14) Load contactor indicating lights

Indicating lights within the respective contactor control push-button switches (24 yellow) glow when the circuit is energized, indicating that power is available at the plug. When the load contactor opens for any reason, the light is turned OFF.

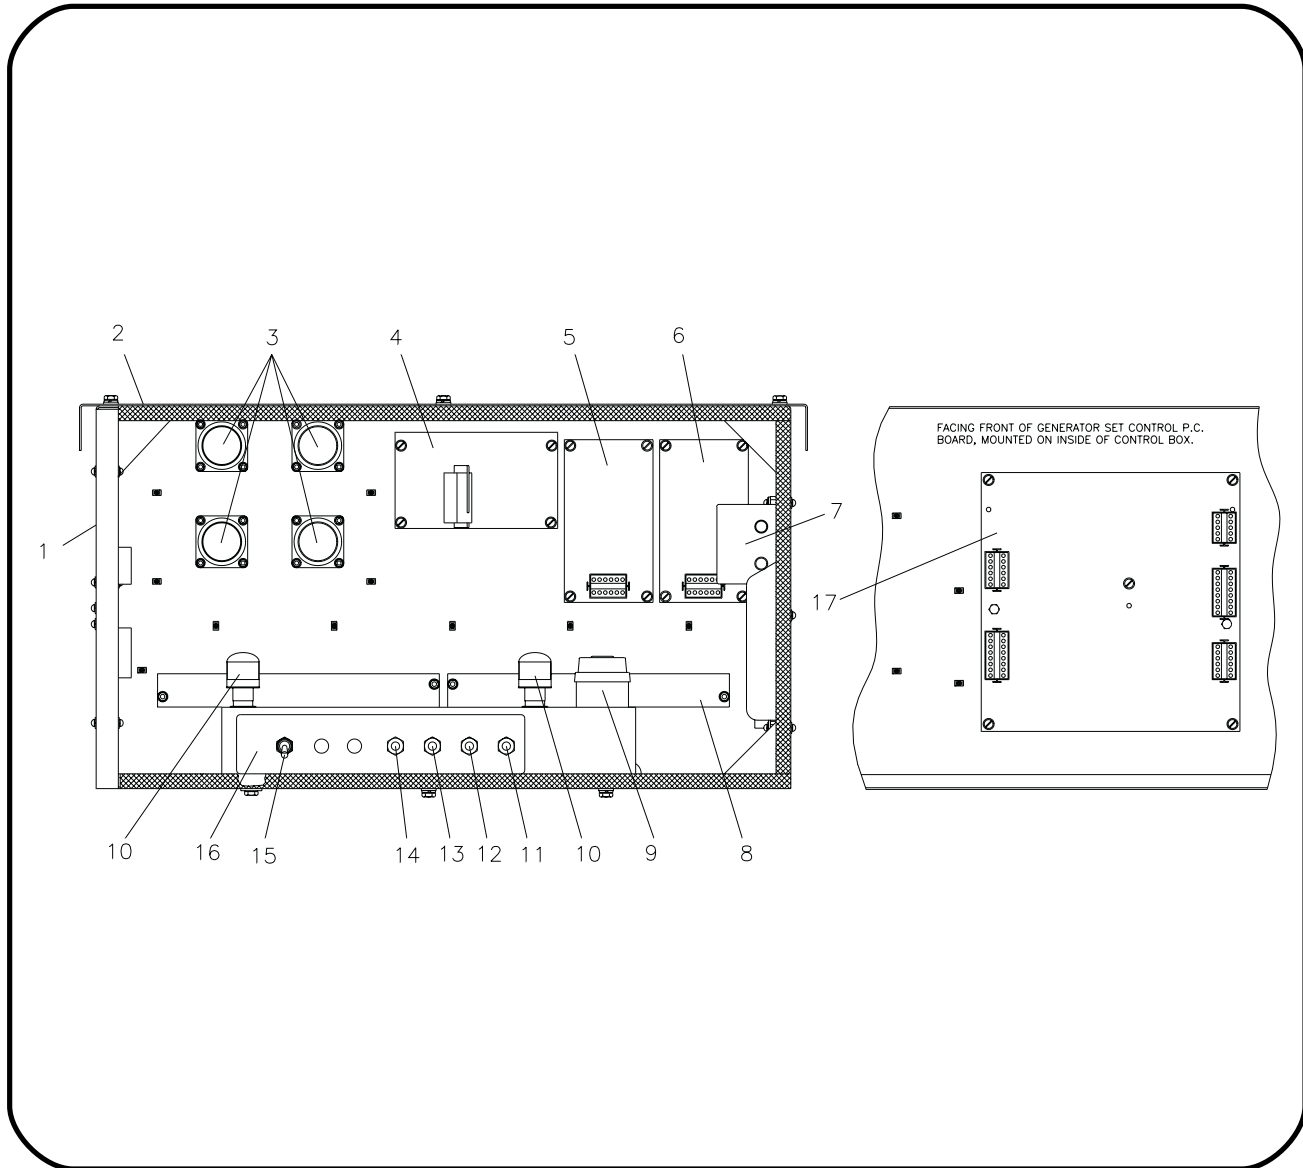

- |                                   |  |
|-----------------------------------|--|
| 1. Control Box Wrapper            | 11. Engine Circuit Breaker (10A)       |
| 2. Control Box Top                | 12. Controls Circuit Breaker (5A)      |
| 3. Receptacles (4)                | 13. Marker Light Circuit Breaker (10A) |
| 4. Memory and Time Delay PC Board | 14. Contactors Circuit Breaker (5A)    |
| 5. Over-Under Frequency PC Board  | 15. Regulated / Diagnostic Switch      |
| 6. Over-Under Voltage PC Board    | 16. Label, Switch Mounting Bracket     |
| 7. Voltage Regulator PC Board     | 17. Generator Set Control PC Board     |
| 8. Terminal Blocks (2)            |  |
| 9. Delay Shutdown Relay           |  |
| 10. Panel Lights (2)              |  |

**Control Box  
 Interior Components  
 Figure 6**

**b. Control Box Interior Components (Fig. 6)**

**(1) Regulated-diagnostic switch**

When the regulated-diagnostic switch (15) is in the REGULATED (down) position, generator output voltage is regulated by the solid state voltage regulator (7, Fig. 6, and Fig. 8) for 240/416 V-AC output to an aircraft. When this switch is placed in the DIAGNOSTIC (up) position, battery voltage (12-V DC) is applied to the generator exciter with the engine running at rated RPM, in order to check the operation of the generator. By applying this 12 V-DC battery voltage to the exciter and observing generator output voltage, it can be determined if a particular power output malfunction is caused by a defective generator or by a defective voltage regulator. When this switch is in the MAINTENANCE position, no current is supplied to the generator exciter. However, a low-level, unregulated voltage of approximately 30-V AC will be produced at the generator output terminals due to the residual magnetism of the exciter.

**(2) Circuit breakers**

A 10-ampere circuit breaker (11), protects the 12-V DC engine governor and fault circuits, and another 10-ampere circuit breaker (13), protects the 12-V DC lighting system. A 5-ampere circuit breaker (12) protects the 12-V DC control system, and another 5-ampere circuit breaker (14) protects the circuits of the load contactors.

**(3) Memory-time delay module**

The memory and time delay module (4) is sometimes called the protective monitor module. It is a solid-state device with a hermetically-sealed, reed-type circuit. The printed circuit board includes five memory circuits and a time delay circuit. Each circuit is connected to a corresponding sensing circuit in the sensing modules. All memory circuits are connected to the module circuit relay coil, and any one of the circuits can energize the coil to open the circuit relay contacts. Thus, when a sensing device energizes any one of the module circuits, the module circuit is also energized to break the load contactor holding circuit and allow the load contactor to open. A time delay system is designed into the under voltage circuit to prevent nuisance opening of the contactor under conditions of momentary under voltage in the generator output. An under voltage condition which continues uninterrupted for a period of 4 to 12 seconds (adjustable) will cause the time delay circuit to open the load contactor. Each of the five circuits is connected to a corresponding indicating light (Fig. 5; 14, 15, 17, 21 or 23), which is turned on when a fault occurs. The module circuit will remain energized (OPEN) and the light will remain ON until the reset push-button switch (19, Fig. 5) is pushed to break the module 12-V circuit, and allow the circuit to return to normal, CLOSED position.

**(4) Sensing modules**

The voltage sensing module (6) and frequency sensing module (5) are connected to generator output leads between the generator and load contactor. These solid-state modules sense any abnormal condition of voltage or frequency and signal the solid-state circuitry of the memory and time delay module (4) to open the load contactor and disconnect output to the aircraft. Trip values are adjustable; however, adjustments should be made ONLY under laboratory conditions.

On the 400-Hz output module, one solid-state overload signaling device (1, Fig. 9), is also connected to the protective monitor module. Its function is similar to the voltage and frequency sensing modules.

Trip values for protective circuits are as follows:

Over voltage relay	Trips at 252 volts after 1-second time delay. Trips at 280 volts in 160 milliseconds. Trips at 360 volts in 50 milliseconds.
Under voltage relay	Trips at 200 volts after 7 seconds.
Over frequency relay	Trips at any value between 420-Hz and 480-Hz after a 5-second time delay. Trips immediately at any frequency exceeding 480-Hz.
Under frequency	Trips at 380-Hz or less after a 7-second time delay.
Overload time delay	Trips in approximately 5 minutes at 125% load.

(5) Generator Set Control PC Board

The generator set control PC board (17, Fig. 6 and Figure 7) is a central location for the various plug-in relays used for generator operation. Troubleshooting is thus easier for technicians working on the generator set. This PC board contains the following relays and associated circuitry.

**Master relay, K69**, routes 12-V DC power to all circuits, except panel and clearance lights. This relay is operated upon pressing the START push-button switch (26, Fig. 5), and remains in the OPERATE condition until it is RESET by the STOP push-button switch (20, Fig. 5).


**Bypass relay, K73**, is also activated by pressing the START push-button switch. Relay K73 enables the start signal to the starter solenoid for 5 seconds after it is initially activated. K73 also disables the low oil pressure fault circuit during this 5 second period.

**Idle-excitation relay, K68**, controls engine speed and generator excitation. K68 activates to idle the engine and remove excitation from the generator. In the RESET state, K68 provides a 12-V DC signal to the governor controller, causing the engine to attain rated speed (2400 RPM). At the same time, K68 provides a ground signal to voltage regulator, which enables excitation current to the generator. When the engine is running, K68 changes from OPERATE to RESET, or vice-versa, with each closure of the START push-button switch. Auxiliary circuit also controls the idle-excitation relay. This auxiliary circuit causes the relay to operate when: (1) Engine is at rest and the start push-button switch (26, Fig. 5) is pressed, (2) Any engine fault, except the air filter restriction, occurs.

The circuit which controls K68 also drives a flasher circuit that controls the lamp within the START push-button switch (26, Fig. 5).

**Relay K72** controls the No. 1 contactor. When the engine is at rated speed, and voltage has built up, K72 changes from OPERATE to RESET, or vice-versa, with each closure of the No. 1 contactor push-button switch. An auxiliary circuit will reset K72 when the No. 1 plug is removed from the aircraft.

**Relay K70** controls panel and clearance lights. This relay changes from OPERATE to RESET, or vice-versa, with each closure of the LAMPS push-button switch (28, Fig. 5). The fuel gage is also powered by K70 when the engine is at rest. K70 is reset, turning off all lights, when the engine STOP push-button switch is pressed.

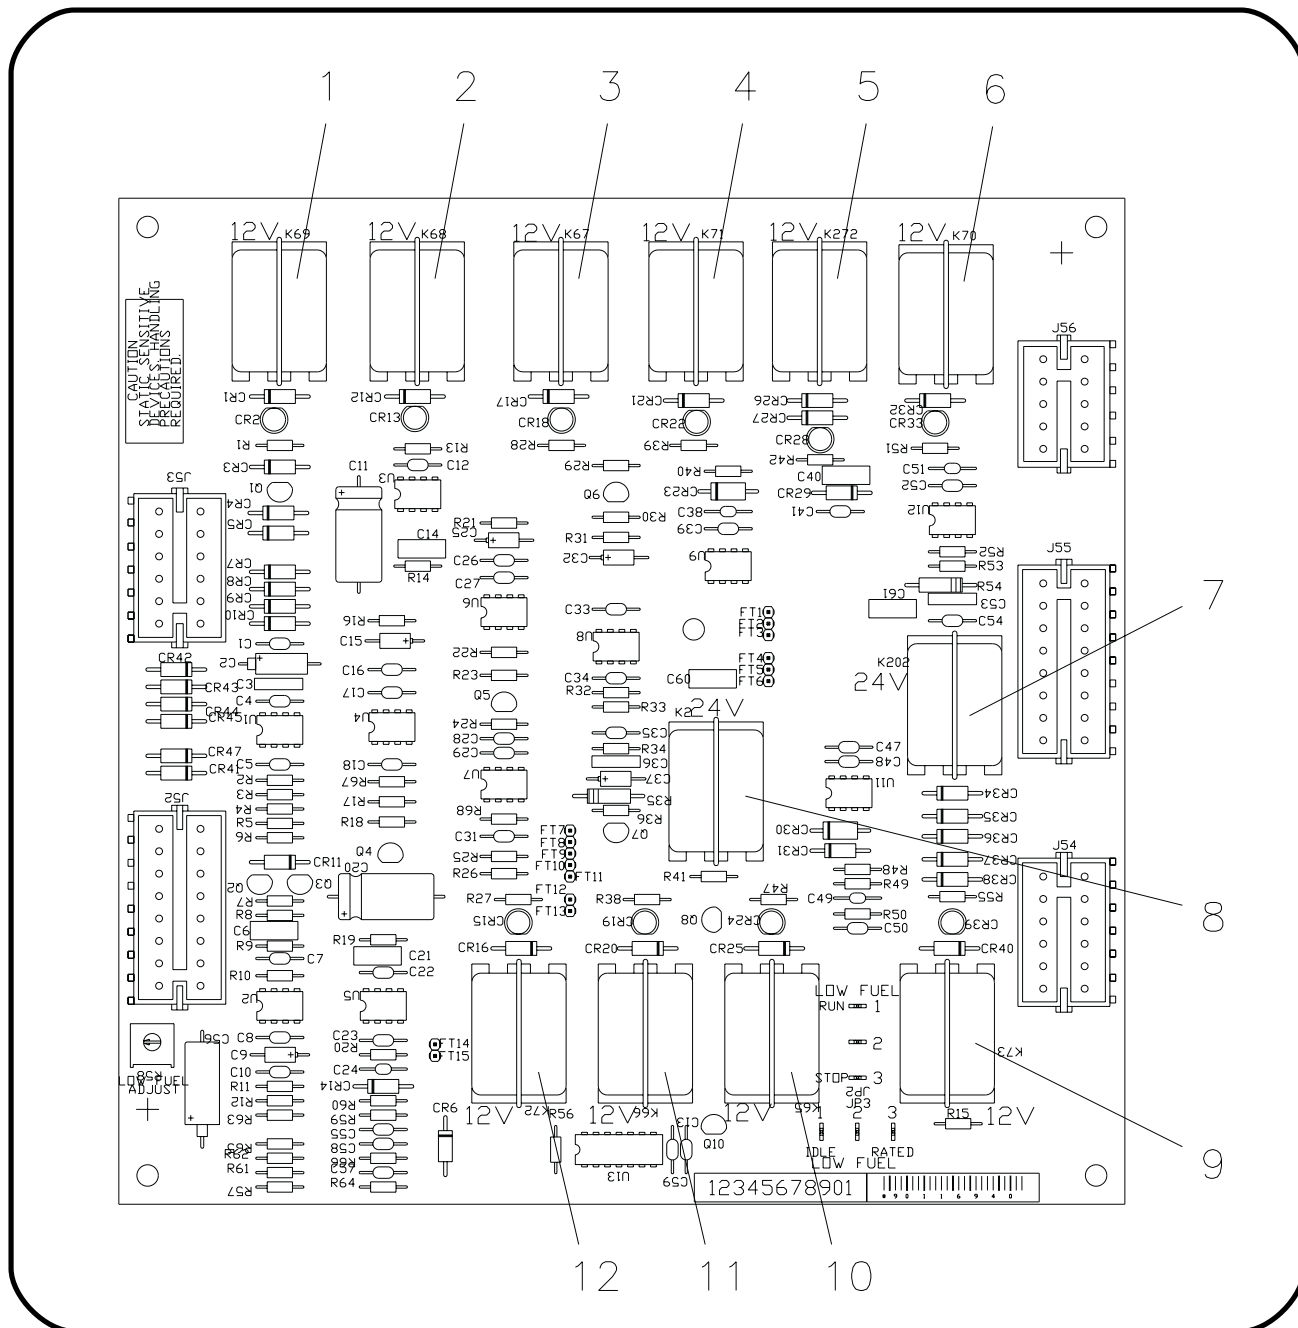

- |   |   |
|---|---|
| 1. Master Relay (K69)                     | 7. No Function                          |
| 2. Idle-Excitation Relay (K68)            | 8. No Function                          |
| 3. Over Temperature Fault Relay (K67)     | 9. Bypass Relay (K73)                   |
| 4. Low Oil Pressure Fault Relay (K71)     | 10. Low Fuel Fault Relay (K65)          |
| 5. No Function                            | 11. Air Filter Fault Relay (K66)        |
| 6. Panel and Clearance Lights Relay (K70) | 12. No. 1 Contactor Control Relay (K72) |

**Generator Set Control PC Board**  
**Figure 7**

**Relays K65, K66, K67 and K71** are fault relays. Each receives a signal from engine sensors, and illuminate panel lights to indicate the presence of a fault. Activation of the over temperature relay, K67, or low oil pressure relay, K71, result in interruption of 12-V DC power to the governor controller, causing the engine to shut down. Activation of low fuel relay K65 may result in the engine reverting to idle speed or shut-down, depending on the condition set by jumpers JP2 and JP3. The only result of an air filter fault, is that relay K66 causes illumination of the panel light. All engine fault relays remain activated until power is removed by pressing the STOP push-button switch (20, Fig. 5) or the emergency stop switch.

(6) Voltage regulator PC board


This voltage regulator (7, Fig. 6 and Fig. 8) is designed to provide 1% voltage regulation for all loads up to 100% of rated load on a three-phase, four-wire, 240/416-volt, 400-Hz brushless alternator. This regulator provides field excitation power as required to meet varying alternator load conditions to hold the alternator voltage constant. In addition, the voltage regulator PC board circuitry provides line drop compensation. Any deviation of the alternator voltage from its set, regulated level is sensed at the voltage regulator PC board. The sensing signal is compared to a reference signal, and, with associated circuitry, varies the field power supplied to the rotary exciter.

When the machine is started, and the engine is at rated speed, the rotary exciter is excited from alternator residual magnetism through the half-wave rectifier bridge, located on the voltage regulator PC board assembly. As the rotary exciter voltage increases, alternator excitation increases and the alternator voltage builds up. The sensing circuit of the voltage regulator PC board then compares the input voltage to a reference voltage and adjusts the field power of the rotary exciter to bring the voltage into regulation limits.

When the alternator is loaded, its terminal voltage decreases, lowering the rectified three-phase voltage of the voltage sensing circuit. The sensing voltage is low in respect to its reference voltage, causing the voltage regulator PC circuitry to increase the power to the field of the rotary exciter. The alternator voltage increases until the voltage returns to its regulated value.

When a load is removed from the alternator, the alternator voltage rises. The rectified three-phase voltage sensing signal increases, causing this signal to be higher than the reference signal. The associated voltage regulator circuitry causes the field power of the rotary exciter to decrease, lowering the alternator voltage until the voltage returns to regulated value. The line drop voltage compensation circuit consists of: (1) A current transformer on each phase of the load circuit, and (2) A fixed resistance in parallel with each current transformer. The current transformers detect the magnitude of current flowing through the power cables from the alternator to its load and feed a signal into the voltage regulator PC board. The PC board processes this signal to change the output voltage proportional to the current draw. The regulator output increases slightly so that the alternator output voltage is equal to the regulated voltage plus the voltage drop in the lines. The line drop compensation potentiometer may be adjusted to match exactly the voltage drop of the power cables carrying the load current.

A receptacle connector at the bottom of the voltage regulator PC board provides a quick connect-disconnect facility for interconnecting wire leads.

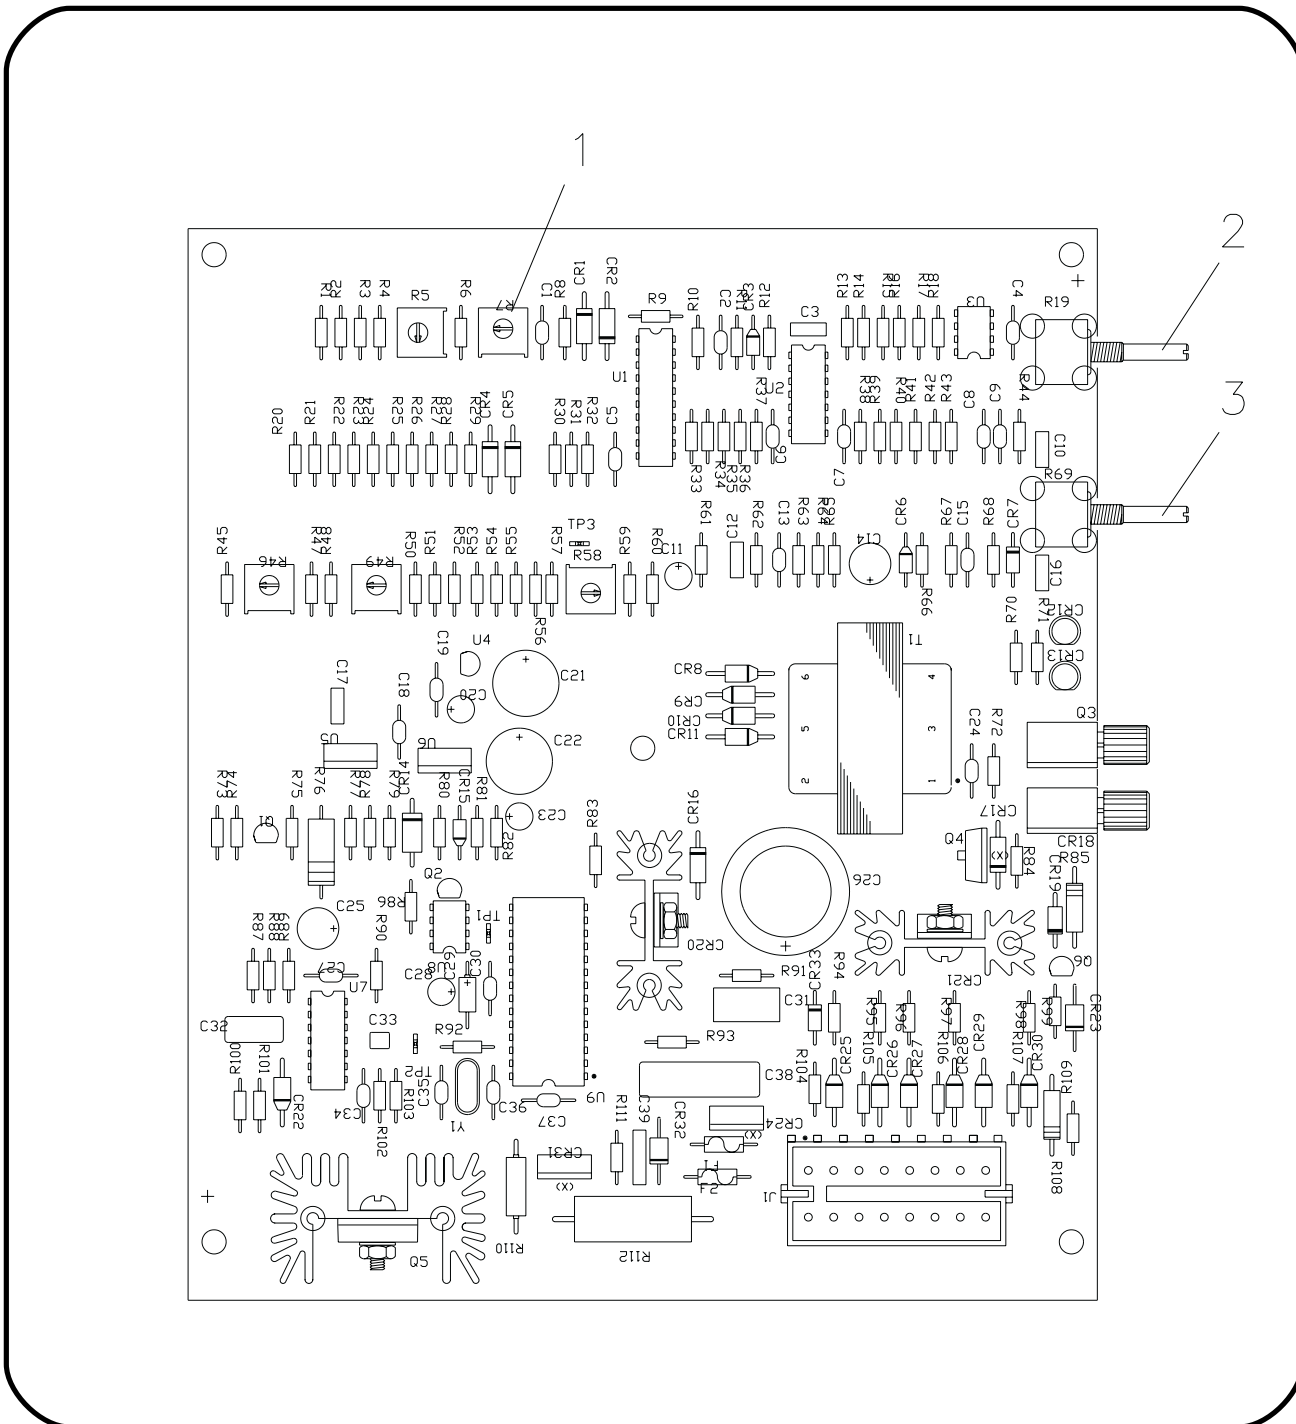

- 1. Output Voltage Adjustment (Course)
- 2. Output Voltage Adjustment (Fine)
- 3. Line Drop Compensation Adjustment

**Voltage Regulator PC Board**  
**Figure 8**

## 8. 400 Hz. Output Module Panel Assembly (See Fig. 9)

The output module panel assembly, sometimes referred to as the contactor panel, is located at the left front of the machine under the control box. It is accessible by opening the left front door and then removing the clear lexan and steel panels below the control panel. The panel assembly provides sensing and overload protection for the output circuit and provides a means of connecting and disconnecting generator output to and from the load.

### a. Load contactor

The load contact (5) contains a magnetic operating coil and four sets of contacts. The three larger conduct three-phase AC generator output. A small contact set is connected in the protective monitor circuit and supplies 12-V DC power used by sensing relays to signal the protective monitor when a fault occurs. Three-phase, 400-Hz generator output power is conducted to the load contactor by 2/0 cables which pass through two sets of current transformers.

### b. Current transformers

#### (1) Line-drop current transformers

Items 2 and 3 (Fig. 9) are line-drop current transformer-burden resistor combinations. They work in conjunction with one another to detect the magnitude of current flowing from generator to load. They feed a signal to the voltage regulator which interprets the signal and alters the exciter field current as required to maintain a constant predetermined voltage at the load.

#### (2) Generator ammeter and overload current transformers

Three overload current transformer-burden resistor combinations (4 and 6) work in conjunction with one another, to convert a current signal to a voltage signal which is sent to the ammeter and to the overload sensing board. The ammeter is really a voltmeter graduated and numbered in amperes to show current proportional to the voltage signal received. This ammeter is so graduated and numbered that, when cables running through the current transformers carry a current of 166 amperes (rated load), 6.67 volts is sent to the ammeter. The ammeter will indicate it as 166 amperes.

### c. Overload Conditions

When an overload condition develops, wherein load exceeds 325 amperes (125% of rated load) the overload sensing board (1) sends a signal to the memory and time delay PC board (4, Fig. 6). This signal, which is the same one used in the ammeter circuit, interrupts the load contactor circuit to open the load contactor.

#### (1) Generator overload module

When there is load on the generator set, and an overload condition exists which exceeds 125% of the generator's rated load, this solid-state overload module (1) interprets a signal from the generator overload current transformers (6) and sends a signal to the memory and time delay PC board (4, Fig. 6).

To do this, the overload module is equipped with a hermetically-sealed, reed-type relay. Relay contacts are normally open. The solid-state circuitry is designed to close relay contacts when output current reaches 125% of normal rated output capacity. The closed relay sends a signal to the protective monitor. This signal gates the overload SCR (silicon-controlled rectifier) in the protective monitor and opens the contactor (5).

The following is a list of overload module characteristics:


At 125% load the module will function in 5 minutes.

At 150% load the module will function in 16 seconds.

AT 200% load the module will function in 4 seconds.

**NOTE:** The overload protective system will function when any phase carries 123% to 127% of rated load. All times are plus or minus 25% and are adjustable.



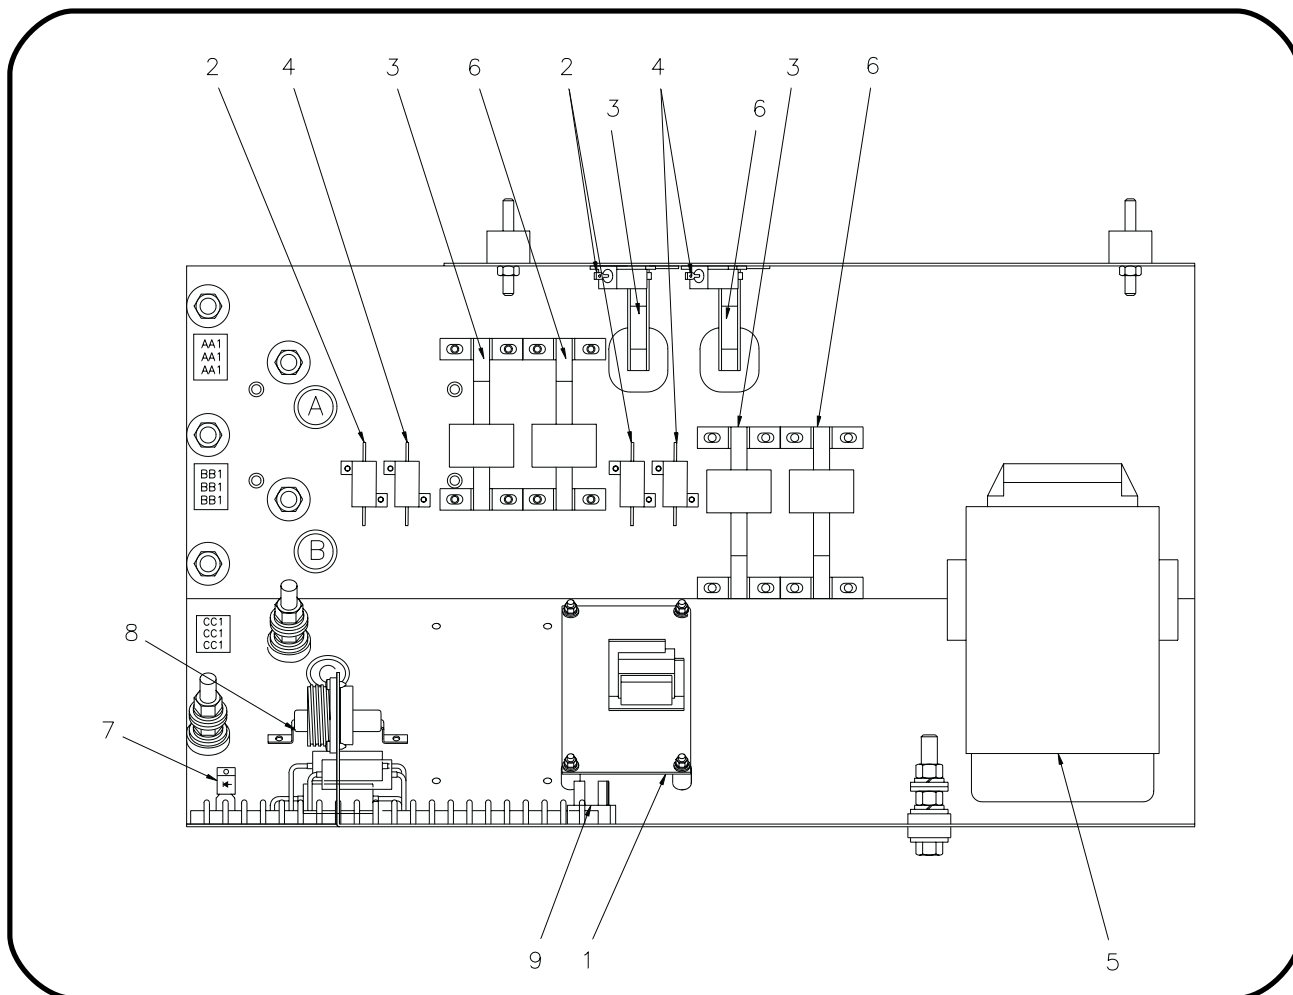

- |   |   |
|---|---|
| 1. Overload PC Board (K4)                     | 6. Overload Current Transformer (T30, T31, T32) |
| 2. Resistor, 50 ohm, 20 watt (R16, R17, R18)  | 7. Fly-back Diode, Exciter (CR10)               |
| 3. Line Drop Current Transformer (T4, T5, T6) | 8. Resistor, 100 ohm, 25 watt, Contactor (R46)  |
| 4. Resistor, 25 ohm, 20 watt (R33, R34, R35)  | 9. Rectifier, Contactor (CR6)                   |
| 5. Load Contactor (K1)                        |   |

**Single Output Power Module**  
**Figure 9**

**d. Rectifier**

A diode-bridge rectifier (9) receives 400-Hz AC from phase C of the generator output and converts it to a pulsating, direct current for energization of the load contactor holding coil only. This DC coil-holding circuit is controlled indirectly by controlling the 400-Hz AC to the rectifier. The ground circuit for the rectifier's AC supply must pass through the relay contacts in the protective monitor module to ground cable N. Therefore, any time a protective device functions to open the protective monitor relay, the rectifier's AC circuit is opened. No DC is then available for the load contactor holding coil, hence, the load contactor opens.

## 9. Cold Weather Starting System

This cold weather starting system is used for starting the engine of a generator set engine at very cold temperatures.

This cold weather starting system is a fully automatic Engine Starting Fluid System designed to spray a controlled amount of starting fluid into the air intake system of an engine during and immediately after cranking.

The system's Engine Temperature Sensor (ETS) switch determines when the System should function. When needed, the solenoid valve is activated automatically during engine cranking. Once activated, starting fluid is released from the pressurized cylinder, through a flow metering orifice fitting at the bottom of the valve through the nylon tubing, and out of an injector nozzle located in the engine's air intake system. A reservoir in the valve maintains a flow of starting fluid after cranking to prevent the just started engine from faltering or dying.

Whenever the engine does not start within a normal period of cranking, the starting fluid cylinder may be empty. Refer to "Servicing and Troubleshooting."

---

## Section 2. Preparation for Use, Storage or Shipping

---

### 1. Preparation for Use

#### a. Inspection/Check

Inspect the unit thoroughly prior to operation.

- (1) Remove blocking, banding, ties, and other securing material.
- (2) Inspect exterior for shipping damage such as broken lights, damaged sheet metal, etc.
- (3) Open all canopy doors and inspect interior for foreign material such as rags, tools, shipping papers, etc.
- (4) Check fuel, coolant, and oil hoses and connections for visible leaks. Visually inspect the compartment floor and ground surface under the unit for signs of leakage. If leaks are found, correct by tightening hose clamps, tube fitting, etc., as required.
- (5) Check security of generator set retaining components.
- (6) Check the following for sufficient quantity:

##### a. Fuel

Press lamps button to energize fuel gage when engine is stopped. Fuel is supplied from a customer-furnished source.

**NOTE:** For recommended fuel specifications refer to the Cummins Operation and Maintenance Manual provided with this Hobart manual.

##### b. Engine coolant

Remove radiator cap to check coolant level. Coolant level should be at the bottom of the filler neck. See figure 2 for coolant capacities.

#### CAUTION

**BE SURE** the cooling system antifreeze solution is adequate to protect below lowest temperature expected.

**NOTE:** For antifreeze protection, use a solution of 50% permanent antifreeze (Ethylene glycol) and 50% clean water.

##### c. Engine lubricating oil level

The oil gage rod (See Fig 1) has "H" high mark and "L" low level marks to indicate the operating lubrication oil supply. Oil level should be kept as near the high mark as possible, without going over it. See figure 2 for oil capacity specifications.


#### CAUTION

**NEVER** operate the engine with oil level below the "L" level mark or above the "H" level mark.

See the Cummins Operation Maintenance Manual for oil recommendations.

##### d. Check Batteries

Inspect the batteries for proper connection of the terminals and also check the electrolyte level (if possible). Service or replace if necessary.

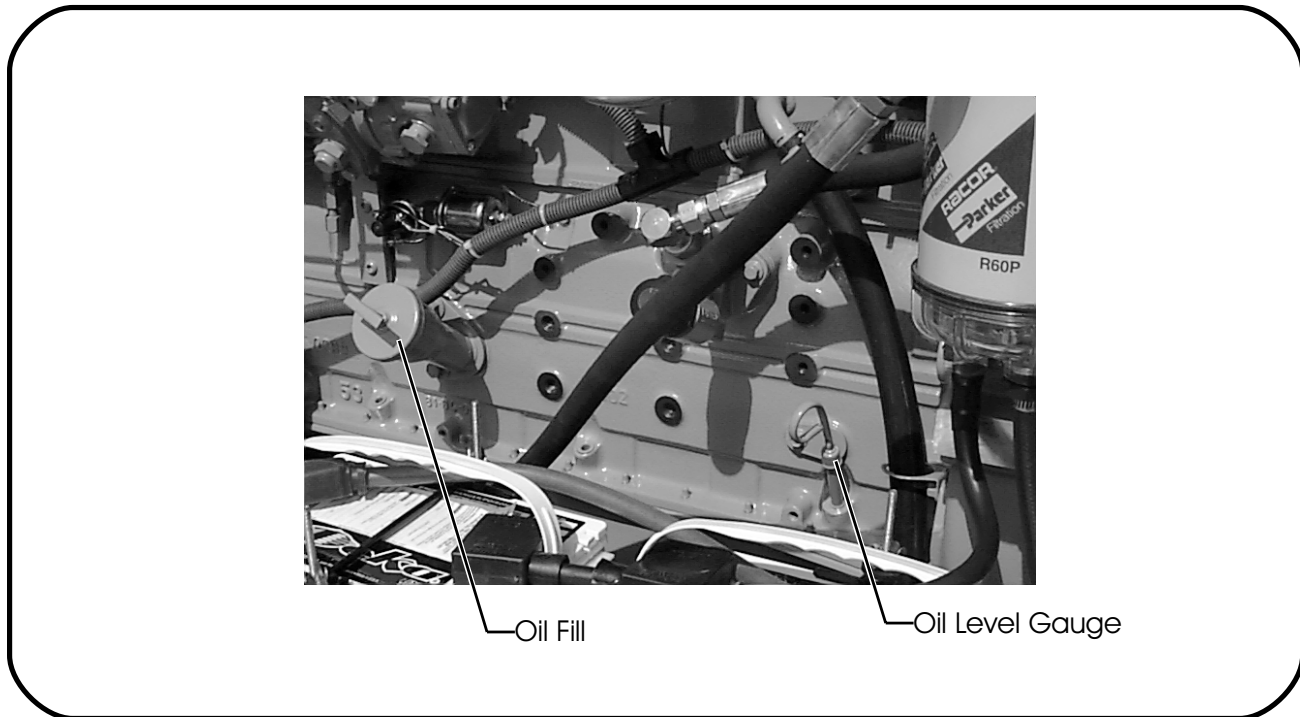

**Oil Fill and Check Location  
 Figure 1**

Lubricating oil capacity with filter	24 Quarts (22.7 liters)
Coolant capacity including radiator	38 Quarts (36 liters)
<b>Figure 2                  Capacity</b>	

## 2. Tips on Cold Weather Starting

### a. Battery and Cables

To start in cold weather, a diesel engine must crank at a fairly high speed. Worn out batteries, partially discharged batteries, and poor or loose cable connections will reduce cranking speed. Batteries, cables, and connections should be cleaned and tightened regularly.

### b. Fuel

For an engine to start and continue running, fuel must flow through the injection system. Unblended #2 diesel fuel “clouds”, forming filter-clogging waste at temperatures around + 15° F (- 10° C) making starting and running impossible. Most engine manufactures recommend that fuel have a cloud point at least 10° F (5° C) below the coldest anticipated temperature.

**c. Lube Oil**

Engine lubricating oil gets thicker at lower temperatures. Many oils that flow freely at 70° F (21° C) are extremely thick at 0° F (-18° C). Follow your engine manufacturer's recommendations regarding oil viscosity for the coldest temperatures you expect your engine to encounter.

**3. Preparation for Storage**

When a generator set is to be stored or removed from operation, special precautions should be taken to protect the internal and external parts from rust, corrosion, and gumming in the engine fuel system.

**a. General**

Pull all circuit breakers and/or disconnect battery negative terminal.

- (1) The unit should be prepared for storage as soon as possible after being removed from service.
- (2) The unit should be stored in a building which is dry and which may be heated during winter months.
- (3) Moisture absorbing chemicals (Hobart Brothers Part No. 76A-1354-001) are available for use where excessive dampness is a problem; however, the unit must be completely packaged and sealed if moisture absorbing chemicals are to be effective.

**b. Temporary Storage**

When storing the unit for 30 days or less, prepare as follows:

- (1) Lubricate the unit completely in accordance with instructions in Section 2-2. This will include changing engine oil, and all filter elements.
- (2) Start the engine and operate for about two minutes so that all internal engine components will be coated with new oil.

**NOTE:** Do not drain the fuel system or crankcase after this run.

- (3) Make certain the cooling system antifreeze solution is adequate to protect below the lowest temperatures expected during the storage period. See 2-2; Para 6. Be sure the solution is thoroughly mixed.
- (4) Clean the exterior of the engine. Dry with clean rags and compressed air.
- (5) Seal all engine openings. Use a waterproof, vapor proof material which is strong enough to resist puncture damage from air pressures.

**c. Long Time Storage (Over 30 Days)**

To protect the generator and other electrical components, the complete unit should be packaged using moisture proof packaging material and sealing material. Place containers of moisture absorbing chemicals, Hobart Brothers Part No. 76A-1354-001, in the unit before packaging. The unit may be stored for long periods with no special preparation if it is possible to operate the engine once each week. When starting once a week proceed as follows:

- (1) Make certain the cooling system is adequately protected.

**WARNING**

**ENSURE** adequate ventilation before starting the engine.

- (2) Start the engine and operate under full load until coolant temperature has reached at least 176°F (80°C).
- (3) While the engine is running, ensure that normal operating controls are in good working condition before shutdown and storage.

If weekly operation is not possible, contact the nearest Cummins Engine Company distributor for instructions.

**d. Preparation for Shipment**

- (1) Disconnect battery negative terminal before shipping.
- (2) During long shipments, the generator set retaining hardware may become loosened by vibration, jolting, etc.

**WARNING**

When shipping the unit, provide sufficient retaining materials to ensure the generator set cannot roll out of the vehicle in which it is being transported.

**NOTE:** It is suggested that strong banding be used to secure the generator set, or a strong steel bar may be welded or bolted across the front of the generator set frame.

---

## Section 3. Operation

---

### 1. General

This section contains information and instructions for the safe and efficient operation of the equipment. Operating instructions are presented in step-by-step sequence of procedures to be followed in supplying 400-Hz power.

**NOTE:** Read ALL of the Operating Instructions before attempting to operate the equipment.

#### **WARNING**

Ear protection equipment may be necessary when working close to this equipment.

### 2. Operating the Unit

#### a. Pre-start inspection

- (1) Be sure the fuel shutoff valve on the unit is open.
- (2) Ensure 12-V DC power is available to the engine starting system.
- (3) Check the engine and generator compartments to make certain they are free of rags or other foreign materials.
- (4) Make certain there is sufficient lubricating oil and coolant in the engine.
- (5) Check that all circuit breakers are reset.

#### b. Normal Engine Starting Procedures

Engine starting procedures are outlined below. Engine operating controls and monitoring instruments are illustrated in Fig. 1.

#### **CAUTION**


Refer to Operating Instructions in the Cummins Operation Manual, when starting engine for the first time.

**NOTE:** The Cummins Operation Manual is provided with this Hobart manual.

- (1) If illumination is required, press lamps push-button switch (28) one time. Pressing this button switch also activates the fuel gage. (1, Fig. 1).
- (2) Press the green engine start push-button switch (26) and hold until engine starts. The engine will start at IDLE speed, and the green light in the engine start push-button switch will flash to indicate that power is available to the engine protective circuit and electric governor.

#### **CAUTION**


Do not attempt to bring to rated speed for **at least 5 seconds** after engine starts. Damage to the starter and flywheel will result.

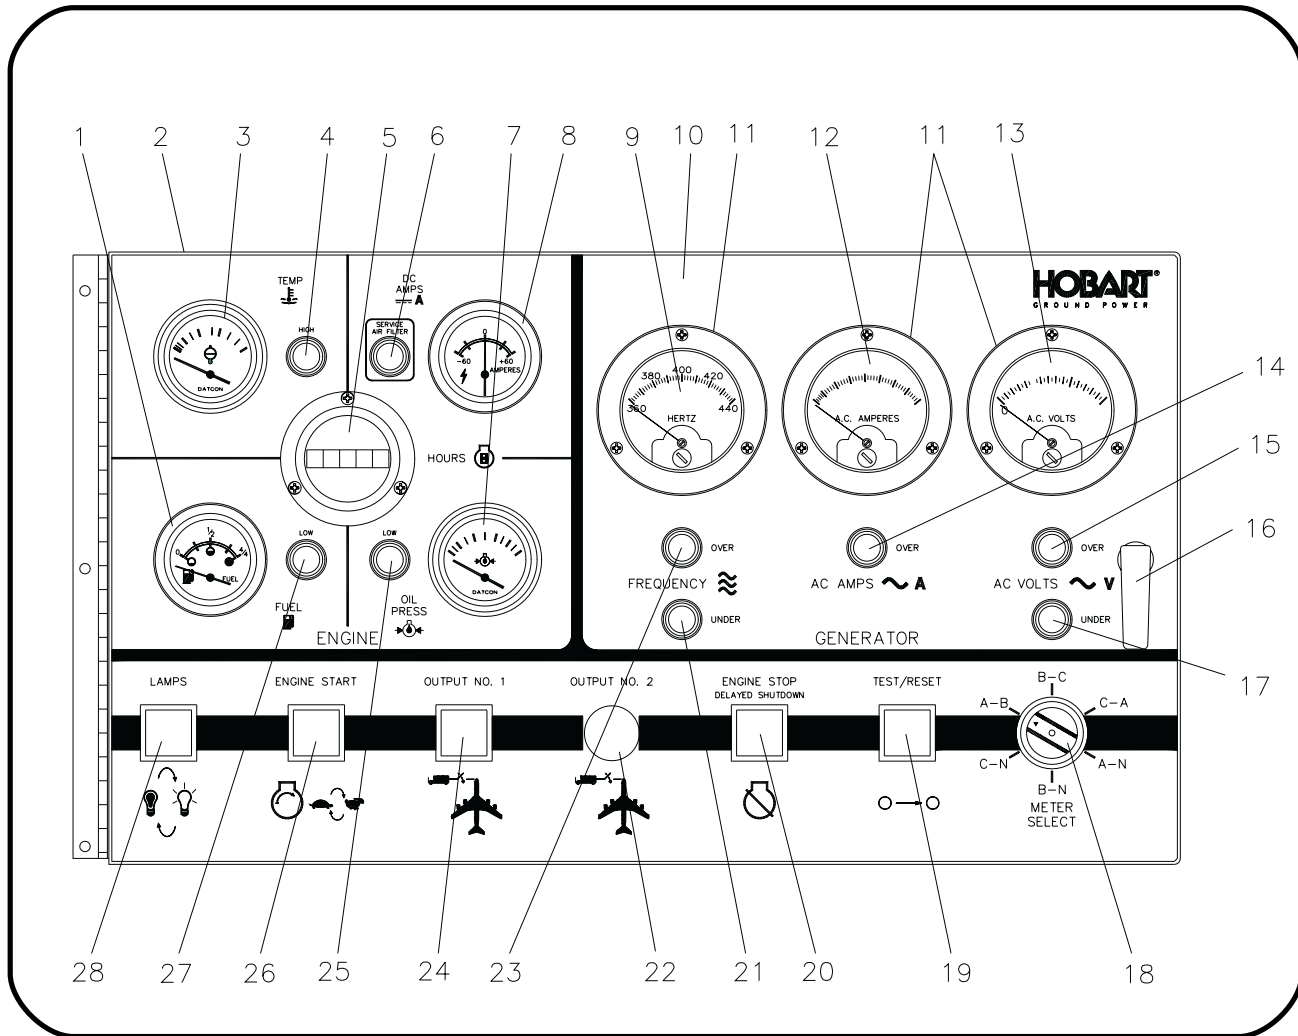

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>1. Fuel gage</li> <li>2. Front panel</li> <li>3. Engine coolant temperature meter</li> <li>4. Over temperature indicator light (red)</li> <li>5. Engine hour meter</li> <li>6. Indicating light, air cleaner restriction</li> <li>7. Oil pressure gage</li> <li>8. Engine ammeter</li> <li>9. Frequency meter</li> <li>10. Control Box label</li> <li>11. Strip lights (3)</li> <li>12. Generator ammeter</li> <li>13. Voltmeter</li> <li>14. Overload indicator light (red)</li> <li>15. Overvoltage indicator light (red)</li> </ul> | <ul style="list-style-type: none"> <li>16. Adjustable grip latch</li> <li>17. Undervoltage indicator light (red)</li> <li>18. Meter Selector switch</li> <li>19. Test-reset push button switch (red)</li> <li>20. Engine stop push button switch (red)</li> <li>21. Underfrequency indicator light (red)</li> <li>22. Hole Plug</li> <li>23. Overfrequency indicator light (red)</li> <li>24. No. 1 contactor push button switch (yellow)</li> <li>25. Low Oil Pressure indicator light (red)</li> <li>26. Engine start push button switch (green)</li> <li>27. Low Fuel indicator light (red)</li> <li>28. Panel light push button switch (yellow)</li> </ul> |
|---|--|

**Operating Controls and Instruments**  
**Figure 1 (Sheet 1 of 2)**



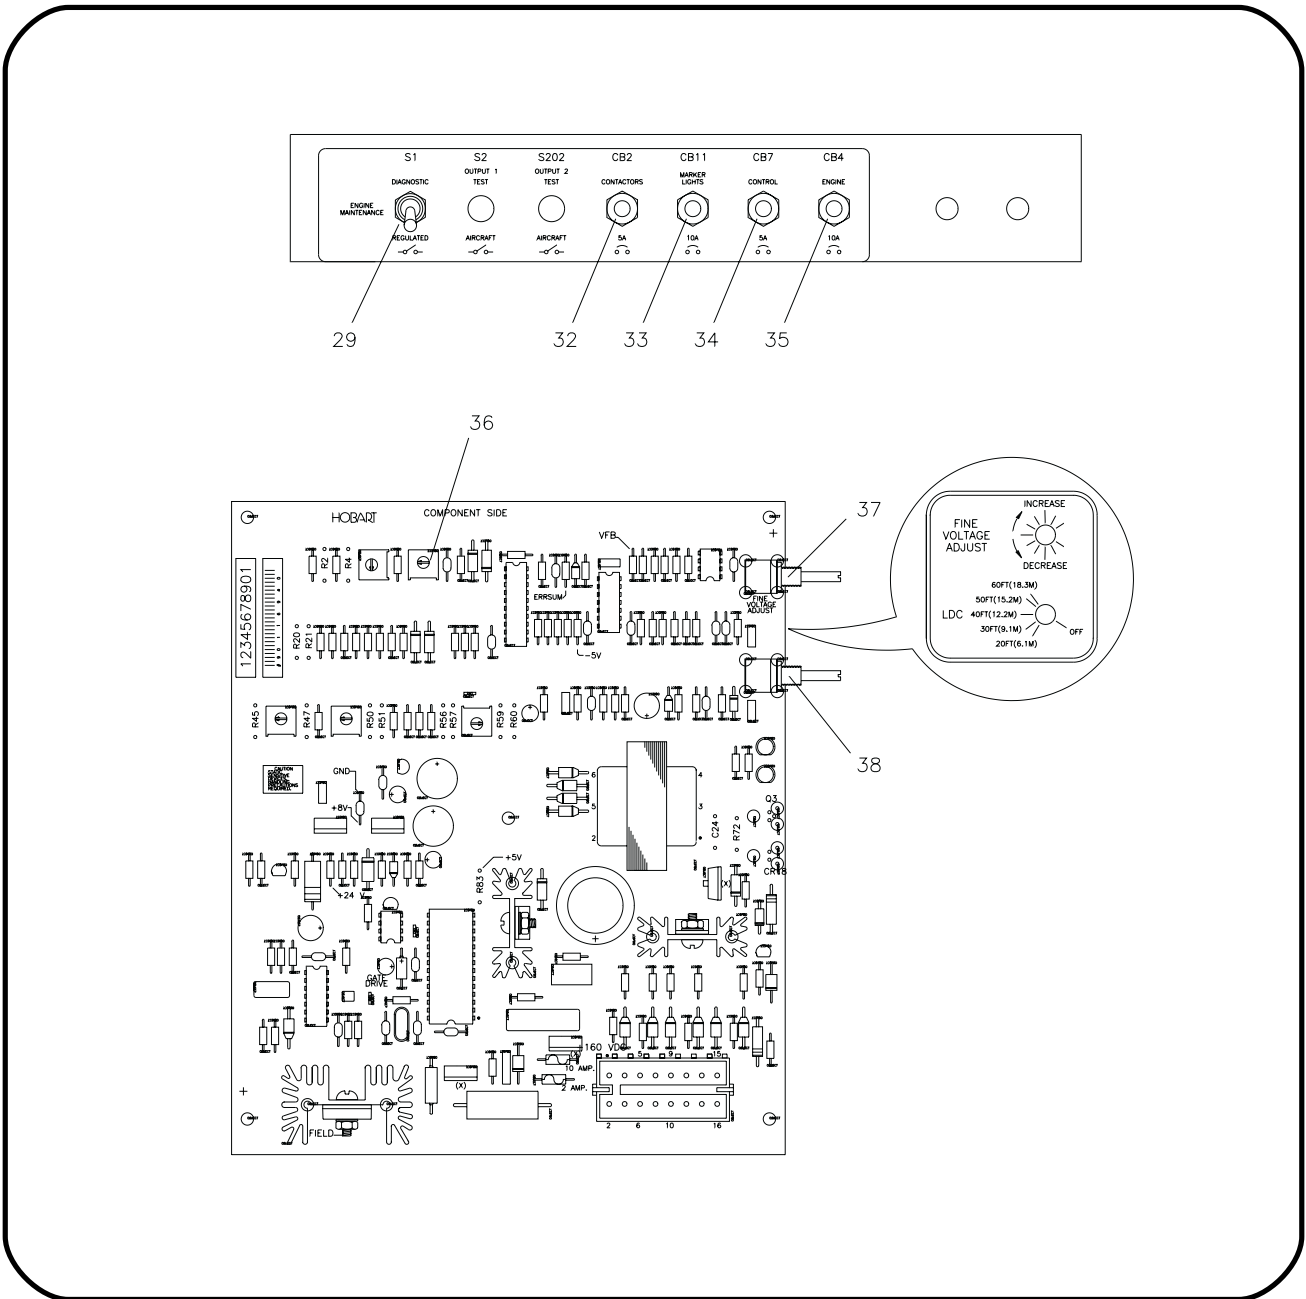

- |   |  |
|---|--|
| 29. Regulated-diagnostic switch             | 34. Circuit Breaker, control (5-amp)   |
| 30. Not Used                                | 35. Engine circuit breaker (10-amp)    |
| 31. Not Used                                | 36. Output voltage adjustment (coarse) |
| 32. Circuit Breaker, contactors (5-amp)     | 37. Output voltage adjustment (fine)   |
| 33. Circuit Breaker, marker lights (10-amp) | 38. Line drop compensation adjustment  |

**Operating Controls and Instruments**  
**Figure 1 (Sheet 2 of 2)**

**CAUTION**

If the engine fails to start within 5 seconds, the control system will automatically disable the starting motor and indicate a low oil pressure fault. The emergency stop switch must be pressed to reset the control system and allow another starting attempt. If the engine fails to start after four attempts, an inspection should be made to determine the cause.

If the engine fires sufficiently to disengage the starter gear, but does not start, allow the starting motor to come to a complete stop before attempting to engage the starter again, then press the start push button switch.

- (3) Check oil pressure to make certain that it is normal, and observe all other engine instruments for normal operation.
- (4) Allow engine to idle and warm for **3 - 5 minutes** before bringing it up to rated speed.

**CAUTION**

DO NOT allow the engine to idle for long periods of time.

**c. Failed Starting Procedure**

In the event that the engine fails to start. The circuitry must be reset before the next attempt. To do this:

- (1) Push the red **EMERGENCY STOP/RESET BUTTON** on the left side door of the generator set.
- (2) Pull the red **EMERGENCY STOP/RESET BUTTON** back out before the next attempt of starting the generator set.

**d. Power Delivery**

- (1) Press engine start push button switch (26, Fig. 1) a second time to bring engine from idle speed to rated speed. The electric governor will immediately increase engine speed to 2400 RPM and maintain it. The voltage build-up will occur automatically. Also the green indicating light in the engine start push-button (26) switch will glow continuously.
- (2) Observe generator instruments. The frequency meter (9, Fig. 1) should indicate exactly 400 Hz. With voltmeter-ammeter selector switch (18) in any line-to-neutral position, (A-N, B-N, or C-N), the voltmeter (13) should read 240 volts. With voltmeter-ammeter selector switch in any line-to-line position, (A-B, B-C, or C-A), the voltmeter should read 416 volts.

**The final step in delivering power** is closing the load contactor. When satisfactory frequency and voltage values are indicated by the instruments, close the load contactor by momentarily pressing the load contactor control push button switch (24). The yellow indicating light of the push button switch that is pressed will glow at once, to indicate that the load contactor is closed and power is available. As soon as the light glows, release the push button switch.

- (3) Early in the power delivery run it is recommended that the operator check output voltage and current in each of the three phases. Use the meter switch (18, Fig. 1) to select the phase and line-to-line or line-to-neutral voltage. If the load is changing, it is good operating practice to observe the instruments until load conditions stabilize.

**CAUTION**

NEVER press the test/reset push button switch while power is being delivered. The contactor will open and power will be suddenly interrupted.

- (4) A condition of overvoltage, undervoltage, underfrequency, overfrequency, or overload in the output circuit will automatically open the load contactor and turn on the applicable indicating light to signal the operator which of the above faults caused the protective monitor system to operate. After the fault has been corrected, press the test/reset push button switch (19, Fig. 1) to turn off the indicating light and reset the protective relay system. Proceed with power delivery by operating the load contactor push button switch.

**e. Failed Power Delivery (See Fig. 1)**

**CAUTION**

The generator set must be shut down so that the failed power delivery problems can be diagnosed. Only qualified technicians should work on this generator set.

The regulated/diagnostic switch (29) must be set to REGULATED for power delivery. This switch is located inside the control box behind the control panel.

See section 2-4 for other No. 1 Load Contactor Operating Circuit troubleshooting procedures.

**f. Discontinue Power Delivery with Unit Shutdown (See Fig. 1)**

(1) Normal conditions

- a. Push the load contactor push button switch (24) to open the contactor. The indicating light (yellow) on that switch will go OFF immediately to indicate that the load contactor has opened and power is no longer being delivered. The engine will remain at rated speed.
- b. Push the red engine stop push-button switch (20) once to bring the engine down to idle speed. This will begin the automatic shutdown sequence to shut off the engine, gauges, lights, etc., after approximately 3 - 5 minutes.

(2) Emergency conditions

- a. Depress the **EMERGENCY STOP BUTTON** (sect. 1-1; 4, fig.1) located on the left front side of the generator set canopy. When pushed, this button instantly shuts the generator set off and **must be pulled back to reset itself for restarting the generator set.**

*This page intentionally left blank.*

# Chapter 2. Servicing/Troubleshooting

---

---

## Section 1. Maintenance Inspection/Check

---

### 1. General

To make certain the generator set is always ready for operation, it must be inspected and maintained regularly and systematically so that defects may be discovered and corrected before they result in serious damage to components, or failure of the equipment.

#### **WARNING**

**STOP** operations at once if a serious or possibly dangerous fault is discovered.

### 2. Maintenance Schedule

#### a. General

A periodic maintenance schedule should be established and maintained. A suggested schedule is provided in Fig. 1 on the following pages. It may be modified, as required to meet varying operating and environmental conditions. It is suggested that generator set and vehicle inspections be coordinated as much as possible.

#### b. Maintenance Schedule Check Sheet

It is strongly recommended that the customer use a maintenance schedule check sheet such as the one in Cummins Operation Manual. The check sheet will provide a record and serve as a guide for establishment of a schedule to meet the customer's maintenance requirements for his specific operation.

#### c. Time Intervals (See Fig. 1 and 2)

The schedule is based on both hours of operation and calendar intervals. These two intervals are not necessarily the same. For example, in normal operation the oil change period, based on hours of operation, will be reached long before the three months calendar period. The calendar period is included to make certain services are performed regularly when the equipment is stored, or being operated infrequently. Lubricating oil standing in engines that are stored, or used very little, may tend to oxidize and may require changing although it is not dirty. Perform all services on whichever-comes-first basis.

#### d. Identification of Interval Periods (See Fig. 1 and 2)

Each interval period is identified by a letter A, B, C, etc., (See Fig. 2). For example, services under B schedule should be performed at the end of each 250 hours of operation, or every three months period, BR service is performed during the BREAK IN period (first 50-150 hours). AR service is performed AS REQUIRED.

HOURLY INTERVAL CALENDAR INTERVAL	As Req.	Once after 50 to 150	10 or Daily	250 or 3 Mo.	500 or 6Mo.	1000 or 1 Year		2000 or 2 Years
SYMBOL	AR	BR	A	B	C	D	E	F
<b>ENGINE</b>								
Change Air Cleaner Cartridge	X							
Tighten Manifold Hardware	X							
Check Crankcase Oil Level			X					
Drain Fuel PreFilter Elements			X					
Check Coolant Level			X					
Check for Leaks and Correct		X	X					
Check Air Cleaner Indicator			X					
Check Exhaust System			X					
Check and Record Oil Pressure				X				
Change Fuel Filter Elements		X		X				
Clean Radiator Core (external)				X				
Check Governor Linkage				X				
Change Crankcase Oil		X			X			
Change Oil Filter Element		X			X			
Check/Adjust Drive Belt(s) Tension					X			
Check Engine and Generator Mounts		X			X			
Check Coolant, Additive-Concentration					X			
Check Fan Hub and Drive Pulley						X		
Check Fuel Prefilter Cartridge		X				X		
Check Hose Clamps on Air Intake Side						X		
Service Fuel Cooler						X		
Steam Clean Engine		X					X	
Clean fuel system							X	
Check Vibration Damper							X	
Check Injectors and Valve Clearance (adjust if necessary)		X					X	
Check Fuel Manifold Pressure							X	
Check Water Pump							X	
Check Alternator							X	
Check Cranking Motor							X	

Maintenance Schedule  
 Figure 1

HOURLY INTERVAL CALENDAR INTERVAL	As Req.	Once after 50 to 150	10 or Daily	250 or 3 Mo.	500 or 6Mo.	1000 or 1 Year		2000 or 2 Years
SYMBOL	AR	BR	A	B	C	D	E	F
<b>ENGINE</b>								
Clean/Calibrate/Replace Injectors								X
Check Fuel Pump Calibration								X
Change Coolant								X
Inspect Cylinder Heads								X
Inspect Pistons and Piston Rings								X
Inspect Bearings and Journals								X
Clean fuel cooler				Spring & Fall				
Check Fan Mounting				Spring & Fall				
Clean Cooling System				Spring & Fall				
Check Hoses				Spring & Fall				
Clean Electrical Connections				Spring & Fall				
Check Thermostats and Seals				Fall				
<b>ELECTRICAL (12-V DC System)</b>								
Check All Lights			X					
Check Charging Rate			X					
Check Battery and Fluid Level				X				
Clean Battery Terminals	X			X				
Check Wiring and Connections					X			
<b>ELECTRICAL (400-Hz System)</b>								
Check Output Cable and Connectors			X					
Check Volt, Amp & Frequency Meters			X					
Check Protective Relays					X			
Inspect Wiring and Connectors					X			
Clean and Inspect Generally					X			

Maintenance Schedule  
 Figure 1

Symbols	Time Intervals	
^	Hours	Calendar
BR	50-150	None
AR	As Required	None
A	10 Hours	Daily
B	250 Hours	3 Months
C	500 Hours	6 Months
D	1000 Hours	1 Year
E	1500 Hours	1-½ Years
F	2000 Hours	2 Years
S	Seasonally	Spring and/or Fall

**Symbols and Time Intervals**  
**Figure 2**

### 3. Inspection/Check

#### a. General

Inspections, checks, and maintenance are described in general here. More specific and detailed information contained in 2-2 and 2-3, will be referenced when applicable.

#### b. "AR" Checks and Operations (As Required)

##### (1) Engine

##### a. Change air cleaner.

A definite time schedule for changing the air cleaner cannot be established. This filter should not be washed more than six times or retained for more than one year's service, which ever comes first.

##### b. Tighten manifold, muffler, and exhaust pipe attaching hardware as required.

##### (2) Electrical System (12-V DC)

##### a. Check battery terminals

Anytime the battery compartment doors are opened for any reason, visually check battery cable connectors and battery posts. If corrosion is observed, disconnect cables and clean battery posts and connectors with a wire brush or special battery post-and-connector cleaning tool. Coat posts and connectors with a light film of petroleum lubricant before reconnecting cables.

#### c. "BR" Checks and Operations (Break-In Period, Once After 50-150 hrs.)

The following procedures are precautionary measures taken on most new engines. If a problem occurs with any of the following issues be sure to recheck it after the next 50-150 hours.

- (1) Check for leaks and correct. This involves an overall inspection of the engine and may require some maintenance if leaks are found. Refer to the Cummins Operations Manual for assistance.
- (2) Change fuel filter elements. Metal shavings from the new fuel tank can clog the filter. See 2-2, Para. 4 for details.
- (3) Change crankcase oil. New engines often release metal shavings more frequently. Therefore the crankcase oil must be changed as a precautionary measure. See 2-2, Para. 2, d, (4) for instructions.




- (4) Change oil filter element. The oil filter should be changed with the oil. See 2-2, Para 2, d, (4) for details.
- (5) Check engine mounts to ensure they are properly installed and that they have not worked loose. (Torque is set at 285 Nm, 210 ft-lb).
- (6) Check fuel prefilter cartridges for foreign substances which could have come in from the new fuel tank or possibly the fuel.
- (7) Steam clean the engine to free it of oil and dirt to prevent uneven engine cooling "hot spots." The oil and dirt can also fall into the engine and fuel system when covers are removed during repair work.
- (8) Check Injectors and Valve clearances and adjust if necessary. Refer to Cummins Operations manual for details.

**d. "A" Checks and Operations (10 Hours or Daily)**

- (1) Check crankcase oil level

**CAUTION**

**DO NOT** overfill. **DO NOT** operate the engine with oil level below the lower bar or above the upper bar on the dipstick.

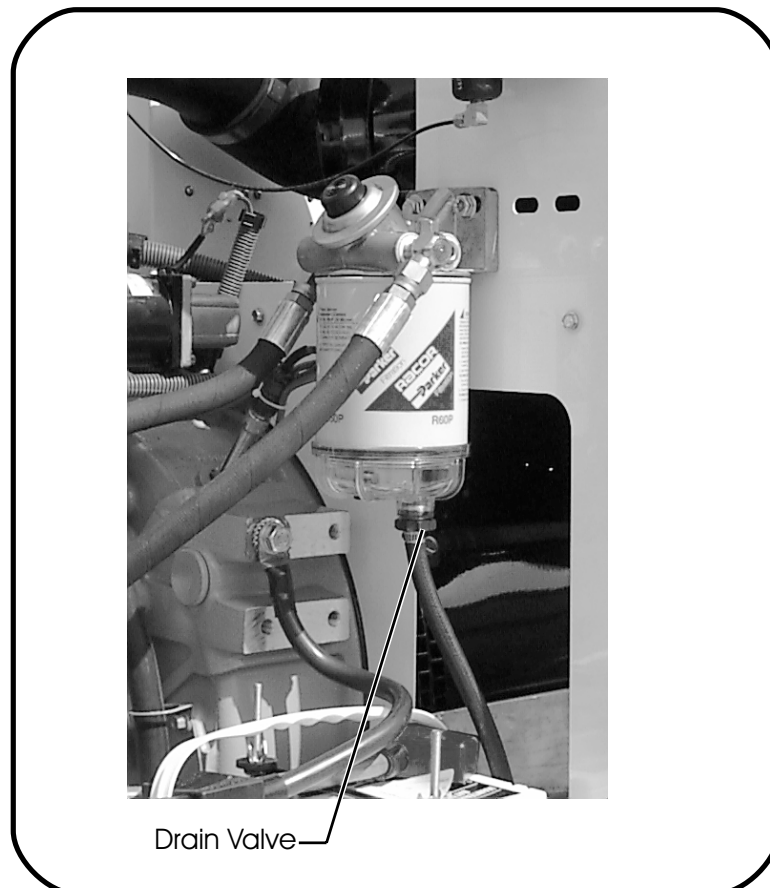

**Fuel Pre-Filter  
Figure 3**

- a. Check oil level daily with oil gage dipstick (see 1-2, Fig. 1).
- b. Oil level should not be checked until 3 to 5 minutes after engine shutdown. Keep oil level as near the upper bar as possible.

(2) Drain fuel prefilter (see fig. 3)

The life of the fuel pump and injectors can be extended if the operator drains about a cup of fuel from the fuel prefilter element to remove water and sediment before starting the engine each day.

**CAUTION**

BE SURE to prime and bleed the fuel system after draining the filters, replacing any element in the system, or if the fuel tank has run empty. Failure to do so can cause engine starting problems.

- a. Provide a container for catching drained fuel.
- b. Open the drain valve on the fuel/water filter by turning it counterclockwise.
- c. Drain the filter until clear fuel is visible.
- d. Tighten the drain valve.
- e. Safely dispose of drained fuel.
- f. Purge air from fuel system if necessary.

(3) Check coolant level

Check coolant level daily or at each fuel fill interval. Investigate for cause of any coolant loss.

(4) Check for leaks and correct

At each daily start-up, check for coolant, fuel, and oil leaks. Coolant leaks may be more noticeable when components are cold. Observe pumps, hoses, fittings, gasket connections, etc., for signs of leakage. Correct as required.

(5) Check air cleaner indicator

At each daily start-up, observe the air cleaner indicator light (1-3; 6, Fig. 1). If this light comes **ON**, it indicates that the air cleaner should be changed.

(6) Check exhaust system

Visually inspect muffler and exhaust pipes for rust and signs of approaching failure. Listen for any gasket or joint leaks.

**WARNING**

A leaking and defective exhaust system could be a fire hazard.

(7) Electrical (Engine)

a. Check all lights

Check all indicating lights to be sure they will operate when they should. If any light fails to operate, check both the lamp and its protective circuit breaker. Figure 5 lists all lamps with their location and part number. Figure 6 lists all circuit breakers.

b. Check alternator charging rate

Observe the 12-V DC ammeter each time the engine is started. A zero amperage reading or extremely high reading for any length of time indicates trouble in the alternator, regulator, battery, or interconnecting wiring.

(8) Electrical (Generator)

a. Output connectors

Check the connectors for damaged insulation and contacts each time the connector is used.

b. Monitoring instruments

Check operation of voltmeter, ammeter and frequency meter each time the unit is started.

**e. "B" Check and Operations (250 Hours or 3 Months)**

(1) Engine

a. Check and record oil pressure

After each oil change, check and record oil pressure at idle speed after oil has warmed to approximately 140° F (60° C). Record oil pressure under identical conditions at each oil change interval. A comparison of pressure at idle speed with previous readings will give an indication of progressive wear of oil pump, bearings, shafts, etc. Investigate any abnormal change in pressure readings.

b. Change fuel filters. Refer to 2-2; Para. 4.

c. Clean radiator core. See 2-2; Para. 5, F for instructions.

d. Check governor linkage

Check all attaching hardware. Check ball joints for wear and looseness. Check linkage for free movement throughout its complete travel range.

(2) Electrical (12-V DC system)

**NOTE:** The battery furnished with this generator set is MAINTENANCE FREE.

a. Battery electrolyte level (if applicable)

Battery electrolyte level must be maintained above top of plates. Add distilled water as required.

**CAUTION**

**DO NOT** overfill.

b. Check battery

If battery requires water frequently, or is low in charge, the reason for the condition must be found and corrected.

c. Battery terminals

Check battery terminals and clean if necessary in accordance with Para. 3, B, (2) (a) above.

**f. "C" Checks and Operations (500 Hours or 6 Months)**

(1) Engine

a. Change crankcase oil. See 2-2, Para. 2, D, (4) for details.

b. Change oil filter element each time crankcase oil is changed. See 2-2, Para. 2, D, (4) for details.

(2) Check and adjust drive belts

a. See 2-2; Para. 6 for tension check and adjustment instructions.

(3) Check engine mounts

**WARNING**

An unstable or loosely mounted engine can create hazardous environment and may also damage equipment.

a. Engine mount bolts must be torqued to 285 Nm (210 ft-lb.).

(4) Check coolant additive concentration

The cooling system protective liquid (nitrite-, amine- and phosphate free) provides effective protection against corrosion, cavitation, and freezing. See Cummins Owners and Operations Manual for ordering and mixture details.

(5) Electrical (12-V DC system)

a. Wiring

Inspect all cables and leads for worn or damaged insulation.

b. Connections

Inspect connectors for security and damaged or corroded condition.

(6) Electrical Generator

a. Protective relays

Check operation of all protective relays to make certain they will function if a fault should occur in the output circuit. Procedures for testing these relays are contained in the Adjustment/Test section of this manual.

b. Wiring and connections

Check all cables, leads, and wiring for broken, worn and damaged insulation.

Check all connections for tightness.

c. Clean and inspect generally

**g. "D" Checks and Operations (1000 Hours or 1 Year)**

(1) Engine

a. Check fan hub and drive pulley.

Inspect for loose bolts or worn features. Tighten bolts and replace parts if necessary

b. Check fuel cartridge (See 2-2; 4, B).

Prefilter may accumulate foreign substances that may cause damage to fuel system if not removed. Inspected prefilter thoroughly.

c. Check hose/clamps on air intake side.

Be sure that all clamps are properly secured to prevent leaks.

**h. "E" Checks and Operations (1500 Hours or 1.5 Year)**

**(1) Engine**

**a. Steam clean engine**

There are several reasons why the engine exterior should be kept clean. Dirt on the outside will enter fuel and oil filter cases and rocker housings when covers are removed, unless dirt is removed first. A clean engine will run cooler and develop fewer hot-spots.

Steam cleaning is one of the most satisfactory methods of cleaning and engine; however, there are some **CAUTIONS** to be observed:

**WARNING**

Exercise care to avoid injury and damage to eyes and skin

**CAUTION**

1. If a cleaning compound is used, select one which is free from acid and which will not remove paint.
2. Protect (or remove) all electrical accessories, such as voltage regulator, alternator, and electrical wiring.
3. Seal all openings. **DO NOT** use a flammable solvent.
4. **DO NOT** use mineral spirits or solvents on a hot engine.
5. Remove or protect bottom panel of unit (belly pan) to protect insulation.

**b. Clean fuel system**

See Owner and Operations Manual for instructions.

**c. Check vibration damper. (Fig. 4)**

Check vibration damper for looseness or wobble, verifying the hub bolts are tightened to the Cummins specifications.

**d. Check adjustment of injectors and valves**

Injectors and valves must be in correct adjustment at all times for best engine performance. Refer to Cummins Operation Manual for injector and valve adjusting instructions.

**e. Check fuel manifold pressure**

This check is necessary only if there is an apparent or suspected loss of power. Refer to Cummins Operation Manual for tools required and test instructions.

**f. Check water pump (Fig. 4)**


Check water pump for signs of leaking and lubricant loss. Replace with new pump if lubricant is being lost.

**g. Check fan hub (Fig. 4)**

Check fan hub for signs of lubricant loss. Replace with new prepacked hub if lubricant is leaking.

**h. Check alternator and cranking motor (Fig. 4).**

The alternator and cranking motor on this particular engine require no periodic lubrication.

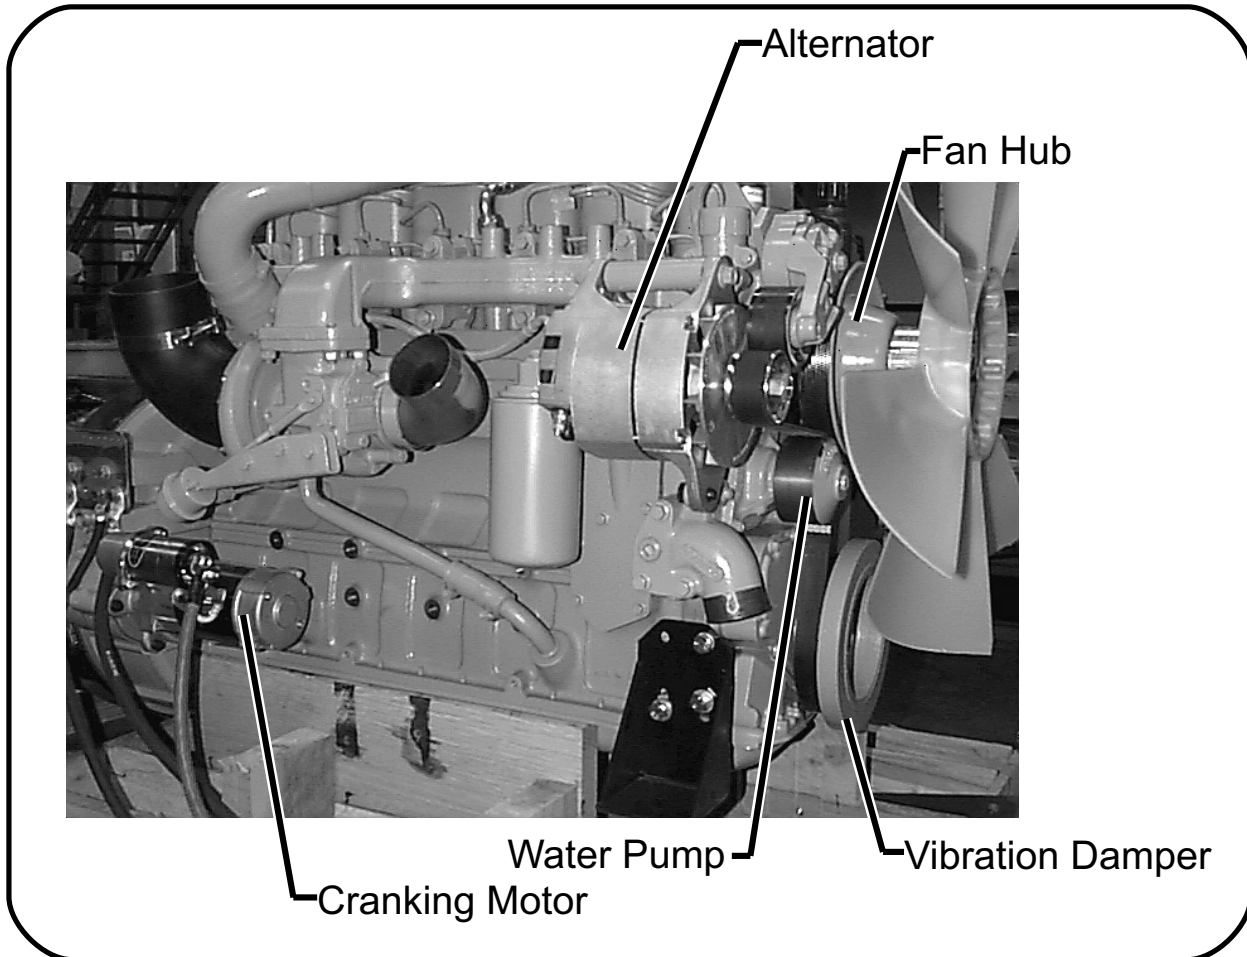

**Engine Accessories  
Figure 4**

**i. "F" Checks and Operations (2000 Hours or 2 Years)**

**(1) Engine**

These checks should determine whether the engine requires a complete overhaul or whether it may be operated for another service period. High oil consumption, low oil pressure at idle speed, oil dilution and other signs of wear must be considered.

Disassemble the engine sufficiently to perform the following inspections and services. Complete overhaul facilities should be available. If the user performs this operation in his own shop, a shop manual should be procured from Cummins Engine Company.

**a. Clean/Calibrate/Replace injectors**

Injectors must be cleaned and calibrated regularly to insure proper fuel delivery to combustion chambers. Special tools are required. It is suggested that the Cummins Distributor be consulted for this operation.

**b. Check fuel pump calibration**

This operation may be performed on an as required basis. Pump calibration also requires special tools and testing equipment. Consult a Cummins Distributor for information.

- c. Change coolant
- d. Inspect cylinder heads for the possibility of overhaul
- e. Inspect pistons and piston rings
- f. Inspect bearings and Journals

**j. Seasonal Maintenance Checks Spring/Fall (Engine)**

(1) Inspect engine cooling fan each spring and fall.

- a. Check fan to be sure it is securely mounted.
- b. Check for fan wobble and/or broken/cracked blades.
- c. Check fan hub and crankshaft pulley for secure mounting.

(2) Check cooling system each spring and fall. Clean if necessary. See 2-2, Para. 5, for cooling system maintenance.

(3) Check all hoses.

In addition to daily checks of hoses for leaks, inspect hoses thoroughly each time the cooling system is cleaned and serviced.

Inspect for signs of deterioration and collapse.

- a. Inspect for cracks and cuts
- b. Inspect for cutting and deformation caused by hose clamps.
- c. Replace hoses as required.

(4) Check and adjust V belts each time the cooling system is cleaned, or on an as required basis. See 2-2, Para. 6.

(5) Check thermostat and seals each fall when cooling system is serviced.

**k. Lamps and Circuit breakers**

(1) Check all lamps daily and check circuit breakers as required.

(2) A lamp chart (Fig. 5) lists all lamps with their location and identifying trade number in table below.

(3) The circuit breaker chart (Fig. 6) lists all circuit breakers with their location, size, and type.

Light Identification	Location	Lamp (Bulb): as per Lamp Industry Trade Number
Instrument Panel Lights	Control box Interior (1-1; Figure 6, Item 11)	67
Engine Start Indicator	Engine-Generator Control Panel (1-1; Figure 5, Item 26)	1815
No. 2 Load Switch	Engine-Generator Control Panel (1-1; Figure 5, Item 22)	1815
No. 1 Load Switch	Engine-Generator Control Panel (1-1; Figure 5, Item 24)	1815
FAULT Indicators (9)	Engine-Generator Control Panel	1815
Clearance (Marker) Lights (4)	Canopy	57
Engine Gauge Lights	Oil pressure, Engine Temp., ammeter, and fuel gauge on control box	53

**Lamp Identification Chart**  
**Figure 5**

Item Protected	Location	Illustration	Size and Type
Engine Circuit and Instrument Panel	Control box Interior	1-1; Figure 6, Item 12	10A Circuit Breaker
Controls	Control box Interior	1-1; Figure 6, Item 13	5A Circuit Breaker
Marker Lights	Control box Interior	1-1; Figure 6, Item 14	10A Circuit Breaker
Load Circuit	Control box Interior	1-1; Figure 6, Item 15	5A Circuit Breaker

**Circuit Breaker Identification Chart**  
**Figure 6**

#### 4. Cold Weather Start Servicing and Troubleshooting

Many vehicle components can affect cold weather starting. The following guide is limited to general troubleshooting of the Dieselmatic System. Further details can be found in the Dieselmatic installation and maintenance manual, and should be read prior to operating. The two most common problems are an empty fluid cylinder and a clogging metering orifice.

##### a. Check Fluid Cylinder Contents and Valve Gasket

- (1) Clean all dirt from neck of cylinder and top of valve before removing the fluid cylinder. Protect top of valve from dirt when cylinder is removed.
- (2) Check that fluid cylinder has pressure.



- (3) Check valve gasket. If gasket inside valve is damaged or worn, replace with a new gasket. Make sure only one gasket is used.
- (4) Cylinder, or its replacement, should be reinstalled by turning cylinder clockwise until the o-ring contacts the valve. Tighten an additional 1-1/2 turns. **DO NOT OVER TIGHTEN CYLINDER!**

**b. Check of electrical system.**

- (1) Check to see if fuse is blown. Check all wiring for loose connections, shorts, and broken wires.
- (2) Check that the dieselmatic system is wired correctly.

**NOTE:** To check system for proper operation, the Engine Temperature Sensor (ETS) must be below 40° F (4° C) or be bypassed by connecting the valve's black lead directly to a good ground. After checking be sure to reconnect the black lead as it was originally connected.

- (3) Test valve by removing fluid cylinder and momentarily engaging cranking motor. Valve plunger should move up and remain up while cranking motor is engaged. If valve operates, proceed to step (5).
- (4) If valve plunger did not function, check valve by disconnecting leads from cranking motor and ground. Momentarily touch leads directly across battery across battery terminals. The valve plunger should move up and remain up until the leads are disconnected. If the valve does not activate when connected across the battery it is faulty and should be replaced.
- (5) Check Engine Temperature Sensors (ETS) switch by chilling to sub-freezing temperatures. At cold temperatures, the ETS Switch should close (i.e. show continuity when checked with a DC powered test light or ohmmeter.) The closing and opening temperature should be about 40° F (4° C). If either continuity test fails, the ETS Switch should be replaced.

**c. Check for clogging of flow metering orifice fitting.**

The Dieselmatic's fluid flow rate is controlled by serviceable filtered metering orifice inside the fitting at the bottom of the valve assembly. The following procedure is recommended when checking for clogging

- (1) Remove system's nozzle from engine.
- (2) If starting fluid does not spray from nozzle when the system is activated, disconnect tubing from valve fitting. If starting fluid sprays from the fitting when the system is activated, check tubing for kinks, burns, cuts, clogs, or check for a clogged nozzle. When performing these two operations, be sure to spray fluid into and appropriate container.
- (3) If starting fluid does not spray from valve fitting, it should be removed from valve and cleaned. Remember, left hand threads.
- (4) The filter may be removed from the fitting, and the o-ring removed from the filter. It can be washed in clean solvent and blown with compressed air. For best results, replace filter with a new one KBI Part Number 240005. Reassemble filter with o-ring into fitting.
- (5) It is suggested before cleaned filter assembly is reinserted into valve, that valve be flushed by activating the system. When performing this operation, be sure to spray fluid into an appropriate container.
- (6) Reinsert clean filtered fitting assembly into valve. Remember: left hand threads. Reinstall system's nozzle into engine. Reconnect tubing to valve fitting and nozzle.
- (7) Check all fitting and tubing connections for leaks.

*This page intentionally left blank.*

---

## Section 2. Maintenance Procedures

---

### 1. General

A suggested Maintenance Schedule was provided in Section 1, of this Servicing Chapter. Each step of the schedule was also covered in general in Section 1. This Section covers maintenance in more details where necessary.

#### **WARNING**

Stop operation immediately if a serious or possibly dangerous fault is discovered.

### 2. Lubrication

#### a. General

Proper lubrication is one of the most important steps in good maintenance procedure. Proper lubrication means the use of correct lubricants and adherence to a proper time schedule. Lubrication points, frequency of lubrication, and recommended lubricants are indicated in Figures 1 thru 4.

#### b. AC Generator

The 400 Hz generator requires NO lubrication.

#### c. Generator Controls

Generator controls and instruments require no periodic lubrication. A few drops of oil may be required on door hinges occasionally to insure free and quiet operation.

#### d. Engine

Although the engine and its accessories require no more attention than any other similar installation, they still inherently require a major portion of the generator set lubrication and maintenance. Recommendations regarding engine lubrication have been taken from the engine manufacturer's "Operation and Maintenance Manual" and incorporated here to make them more readily available to operators and maintenance personnel.

##### (1) Lubrication schedule

Time schedules indicated on the Lubrication Chart, Fig. 4, are approximate. They are based on average operating conditions. It may be necessary to lubricate more frequently under severe operating conditions such as: low engine temperatures, high oil temperatures, or intermittent operation. However, time intervals should not exceed those indicated in the chart without careful evaluation.

##### (2) Oil specification

Engine lubricating oil, recommended by the engine manufacturer, is identified by an API (American Petroleum Institute) classification designation.

The use of quality lubricating oil, combined with appropriate lubricating oil drain and filter change intervals are important factors in extending engine life.

Oil recommended for the diesel engines in this application is API Class CE/SG. Use a high quality 15W-40 multi-viscosity lubricating oil, such as Cummins Premium Blue, or its equivalent in Cummins engines. Choose the correct lubricating oil for your operating climate.

Lubricating oil is discussed in detail in the Cummins Operation and Maintenance Manual.

ITEM	MAINTENANCE REQUIRED								
Lube Oil	Check oil level daily or after every 10 hours of use. Change oil and the oil filter after the first 50 to 150 hours of use, then at 500 hour or 6 month intervals there after. Use oil that conforms to API specification CE/SG.								
Capacity	Engine lube oil capacity with filter: 16 quarts (15.1 liters)								
Oil Filter Replacement	Oil Filter Replacement Hobart Brothers Part No. 286987-006 Oil Filter Replacement Cummins Part No. 3908615								
Lube Oil Viscosity Required as per Ambient Temperatures	<table border="0"> <tr> <td><u>VISCOSITY</u></td> <td><u>AMBIENT TEMPERATURE CONDITIONS</u></td> </tr> <tr> <td>SAE 15W40</td> <td>13°F (-11°C) and above for all seasons</td> </tr> <tr> <td>SAE 10W30</td> <td>-10°F to +68°F (-23°C to +20°C) Winter conditions</td> </tr> <tr> <td>SAE 5W30</td> <td>-20°F to +50°F (-29°C to +10°C) Arctic Conditions</td> </tr> </table>	<u>VISCOSITY</u>	<u>AMBIENT TEMPERATURE CONDITIONS</u>	SAE 15W40	13°F (-11°C) and above for all seasons	SAE 10W30	-10°F to +68°F (-23°C to +20°C) Winter conditions	SAE 5W30	-20°F to +50°F (-29°C to +10°C) Arctic Conditions
<u>VISCOSITY</u>	<u>AMBIENT TEMPERATURE CONDITIONS</u>								
SAE 15W40	13°F (-11°C) and above for all seasons								
SAE 10W30	-10°F to +68°F (-23°C to +20°C) Winter conditions								
SAE 5W30	-20°F to +50°F (-29°C to +10°C) Arctic Conditions								
Synthetic Oils	See the Cummins Operator's Manual for usable synthetic oils and instructions.								
Fuel Prefilter	Drain Filter Daily. Change filter element every 250 hours or 3 months of use.								
Coolant	Check coolant level daily. Service and maintain coolant system according to sect. 2-2, para. 5. Engine coolant capacity (system): 28 quarts (26.4 liters)								
Coolant hoses and connections	Check coolant hoses and connections daily for leaks.								
Air Cleaner	Change air cleaner filter as required when air cleaner indicator (on engine control panel) shows that it should be changed.								
Fan Belt	Check fan belt condition and tension every 500 hours or 6 months of use.								
AC Generator	AC generator bearings are sealed and require no periodic lubrication.								
Alternator	Alternator bearings are sealed and require no periodic lubrication.								
Starter Motor	Starter motor bearings are sealed and require no periodic lubrication.								
Water Pump	The water pump is packed at assembly and requires no periodic lubrication.								

**Lubrication and Maintenance Chart**  
**Figure 1**

Symbol	Name	Specification	Notes
1	Grease, General Purpose	MIL-G-3545	Excludes those of sodium or soda soap thickeners
2	Oil, Engine, Heavy Duty	API Class CC	Must contain ash but not more than 1.85%
3	Dry Graphite Lubricant (for trailer brake cables)	MIL-T-5544, or equivalent	Use on brake cables. DO NOT use general purpose grease.

**Lubricants**  
**Figure 2**

Ambient Temperature	SAE Viscosity
-13°F to +95°F (-25 to +20°C)	10W-30
+14°F and above (0°C and above)	15W-40
-40°F to 68°F (-40°C to 20°C)	5W-40

**Temperature and Viscosity Chart**  
**Figure 3**

(3) Oil viscosity

A temperature and oil viscosity index chart is shown above. For operation at temperatures consistently below -13° F (-25° C), refer to Arctic Oil Recommendations in the Cummins Operation and Maintenance Manual.

(4) Changing engine oil

Oil should be changed after each 200 hours of engine operation. The generator set is equipped with an hourmeter to record actual engine operating time. The ideal time to change engine oil is soon after a power delivery run, when the engine is at operating temperature.

Change the oil filter element each time the oil is changed.

Symbols ^	Time Intervals	
	Hours	Calendar
AR	As Required	None
A	10 Hours	Daily
B	200 Hours	3 Months
C	400 Hours	6 Months
D	800 Hours	1 Year
E	1200 Hours	1 Year
F	6000 Hours	5 Years
S	Seasonally	Spring and/or Fall

**Symbols and Time Intervals**  
**Figure 4**

**NOTE:** If lubricating oil is drained immediately after the unit has been run for some time, most of the sediment will be in suspension and will drain readily.

<b>CAUTION</b>	Do not use solvents as flushing oils in running engines.
----------------	--

Oil Capacity (including filter)	16 quarts (15.1 liters)
Oil Capacity (oil pan)	15 quarts (14.2 liters)
Coolant Capacity	29 quarts (27.4 liters)

**Oil and Coolant Capacities**  
**Figure 5**

Change oil as follows:

- a. Provide a container for catching used oil. Capacity must be greater than 24 quarts.
- b. Remove drain plug located in oil pan.
- c. While oil is draining, change the oil filter element. See instructions below.
- d. Clean the drain plug and install when engine oil has drained. Torque the drain plug to 35 to 40 foot-pounds (47 to 54 Nm).
- e. Remove oil filler cap by turning screw handle counter-clockwise to loosen cap and lift straight up.
- f. Refill the crankcase with new, clean oil which meets engine manufacturer's recommendations. (See Para. 2, D, (2) above, or Cummins Operation and Maintenance Manual).

**CAUTION**

1. Always use clean containers, funnels, etc.
2. Don't forget to drain old oil, reinstall drain plug and install new oil before starting engine.

- g. Install filler cap and check oil level on gage rod (Sect. 1-2, Fig. 1).
- h. Start engine and check oil pressure at once. Allow engine to idle for 5 minutes, then stop.
- i. After the engine has been stopped for about 5 minutes, recheck the oil level. Add oil, if required, to bring the level up to the H mark on the gage rod.

(5) Changing oil filter element

- a. Provide a container for catching oil.
- b. Remove the filter and inspect it.

**NOTE:** The o-ring can stick to the filter head. Make sure it is removed before installing a new filter.


**CAUTION**

If bearing metal particles are found on the element or in the shell, the source should be determined before a failure results.


**CAUTION**

Determine source of moisture, internal leaks; defective seals, gaskets, etc.

- c. Fill the new filter with clean lubricating oil before installation.
- d. Apply a light coating of lubricating oil to the gasket sealing surface and install the filter. **DO NOT** over tighten the filter.
- e. Check crankcase oil level.
- f. Start engine and check oil filter for leaks.
- g. Stop engine, and after allowing sufficient time for oil to drain to crankcase, recheck oil level. Add oil as required.

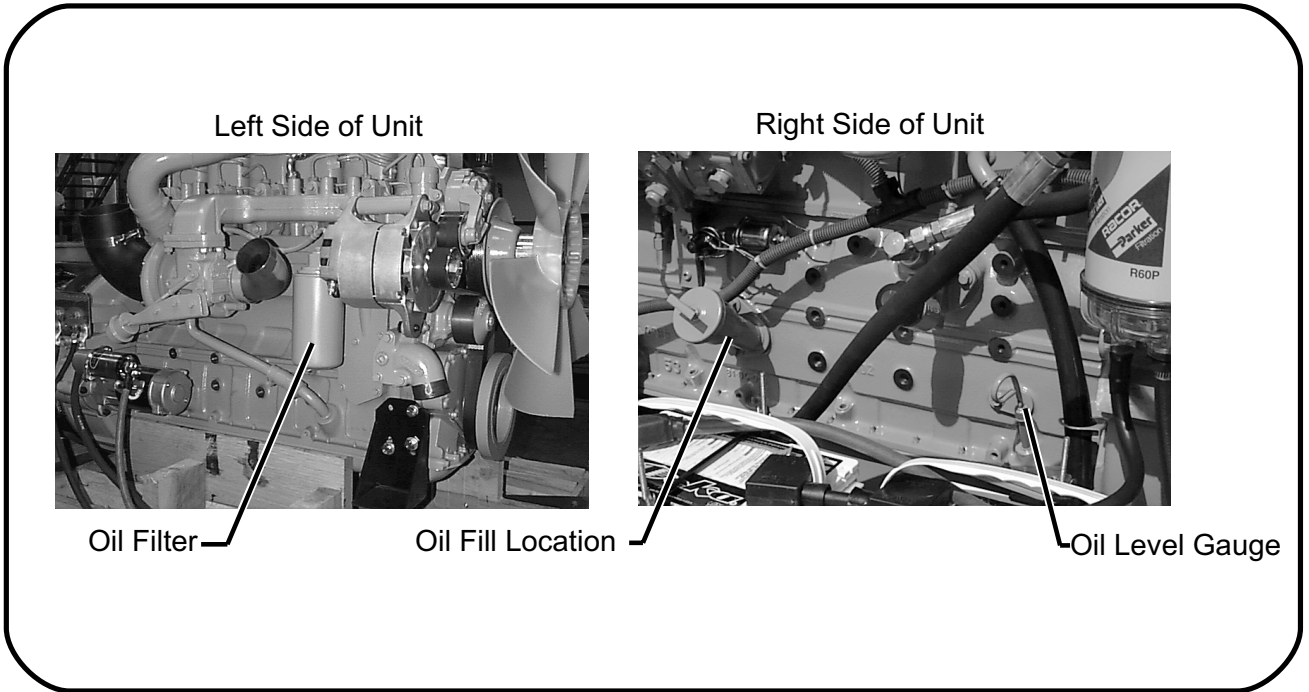

Changing Oil Filter  
Figure 6

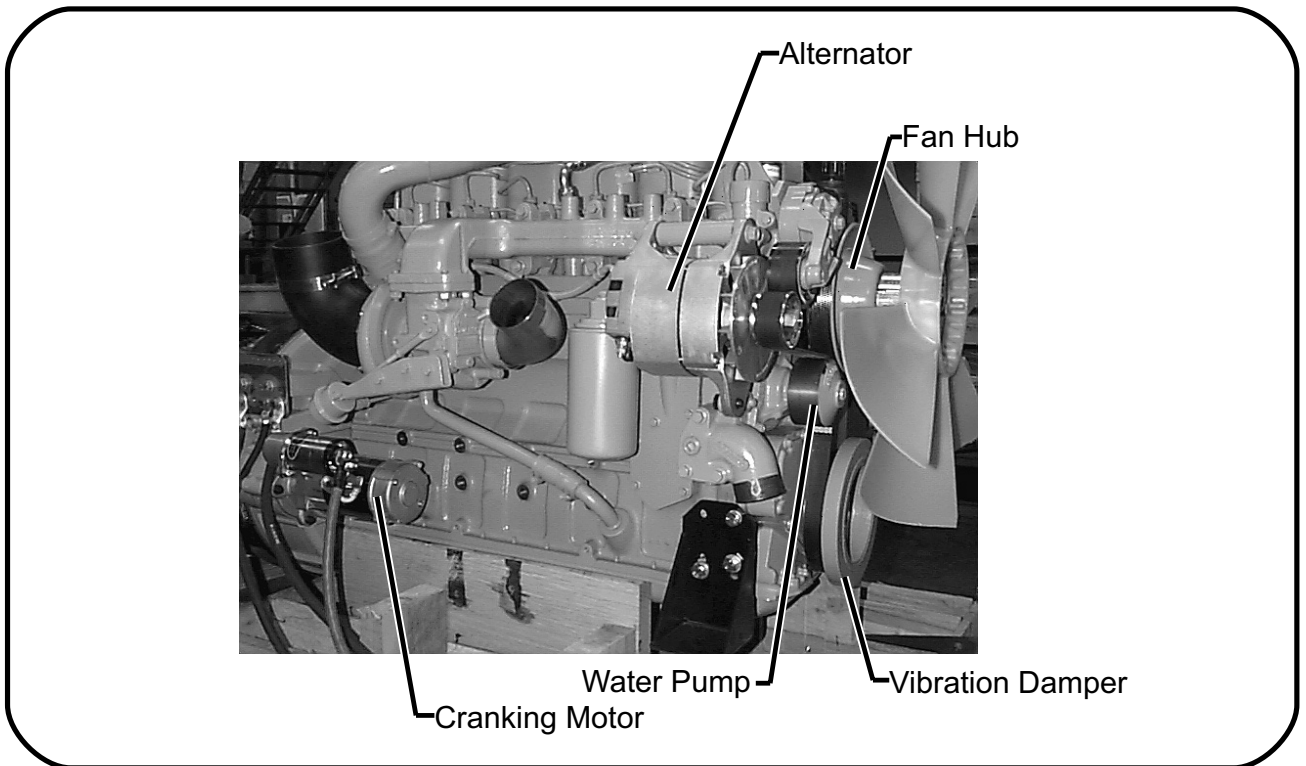

Engine Accessories  
Figure 7

**e. Engine Accessories Lubrication (Fig. 7)**

(1) Alternator

Most alternators contain sealed bearings and require no periodic lubrication, however, CHECK to make certain there are no lubrication points on your particular alternator.

(2) Starter

Most starting motors are lubricated at assembly and should be relubricated only when the starter is removed and disassembled, however, INSPECT the starter to make certain it has no lubrication points.

(3) Water Pump

The water pump is packed at assembly and requires no periodic lubrication. Replace pump if signs of lubricant leakage are found.

(4) Fan Hub

The fan hub is also lubricated at assembly and requires no periodic lubrication. Replace hub if lubricant is leaking.

**3. Servicing the Air Cleaner**

This air cleaner is a dry type which may be cleaned as many as six times before replacing it with a new air cleaner. A definite time schedule for cleaning or changing the air cleaner cannot be determined because of varying operating conditions. However, since this air cleaner can be removed and replaced without difficulty on this generator set (simply by loosening three metal clamps on each end of the air cleaner), it may be inspected either at prescribed service intervals or at any time deemed necessary.

**a. Inspecting the Air Cleaner**

- (1) Make periodic checks of air cleaner inlet screen for obstructions. If any obstructions are present, remove them.
- (2) **Check outlet connection for proper seal.**

**NOTE:** DO NOT judge the element's life just by looking at it, **IT SHOULD LOOK DIRTY**, or it's not doing its job.

**b. Cleaning Instructions**

**CAUTION**

- (1) Do not tap the air cleaner on a hard surface to clean it, and
- (2) Never leave the air inlet ducting open longer than necessary during the service procedure.

(1) Pressurized air cleaning

After removing the air cleaner from the generator set, blow air into the outlet neck, causing dust to flow off the air cleaner filter media.

**CAUTION**

- (1) Do not use compressed air higher in pressure than 100 psi, and
- (2) Do not use compressed air cleaning when the filter media is wet.



(2) **Low pressure water flush**

- a. Flow low pressure water, warm or cold, into the air cleaner outlet neck, causing dirt to flow off the filter media. Always be sure not to let any contaminated water back into the outlet neck.
- b. A mild detergent may also be used. However, the filter must then be flushed thoroughly with clean water. This cleaning method is recommended by the manufacturer.
- c. Always allow filter media to dry before use.

**c. Disposal**

Normal trash pick-up is acceptable. **NEVER** burn the air filter for disposal.

#### 4. Engine Fuel

**a. Quality**

The quality of fuel oil used in the diesel engine is a major factor in engine performance and life. Fuel oil must be clean, completely distilled, stable and non-corrosive.

The Cummins engine has been developed to take advantage of the high energy content and generally lower cost of No. 2 Diesel Fuel. The engine will also operate satisfactorily on No. 1 fuel. If other fuels are being considered, refer to the Cummins Operation and Maintenance Manual for fuel specifications and recommended fuel oil properties.

**CAUTION**

Due to the precise tolerances of diesel injection systems, it is extremely important that the fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the injection pump and the injection nozzles.

Use ASTM No.2D fuel with a minimum Cetane number of 40. No. 2 diesel fuel gives the best economy and performance under most operating conditions. Fuels with Cetane numbers higher than 40 may be needed in high altitudes or extremely low ambient temperatures to prevent misfires and excessive smoke.

At operating temperatures below 32° F (0° C), use a blend of No. 1D and No. 2D fuels, also known as "winterized" No. 2D.

**NOTE:** No. 1D fuels can be used, but fuel economy will be reduced.

**b. Fuel Filter (Fig. 8)**

A double element fuel filter is located between the fuel source and the pump. Its function is to remove foreign material from the fuel before it enters the fuel pump. The filter operates under vacuum. Elements are the throwaway type, in which the case and element are made as one disposable part.

(1) **Check fuel filter restriction**

The most accurate method of determining filter change requirement is by measuring the fuel pressure drop across filters.

The measurement of pressure drop across filters is 5 psi (9 kPA).

(2) **Changing fuel filter elements**

Change elements after each 200 hours of operation unless a restriction test indicates the time period should be extended.

Replacement primary fuel filter elements are Hobart No. 286897-004.

Replacement secondary fuel filter elements are Hobart No. 286897-005.

- a. Unscrew element and discard.

**NOTE:** The elements should be removable by hand. If not, there are several types of filter element removal tools.

- b. Fill **NEW** element with **CLEAN** fuel.

**CAUTION**

When installing new element, do not over tighten it. Tightening it with mechanical tools may distort or crack filter head.

- c. Install new element and tighten by hand until seal touches filter head. Tighten an additional one-half to three-fourths turn.



Primary Fuel Filter

Secondary Fuel Filter

**Fuel Filter  
(Left Side of Unit)  
Figure 8**

## 5. Engine Cooling System

### a. General

Cooling system service requires more than maintaining the proper coolant level in the radiator and protecting the system against freezing. Water should be clean and free of any corrosive chemicals such as chloride, sulphate, and acids. It should be kept slightly alkaline with a pH value in the range of 8.0 to 9.5. Any water which is suitable for drinking can be used in the engine when properly treated as described in Cummins Operation and Maintenance Manual. The Cummins Distributor should be consulted regarding the selection of satisfactory brand, permanent-type antifreeze for use in the cooling system.

### b. Radiator Cap

#### (1) General

A pressure relief valve is built into the radiator cap. It is designed to open at a pressure of approximately seven psi.

**CAUTION**

When removing cap from a very hot radiator, do not turn cap past safety stop until all pressure or steam has escaped.

(2) Removal

To remove, turn the cap to the left (counterclockwise) to the safety stop. When all pressure is released, press down on the cap and continue to turn until the cap is free to be removed.

**CAUTION**

Allow engine to cool before adding coolant.

**NOTE:** Do not attempt to repair the valve in a radiator cap. Replace with a new cap.

(3) Installation

When installing the cap, be sure it is turned clockwise as far as it will go so that the pressure retaining valve will be functional.

**c. Coolant**

**Anti-freeze is essential in any climate.** It broadens the operating temperature range by lowering the coolant freezing point and by raising its boiling point. Do **NOT** use more than 50 percent anti-freeze in the mixture unless additional freeze protection is required. **NEVER** use more than 68 percent antifreeze under any condition. Never use soluble oil in the cooling system.

For complete information regarding coolant specifications, temperature ranges, testing equipment, antifreeze, etc., refer to Cummins Operation and Maintenance Manual.

(1) General

A permanent type antifreeze is recommended for use in the cooling system in any climate

**CAUTION**

1. Do not use methanol or alcohol as an antifreeze.

2. Do not mix brands or type of antifreeze. A solution containing two or more types of antifreeze is impossible to test accurately.

(2) Selecting antifreeze

- a. Select a permanent type antifreeze known to be satisfactory for use with chromate corrosion resistor.
- b. When it is not known if the antifreeze is satisfactory for use with chromate resistor, check with local Cummins Distributor for a list of compatible antifreezes.

**CAUTION**

Do not use soluble oil in the cooling system

(3) Checking antifreeze solution

Check the solution with a reliable tester when in doubt about antifreeze protection.

**NOTE:** When testing, be sure coolant is at operating temperature. Follow manufacturer's instructions on tester.

#### d. Draining the Cooling System

To drain the cooling system, proceed as follows:

### WARNING

Check temperature gage; coolant temperature must be no higher than 120° F (50° C) before removal of radiator cap.

- (1) Remove radiator cap.
- (2) Open the radiator drain valve.
- (3) Allow the system to drain completely.

**NOTE:** Be sure the drain valve does not clog during draining.

- (4) When the system is completely drained, close the drain valve.

#### e. Cleaning the Cooling System

There may be need for cooling system internal cleaning. If chemical cleaning becomes necessary, refer to instructions in the Cummins Operation and Maintenance Manual.

#### f. Cleaning the Radiator Core

Blow out accumulated dirt from the radiator core air passages, using compressed air. Engine overheating is often caused by bent or clogged radiator fins. When straightening bent fins, be careful not to injure the tubes or to break the bond between fins and tubes.

**NOTE:** Direct the air in a reverse direction to normal air flow. Normal flow on this installation is from the engine compartment outward.

#### g. Filling the Cooling System

- (1) Inspection/Check
  - a. Check system for evidence of leaks.
  - b. Inspect all hoses. Install new hoses as necessary. Tighten hose clamps as required.
  - c. Check the condition of fan and water pump belts. Replace belts if necessary.
- (2) Install coolant
  - a. Remove radiator cap. Be sure the drain valve is closed. Make sure the vent in the water manifold is open to allow air to escape when filling.
  - b. Pour coolant(anti-freeze/water) into radiator very slowly until it reaches level of top drain valve. Close valve and continue filling until coolant reaches a level approximately 1 inch below top of tank. Allow for a 5% expansion when coolant reaches operating temperature.

**NOTE:** A safety feature built into the tank consists of a pipe attached to the filler neck which extends into the tank approximately 1 inch. If coolant is added after the liquid reaches the bottom of the safety tube, it will immediately overflow.

- c. Start the engine and allow to idle. Add coolant as trapped air escapes from the system and the coolant level falls.
- d. Continue to check coolant level until all trapped air escapes. Add coolant, if needed, to fill to the required level, 1 inch below top of tank. Install radiator cap and close the vent valve.

**NOTE:** It is good practice to attach a card, indicating the cooling system contents and date serviced, to the radiator filler neck.

#### h. Thermostat

The thermostat should be checked each fall, or as required. Refer to Cummins Operation and Maintenance Manual for recommended test instructions.

## 6. Drive Belts

### a. General

The engine cooling fan, alternator, fuel pump, and water pump are driven by a timing belt which must be replaced if it becomes worn or damaged.

### b. Preparation for Belt Check and Adjustment

All driven assemblies must be securely mounted in operating position before checking belt tension.

### c. Checking Belt Tension (fig. 9)

Check belt tension every 1000 hours, or once a year, whichever comes first. A belt which is too tight is destructive to bearings of the driven part. A loose belt will slip and cause inefficient operation of the part being driven as well as wear to the belt.

Belt tension may be checked either with a gage or manually. Use Cummins Belt Tension Gage no. ST-1293, or equivalent. Gage should indicate 90 to 110 pounds. If a gage is not available, tension may be checked manually by depressing the belt with the index finger to determine the amount of belt deflection obtained when force of approximately at a point halfway between pulleys on the longest span of the belt.

### d. Check Fan Belt (fig. 10)

- (1) Check belt tension (see above).
- (2) Remove the drive belt by lifting on the belt tensioner with a 1/2 square drive. The belt can then be slid off the water pump pulley and worked off the other pulleys and around the fan.
- (3) Inspect the belt for damage.
  - a. Traverse (across the belt width) cracks are acceptable.
  - b. Longitudinal (direction of belt length) cracks that intersect with transverse cracks are unacceptable.
- (4) Replace the belt if it has unacceptable cracks, is frayed or has pieces of material missing.
- (5) Check the belt tensioner while the belt is removed. It should spin freely without any wobble or excessive (0.006") end play.
- (6) Install the drive belt.

## 7. Generator Maintenance

The 400 Hz generator required no maintenance or service other than periodic cleaning. The unit is brushless, and bearing(s) are permanently lubricated and sealed.

### a. Cleaning


The generator may be cleaned by careful use of compressed air and/or a good, SAFE commercial cleaner. Steam cleaning of the generator is not recommended because the use of steam and harsh chemical compounds may result in damage to insulation and other generator components.

### CAUTION


Do not use a flammable solvent. Be sure the unit is completely dry before operating.

### b. Adjustment

The generator itself requires no adjustment. Adjustment procedures for generator controls are covered in 2-3.

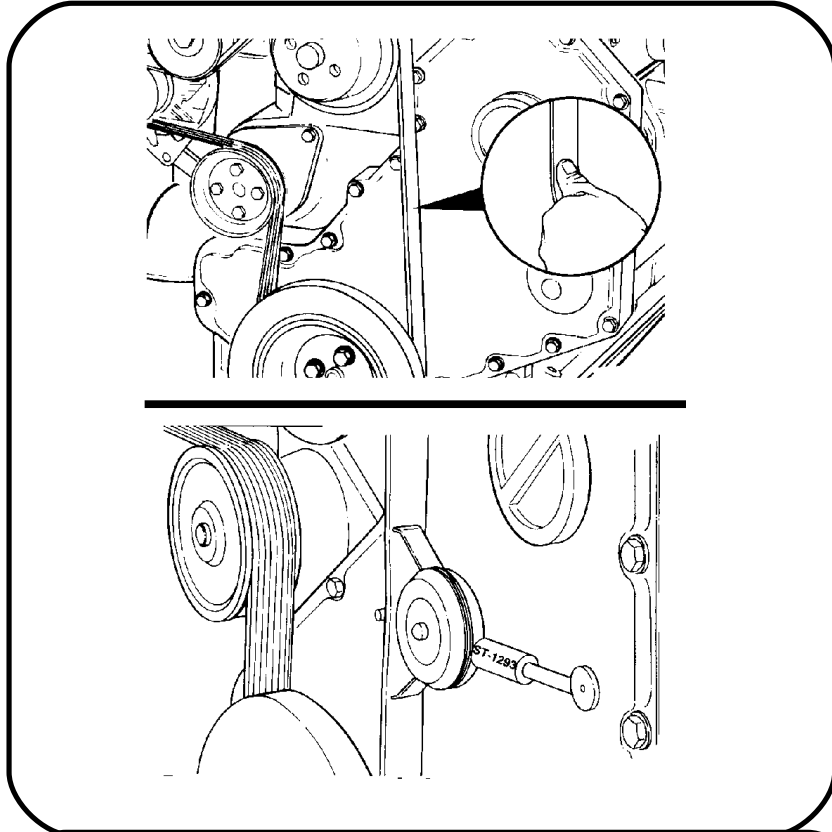

Checking Belt Tension  
Figure 9

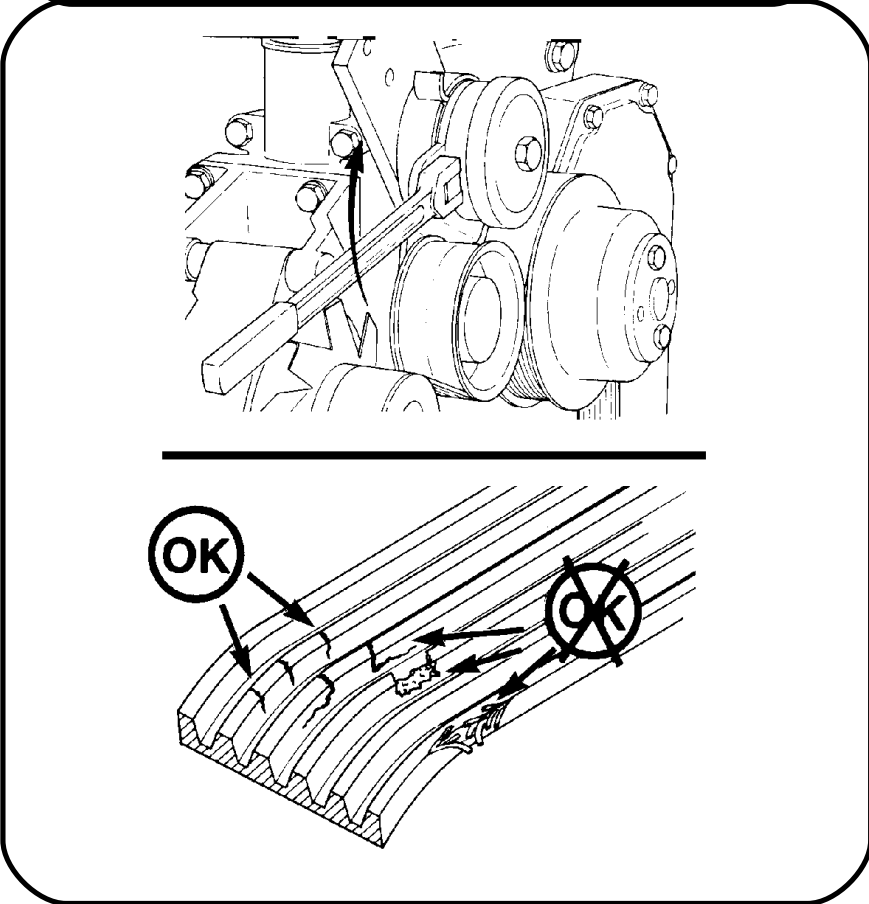

Removing and Inspecting  
Drive Belts  
Figure 10

## 8. Voltage Regulator Maintenance/Repair

When the voltage regulator is working properly, no maintenance is necessary. However, if the generator set is used in a dusty environment, the regulator should be periodically cleaned with compressed air.

The voltage regulator, which is in fact a PC board, does not lend itself to field repair. For the convenience of maintenance personnel, this voltage regulator is designed to be trouble-free and simple to put back into service once it has malfunctioned or if it is not functioning properly. Most malfunctions of the voltage regulator will be corrected by (1) removing and replacing the PC board, and (2) making voltage and line-drop adjustments after installing the new board. To remove and replace voltage regulator PC board, proceed as follows:

- a. **Disconnect the 16-pin connector.**
- b. **Remove the nuts and washers which attach the voltage regulator to the four shock mounts which are attached to the inside right panel of the control box. Exercise care to avoid breaking or dropping the PC board.**
- c. **Place the new voltage regulator PC board on the four shock mounts from which the defective PC board was removed, and fasten the new PC board securely in place with the nuts and washers which were previously used.**
- d. **Re-connect the 16-pin connector, and make certain that this connection is securely made.**

## 9. Cold Weather Starting Aid Servicing and Troubleshooting

### WARNING

When servicing or troubleshooting the cold weather starting kit, make certain that this work is done in a well ventilated area. Goggles should be worn to protect eyes when servicing this kit.

Many vehicle components can affect cold weather starting. The following instructions are limited to troubleshooting of the Dieselmatic System. The most common problems are (1) an empty fluid cylinder, and (2) a clogging metering orifice.

### a. Check Fluid Cylinder Contents And Valve Gasket.

- (1) Clean all dirt from neck of cylinder and top of valve before removing the fluid cylinder. Protect top of valve from dirt when cylinder is removed.
- (2) An empty net weight 21 oz. fluid cylinder weighs 16 oz. (454 gr.), and a full fluid cylinder weighs 37 oz. (1049 gr.).
- (3) Check that fluid cylinder has pressure.
- (4) Check valve gasket. If gasket inside valve is damaged or worn, replace with a new gasket, KBI Part Number 300012. Make sure only one gasket is used, as two gaskets would prevent valve from operating.
- (5) Cylinder, or its replacement, should be reinstalled hand tight. Coupling Dirt Eliminator may be transferred from old cylinder to new cylinder or replaced with a new one, KBI Part Number 300830.

### b. Check of electrical system.

### WARNING

Electrical shock can kill. Do not touch live electrical parts.

- (1) Check to see if fuse is blown. Check all wiring for loose connections, shorts, and broken wires.
- (2) Check that the Dieselmatic System is wired correctly.

**NOTE:** To check system for proper operation, the Engine Temperature Sensor (ETS) must be below 40° F (4° C) or be bypassed by connecting the valve's black lead directly to a good ground. After checking, be sure to reconnect the black lead in accordance with Connection Diagram.

- (3) Test valve by removing fluid cylinder and momentarily engaging cranking motor. Valve plunger should move up and remain up while cranking motor is engaged. If valve operates, proceed to step (5).
- (4) If valve plunger did not function, check valve by disconnecting leads from cranking motor and ground. Momentarily touch leads directly across battery terminals. The valve plunger should move up and remain up until the leads are disconnected. If the valve does not activate when connected across the battery it is faulty and should be replaced.
- (5) Check Engine Temperature Sensors (ETS) switch by chilling to sub-freezing temperatures. At cold temperatures, the ETS switch should close (i.e. show continuity). Check with a DC powered test light or ohmmeter. At warm temperatures, the ETS switch should open (i.e. not show continuity). The closing and opening temperature should be about 40° F (4° C). If either continuity test fails, ETS switch should be replaced.

### c. Check for Clogging of Flow Metering Orifice Fitting

#### **WARNING**

When servicing or troubleshooting the cold weather starting kit, make certain that this work is done in a well ventilated area. Goggles should be worn to protect eyes when servicing this kit.

The Dieselmatic's fluid flow rate is controlled by serviceable filtered metering orifice inside the fitting at the bottom of the valve assembly. See Figure 2. The following procedure is recommended when checking for clogging:

- (1) Remove system's nozzle from engine.
- (2) If starting fluid does not spray from nozzle when the system is activated, disconnect tubing from valve fitting. If starting fluid sprays from the fitting when the system is activated, check tubing for kinks, burns, cuts, clogs, or for a clogged nozzle. When performing these two operations, be sure to spray fluid into an appropriate container.
- (3) If starting fluid does not spray from valve fitting, it should be removed from valve and cleaned.

**NOTE:** Fitting end installed in valve has left hand threads.

The filter may be removed from the fitting. It can be washed in clean solvent and blown with compressed air. For best results, replace filter with a new one, KBI Part Number 300813. Reassemble filter with "O" ring into fitting.

- (4) It is suggested before clean filtered assembly is reinserted into valve, that valve be flushed by activating the system. When performing this operation, be sure to spray fluid into an appropriate container.
- (5) Reinsert clean filtered fitting assembly into valve. Remember: left hand threads. Reinstall system's nozzle into engine. Reconnect tubing to valve fitting and nozzle.
- (6) Check all fitting and tubing connections for leaks.



---

## Section 3. Adjustment/Test

---


### 1. General

These adjustment and test procedures are applicable to testing and adjusting the generator set after major repair, major parts replacements, or overhaul.

### 2. Testing the Generator Set


#### a. Pre-operational Test Procedures

- (1) Connect cables from the generator output terminals to a load bank. Use cables of the same size and length as those to be used in service. Be sure the generator output N cable is grounded.
- (2) Check engine oil level. Oil should be at high bar on the dipstick.
- (3) Check radiator coolant level (See 2-2, Para. 5).
- (4) Check tension of drive belt (See 2-2, Para. 6).
- (5) If governor throttle linkage was disturbed, check all linkage to make certain engine speed may be controlled when the engine is started. Refer to Paragraph 3, e, (1) and see Figure 3.
- (6) Inspect for oil, fuel and coolant leaks.
- (7) If the setting of the output voltage coarse adjustment potentiometer (36, Fig.1) on the voltage regulator has been disturbed, set it at CENTER position (halfway between full clockwise position and full counterclockwise position).
- (8) Check marker lights circuit breaker (33, Fig. 1) by pressing panel light push button switch (28). If panel lights (11, Fig. 1) operate, the circuit breaker, switch, and lamps are good.
- (9) Check fault indicating lights by pressing test/reset push button switch (19, Fig. 1). If lights glow, the control circuit breaker (34) and indicating lamps are good.
- (10) Make a general inspection of all wiring, and terminals. Inspect the equipment to be certain no damage will result from starting the engine.

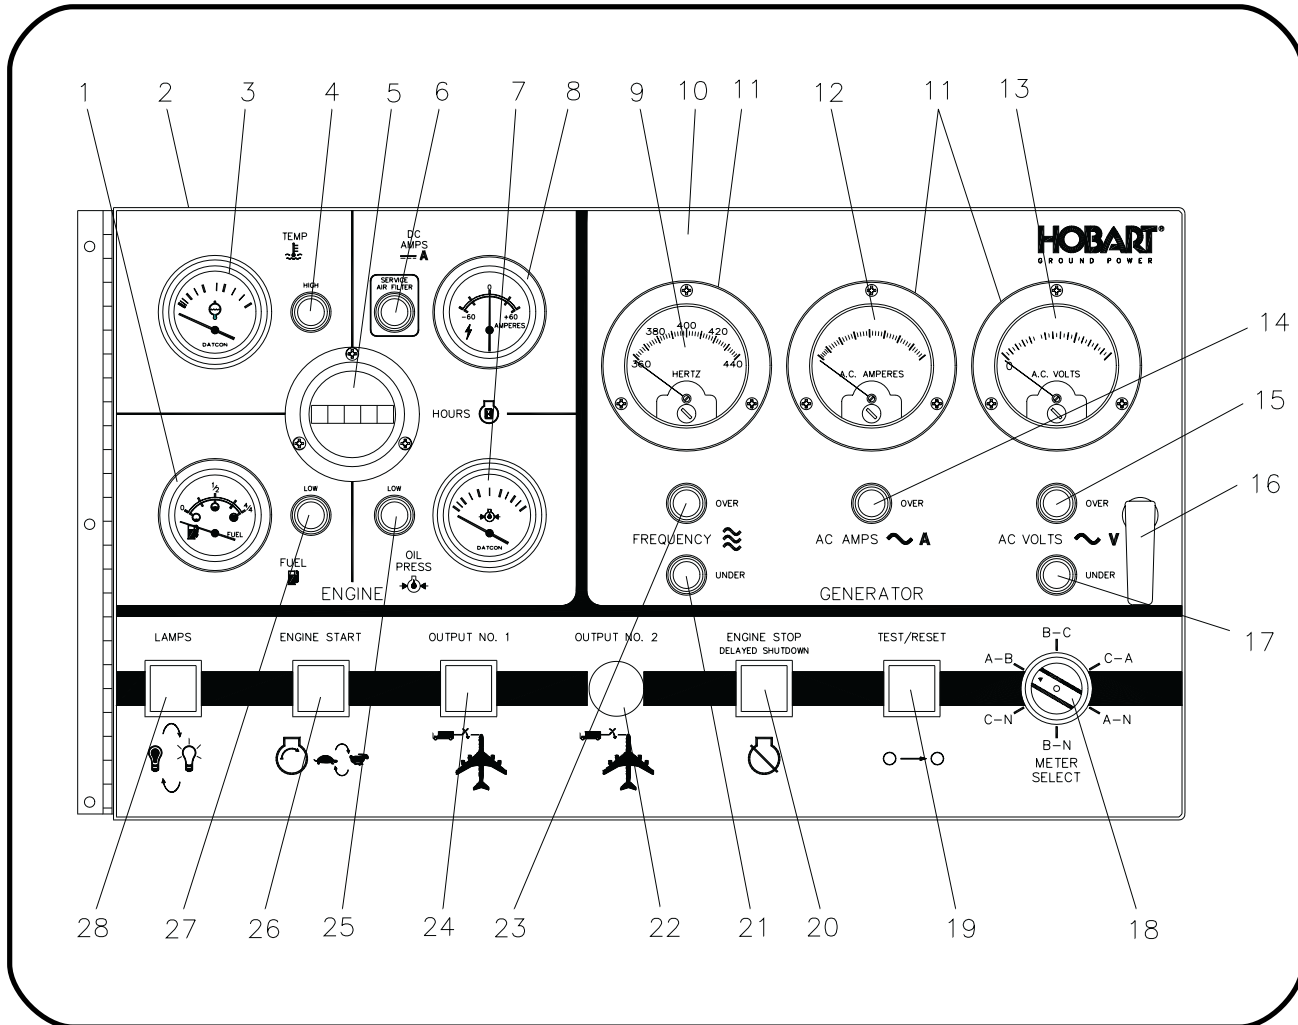

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>1. Fuel gage</li> <li>2. Front panel</li> <li>3. Engine coolant temperature meter</li> <li>4. Over temperature indicator light (red)</li> <li>5. Engine hour meter</li> <li>6. Indicating light, air cleaner restriction</li> <li>7. Oil pressure gage</li> <li>8. Engine ammeter</li> <li>9. Frequency meter</li> <li>10. Control Box label</li> <li>11. Strip lights (3)</li> <li>12. Generator ammeter</li> <li>13. Voltmeter</li> <li>14. Overload indicator light (red)</li> <li>15. Overvoltage indicator light (red)</li> </ul> | <ul style="list-style-type: none"> <li>16. Adjustable grip latch</li> <li>17. Undervoltage indicator light (red)</li> <li>18. Meter Selector switch</li> <li>19. Test-reset push button switch (red)</li> <li>20. Engine stop push button switch (red)</li> <li>21. Underfrequency indicator light (red)</li> <li>22. Hole Plug</li> <li>23. Overfrequency indicator light (red)</li> <li>24. No. 1 contactor push button switch (yellow)</li> <li>25. Low Oil Pressure indicator light (red)</li> <li>26. Engine start push button switch (green)</li> <li>27. Low Fuel indicator light (red)</li> <li>28. Panel light push button switch (yellow)</li> </ul> |
|---|--|

**Operating Controls and Instruments**  
**Figure 1 (Sheet 1 of 2)**

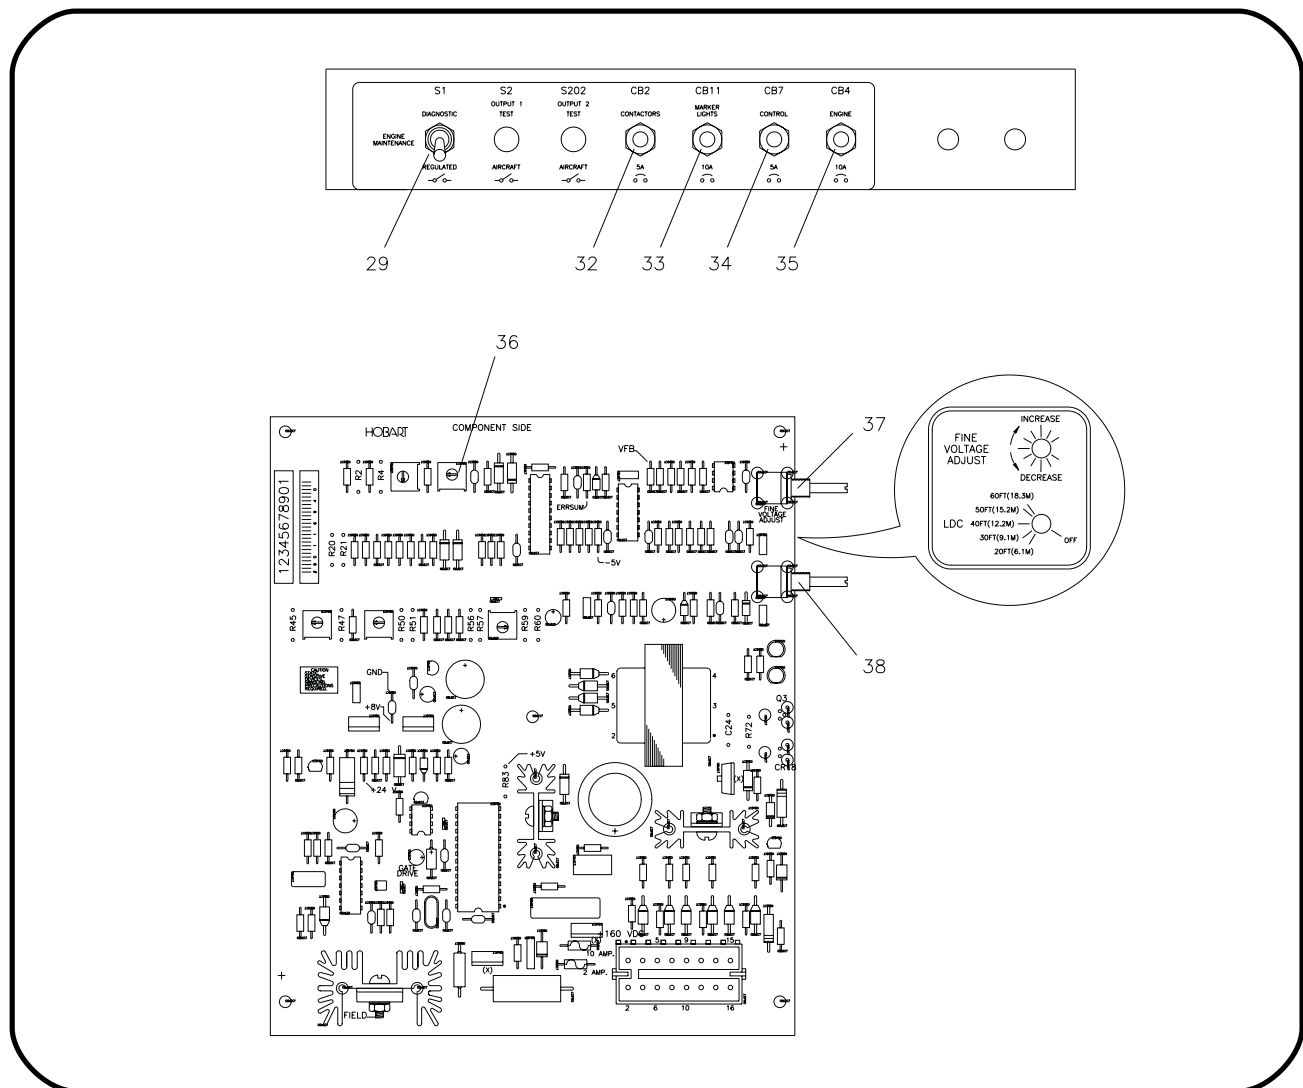

- |   |  |
|---|--|
| 29. Regulated-diagnostic switch             | 34. Circuit Breaker, control (5-amp)   |
| 30. Not Used                                | 35. Engine circuit breaker (10-amp)    |
| 31. Not used                                | 36. Output voltage adjustment (coarse) |
| 32. Circuit Breaker, contactors (5-amp)     | 37. Output voltage adjustment (fine)   |
| 33. Circuit Breaker, marker lights (10-amp) | 38. Line drop compensation adjustment  |

**Operating Controls and Instruments**  
**Figure 1 (Sheet 2 of 2)**

**b. Operational Test Procedures**

- (1) Start the engine in accordance with instructions in 1-3, Para. 2, A thru C.
- (2) Check operation of engine instruments; DC ammeter (8, Fig. 1), coolant temperature indicator (3), oil pressure gage (7) and hourmeter (5).
- (3) Check engine idle speed. Should be 850 +/- 50 RPM. If adjustment is necessary, adjust the idle speed potentiometer on the governor control box.

**NOTE:** A stroboscope is required for this check.

- (4) Again check for oil, fuel, and coolant leaks and correct any leaking condition.
- (5) Position switches and controls for automatic voltage regulation and power delivery as follows:
  - a. Place regulated-diagnostic switch (29, Fig. 1) in REGULATED position.
  - b. If the of the output voltage coarse adjustment potentiometer (36) on the voltage regulator regulator has been disturbed, place the knob at mid-range position.
- (6) Bring the engine up to governed speed and also energize the generator by pressing the engine start push button switch (26) a second time. If the engine comes up to governed speed and a voltage value appears on the voltmeter (13), the electric governor and excitation circuits are functioning.
- (7) After generator overhaul or repair, the Regulated/Diagnostic switch (29, Fig. 1) must be placed in the **DIAGNOSTIC** position for 3 to 5 seconds to remagnetize the exciter. Then return the switch to the **REGULATED** position after voltage has built-up.
- (8) Observe frequency meter (9). If engine speed is properly adjusted, frequency will be exactly 400 Hz. If not, adjust engine governed speed in accordance with Para. 3, E, (3). See Fig. 6.
- (9) Observe voltmeter (13). Use output voltage coarse adjustment potentiometer (36) to adjust voltage to 240 V AC.
- (10) Measure governor actuator input signal. See Para. 3, e.
- (11) Measure governor magnetic pickup signal. See Para. 3, e.
- (12) Check high-speed limiting governor.  
Engine limiting speed governor should limit engine speed to approximately 2750 +/- 75 RPM.
- (13) Check adjustable voltage range.
  - a. Observe voltmeter (13) and turn output voltage coarse adjustment potentiometer (36) to full CLOCKWISE position. Maximum voltage should be 268 volts or higher.

**NOTE:** If voltage should decrease when regulator potentiometer is turned clockwise, it indicates that internal wiring in the voltage regulator is incorrect. Replace complete voltage regulator assembly.

- b. Observe voltmeter and turn regulator potentiometer knob to full COUNTERCLOCKWISE position. The minimum voltage should be 184 volts or lower.
- (14) Position load bank switches, etc., to apply a light load to the generator.

**c. Testing the Output Circuit (See Fig. 1)**

- (1) Press the No. 1 load contactor push button switch (24). The contactor power ON indicating light within the push button switch should glow and remain ON when the push button switch is released.
- (2) Apply 1/3 to 1/2 load at the load bank and allow the unit to run for 15 to 30 minutes. Observe operation of all monitoring instruments.
- (3) Increase load at the load bank to full load.
- (4) Check operation of the governor by observing the frequency meter (9, Fig. 1) when generator is switched from no load to full load, and vice versa. Use the contactor control push button switch to apply and remove load several times. Steady-state frequency droop should be no more than 1 Hz. Adjust governor if necessary [see Para. 3, E, (3)].
- (5) Follow instructions in Para. 3, B, (2) (b) to set voltage regulator line drop compensation for the length and size of cable being used.
- (6) Check voltage regulator, at intervals, from no load to full load and on up to 125% load. Observe and note voltage at various loads. Steady-state voltages should vary no more than +/- 1% from normal output voltage.
- (7) Operate the output circuit of the unit not less than 10 minutes under full 90-KVA load. The overload device (Ref. 1-1; 1, Fig. 9) MUST NOT trip.
- (8) Operate the output circuit of the unit at 125% load (208 amperes) for 5 minutes immediately following the full load run. The overload device MUST trip within 5 minutes, and the overload indicating light on the engine generator control panel must come ON to indicate an overload condition.
- (9) Reduce load to normal. Turn off overload indicating light by pressing reset push button switch (19, Fig. 1).

**d. Testing and checking meters, switches, circuits, and indicating lights (See Fig. 1)**

- (1) Check accuracy of voltmeter
  - a. Open door of control box and connect a master voltmeter of known accuracy to terminals of the voltmeter (13).
  - b. Compare the unit's voltmeter reading with master meter. Error must not exceed 2% of full scale.
- (2) Check accuracy of AC ammeter
  - a. Connect a master ammeter of known accuracy to the AC ammeter (12).
  - b. Compare the unit's ammeter reading with master meter under various loads. Error must not exceed 4% of full scale.
- (3) Check operation of meter selector switch (18). A voltage value should be shown in each switch position.
  - a. In any LINE-TO-NEUTRAL position, voltmeter reading should be 240 volts.
  - b. In any LINE-TO-LINE position, voltmeter reading should be 416 volts.
- (4) Check accuracy of frequency meter
  - a. Connect a master frequency meter of known accuracy to the terminals of the frequency meter (9).
  - b. Compare meter readings. Error must not exceed 1% of full scale.

**NOTE:** Make all protective system tests with the unit operating under load.

- (5) Check operation of over voltage circuit and indicating light.
  - a. With the unit running at normal load, adjust the coarse adjustment potentiometer (36, fig. 1) of the voltage regulator **CLOCKWISE** to increase voltage until the over voltage sensing circuit actuates the protective monitor to open the load contactor and turn on the over voltage indicating light. At 252 volts, the circuit will trip after a 1-second time delay. At higher values of voltage, time delays for over voltage trips are as follow:
    - At 280 volts, the circuit will trip within 160 milliseconds.
    - At 360 volts, the circuit will trip within 50 milliseconds.
  - b. If the load contactor does not open under the conditions described in step (a), refer to the Troubleshooting Chart in Section 2-4.
  - c. Return unit to normal operating conditions by adjusting coarse adjustment potentiometer (turning it counterclockwise) and pressing reset push button switch (19).
- (6) This step checks operation of the under voltage sensing circuit, indicating light, and time delay circuit.

When the voltage is reduced to a predetermined value, the under voltage sensing circuit activates the under voltage time delay circuit. If the under voltage condition continues for approximately 7 seconds, the time delay circuitry will activate the protective monitor's under voltage circuit, which in turn opens the load contactor to stop power delivery and turns on the red under voltage indicating light (17). A stopwatch is required for this check.

  - a. With the unit running at normal load, use the output voltage coarse adjustment potentiometer (36) on the voltage regulator to reduce the voltage to 208 volts. The load contactor should **NOT** open.
  - b. Reduce voltage in steps of 1 volt, with a time delay of 7 seconds between steps. At a setting of 200 volts, the load contactor will open and the under voltage light will glow after a sevensecond time delay.
  - c. If the load contactor does not open under the conditions described in step (b), refer to the

Troubleshooting Chart in Section 2-4.

- d. If the under voltage circuit performs satisfactorily, return unit to normal operation by adjusting output voltage coarse adjustment potentiometer for normal output voltage, pressing the reset push button switch, and closing the load contactor.
- (7) Check under frequency sensing circuit, protective monitor, and indicating light. At some frequency value from 380 Hz or less, after 7 seconds, the under frequency condition should signal the under frequency circuit in the protective monitor module to OPEN the load contactor holding circuit, thus OPENING the load contactor. To check the under frequency protective components, proceed as follows:
- a. While the unit is operating normally under load, reduce generator output frequency by reducing engine speed. Use the governed speed setting potentiometer (Fig. 5). Turn adjusting screw gradually COUNTERCLOCKWISE to reduce engine speed until frequency meter indicates 385 Hz. Under frequency protective circuit should not open the load contactor at this frequency.
  - b. Reduce frequency in steps of 1 Hz, with a time delay of 7 seconds between steps.
  - c. If the protective circuit opens the load contactor and turns on the under frequency light after 7 seconds at 380 Hz, all components of the system are functioning properly.
  - d. If the load contactor is not opened at 380 Hz after 7 seconds, refer to Troubleshooting Chart to determine which component is defective.
  - e. Return unit to normal operating condition.
- (8) Check over frequency sensing circuit, protective monitor, and indicating light.
- At some frequency value from 420 Hz to 480 Hz, after 7 seconds, the over frequency sensing circuit should signal the over frequency circuit in the protective monitor module to OPEN the load contactor holding circuit, thus OPENING the load contactor.
- At any frequency value exceeding 480-Hz, the over frequency sensing circuit should immediately signal the over frequency circuit in the protective monitor module to OPEN the load contactor holding circuit, thus OPENING the load contactor.
- To check the over frequency protective components, proceed as follows:
- a. While the unit is operating normally under load, increase generator output frequency by increasing engine speed. Use the governed speed setting potentiometer (Ref. Fig. 5). Turn adjusting screw CLOCKWISE gradually to increase engine speed until frequency meter indicates 415 Hz. Over frequency protective circuit should not open the load contactor at this frequency.
  - b. Increase frequency in steps of 1 Hz, with a time delay of 5 seconds between steps.
  - c. If the protective system opens the load contactor and turns on the over frequency light after 5 seconds at 426 Hz, all components of the system are functioning properly.
  - d. If the load contactor is not opened at 426 Hz after 5 seconds, refer to Troubleshooting Chart to determine which component is defective.
  - e. Return unit to normal operating condition.
- (9) If the generator is operating under load at this point, place the contactor control switch (24, Fig. 1) in OFF position to open load contactor and disconnect load. There will be no further need for the load bank in the following check.

**e. Re-checking the entire unit after testing**

- (1) With the engine running at normal governed speed, check the entire unit for vibration and for any parts which may have become loosened during the above checks. Tighten any loose attaching hardware as required.
- (2) Check engine oil pressure at rated speed (2400 RPM). The oil pressure gage should indicate at least 45 psi (310 kPa) when engine is hot. Also at rated speed, check engine coolant temperature. The needle in the temperature gage should indicate in the range of 180° F to 200° F (82.2° C to 94° C), depending upon ambient temperature.

**WARNING**

If a metal sounding rod is used to detect bearing noises, exercise extreme care to avoid injury.

- (3) Check 400 Hz generator bearings. Use a stethoscope or metal sounding rod to listen for unusual noises. If using a metal rod, place one end on the generator housing and hold the other end near the ear. Hold the rod with three fingers and use the index finger and thumb to form a sounding chamber between the rod and the ear. Do NOT allow the rod to touch the ear. Listen for grinding or pounding sounds which would indicate a defective bearing. An engine noise may be telegraphed to the generator and misinterpreted as a generator noise. Send the unit to overhaul if in doubt of bearing serviceability.

**3. Generator Set Adjustment**

**a. Generator Adjustment**

The 400 Hz generator is a brushless type requiring no adjustments of any kind.

**b. Adjust 400 Hz voltage regulator.**

When a voltage regulator is first put into service, or when output (generator-to-aircraft) cables are changed, the regulator may require adjustments of output voltage value and line-drop compensation.

For making these adjustments, the voltage regulator has three potentiometers:

Coarse output voltage potentiometer

Fine output voltage potentiometer

Line-drop compensation potentiometer. See Figure 1, Sheet 2 for identification of components used for regulator adjustment.

For regulator adjustment, the generator set must be running at rated RPM, under no-load conditions.

**(1) Adjustment**

**a. Adjust Voltage Control**

The output voltage at which the generator is regulated is adjustable by the PC board fine output voltage adjustment potentiometer (36, Fig. 1). Turn the potentiometer adjustment clockwise (cw) to increase generator output voltage, and counterclockwise (ccw) to decrease voltage.

Observe the output voltage as indicated by the voltmeter which is located on the control panel of the generator set. Set output voltage at 240-V AC line-to-neutral (416-V AC line-to-line).

**b. Adjust Line Drop Compensation**

Adjustment of line drop compensation is made with the line drop compensation potentiometer (38, Fig. 1). Turning the potentiometer knob clockwise increases the magnitude of the compensation, and turning the potentiometer knob counterclockwise decreases the magnitude. To adjust the line drop compensation, proceed as follows:



Connect the generator set output cables to a load. Load the generator set with the largest available three-phase load of rated power factor not exceeding the maximum rating of the generator set.

Measure output voltage at the load end of the cables. If the load voltage rises or drops more than 1% at the load end of the cables, decrease or increase the line drop compensation until the regulation is flat (240-V AC line-to-neutral and 416-V AC line-to-line).

If the line drop compensation adjustments have affected the no-load voltage output, adjust the fine output voltage control potentiometer (37, Fig. 1) to the desired value.

(2) Test the Voltage Regulator

After necessary adjustments have been completed, re-test the voltage regulator as follows:

- a. Connect a voltmeter at the load end of the generator output cables.
- b. Operate the generator set at no-load and observe voltage reading.
- c. Operate the generator set under load and observe voltage reading.
- d. Voltage under load should vary no more than 1% at the load end of the cables from voltage under no-load.

**c. Basic Engine Adjustments**

Adjustment procedures applicable to the diesel engine are included in the Cummins Operation Manual, which is located in Chapter 5. Specific information for these engines is listed in Figure 2. Refer to the Cummins Operation and Manual for detailed information on the following engine adjustments.

(1) Exhaust valve adjustment

(2) Fuel injector timing adjustment

(3) Engine idle speed adjustment

Engine idle speed is set at the factory. The adjustment is then sealed to discourage tampering. Idle speed should not be changed by the user. If adjustment is required, contact the local Cummins Distributor. The recommended idle speed is 750 +/- RPM.

**NOTE:** A stroboscope is required for engine idle speed checks.

(4) Engine speed limiting adjustment

The speed limiting adjustment is also set and sealed at the factory. Speed should be limited to 2750 +/- 75 RPM. If adjustment is required, contact your local Cummins Distributor.

**d. Engine Accessories Adjustment**

(1) Alternator and fan belt adjustment

Refer to 2-2, Par. 6 for belt adjustment instruction.

Manufacturer	Cummins
Type engine	In-line 6 cylinder, 4 cycle diesel
Model	6B5.9C165
Engine governed speed	2400 RPM
Idle speed	850 +/- 50 RPM
Speed limiting governor	approximately 2750 +/- 75 RPM
Firing order	1-5-3-6-2-4
Fuel pump speed limiting governor	automotive type
Lubricating oil pressure at 2400 RPM	45 to 50 PSI (310.3 to 620.5 kPA)
Engine coolant temperature	160° F to 200° F (71° C to 93° C)

**Engine Specifications  
 Figure 2**

**e. Electric Governor System Adjustment**

Two of the electric governor system main components, namely the magnetic pickup and electric control box, have critical adjustments which can affect engine performance and, therefore, generator output. Actuator-to-fuel control lever adjustment can also affect engine performance.

**NOTE:** When servicing the actuator linkage **DO NOT** lubricate the ball joints, as they are self lubricating. **DO NOT** lubricate them as damage will occur.

When the complete system is to be checked, and/or adjusted, a definite sequence of procedures should be followed:

First - Check or adjust actuator linkage

Second - Check or adjust magnetic pickup

Third - Check or adjust electronic control box.

**NOTE:** When making governor system adjustments, an important factor in such adjustments is the type of fuel used in the generator set. For the engine of this generator set, carefully follow the engine fuel guidelines referenced in 2-2, 4, (a).

(1) Actuator linkage adjustment (See Fig. 3)

The proper adjustment of the mechanical linkage between the electric actuator and engine speed control lever is important to the satisfactory operation of the complete system. The engine run lever and the engine stop lever are two Cummins supplied pieces that control the engine speed.

The engine run lever (5) is a factory preset throttle control that should not be tampered with. It is set to run wide open.

The engine stop control lever (4) along with the Hobart installed governor actuator (1) is used to control the engine speed only. The linkage (2 and 3) should be used for governor adjustment only.

Two definite rules must be followed in making the adjustment:

Adjust linkage to use the full travel of the threaded rod (2) and the engine stop lever (4).

Linkage must move engine stop lever (4) from no fuel to maximum speed (2750 rpm) position, or very close to maximum speed position to allow engine to pull 125% load.

Refer to figure 3 while making linkage adjustments. with engine stopped, check and adjust linkage as follows:

- a. Before making adjustment, observe and note the hole that the engine stop lever (3) uses to mount the ball joint (3). It is oval shaped therefore it will allow for a variety of positions for the ball joint (3) to rest.
- b. Loosen the ball joint nut that fastens the ball joint (3) to the stop engine lever. Then loosen the nut that fastens the ball joint to the threaded rod (2), and remove the ball joint (3) from the engine stop lever (4).

**NOTE:** Do not remove the ball joint from the threaded rod.

- c. Be sure that the engine stop lever (4) has not slipped on its shaft. If it has slipped, position it correctly and tighten securely.
- d. Place the lever (4) in **NO FUEL** position and hold in place. Attempt to position the ball joint (3) in the oval hole of the engine stop lever (4), that will allow for a maximum range of travel of both levers. To do this:  
Loosen nuts and rotate the ball joint - inward or outward on the threaded rod - as necessary for making the placement.  
Hold the removed ball joint in its correct position in the mounting hole of the engine stop lever (4), and tighten the ball joint nut.  
Then fasten down the nuts snug in order to inspect linkage travel.
- e. Then manually operate the threaded rod (2) back and forth between no fuel and full speed to compare its travel with the travel of the engine stop lever (4). If adjustment is unsatisfactory, try another place in the oval hole in the engine stop lever and readjust the rod length.
- f. When proper adjustment has been completed, tighten the jam nut on the threaded rod (2) firmly against the ball joint (3).
- g. Check governor linkage for freedom of travel. Move the rod assembly manually to see that there isn't any binding or lost motion in linkage. Make corrections if and as required. At **NO FUEL** position, the engine stop lever should be pulled all the way forward. For maximum RPM, the actuator shaft should move far enough to force the engine stop lever to use all its travel as it moves backward.
- h. Start the engine, and set idle speed to 850 RPM +/- 50 RPM. (Refer to Par. 3, (e) (3) for procedure for setting idle speed). Operate engine at idle speed until it is warmed to operating temperature.



#### (2) Magnetic pickup adjustment

The strength of the magnetic pickup signal to the control box can be weakened if the tip of the pickup is too far from the flywheel ring gear or if it becomes damaged. If the pickup is removed for any reason, or if the signal is weak, as indicated by test in Par. 3, e, (3), adjust the pickup as follows:

- a. Disconnect magnetic pick-up wires at the terminal strip on the governor controller (terminals 3 and 4).
- b. Loosen the jam nut (2, Fig. 4) and remove magnetic pickup (1).
- c. Inspect to make certain the tip is not damaged from contact with the ring gear teeth. Replace pickup if it is damaged. If it isn't, clean the tip of it and re-install it.

### CAUTION

The pickup tip must be directly over a tooth and not between teeth when adjustment is made.

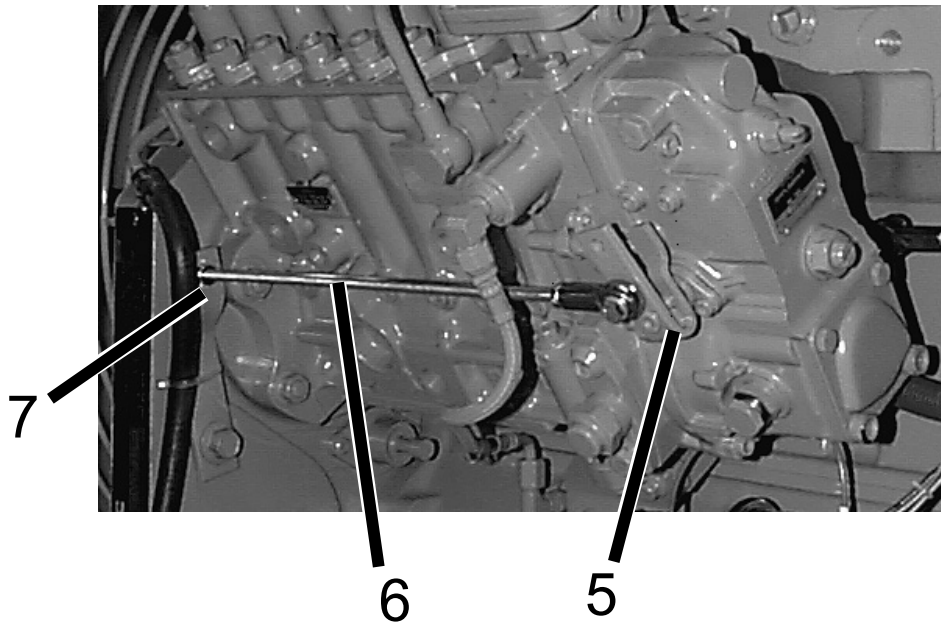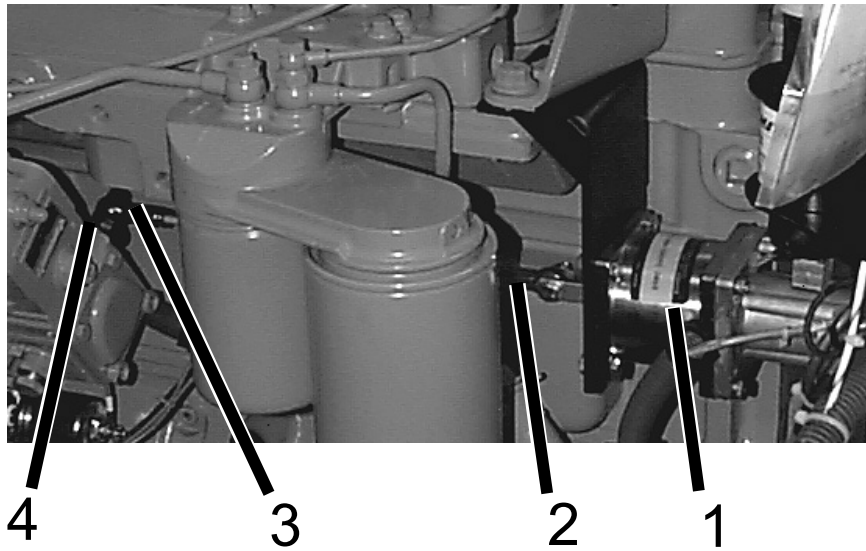

- 1. Actuator
- 2. Threaded Rod
- 3. Ball Joint
- 4. Engine Stop Lever

- 5. Engine Run Lever
- 6. Throttle Holdback Rod
- 7. Throttle Holdback Bracket

**Governor Actuator Linkage  
Figure 3**

- d. Rotate the engine as required to locate a ring gear tooth directly below the tapped, pickup mounting hole. Continue turning pick-up CLOCKWISE until it bottoms out (hits a ring gear tooth).
- e. Back the magnetic pick-up outward 1/4 to 3/4 of a turn COUNTERCLOCKWISE. This creates a gap between the magnetic pick-up and the ring gear.
- f. Re-connect pick-up wires to terminals 10 and 11 of the governor controller.
- g. Start the engine and run it at idle speed.
- h. Check voltage at terminals 10 and 11. The signal should read about 10 V-AC.
- i. If the signal is weaker than 4-V AC, check connections. If necessary, check magnetic pick-up continuity with an ohmmeter.
- j. Tighten the jam nut when the pick-up is properly adjusted.

NOTE: A minimum of 2.5-V AC is required during engine cranking. This minimum voltage is necessary to energize the electronics of the control box. At rated speed, the magnetic pick-up voltage could go as high as 25-30-V AC without damage to the internal electronics of the control box.

(3) Governor control box adjustment (See fig. 5)

The control box has three control potentiometers (pot) for setting the response characteristics of the governor system. They are: "I", "D", and "GAIN." There is a fourth potentiometer named "DROOP", which is not used in this installation. It is set to zero or minimum. There are two potentiometers for controlling speed. The "SPEED" potentiometer in the control box is for setting IDLE speed. The potentiometer on the external printed circuit board is for setting the RATED speed. These are both multi-turn controls. They are also interactive with each other.

Make the controller settings as follows:

a. Preliminary controller settings

Turn the engine OFF

Set the "I" potentiometer (pot) to the FORTH increment mark from zero.

Set the "D" potentiometer to the THIRD increment mark from 0 (zero).

Set the "GAIN" potentiometer to the THIRD increment mark from 0 (zero).

Set the "DROOP" potentiometer COUNTER CLOCKWISE to minimum 0 (zero).

Turn the rated speed potentiometer all the way COUNTER CLOCKWISE. Then count twelve full turns CLOCKWISE.

Start the engine, leave at IDLE speed and adjust the IDLE speed potentiometer in the control box until the engine is operating at 850 RPM. Turning the potentiometer CLOCKWISE increases engine RPM.

Checking No-Load Operation of Controller (See fig. 5)


Press engine start switch (26, Fig. 1) a second time to increase engine RPMs to approximately the rated speed (2400 RPM).

Turn the "GAIN" potentiometer full CLOCKWISE. The frequency meter gage and governor should become unstable and oscillate. If it does not, manually bump the linkage to cause it to oscillate.

Slowly turn the "GAIN" potentiometer COUNTER CLOCKWISE until the oscillations stop. Turn the "GAIN" potentiometer ½ an increment past a point where the oscillations stop.

Turn the "D" potentiometer full CLOCKWISE. The frequency meter gage and governor should become unstable and oscillate. If it does not, manually bump the linkage to cause it to oscillate.

Slowly turn the "D" potentiometer COUNTER CLOCKWISE until the oscillations stop. Turn the "D" potentiometer ½ an increment past a point where the oscillations stop.

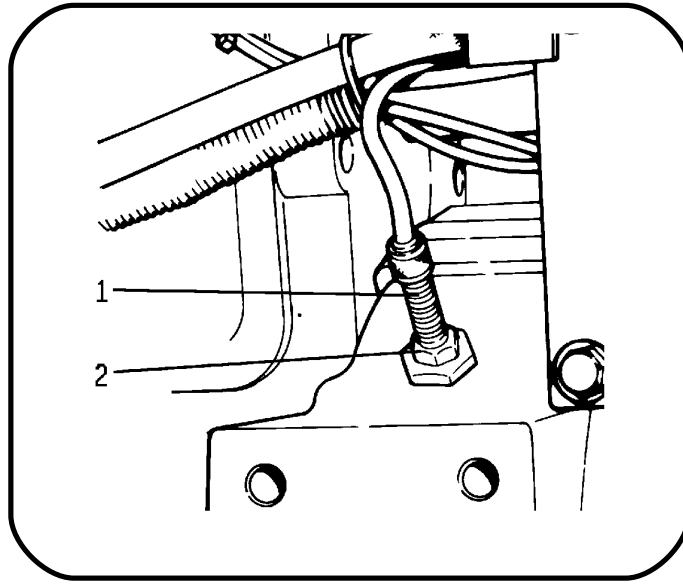

**Magnetic Pick-Up Adjustment**  
**Figure 4**

Turn the "I" potentiometer full CLOCKWISE. The frequency meter gage and governor should become unstable and oscillate. If it does not, manually bump the linkage to cause it to oscillate.

Slowly turn the "I" potentiometer COUNTER CLOCKWISE until the oscillations stop.

**NOTE:** If the frequency meter gage and/or governor should still oscillate after the adjustment of these potentiometers, the type of oscillation might give an indication of which ("GAIN" or "I") might need further adjustment. If the oscillation is fast and jagged, the "I" needs to be reduced by  $\frac{1}{2}$  to 1 increment. If the oscillation is slower and not as sharp, the "GAIN" needs to be reduced by  $\frac{1}{2}$  to 1 increment.

Use the start switch to toggle between the rated and idle speed. Run the engine from rated speed to idle speed. The governor should regain control after a short delay, there should only be between 2 to 4 oscillations (bounces) in the frequency meter. If this does not happen, the "GAIN" or "I" might need to be further adjusted. Again, the type of oscillation in the meter will tell which potentiometer to adjust (see above note). Repeat this procedure several times to assure consistency.

Using the engine start switch, run the engine up to rated speed. After a short delay, there should be only 2 to 4 oscillations in the frequency meter. If there is more oscillations than that, then further adjustment is needed. If the oscillations are 2 to 4 or less, then the controls are set.


**NOTE:** The "GAIN" and "I" controls interact with each other. That is to say that when one of them is adjusted, it affects the other. So it might be necessary to adjust back and forth between the two potentiometers several times to optimize performance.

*b.* Adjust for RATED speed operation (fig. 5)

The function of the speed adjust p.c. board is to set the rated engine speed. To check for proper adjustment, proceed with the following steps:

With the engine running and properly adjusted for IDLE speed, press engine start switch (26) to increase RPMs to RATED SPEED. The engine should be running at 2400 RPM and have an output frequency of 400 Hertz.

If the frequency reading is high or low (from 400 Hertz), operate the generator set at RATED speed, turn the adjustment pot on the speed adjust P.C. board in the CLOCKWISE direction to increase RPM's or COUNTERCLOCKWISE direction to decrease RPM's.

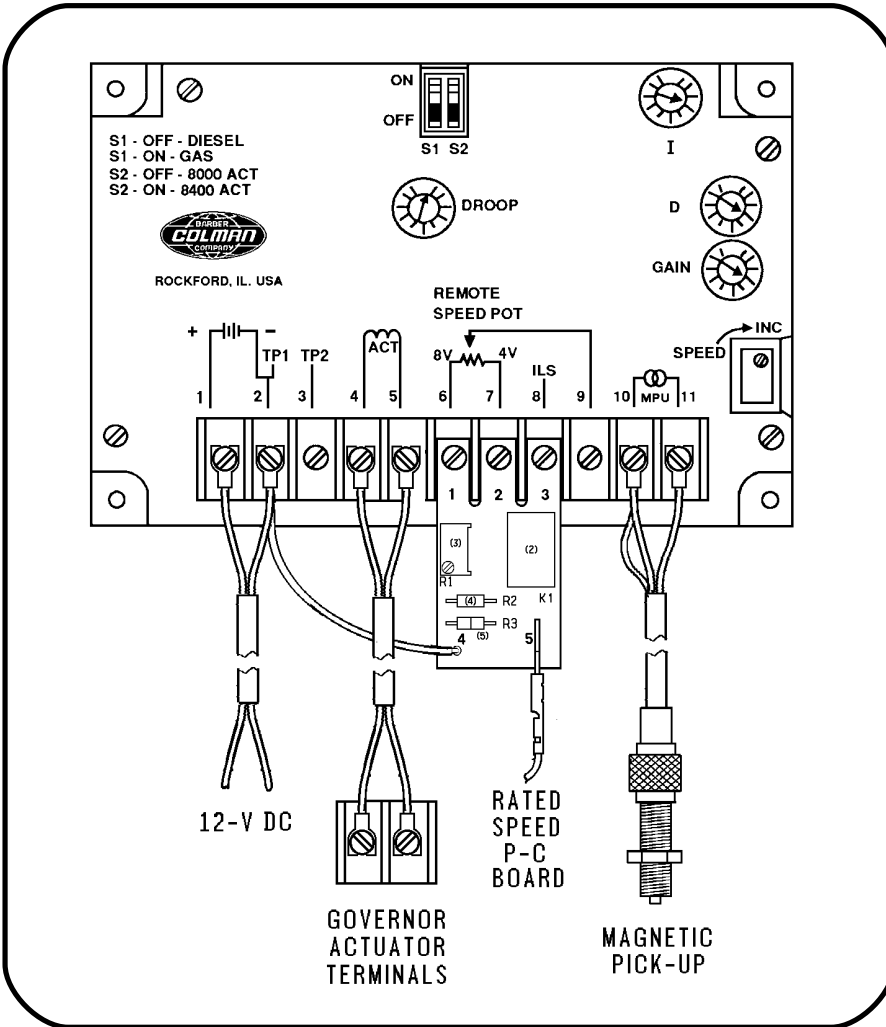

Electric Governor  
 Control Box  
 Figure 5

After making any adjustments, switch to IDLE speed, allow the engine to stabilize, then switch back to RATED speed.

a. Checking the Actuator

The actuator does not require any adjustments. An actuator malfunction, when it occurs, will result in the actuator being totally inoperative, either due to the actuator coil being open or shorted to the actuator case. Resistance measurements will reveal either of these conditions.

b. Checking Operation of Controller Under Load

Apply a load to the generator set, then remove the load and observe the length of time required for engine speed to stabilize. Engine speed should stabilize within 3 to 5 diminishing oscillations on the frequency meter. If this does not happen, proceed as follows:

With the generator set operating at no load, turn the GAIN setting slightly in the COUNTERCLOCKWISE direction.

Apply a load again to the generator set. Then remove the load again and observe the length of time required for engine speed to stabilize. It should now stabilize in 3 to 5 diminishing oscillations on the frequency meter.

**NOTE:** If engine speed STILL doesn't stabilize, recheck governor linkage. If the linkage is set properly, the governor controller is probably defective.

c. Checking Magnetic Pick-up Signal

Connect a high impedance voltmeter to magnetic pick-up input terminals (terminals 10 and 11, Fig. 5) on controller terminal board. The voltage value at no load, governed speed should be 4-V AC MINIMUM.

**NOTE:** A signal as low as 2.5-V is sufficient to operate the control unit satisfactorily. If a no-voltage condition is indicated, the magnetic pick-up is too far away from flywheel teeth, or it is defective.

**4. Generator and Exciter Test**

The generator fields and exciter stators may be tested with a Kelvin bridge. This is a double-bridge type instrument required for the very low resistance's encountered in this test. It is understood that 0 resistance indicates a SHORT CIRCUITED condition. An infinite resistance reading indicates an OPEN CIRCUITED condition. See Fig. 6 for resistance values.

- a. Disconnect generator stator leads at the output module panel.
- b. Disconnect the two black exciter field leads from terminal block mounted on output module panel.
- c. Check resistance and compare to values given in Figure 6.

Test Connection	Resistance (Ohms)
Generator Stator Phase A to N (G1)*	0.00470
Generator Stator Phase B to N (G1)*	0.00470
Generator Stator Phase C to N (G1)*	0.00470
Exciter Stator Field (L2)	26.5
A - B, B - C, C - A Exciter Armature (G2)	0.1
Generator Revolving Field (L1)	2.1

**\*NOTE:** The two leads of a phase must be connected when test is made. Take readings when unit is cold and in an ambient temperature of 70° F (21° C).

**Generator and Exciter Stator Tests  
 Figure 6**

**5. Diode Test**

Test values for diodes are not given here because they could be misleading. Test values may vary even between diodes of the same part number, rating, and manufacturer. General instructions for testing diodes follow:

- a. Disconnect exciter windings from diode lead(s).
- b. Use a good quality ohmmeter. An instrument which indicates 50 ohms at the center of the scale is preferable.

**NOTE:** Make certain the battery is in good condition and the pointer is adjusted to zero when the test lead points are shorted together. Set the scale selector to RX1.

- c. Hold one ohmmeter lead point on the threaded end of the diode. Hold the other lead point on the wire terminal end. Observe and note the indicated resistance. Now reverse the lead connection on the diode. Again observe and note the ohmmeter indicated resistance. Generally speaking, if an infinite or very high resistance was indicated with the leads connected one way and a low, readable resistance was indicated with the leads connected the opposite way, the diode may be considered good.



---

## Section 4. Troubleshooting Procedures

---

### 1. General

The Troubleshooting Chart, beginning on Page 6, covers the common malfunctions which you may find during operation or maintenance of this equipment. It cannot list all malfunctions that may occur. If a malfunction is not listed in the chart, start looking for the cause at the source of power in the affected circuit. Refer to the schematic and connection diagrams in Chapter 5 and test the circuit, step by step, until the source of the malfunction is isolated.

The Troubleshooting Chart is arranged under 3 headings: Trouble Symptom and Condition, Probable Cause, and Test Check and/or Remedy. Trouble(s), Symptom(s), and Condition(s) are described and numbered. Probable Cause(s) are indented to the right and listed in numbered steps below Probable Cause. Test Check and/or Remedy provides instructions for correcting the malfunction, and is listed below each Test or Inspection procedure. Tests and inspections called for in the Troubleshooting Chart are to be performed as described in section 2-3 of this manual.

### 2. Equipment for Troubleshooting

#### WARNING

Exercise extreme care to avoid contact with high voltage leads and components. High voltage can kill!

#### CAUTION

Maintenance personnel must be very careful when performing terminal-to-terminal checks to be certain the proper terminals are being used, especially when using jumper leads. Damage to electrical components may result from the application of improper voltage and current.

A good quality multi-scale volt ohmmeter is the only instrument required for troubleshooting. At least two jumper leads with alligator, or similar clips, will be required. The engine electrical system may be used as a 12-V DC power source.

### 3. Parts Replacement

To lessen end item down time and to get a faulty machine back on line as quickly as possible, the black-box concept of parts replacement is reflected in the Troubleshooting Chart. For example, if a component in the governor control box is defective, the quickest way to remedy the situation is to replace the complete control box and send the old box to stock. Assemblies which lend themselves to this concept are:

Electric governor control box	Protective monitor PC board
Electric governor actuator	Over-Under frequency PC board
Voltage regulator	Overload PC boards
Over-Under voltage PC board	Generator Set Control PC Board

#### 4. Test Values

Although test values are provided throughout the troubleshooting chart, additional information and values are given here.

Generator output voltage at maximum voltage regulator potentiometer setting: 134 volts or higher.

Generator output voltage at minimum voltage regulator potentiometer setting: 108 volts or lower.

Over voltage relay                      Trips at 252 volts after a 1-second time delay.  
Trips at 280 volts in 160 milliseconds.  
Trips at 360 volts in 50 milliseconds.

Under voltage relay                      Trips at 200 volts after 7 seconds.

Over frequency relay                      Trips at any value between 426-Hz and 480-Hz after a  
5-second time delay. Trips immediately at any frequency  
exceeding 480-Hz.

Under frequency relay                      Trips at 375 Hz or less after a 5-second time delay.

Overload time delay                      Trips in approximately 5 minutes at 125% load.

Frequency at rated speed of 2400 RPM is 400 +/- 2 Hz at no load and rated load.

Engine oil pressure (warm and at rated speed 2400 RPM) 45 to 90 PSI (445 to 621 kPa).

Engine coolant temperature (normal operation) 160 to 200° F (71 to 93° C).

#### 5. Check Connections and Leads

ALWAYS make a check of connections and leads to a component suspected of being faulty. With the exception of a few instances, we will assume that connections and wiring have always been checked first and that power has not been lost as a result of defective wiring or connections.

#### 6. Electric Governor Troubleshooting

The following facts concerning the operation of the electric governor may be helpful in understanding the system and in determining which unit in the system is faulty in case of troubles.

- (1) The system requires two sources of power to operate normally.
  - a. 12 V DC input power (from engine electrical system)
  - b. 4 V AC input voltage normal, the actuator will go to, or remain in **STOP** position under the following conditions:
    - No 12 V DC power
    - No voltage from control box to actuator
    - Inadequate magnetic pickup voltage

- (2) The actuator will surge under the following conditions:
  - a. Stability or gain adjustment set too high
  - b. Actuator linkage loose
  - c. Actuator linkage binding

## 7. Engine Troubleshooting

The ability of the engine to start and run properly depends upon a number of things.

- (1) An adequate supply of 12 V DC power reaching a good starter (1, fig. 1) and starter button.
- (2) Sufficient 12 V DC power reaching the fuel.
- (3) An adequate supply of air, compressed to a sufficiently high pressure.
- (4) The injection of the correct amount of clean fuel at the proper time


**NOTE:** When troubleshooting the engine, keep the above requirements in mind.

## 8. Illustrations

Illustrations, Figures 1, 2, and 3 are referred to throughout the Troubleshooting Chart.


## 9. Connection and Schematic Diagrams

All connection and schematic diagrams for generator, engine, lights, and all controls are located in chapter 5.

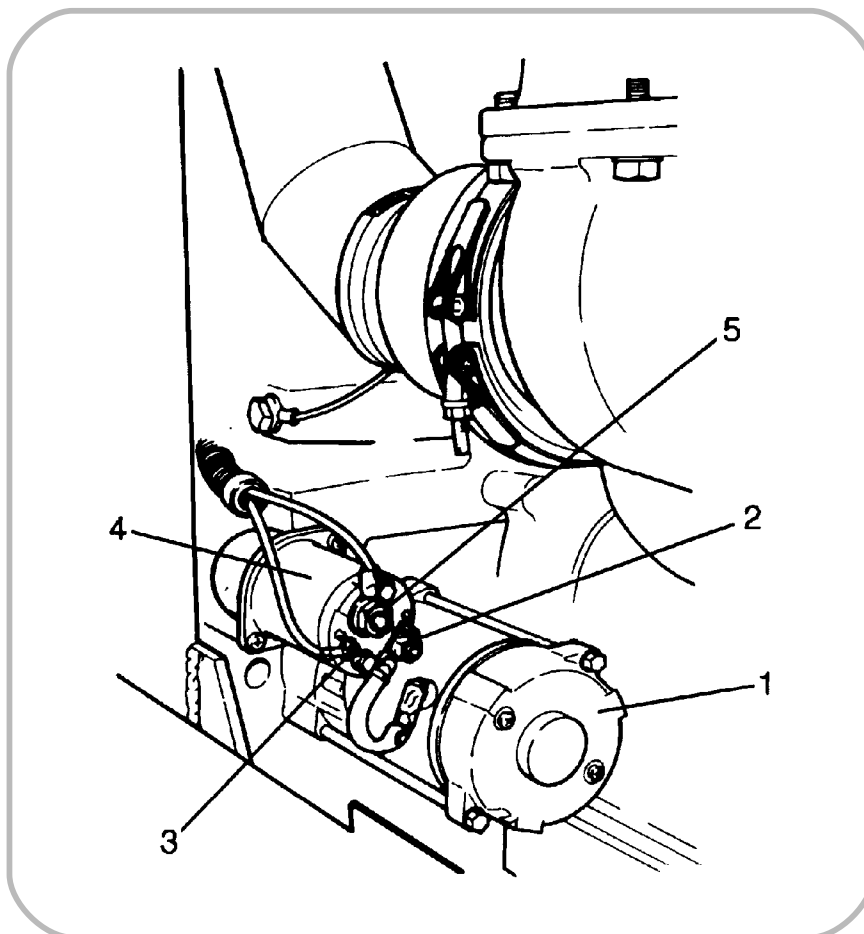


- 1. Starter
- 2. Starter Terminal
- 3. Switch to starter terminal
- 4. Starter solenoid
- 5. Solenoid switch input terminal

**Starter and Solenoid Switch**  
**Figure 1**

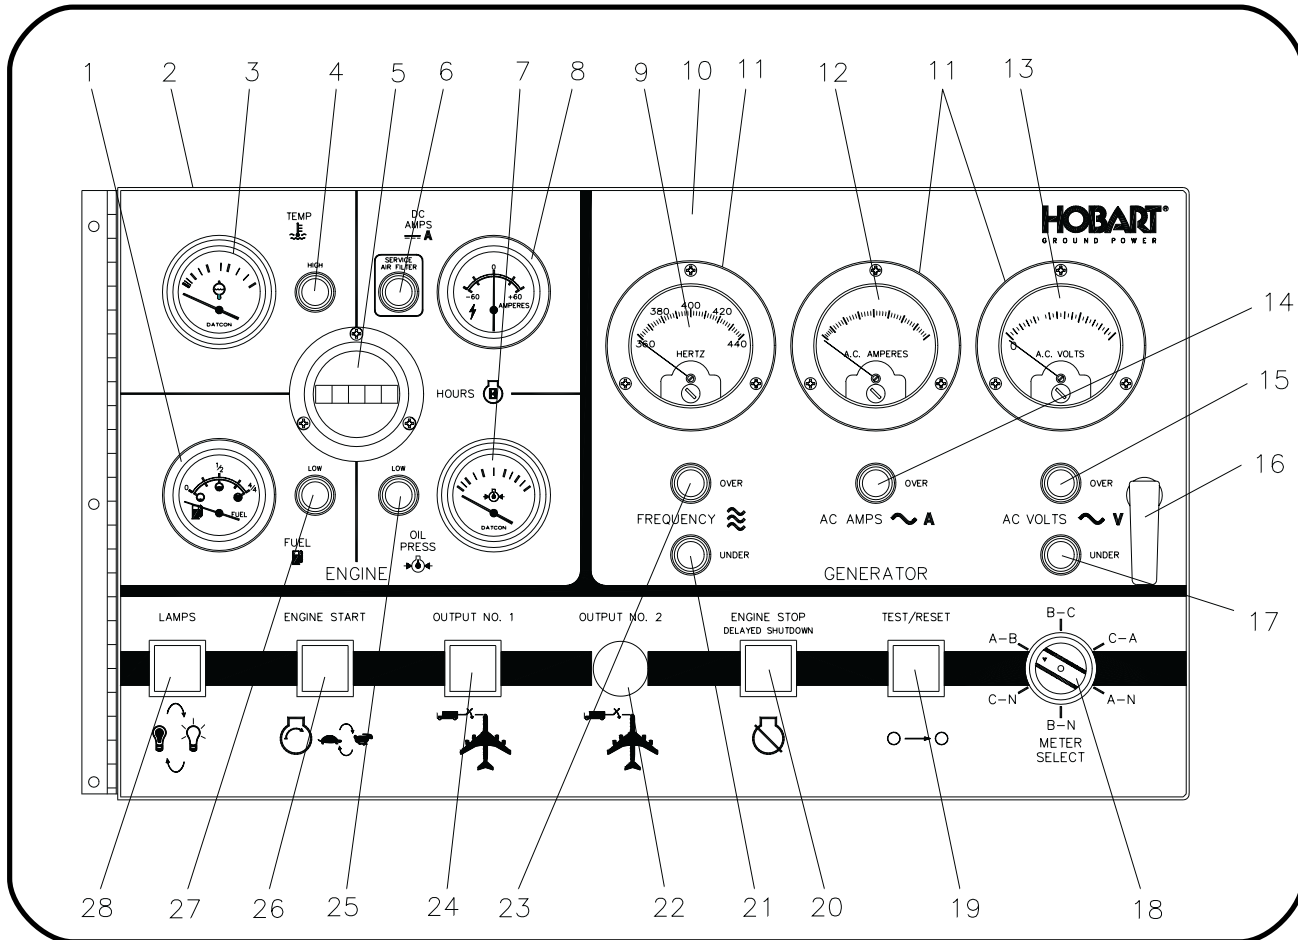


- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>1. Fuel gage</li> <li>2. Front panel</li> <li>3. Engine coolant temperature meter</li> <li>4. Over temperature indicator light (red)</li> <li>5. Engine hour meter</li> <li>6. Indicating light, air cleaner restriction</li> <li>7. Oil pressure gage</li> <li>8. Engine ammeter</li> <li>9. Frequency meter</li> <li>10. Control Box label</li> <li>11. Strip lights (3)</li> <li>12. Generator ammeter</li> <li>13. Voltmeter</li> <li>14. Overload indicator light (red)</li> <li>15. Overvoltage indicator light (red)</li> </ul> | <ul style="list-style-type: none"> <li>16. Adjustable grip latch</li> <li>17. Undervoltage indicator light (red)</li> <li>18. Meter Selector switch</li> <li>19. Test-reset push button switch (red)</li> <li>20. Engine stop push button switch (red)</li> <li>21. Underfrequency indicator light (red)</li> <li>22. Hole Plug</li> <li>23. Overfrequency indicator light (red)</li> <li>24. No. 1 contactor push button switch (yellow)</li> <li>25. Low Oil Pressure indicator light (red)</li> <li>26. Engine start push button switch (green)</li> <li>27. Low Fuel indicator light (red)</li> <li>28. Panel light push button switch (yellow)</li> </ul> |
|---|--|

**Operating Controls and Instruments**  
**Figure 2 (Sheet 1 of 2)**

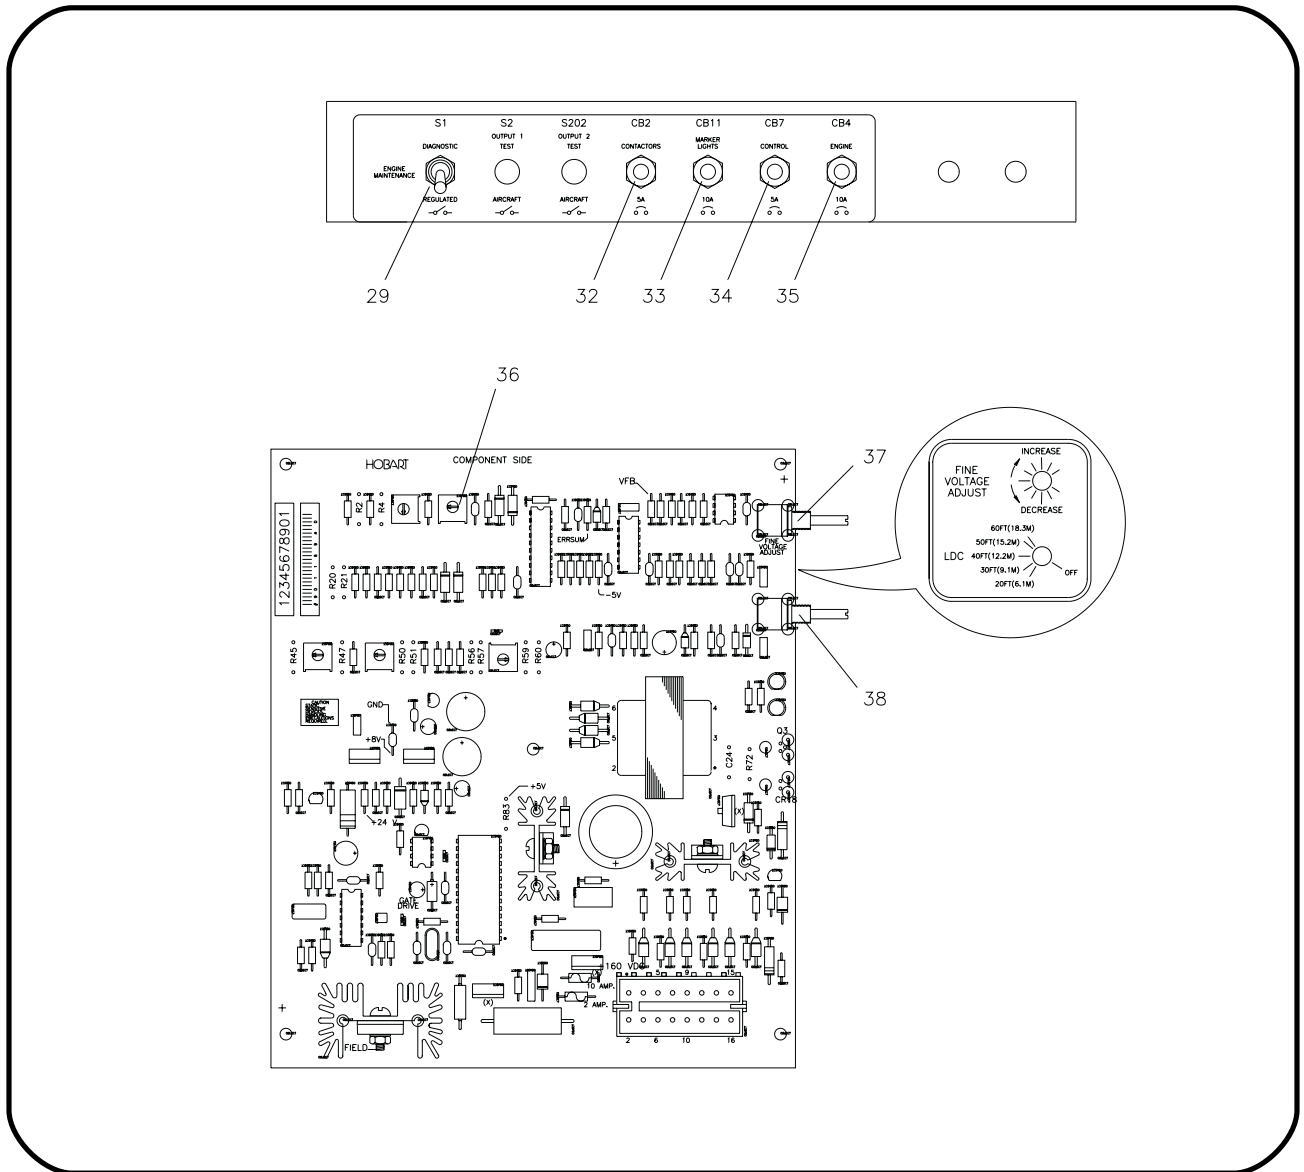

- |   |  |
|---|--|
| 29. Regulated-diagnostic switch             | 34. Circuit Breaker, control (5-amp)   |
| 30. Not Used                                | 35. Engine circuit breaker (10-amp)    |
| 31. Not Used                                | 36. Output voltage adjustment (coarse) |
| 32. Circuit Breaker, contactors (5-amp)     | 37. Output voltage adjustment (fine)   |
| 33. Circuit Breaker, marker lights (10-amp) | 38. Line drop compensation adjustment  |

**Operating Controls and Instruments**  
**Figure 2 (Sheet 2 of 2)**

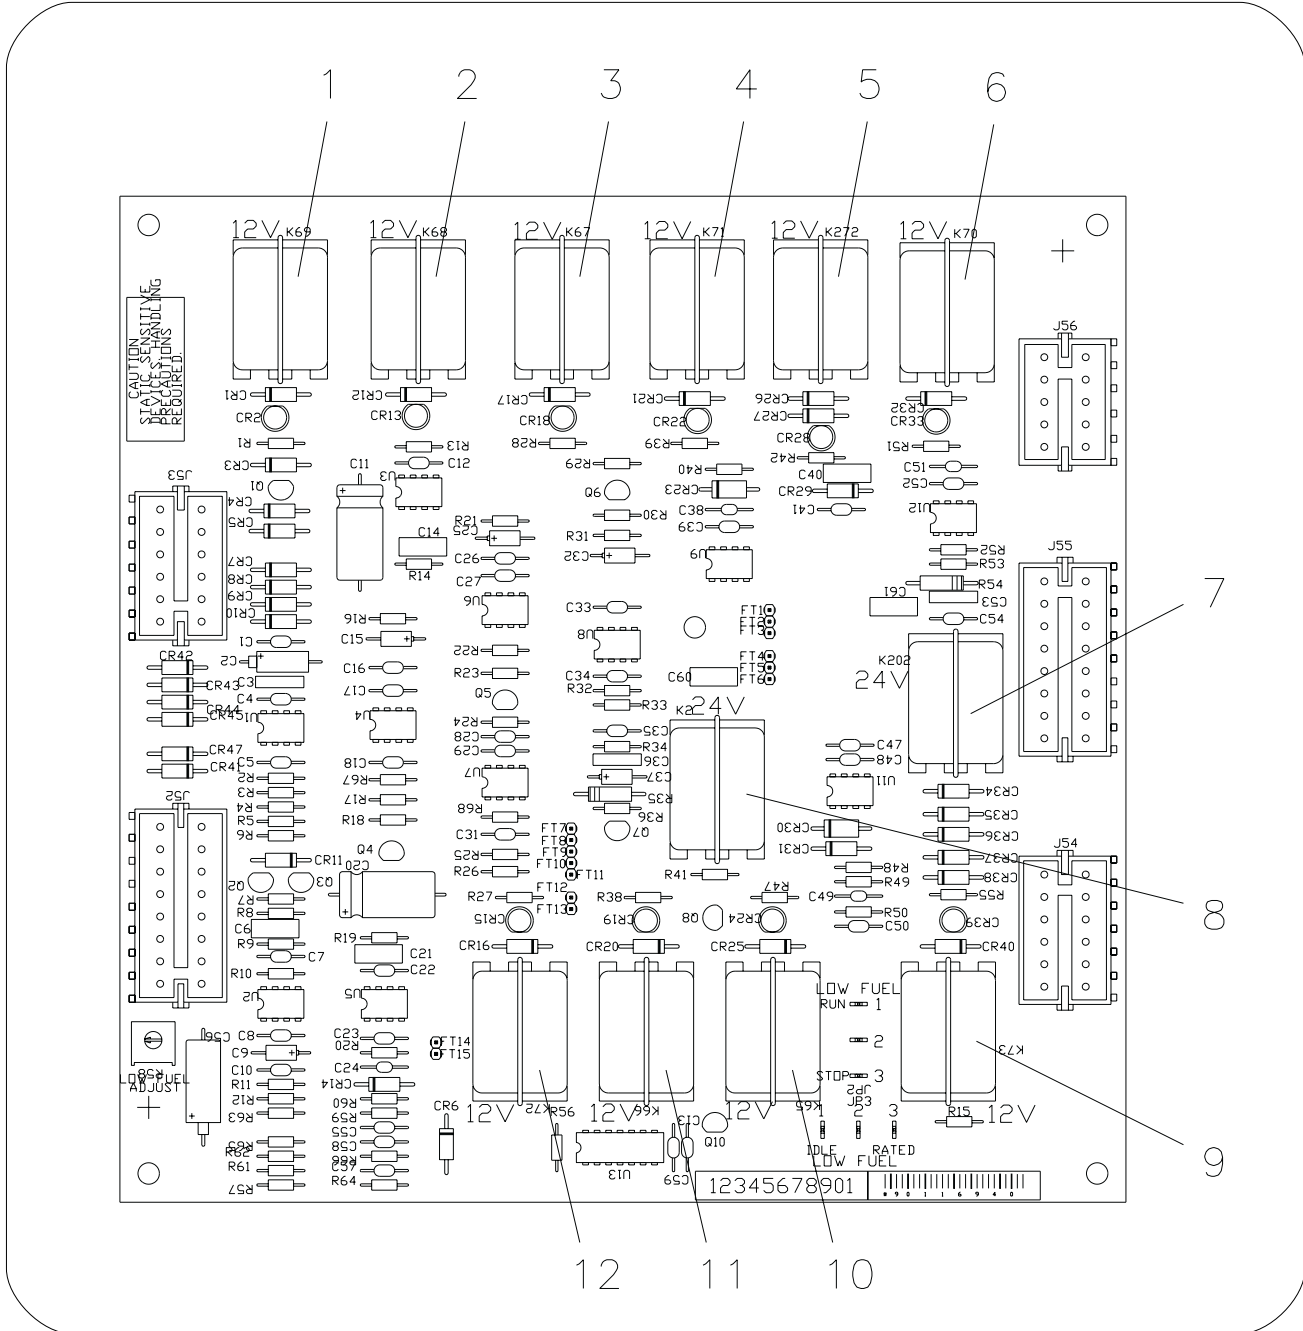

- |   |   |
|---|---|
| 1. Master Relay (K69)                     | 7. No. 2 Plug-Interlock Relay (K202)    |
| 2. Idle-Excitation Relay (K68)            | 8. No. 1 Plug-Interlock Relay (K2)      |
| 3. Over Temperature Fault Relay (K67)     | 9. Bypass Relay (K73))                  |
| 4. Low Oil Pressure Fault Relay (K71)     | 10. Low Fuel Fault Relay (K65)          |
| 5. No. 2 Contactor Control Relay (K272)   | 11. Air Filter Fault Relay (K66)        |
| 6. Panel and Clearance Lights Relay (K70) | 12. No. 1 Contactor Control Relay (K72) |

**Generator Set Control PC Board  
 Figure 3**

## Engine Controls

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
<b>NOTE:</b> Diesel engine trouble shooting is covered in Cummins Operation Manual.		
<p>1. Engine will not start. Starter will NOT crank engine. (See Fig. 1)</p>	<p>a. Battery discharged, or loose battery or ground connection.</p>	<p>Check voltage across batteries. Voltage should be approximately 12.8 volts DC. Check all battery terminals. Be sure 12.8 volts DC is reaching solenoid input terminal.</p>
	<p>b. Electrical defect in starter. See fig. 1.</p>	<p>Momentarily connect a large capacity jumper cable (No. 1/0 minimum) between hot side of starter solenoid and starter input terminal. If starter does not crank engine, proceed to step c. If starter does crank engine, proceed to step e.</p>
	<p>c. Mechanical defect in starter. See fig. 1.</p>	<p>Remove starter motor from engine and apply 12-V DC to test it. If it doesn't operate, it is defective. Replace it. If starter motor does operate, proceed to step d.</p>
	<p>d. Internal seizure.</p>	<p>If battery and starter are good and starter is unable to crank engine, internal seizure is indicated. Attempt to hand crank engine with a 3/4 inch square drive on a long flex handle on crankshaft pulley. If engine cannot be turned one complete revolution, internal seizure is indicated. Remove engine and disassemble to locate problem.</p>
	<p>e. Defective starter solenoid. See fig. 1.</p>	<p>Momentarily connect a large capacity jumper cable (No. 1/0 minimum) between the auxiliary solenoid terminals (one on each side). If engine does not crank, replace starter solenoid. If engine cranks, proceed to step f below.</p>
	<p>f. Defective auxiliary starter solenoid. See fig. 1.</p>	<p>Momentarily jumper small lug on front of auxiliary solenoid to ground. If engine does not crank, replace auxiliary starter solenoid. If engine cranks, proceed to step g below.</p>

## Engine Controls

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
Engine will not start. Starter will NOT crank engine. (continued)	<b>g.</b> Either of two defective relays on the generator control PC board (Fig. 3) could cause this trouble: either master relay K69 (1, Fig. 3) or bypass relay K73 (9, Fig. 3) . Or the PC board itself could have developed a malfunction.	Press lamps button. If clearance lights do not come on, replace relay K69. with a relay known to be good, and attempt to crank the engine. If engine still won't crank, replace bypass relay K73 and try once more to crank the engine. If engine still won't crank, proceed to step <b>h</b> below.
	<b>h.</b> Defective engine start button, S24 (26, Fig. 3) .	Depress button and check continuity between button contacts. If no continuity exists, replace button. If there is continuity, replace generator control PC board.
2. Engine will not start. Cranking speed low.	<b>a.</b> Low battery output	Check battery. Recharge or replace.
	<b>b.</b> Loose starting circuit connections or faulty cables.	Check all connections and cables. Tighten or replace as required.
	<b>c.</b> Improper lubricating oil viscosity	Check oil. See Chapter 1-2; 1, (c). Remove and replace oil if/as necessary.
3. Engine WILL NOT start. Cranking speed normal. LOW OIL indicating lamp on after 5 seconds.	<b>a.</b> No fuel or insufficient fuel in tank. LOW FUEL indicating lamp comes ON 10 seconds after cranking is initiated.	Fill fuel tank if it is empty or if amount of fuel in it is low. If necessary, fill each filter with fuel oil and prime fuel pump according to instructions in Chapter 2-1. If engine will not start after priming, mechanical pump trouble is indicated. If engine starts and stops after a short time, trouble between fuel source and suction side of pump is indicated. Check and/or remedy as follows.



## Engine Controls

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
Engine WILL NOT start. Cranking speed normal. LOW OIL indicating lamp on after 5 seconds. (continued)	<b>b.</b> Defective or misadjusted magnetic pickup (Chapter 2-3, Fig. 4).	The control unit may not be receiving a signal from the magnetic pickup and the "fail-safe" feature of unit may be functioning to prevent any signal from reaching the actuator. To check the magnetic pickup, refer to diagram 287944. Use this diagram to disconnect pickup input leads at terminals 10 and 11 on controller.  Connect a high impedance AC voltmeter to pickup output leads. Crank engine but don't start. Voltage reading should be a minimum of one (1) volt. If no or low voltage is indicated, check pickup adjustment [see 2-3, Para. 3, e,(2)]. If pickup is properly adjusted and voltage is still zero, replace pickup.
	<b>c.</b> Defective actuator	Apply 12-V DC to two actuator input leads (terminals 4 and 5 on terminal strip). Actuator lever should move immediately to full speed position. If lever does not move, replace actuator.
	<b>d.</b> Faulty controller	Connect a DC voltmeter to terminals 4 and 5 on the controller terminal strip. Crank engine. Voltmeter should indicate within two (2) volts of system voltage. If not, replace controller.
	<b>e.</b> Loose connections, damaged hoses or fuel lines between tank and fuel pump	Tighten all fittings and connections. Replace any damaged hoses or fuel links.
	<b>f.</b> Plugged or defective filter	Do not overlook the possibility of restricted flow through the fuel filters. Also check gaskets for leaking or damaged condition.

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
Engine WILL NOT start. Cranking speed normal. LOW OIL indicating lamp on after 5 seconds. (continued)	<b>g.</b> Faulty fuel pump.	Replace fuel pump if defective.
<b>4.</b> Engine cranks, but will not start. LOW OIL indicating lamp comes on immediately.	<b>a.</b> Either of two relays, the bypass relay, K73 (9, Fig. 3), or the low oil pressure fault relay, K71 (4, Fig. 3), or the engine control PC board could be defective.	Attempt to correct this malfunction by replacing, in sequence, each of these relays and the PC board. Replace the component found to be defective.
<b>5.</b> Engine cranks, but will not start. LOW FUEL indicating lamp comes on immediately.	<b>a.</b> Either the low fuel fault relay, K65 (10, Fig. 3), or the engine control PC board is defective.	Attempt to correct this malfunction by replacing low fuel fault relay, K65. If this does not correct the malfunction, replace the engine control PC board.
<b>6.</b> Engine cranks, but will not start. HIGH TEMPERATURE indicating lamp comes ON immediately.	<b>a.</b> Defective or incorrectly wired high temperature switch (S49, located on engine block on right side).	Check wiring to high temperature switch according to connection diagram in Chapter 6, and see that wiring is correct. If wiring is correct, remove wires and check resistance between terminals C and N.O. A resistance of less than 10 ohms indicates a defective switch. Replace switch if defective.
	<b>b.</b> Defective over temperature fault relay, K67 (3, Fig. 3) or engine control PC board.	Attempt to correct this malfunction by replacing over temperature fault relay (K67). If this does not correct the malfunction, replace the engine control PC board.
<b>7.</b> Engine is HARD to start. Cranking speed normal, fuel supply adequate.	<b>a.</b> Low compression, which may be caused by any one of following: Sticking or burned exhaust valves, worn or broken compression rings, leaking cylinder head gasket, or improper valve clearance adjustment.	Check compression in accordance with instructions in Cummins Operation Manual. Overhaul engine to make repairs as necessary.

## Engine Controls

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
<p>8. Engine starts. Stops after a few seconds by automatic shutdown.</p>	<p>a. Shut-down circuit may have functioned normally to stop engine because of low lubricating oil pressure or due to a defective oil pressure switch (S46, located on engine block on right side).</p>	<p>Restart engine, and observe oil pressure gage. If oil pressure is 12 psi or more, disconnect wire from oil pressure switch terminal N.C. Restart engine. If engine continues to run, oil pressure switch is defective. Replace oil pressure switch. If engine stops, check for following malfunctions:</p>
	<p>b. Failure of fault relays on the generator control PC board can cause this malfunction: The low oil pressure relay, K71, (4, Fig. 3), or the PC board itself could have developed a malfunction.</p>	
<p>9. All panel and clearance lights are either always ON or always OFF.</p>	<p>a. Marker lights circuit breaker, CB11 (33, Fig. 2) won't close</p>	<p>Replace marker lights circuit breaker (CB11) if defective.</p>
	<p>b. Clearance/panel lights relay, K70 (6, Fig 3) could be defective, or the PC board itself could have developed a malfunction.</p>	<p>Replace relay K70 in attempt to make the lights function correctly. If replacement of this relay doesn't correct the malfunction, replace the generator control PC board.</p>
<p>10. Engine either goes from rated speed to idle speed, or shuts down.</p>	<p>a. Low fuel relay, K65 (10, Fig. 3), or the generator control PC board itself, could be defective.</p>	<p>Replace relay K65 and restart unit. If fault remains, replace the PC board.</p>
<p>11. Engine has slow response time.</p>	<p>a. Governor controller improperly adjusted</p>	<p>Adjust. See 2-3; Para. 3.</p>
	<p>b. Actuator linkage binding</p>	<p>Inspect and repair as required.</p>
	<p>c. Engine needs tune-up</p>	<p>Tune-up as required. Refer to Cummins Operation Manual.</p>

## Engine Controls

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
12. Engine "misses". Runs unevenly.	a. Insufficient fuel	Check fuel flow in accordance with Cummins Operation Manual. Repair or replace parts as required. Also see Engine, Trouble 3.
	b. Faulty injector	Check injectors in accordance with Cummins Operation and Maintenance Manual. See causes of low compression listed under ENGINE CONTROLS.
	c. Low compression pressure	Check compression in accordance with Cummins Operation Manual. See causes of low compression listed under ENGINE CONTROLS.
13. Engine lacks power	a. Improper engine adjustments and gear train timing	"Tune-up" engine in accordance with Cummins Operation Manual.
	b. Insufficient fuel	See ENGINE CONTROLS
	c. Insufficient inlet air due to damaged air cleaner.	Check air cleaner for "plugging" and/or damage.
	d. Restricted exhaust system	Check exhaust pipes for restrictions. Check muffler for clogged condition. Replace as required.

## Generator Excitation Circuits

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
<p>1. No (or low) generator output voltage in all phases.                      Generator operating at 400 Hz.</p>	<p>a. Idle-excitation relay (K68) (2, Fig 3), or the generator control PC board itself, could be defective. A defect in this circuitry can prevent power from reaching voltage regulator</p>	<p>Replace relay K68, bring unit up to rated speed. Proper voltage should now be generated. If not, replace generator control PC board, and recheck voltage. If this doesn't correct the problem, proceed to Step <b>b</b></p>
	<p>b. Defective generator or excitation circuit.</p>	<p>Place REGULATED/DIAGNOSTIC switch (29, Fig. 2) in DIAGNOSTIC position. This applies 12-V DC from battery to exciter field, which should produce an indicated output voltage of 200 +/- 40- V AC line-to-neutral. If voltage produced is within this range, generator is good, and trouble is in voltage regulator circuit. Proceed to step B.</p>
	<p>c. Defective voltage regulator</p>	<p>Disconnect rectangular plug connector of regulator wiring assembly from suspect PC board, and connect a properly working PC board to regulator wiring assembly, while avoiding short circuiting bottom of properly working PC board to installed PC board. Then start generator set and perform tests and adjustments according to instructions in Section 2-3.</p> <p>If generator set works properly with properly working PC board temporarily connected, shut off generator set and replace defective PC board with one that is properly working (preferably, same PC board used for this troubleshooting check).</p>
	<p>d. Defective REGULATED/DIAGNOSTIC switch (29, Fig. 2)</p>	<p>Check switch thoroughly. A defective switch may prevent current reaching and/or leaving voltage regulator. Replace switch if defective.</p>

## Generator Excitation Circuits

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
No (or low) generator output voltage in all phases. Generator operating at 400 Hz (continued).	e. Defective connector at voltage regulator, or defective wiring from regulator to exciter field	Disconnect plug from voltage regulator PC board. Using jumper leads with clip and prod terminals, connect 12-V DC to terminals 1 and 4 in loose plug. Connect NEGATIVE to terminal 4 Connect POSITIVE lead to terminal 1 (see Schematic and Connection Diagrams in Chapter 5). If generator will NOT produce at least 160 V-AC, replace or repair connector and wiring between voltage regulator and exciter field as required.

## Load Contactor Operating Circuit

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
<p>1. Load contactor (K1) will not close when output No. 1 push button switch (24, Fig. 2) is held in CLOSE position. Generator running at normal voltage. Rectifier circuit breaker CB2 (32, Fig. 2) closed. No fault lights on.</p>	<p>a. Defective circuit breaker CB2 (32, Fig. 2)</p>	<p>Remove terminal leads from circuit breaker, press circuit breaker button to close circuit breaker, and use an ohmmeter to check for continuity. Replace circuit breaker if defective.</p>
	<p>b. In addition to defective wiring and connections in AC and DC load contactor actuating circuits, load contactor may be prevented from closing for any one of following reasons:</p>	<p>Check all wiring and connections in load contactor circuits. Then check components as follows:</p>
	<p>c. Defective (open) relay in memory and time delay PC board (1-1; 4, Fig. 6)</p>	<p>Replace memory and time delay PC board with a board known to be operating properly. If contactor still doesn't close, proceed to step (d).</p>
	<p>d. Defective output No. 1 push button switch (S75) (24 Fig. 2)</p>	<p>Check AC voltage input to contactor rectifier CR6 (1-1: 6, Fig. 10). If voltage isn't approximately 115-V AC, output No. 1 push button switch is defective and must be replaced.</p>

## Load Contactor Operating Circuit

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
<p>Load contactor (K1) will not close when output No. 1 push button switch (24, Fig. 2) is held in CLOSE position. Generator running at normal voltage. Rectifier circuit breaker (CB2) (32, Fig. 2) closed. No fault lights on (continued).</p>	<p>e. Defective rectifier (CR6) (1-1: 9, Fig. 9)</p>	<p>After making certain that output No. 1 push button switch (S75) is providing 115-V AC to rectifier (CR6), measure DC out put voltage between positive (+) and negative (-) terminals of rectifier. If voltage measured isn't approximately 90-V DC, replace rectifier.</p>
	<p>f. Defective coil in load contactor (K1) (1-1; 5, Fig. 9)</p>	<p>Disconnect leads at load contactor terminals V and W. Check coil resistance between these terminals. Resistance should be approximately 50 ohms. If coil is defective, replace complete load contactor.</p>
<p>2. Load contactor (K1) will close when output No. 1 push button switch (24, Fig. 2) is held in CLOSE position. Opens immediately when switch is released.</p>	<p>a. No. 1 load contactor relay (K72) (12, Fig. 3) on generator control PC board, or the board itself, could be defective</p>	<p>Replace relay K72 and again close contactor. If contactor still opens, replace generator control PC board. If this doesn't correct the problem, proceed to step c.</p>



## Load Contactor Operating Circuit

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
Load contactor (K1) will close when No. 1 power accepted push button switch (24, Fig. 2) is held in CLOSE position. Opens immediately when switch is released to center ON position (continued).	<b>b.</b> Defective contacts in N.O. auxiliary push button switch mounted on right side of contactor.	Connect a jumper lead between terminals of N.O. auxiliary switch. If load contactor will now remain closed, replace N.O. auxiliary switch or complete load contactor.
	<b>c.</b> Defective No. 1 output hold circuit resistor (R46) (1-1; 8, Fig. 9) .	Connect a 100-ohm resistor across R46. If contactor will now remain closed, replace No. 1 output hold circuit resistor (R46). If not, replace contactor.
<b>3.</b> Load contactor opens during power delivery. NO fault indicating lights on.	<b>a.</b> No. 1 load contactor relay (K72) (12, Fig. 3) on generator control PC board, or the PC board itself, could be defective	Replace relay K72 and again close contactor. If contactor still opens, try replacing the PC board to correct this malfunction. Proceed with troubleshooting as follows if malfunction is not corrected.
	<b>b.</b> A fault has developed in load contactor holding circuit.	If load contactor cannot be closed by operation of output No. 1 push button switch (S75) (24, Fig. 2), check circuit in accordance with instructions in Trouble 1, above under LOAD CONTACTOR OPERATING CIRCUIT. If load contactor can be closed, but opens as soon as power accepted switch (S75) is released, check for trouble under Trouble 2, above.

## Protective Circuit

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
<p>NOTE: Protective relays and protective monitor are not completely functional until load contactor is CLOSED. Since it is not advisable to vary voltages for test purposes while delivering power to an aircraft, generator should be connected to a load bank for trouble shooting protective circuits.</p>		
<p>To avoid repetition, it will be assumed that reset push button switch (19, Fig. 2) has been pushed and load contactor has been closed before commencing each test.</p>		
<p>1. Load contactor opens during power delivery. Over voltage indicating light ON.</p>	<p>a. Over voltage condition may have been result of a sudden drop in load, or possible tampering with fine or course voltage regulator potentiometers (36 or 37, Fig. 2), and may have been a normal action.</p> <p>b. Defective over-under-voltage PC board (K26) (1-1; 6, Fig. 6)</p>	<p>Press reset push button switch (19, Fig. 2) and resume power delivery. Observe voltmeter (13, Fig. 2) to be certain voltage is normal 240 V-AC. Adjust to normal if necessary. If load contactor is opened again and an over voltage condition is indicated by OV indicating light, proceed to step b.</p> <p>Use course voltage adjusting potentiometer (36, Fig. 2) to reduce voltage to 220 V AC. Observe voltmeter and gradually increase voltage with potentiometer. If sensing circuit in over-under voltage PC board (K26) functions to open load contactor at any value less than 250-VAC, it is defective. Replace over- under voltage PC board.</p>
<p>2. Load contactor opens during power delivery. Under voltage indicating light ON.</p>	<p>a. An under voltage condition has caused sensing circuit in over-under- voltage PC board (K26) to function normally.</p>	<p>Observe generator voltage on voltmeter and adjust to normal 240 V AC with voltage regulator potentiometer (36, Fig. 2). Resume normal operation. If load contactor opens again and an under voltage condition is indicated by UV indicating light, proceed to step B.</p>

## Protective Circuit

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
	b. Defective over-under-voltage PC board (K26).	Use course voltage potentiometer (36, Fig. 2) to reduce voltage to 190-V. Under voltage indicating light should NOT come on during a time delay of 4 to 12 seconds. If light comes on before a delay of 4 to 12 seconds, under voltage relay is defective. Replace over-under voltage PC board (K26).
	c. Defective memory and time delay (protective monitor) PC board (K14)(1-1; 4, Fig. 6).	With unit running normally, use course voltage potentiometer (36, Fig. 2) to reduce voltage quickly to 180 V. If under voltage indicating light (DS38) on control panel is turned ON immediately, memory and time delay PC board is defective. Replace PC board (K14).
3. Load contactor opens during power delivery. Over frequency indicating light (DS40) ON.	a. Electric governor improperly adjusted, or malfunctioning	Proceed as follows:
4. Load contactor opens during power delivery. Over frequency indicating light (DS40) ON.	b. Governor improperly adjusted	Adjust in accordance with Sect. 2-3, Para. 3.
4. Load contactor opens during power delivery. Over frequency indicating light (DS40) ON.	a. Electric governor system malfunctioning	Check and adjust or repair in accordance with governor system information listed in this chapter under ENGINE AND CONTROLS.
4. Load contactor opens during power delivery. Over frequency indicating light (DS40) ON.	b. Defective over-under-frequency PC board (K27)(1-1; 5, Fig. 6).	If over-under frequency tripping continues after governor system is proven to be good, and an over frequency condition does not exist, replace over-under frequency PC board (K27)
5. Load contactor opens during power delivery. Under-frequency light ON.	a. Electric governor improperly adjusted, or malfunctioning	Proceed as follows:
5. Load contactor opens during power delivery. Under-frequency light ON.	b. Governor improperly adjusted	Adjust in accordance with Sect. 2-3, Para. 3, E, (3).
5. Load contactor opens during power delivery. Under-frequency light ON.	c. Electric governor system malfunctioning	Check and adjust or repair in accordance with governor system information listed in this chapter under ENGINE AND CONTROLS.

	<b>d.</b> Defective over-under-frequency PC board (K27)	If under frequency tripping continues after governor system is proven to be good, and an under frequency condition does not exist, replace over-under frequency PC board.
<b>6.</b> Load contactor opens during power delivery. Overload indicating light ON.	<b>a.</b> There may have been an overload condition which caused overload device (K4).	Observe ammeter (12, Fig. 2). Check for abnormal overload condition and correct. If overload device functions to open load contactor when an overload does not exist, proceed to step B.
	<b>b.</b> One of resistors across an overload transformer may be open circuited. Check resistors (R26, R27, and R28).	An open resistor will cause a higher than normal voltage. Refer to 1-1; 7 and 8, Fig. 9 for exact location of these resistors. Check resistors. Replace any resistors found to be defective.
	<b>c.</b> Overload device printed circuit board defective (K4)	Replace overload PC board (Sect. 1-1; 11 or 12, Fig. 9) with an overload module known to
	<b>d.</b> Faulty overload resistors in main overload circuit. Check resistors.	Replace faulty resistors—R33, R34, R35—if any. If none of these resistors are defective, replace main overload PC board, K3 (1-1; 11 or 12, Fig. 9).

## Generator

Trouble, Symptom and Condition	Probable Cause	Test, Check, And/or Remedy
1. No (or low) voltage output	a. Shorted diode in exciter rectifier (CR2).	Check diodes in accordance with Sect. 2-3, para. 5. If diodes are good, proceed to step B.
	b. Open or shorted exciter rotor winding (G2)	Use ohmmeter to check for open or shorted condition. If exciter rotor windings are good, proceed to step C.
	c. Open or shorted exciter field windings (L2)	Check field resistance. See Sect. 2-3, Fig. 6 for normal values.
	d. Open or shorted generator rotor windings (L1)	Check resistance with ohmmeter to determine if open or short circuited.
2. Generator operates single phase	a. Open or short circuited winding in generator stator (G1)	Check stator winding resistances. See Sect. 2-3, Fig. 6 for normal values.
3. Generator overheats	a. Loose connection causing high resistance.	Check all output connections. Look for discoloration caused by heat. Tighten or replace as required.
	b. Improper or blocked ventilation.	Check for foreign material (rags, etc.) blocking air flow. Provide adequate ventilation.
	c. Generator stator windings short circuited.	Check stator windings. See Sect. 2-3, Fig. 6.
4. Unbalanced output	a. Loose connection in output circuit.	Check all output connections. Discolored connectors indicate a loose connection. Tighten or replace as required.
	b. Open or short circuited phase	Check stator windings in accordance with 2-3, Para. 5. Repair or replace as required.
	c. Defective connection in output circuit.	Check plug and receptacle connectors at aircraft. Tighten, repair, or replace as required.
	d. Break or cut in output cable assembly.	Inspect. Repair or replace as required.
	e. Unbalanced load	Check aircraft 400-Hz components.


*This page intentionally left blank.*

## Chapter 3. Overhaul/Major Repair

### Section 1. Exciter Armature


#### 1. General

This section provides information and instructions for removal and installation of the exciter armature used on this generator set. Through design improvements, the exciter and rear main bearing can now be removed without removing the generator from the generator set. The name exciter armature refers to the shaft-mounted, revolving three-phase windings of the exciter.

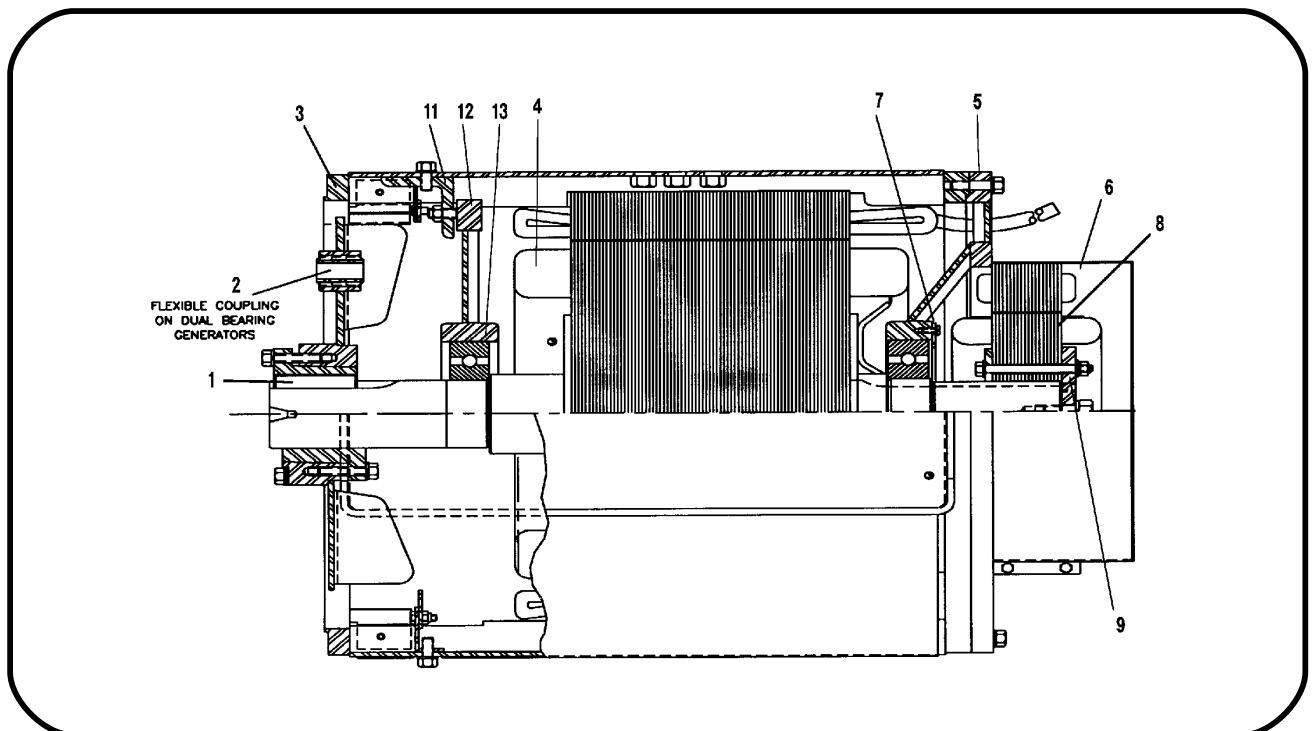

- |  |                              |
|--|------------------------------|
| 1. Coupling Key                        | 8. Exciter Armature Assembly |
| 2. Flex Coupling Assembly              | 9. Exciter Key               |
| 3. Generator Housing & Stator Assembly | 10. Not Used                 |
| 4. Armature Assembly                   | 11. Mounting Bracket         |
| 5. Exciter Housing & Coils Assembly    | 12. Front Bearing Retainer   |
| 6. Exciter Cover                       | 13. Front Bearing            |
| 7. Rear Bearing Retainer               |                              |

Generator (Top Half Section)  
Figure 1

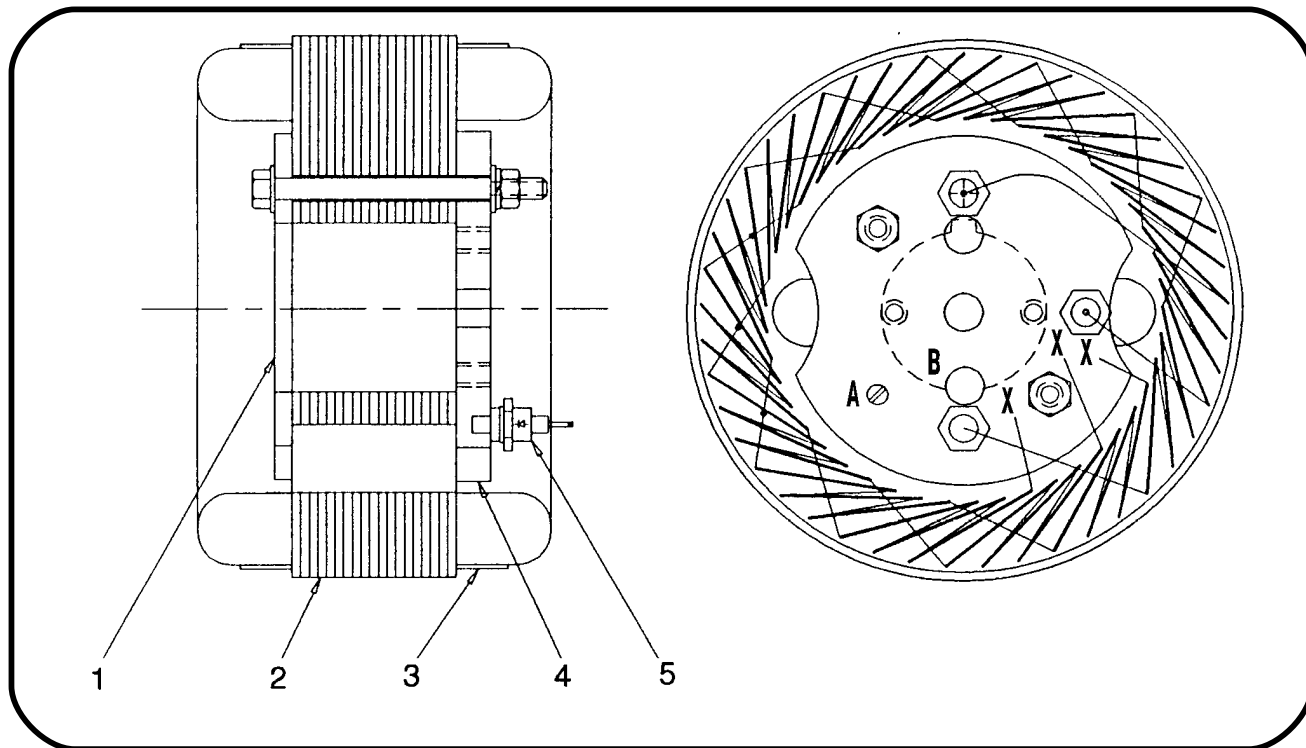

- |                            |                         |
|----------------------------|-------------------------|
| 1. Exciter Core Flange     | 4. Diode Mounting Plate |
| 2. Exciter Core Lamination | 5. Silicon Diode        |
| 3. Banding Glass Tape      |                         |

**Exciter Armature**  
**Figure 2**

The exciter armature covered by the manual is mounted on the rear portion of the main generator armature shaft which extends rearward, beyond the rear generator bearing, into the exciter housing (See Fig. 1). Because of its location on the shaft, the exciter armature must be removed for rear main bearing replacement. The exciter armature has two 3/8-16 tapped holes in its diode mounting plate to accommodate pulling it off the shaft.

Since the removal and installation of exciter armatures can be rather complicated, this manual has been prepared to assist mechanics in the operation. It may be necessary to remove the exciter armature several times for bearing replacement during the life of a generator set.

## 2. Exciter Armature

The exciter armature used in this generator set consists of a revolving winding assembly on a laminated core, a rectifier assembly (diode mounting plate with diodes), and a mounting flange. The flange, core, and diode mounting plate are bolted together to make the complete exciter armature.

The exciter armature is mounted on the main generator armature shaft with a 3/8-inch square machine key and is held in place by a 1/2-13 hex head cap screw in the center of the diode mounting plate.

## 3. Exciter Armature Replacement

### a. General

As stated earlier, exciter armature removal is often required for rear bearing replacement rather than for replacement of the exciter armature itself. Other reasons for exciter armature removal are: generator armature replacement, general overhaul, etc.




**b. Tools needed for Exciter Armature Removal and Installation**

In addition to the standard mechanic's hand tools such as wrenches, etc., you will need only the following items for removing the exciter armature:

- A small, lightweight, sling-hammer puller
- Two 3/8 - 16 X 5-inch fully-threaded hex-head bolts

A small, lightweight, sling-hammer puller is shown in Figure 3. This tool is necessary for removing the threaded machine key which tightens the exciter armature on the generator armature shaft. You may have such a puller in your equipment. If not, Figure 3 also illustrates components and dimensions for fabricating such a tool. Sling-hammer pullers are also commercially available. Instructions for using tool are provided in Paragraph e, (1)

Once the threaded machine key is removed, No other special tools are required for removing the exciter from the generator shaft. This can be done using two 3/8 - 16 X 5-inch fully-threaded hex-head bolts. Instructions for doing this are provided in Paragraph e, (2).

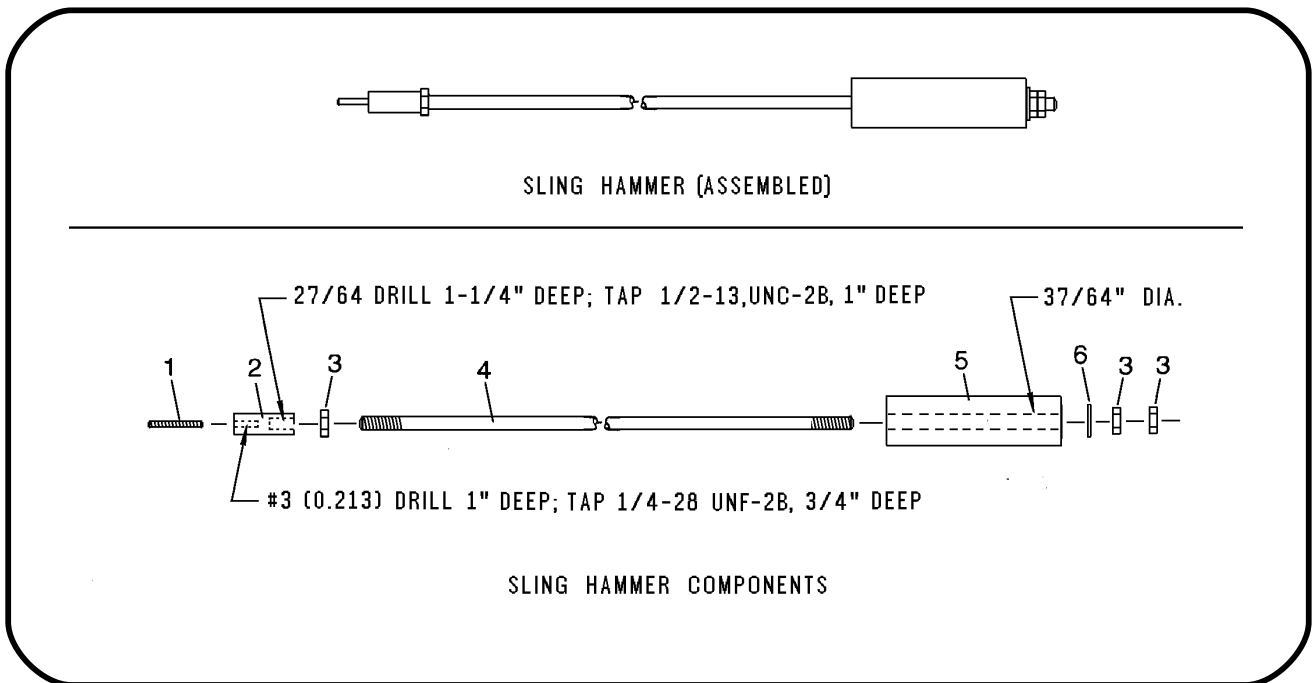

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>1. Stud, 1/4-28 UNF 2A, Grade 5 or 8 ONLY</li> <li>2. Adapter, 3/4" Round CR Steel</li> <li>3. Nut, 1/2-13 Hex, Steel (3 required)</li> </ul> | <ul style="list-style-type: none"> <li>4. Rod, 1/2" Round, CR Steel</li> <li>5. Hammer, 2" Round, CR Steel</li> <li>6. Washer, Flat, 1/2" Steel</li> </ul> |
|--|--|

**Sling Hammer Puller  
 Figure 3**

**c. Conditions for Exciter Removal**

The mechanics performing the work must decide upon the best and most convenient method of removing the exciter armature. If the exciter armature is being replaced, then the work may be performed without removing the generator from the machine. In a great majority of cases, exciter removal will be for the replacement of the rear bearing. This operation can also be accomplished without removing the generator. Replacement of the front bearing requires removal of the generator from the unit.

**d. Preparation for Exciter Armature Removal**

- (1) Remove louvered exciter cover from end canopy.
- (2) Remove exciter housing cover as required. Remove the 1/2-13 cap screw which holds the exciter armature on the generator shaft.
- (3) Refer to Figures 1 and 2. Disconnect the two rectifier-to-generator field leads. One lead with a ring type terminal is attached to the rectifier mounting plate with a screw ("A", Fig. 2) and the other lead goes into a splice type connector with three other leads ("X", Fig. 2) coming from the exciter armature windings. Cut the leads at the connector for removal of the one field lead. Cut as close as possible to the connection as to preserve lead length for reconnection later during exciter armature installation.
- (4) **EXERCISE CARE** to prevent damage to leads. Remove kinks in the two generator leads as much as possible before starting removal operation.

**e. Exciter Armature Removal**

- (1) Removing the Threaded Key with Sling-Hammer Puller

Refer to Figure 4 for location of threaded machine key. Attachment of the assembled puller to the key in one operation is not recommended because the weight and bulk of the assembly make threading the 1/4 inch stud into the key rather clumsy. This could result in cross-threading and damage to key and stud. It is safer and easier to attach as follows:

- a. Thread stud (1, Fig. 4) into adapter (2) until it bottoms, then thread this assembly (1) and (2) into key until stud bottoms in key threads. Tighten securely.
- b. If hammer (5) and rod (4) are not already assembled, thread one nut (3) onto adapter end of rod (4). Thread rod into adapter until it bottoms, then tighten nut securely against adapter. Slide hammer (5) onto rod and install washer (6) and two nuts (3). Thread nuts onto rod until both nuts are full threaded, then lock together.


**WARNING**

Be very careful during removal process (slide-hammering) to avoid injury to hands.

**CAUTION**

Exercise care to prevent breaking or damaging stud.

- c. Position hammer at adapter end of rod.
- d. Quickly move hammer to outer end of rod with a rapid, slinging motion. **HOLD** the hammer through the entire motion. If hammer is allowed to slide free on the rod, the stud could be **DAMAGED** or **BROKEN**.
- e. Repeat steps (c) and (d) as required to loosen key, then remove key and slide-hammer puller.
- f. After key is removed, apply penetrating oil in the armature and shaft keyways.

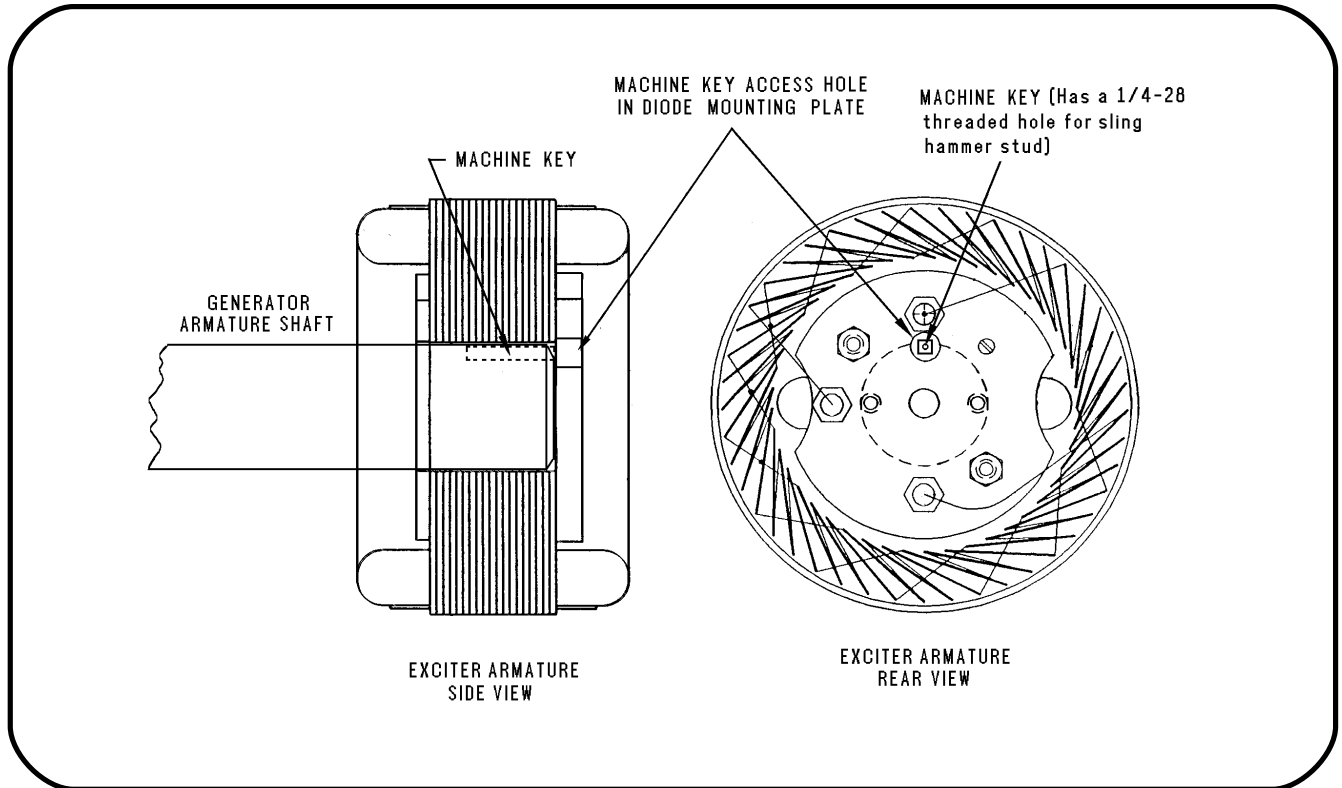

**Location of Exciter Armature Machine Key**  
**Figure 4**

(2) Removing the Exciter Armature


**CAUTION**

Leads may be damaged if armature is turned too far in either direction.

Attempt to loosen exciter armature on shaft by rotating it slightly back and forth. If armature cannot be loosened by hand, use two 3/8 - 16 X 5-inch hex-head bolts as shown in Figure 5 to force the exciter armature off the shaft. Turn each of the two screws a few turns at a time into the threaded holes of the diode mounting plate until the exciter armature is sufficiently loosened from the shaft to be removed from it by hand. Remove it slowly from the shaft and at the same time observe the following **CAUTION**.

**CAUTION**

Pay close attention to field leads while pulling exciter armature from shaft. Make **CERTAIN** that the leads stay in the 1/2" keyway. One mechanic should watch them constantly while another operates the puller. Make certain that leads do not catch and be sure that they slide smoothly through hole ("B", Fig. 2) Straighten leads and remove kinks as required to avoid damage to insulation.

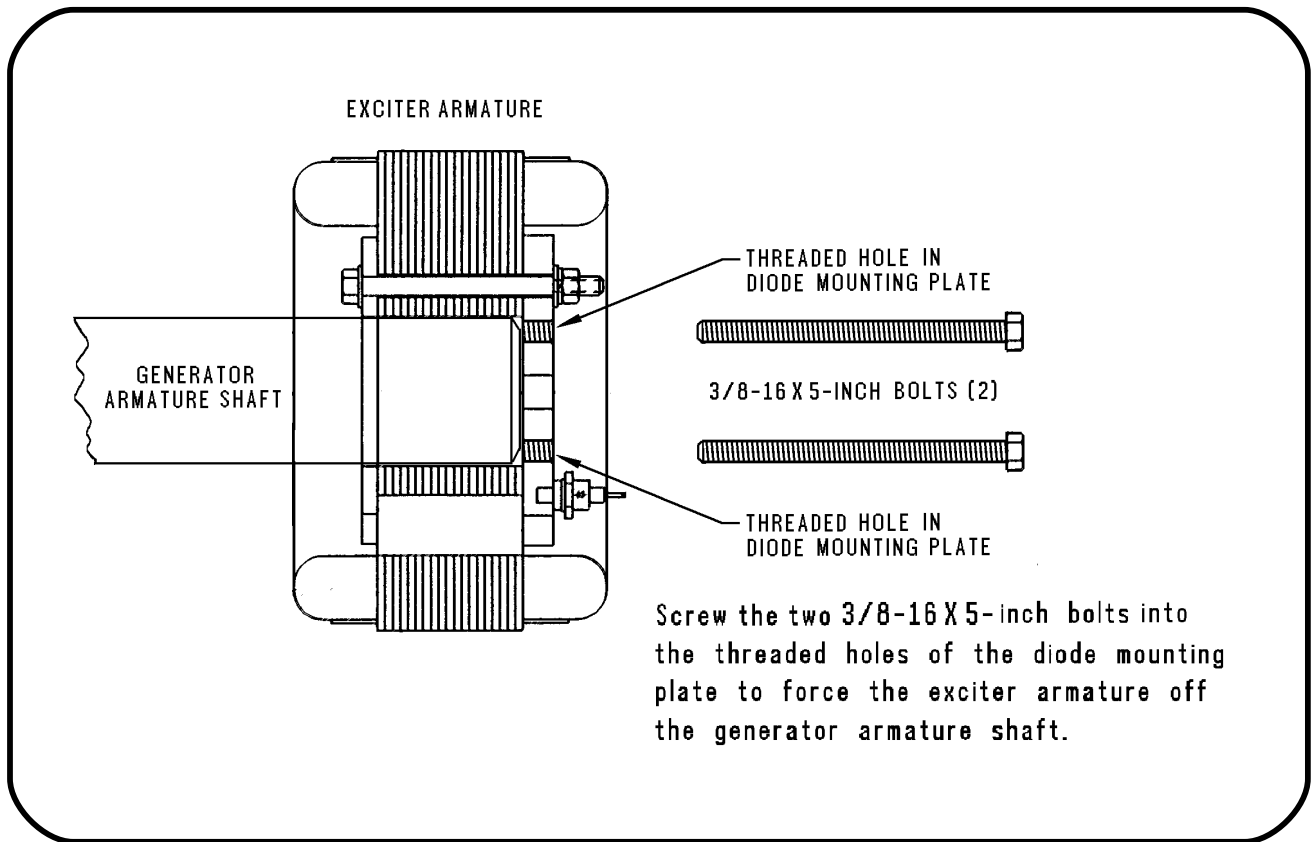

Removing Exciter Armature from Generator Armature Shaft

Figure 5

4.

**Installing the Exciter Armature**

**a. Preparation for Exciter Armature Installation**

- (1) Clean generator shaft and exciter armature bore. Remove all rust, corrosion, etc.
- (2) Make **CERTAIN** that the leads are tucked into the 1/2" keyway, which is opposite from the 3/8" keyway in the generator armature shaft.
- (3) Route the revolving field leads (step 2 above) through exciter armature hole ("B", Fig. 2), which is opposite the keyway.
- (4) Align armature keyway with key in shaft and start armature on shaft.

**b. Exciter Armature Installation**

- (1) If the exciter armature-to-generator shaft fit is such that the exciter armature may be pushed on by hand, push it on very slowly while another mechanic carefully watches and pulls field leads through hole in the exciter armature diode mounting plate. Continue installation until the diode mounting plate contacts the end of the generator shaft. If the exciter armature cannot be pushed on by hand, use a 1/2 - 13 X 5-inch hex-head bolt and 1/2 - 13 nut as shown in Figure 6 to pull the exciter armature onto the generator shaft. Put the exciter armature on slowly and at the same time pull field leads through hole ("B", Fig. 2) in the diode mounting plate. Screw the nut onto the bolt until it is near the head of the bolt. Insert the bolt through the hole in the center of the diode mounting plate as far as it will go, and screw it into the 1/2 - 13 threaded hole in the end of the armature shaft. Screw the 1/2 - 13 nut up against the diode mounting plate. Continue turning the nut until the diode mounting plate contacts the end of the generator shaft, just as is shown in the lower portion of Figure 6. After installation, remove the 1/2 - 13 bolt and nut.

- (2) Connect the two generator field leads to the exciter armature as follows:
- Connect lead with ring type terminal with screw provided to the rear mounting plate ("A", Fig. 2).
  - Connect the other field lead to the three leads coming off of the exciter armature windings ("X", Fig. 2). Use parallel splice connector, crimp and solder for a good connection.
  - Insulate with sleeving material or wrap with electrical tape.

(3) Install the Machine Key

- Clean the machine key thoroughly. All mounting surfaces must be free of rust, corrosion, oil, grease, etc.
- Apply **LOCQUIC** primer, No. 47-56 grade T to **SIDES** of machine key. Do not overprime. A thin film is best. Allow to dry three to four minutes.
- Apply a thin coating of **LOCTITE**, No. 242 adhesive to **SIDES** of keyways in shaft and armature. Be certain to remove any excess from mounting surfaces on shaft and bore of armature.

**NOTE:** Application of "Loctite" is to compensate for any looseness in machine key and keyway (up to 0.005 inch). Manufacturers of **LOCTITE** and other recommended products are listed below.

When exciter armature removal is for the replacement of bearings and no kit is involved, be sure that **LOCTITE** No. 242 is recommended, which is a milder adhesive than that recommended in the manual.

When kits are involved, the correct grade of **LOCTITE** is included in the Kit.

The application of **NEVER-SEEZ** to the shaft and armature bore is **NOT** recommended because there is a danger that it may mix with and contaminate the **LOCTITE**. Application of **NEVER-SEEZ** will be at the customer's risk. **LOCTITE** can lose its adhesive and tightening properties if contaminated by rust preventatives, oil, or other lubricants and antirust products.

- Apply **LOCTITE**, No. 242 to **SIDES** of new type threaded machine key. A thin film 0.005 to 0.010 inch thick is adequate and desirable.
- Ensure keyways in the generator armature shaft and exciter armature are aligned.
- Insert **UNTHREADED** end of key in keyways, then tap lightly until threaded end is flush with end of shaft.

- (4) Secure the exciter armature on generator shaft with the 1/2-13 cap screw.

**CAUTION**

Allow at least 6 hours for complete cure and set up of Loctite before operating machine.


Recommended Products Manufacturers

"LOCQUIC" No. 47-56, Primer Grade T

"LOCTITE" No. 40-31, Retaining Compound, Manufactured by Loctite Corporation, Newington, Connecticut 06111

"NEVER-SEEZ" No. NSBT-8 (8 oz. can), Manufactured by Never-Seez Compound Corporation, Broadview, Illinois 60153

"NOCO10" Varnish No. T-211 (clear, air dry), Manufactured by Sterling Division of Reichhold Chemical Incorporated, Marysville, Pennsylvania 17053

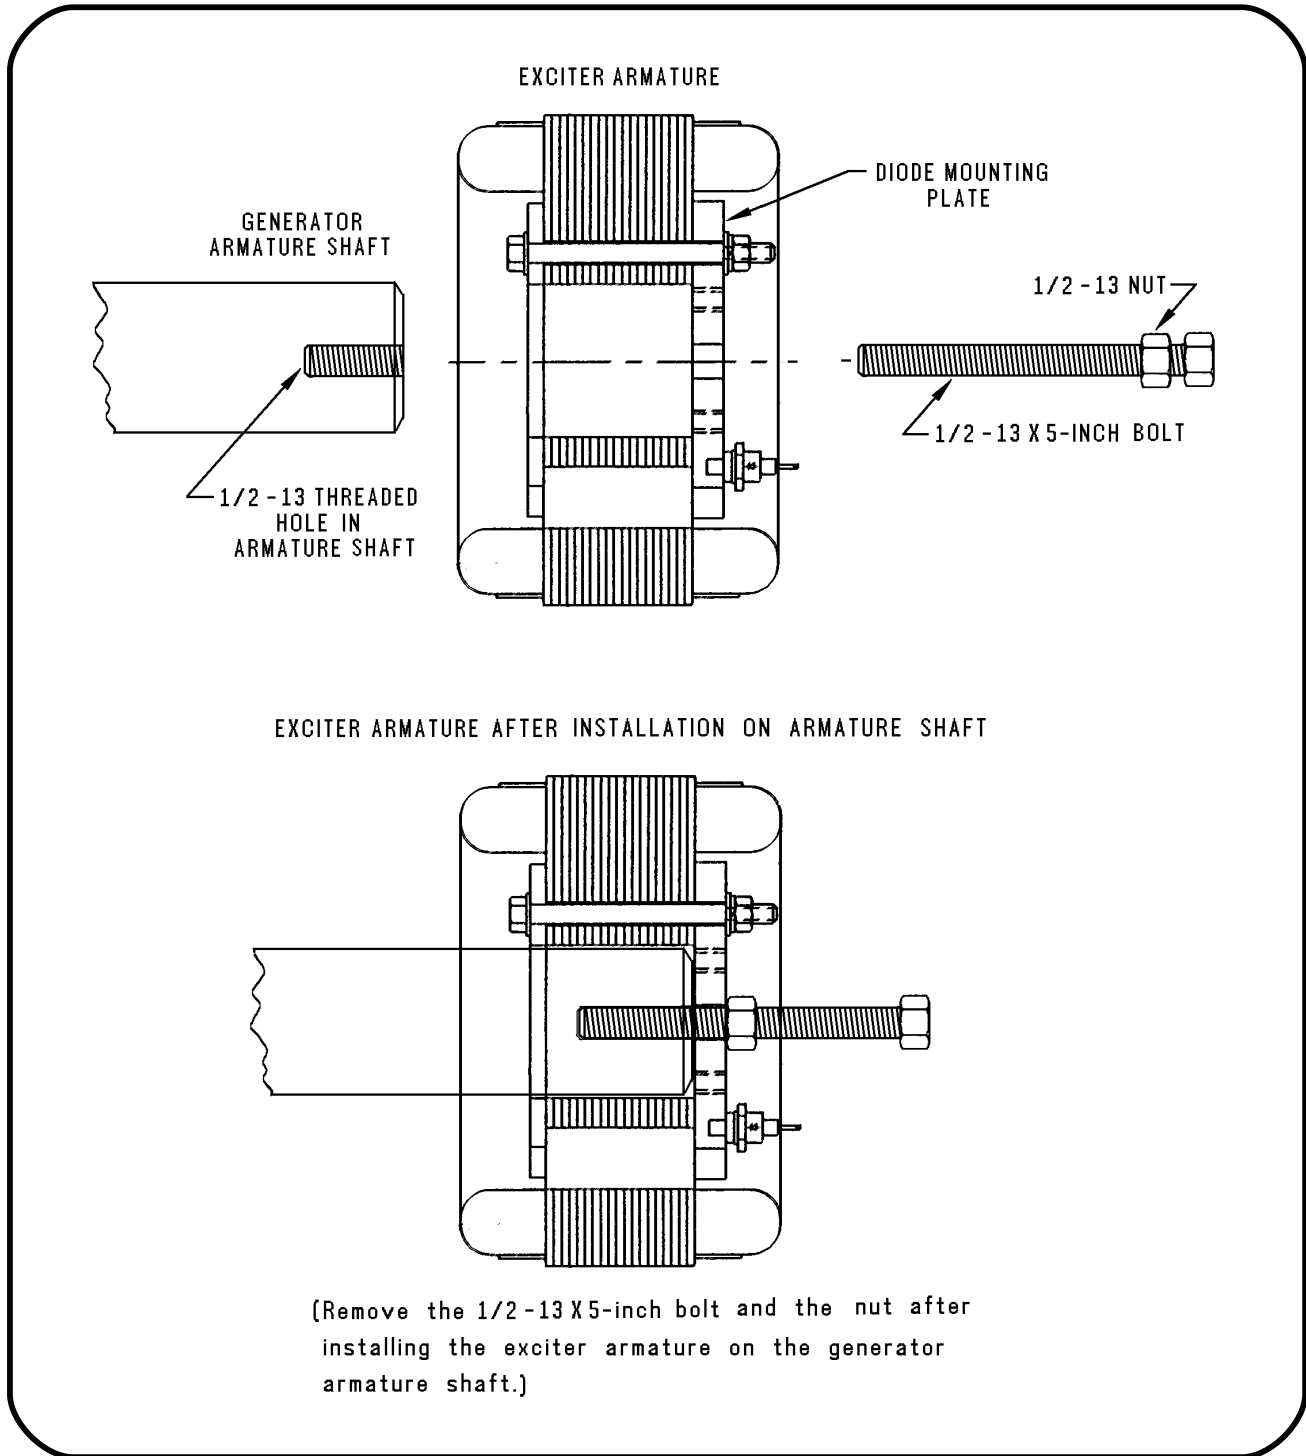

Installing the Exciter Armature  
Figure 6

---

## Section 2. Dual Bearing Flexible Coupling

---

### 1. General

This manual provides basic instructions for removal, service and installation of a flexible coupling assembly, with fan attached, manufactured by Hobart Brothers Company as **Part Number 281701**. This assembly is illustrated in Figure 1. The primary function of this assembly is to couple a Hobart Generator Set to a Diesel engine. The flexible coupling assembly compensates for slight misalignment between the engine and the generator, due to manufacturing tolerances. A tapered bushing and hub secures the coupling to the generator shaft.

#### a. Coupling Bolts

#### CAUTION

Failure to verify proper coupling bolt installation may result in coupling failure and damage equipment.

**NOTE:** It is not necessary to separate the engine and generator if all that is being done is checking and replacing the coupling bolts. Removal of the perforated cover over the fan housing provides access to the coupling bolts for removal and installation.

- (1) Refer to Figure 2. Use a long-handled, reversible ratchet drive with a 15/16-inch hex socket wrench to remove one coupling bolt. Measure its length. If it is 3-1/2 inches (89 mm) long, reinstall it and torque **ALL** three of the coupling bolts to 85 foot-pounds (115 N-m).
- (2) Use of the proper coupling bolts for replacement is **VERY IMPORTANT**. Replacement bolts **MUST** be 5/8-11, SAE Grade 5, hex-head bolts, 2-3/4 inches (70 mm) long, reinstall it and torque **ALL** of the coupling bolts to 85 foot-pounds (115 N-m). Only three bolts must be used and they must be equally spaced. There is **NO ACCEPTABLE SUBSTITUTE** for these bolts. Hobart Brothers stocks these bolts as Part Number W-11102-18.

### 2. Disassembly

Removal of the flexible coupling is required for servicing the generator armature, generator bearings, or the coupling itself. To remove the coupling, for any reason, it is necessary to separate the engine and generator. On self-propelled units, many mechanics prefer to remove the engine and generator as an assembly, and then separate them. Others may prefer to remove the engine or the generator separately to reach the coupling. However, separating the engine and generator while they are installed in the Ground Power Unit is **VERY DIFFICULT** because of the limited working space.

During removal **DO NOT** cut any cables or wires. Disconnect and tag them for reassembly.

#### a. Separate Engine and Generator


- (1) Install a lifting eye with 1/2-13 threads in the tapped hole on top of the generator frame, and attach a hoist to it.
- (2) Remove the fan housing cover from the generator fan housing.
- (3) Refer to Figure 2. Use a 15/16-inch socket on a long-handled ratchet and remove the three hex-head bolts which attach the coupling to the spacer ring.

**NOTE:** These bolts were torqued to 85-foot pounds (115 N-m) at installation. Therefore it may be necessary to block the armature against counterclockwise rotation to remove them.

- (4) Remove bolts attaching the generator fan housing to the engine flywheel housing.
- (5) Separate the generator from the engine with a hoist and move it to a clear working area.

**b. Remove Coupling Assembly**

- (1) Refer to Figure 3. Using a socket wrench, remove all three of the 3/8-16 bolts (1) that secure the bushing (2) to the hub (3).
- (2) To separate the housing from the hub, lubricate two of the 3/8-16 bolts and insert them into the threaded holes (4) in the bushing. With socket wrench, screw these bolts into the bushing such that the bushing pops loose from the hub.
- (3) Using a 3/16-inch Allen wrench, loosen the set screw (6) in the bushing to release pressure on the key (5).
- (4) When the bushing (2) is loose in the hub (3), use a mallet to **GENTLY** tap the bushing out of the hub.
- (5) Slide the coupling assembly off the shaft and remove the key(5).
- (6) Inspect the coupling assembly components carefully as follows:
  - a. Check for deformed fan blades and damage to the disk.
  - b. Check the rubber exposed at both ends of the bushings for signs of deterioration.
  - c. Check hub and split bushing for cracks, evidence of galling, and rust pits. Light rust is permissible on the split bushing and the tapered bore of the hub.
  - d. Check the shaft for any damage or deformation where the coupling was mounted on it.
  - e. Check bushing alignment to make sure that the dimension illustrated in Figure 5 is maintained.

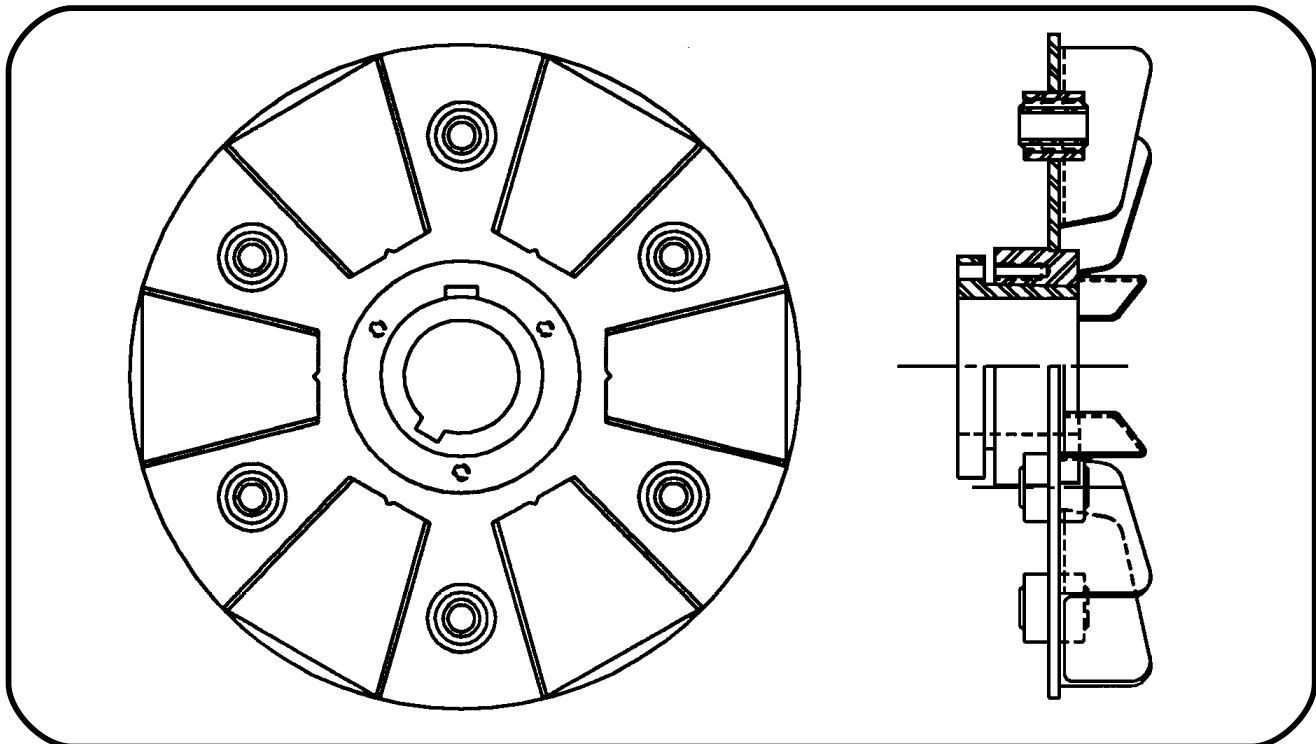

**Coupling Assembly**  
**Figure 1**



### 3. Coupling Service

When ordering coupling kits or other parts from your Hobart Brothers Company Distributor, be sure to include all pertinent information from the unit's identification plate: Specification No., Model No., and unit rating.


If you have any questions concerning your **Hobart Ground Power** equipment, contact our Service Department **by mail, telephone or FAX.**

**Write:** Hobart Brother Company  
Ground Power Division  
Service Department  
1177 Trade Square East  
Troy, Ohio 45373  
U.S.A.

**In U.S.A. Call:** (800) 422-4166 (Parts)  
(800) 422-4177 (Service)

**From Foreign Countries Call:** (937) 332-5050 (Parts)  
(937) 332-5060 (Service)

**FAX:** (937) 332-5121  
(800) 367-4945 Toll Free in U.S.A.

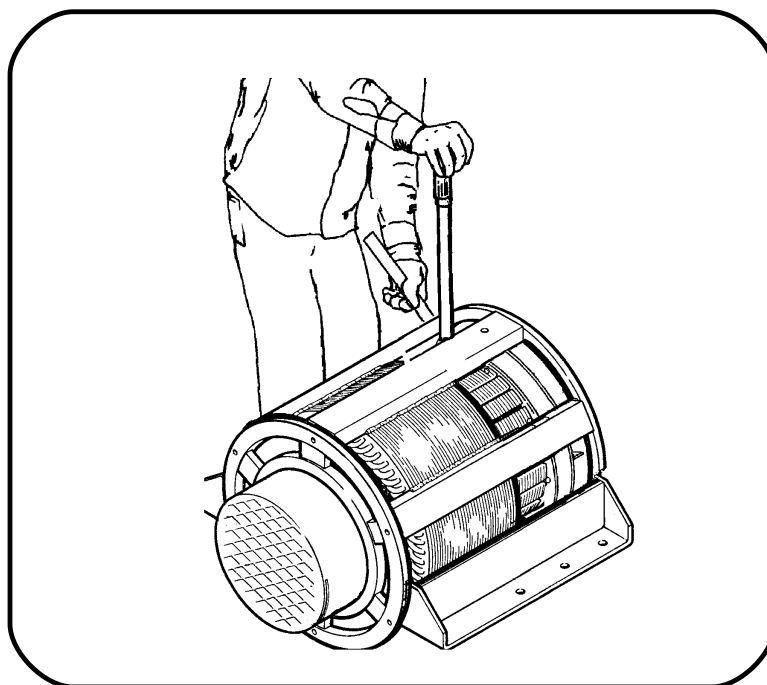


**Access to Coupling Bolts (for removal or installation)**

**Figure 2**

**a. Replacement Coupling Kit**

A replacement coupling kit is available from your Hobart Brothers Company Distributor. This kit provides a replacement coupling assembly with attaching hardware and installation instructions. The Part Number for this kit is 283555. This kit is illustrated in Figure 4

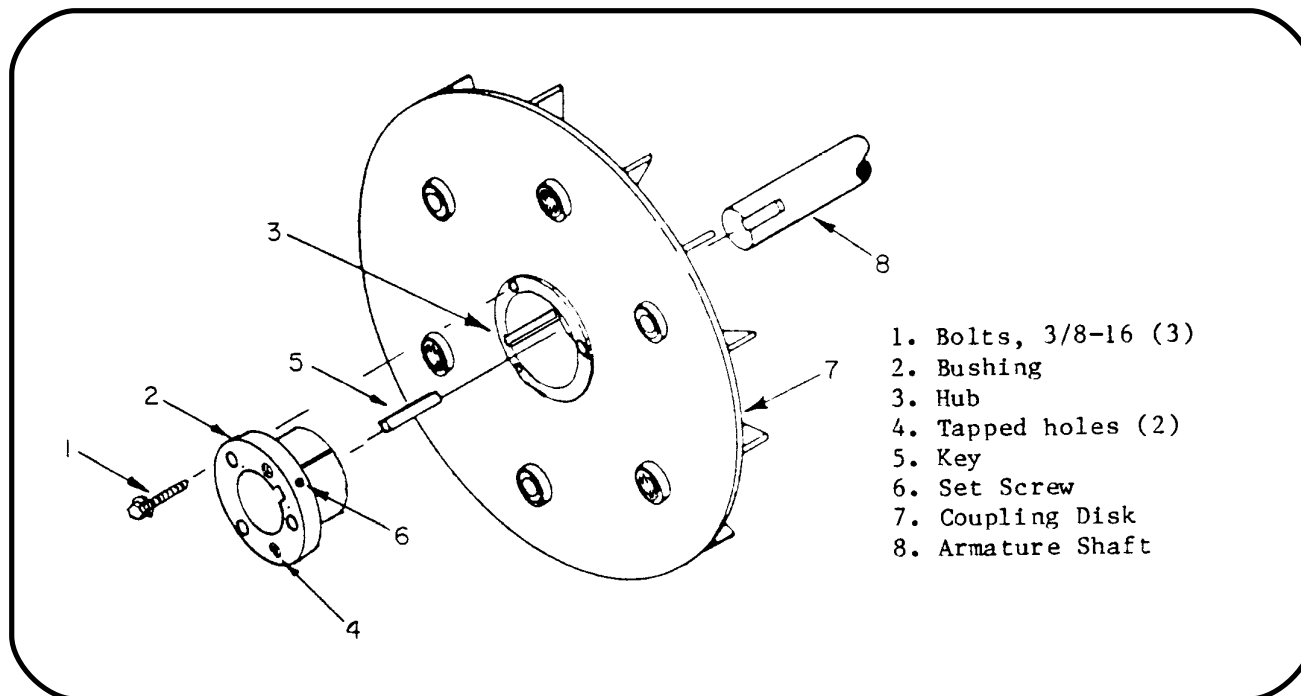

**Hub and Bushing**  
**Figure 3**

**b. Bushing Kit**

A bushing kit is available from Hobart Brothers Company for replacing the rubber bushing only in the coupling assembly. However, it should be noted that the finished coupling assembly must be balanced to 1/2 inch-ounce (**360 mg-m**) maximum, which may be a problem in the field. If bushing replacement only is required, the kit part number is 480290. Each kit contains the required number of bushings, a container of lubrication, and installation instructions.

**c. Bushing Replacement**

**To replace bushings only, proceed as follows:**

- (1) Press out **ALL** old bushings.
- (2) Refer to Figure 5. Clean each bushing socket thoroughly, removing all traces of old rubber. **DO NOT** scratch or deform the bore of the bushing socket.
- (3) Shake the container of lubricant vigorously and pour it into a small shallow dish.
- (4) Roll a bushing in the lubricant to coat it thoroughly, and press it into a socket (from the chamfered end) to the dimension shown in Figure 5: 3/32 +/- 1/64th-inch (2.381 +/- 0.397 mm) from the face of the bushing socket to the face of the bushing, on the side opposite the fan blades.
- (5) Repeat step 4 until all six new bushings are installed.
- (6) Balance the complete coupling assembly to 1/2 inch-ounce (360 mg-m) maximum.

#### 4. Coupling Installation

##### CAUTION

Improper installation of the coupling assembly can result in serious damage to the equipment. Follow these installation instructions exactly.

##### a. Cleaning

Refer to Figure 6. It is **VERY IMPORTANT** that the shaft, the bore and the outside of the split bushing, and the tapered inside of the hub be thoroughly **CLEANED FREE OF DIRT AND GRIT**.

##### CAUTION

Do not lubricate any of the surfaces listed above. Lubrication of these surfaces can cause the coupling to fail and damage the generator set. Slight traces of rust are permissible on the surfaces marked "x", but nothing else.

##### b. Assembly

- (1) If an adapter ring must be replaced, remove the 8 bolts which secure it to the flywheel. Discard the old adapter ring and bolts. Install the new adapter ring Part No. 386612 using the new bolts Part No. 402789-3 (3/8-16 X 2-1/2 Socket Head Cap Screws).

Torque all 8 bolts to 45 foot-pounds (61 N-m).

The new adapter ring and bolts are included in the kit.

- (2) Refer to Figure 3. Assemble the split bushing (2) into the hub (3).

##### CAUTION


Make certain that only the bolts are lubricated, and that no lubricant is permitted to get inside the bushing where the armature shaft will enter the bushing.

- (3) Lubricate the three 3/8-16 bolts **SPARINGLY** and start them into the three (unthreaded) holes finger-tight.
- (4) Slide the generator armature as far as it will go toward the fan housing. Block the armature to maintain this forward position throughout the installation procedure. Block the armature with a wooden block or wedge, being careful not to damage any components of the armature or exciter.

##### CAUTION

Do not rotate the armature while this block is installed.

- (5) Install the key in the shaft keyway.
- (6) Place the bushing in the hub over the installed key (5), and install the coupling assembly on the shaft, with the split bushing approximately flush with the end of the shaft.
- (7) Using a 3/16-inch Allen wrench, tighten the set screw (6) in the bushing (2) to apply pressure on the key (5).

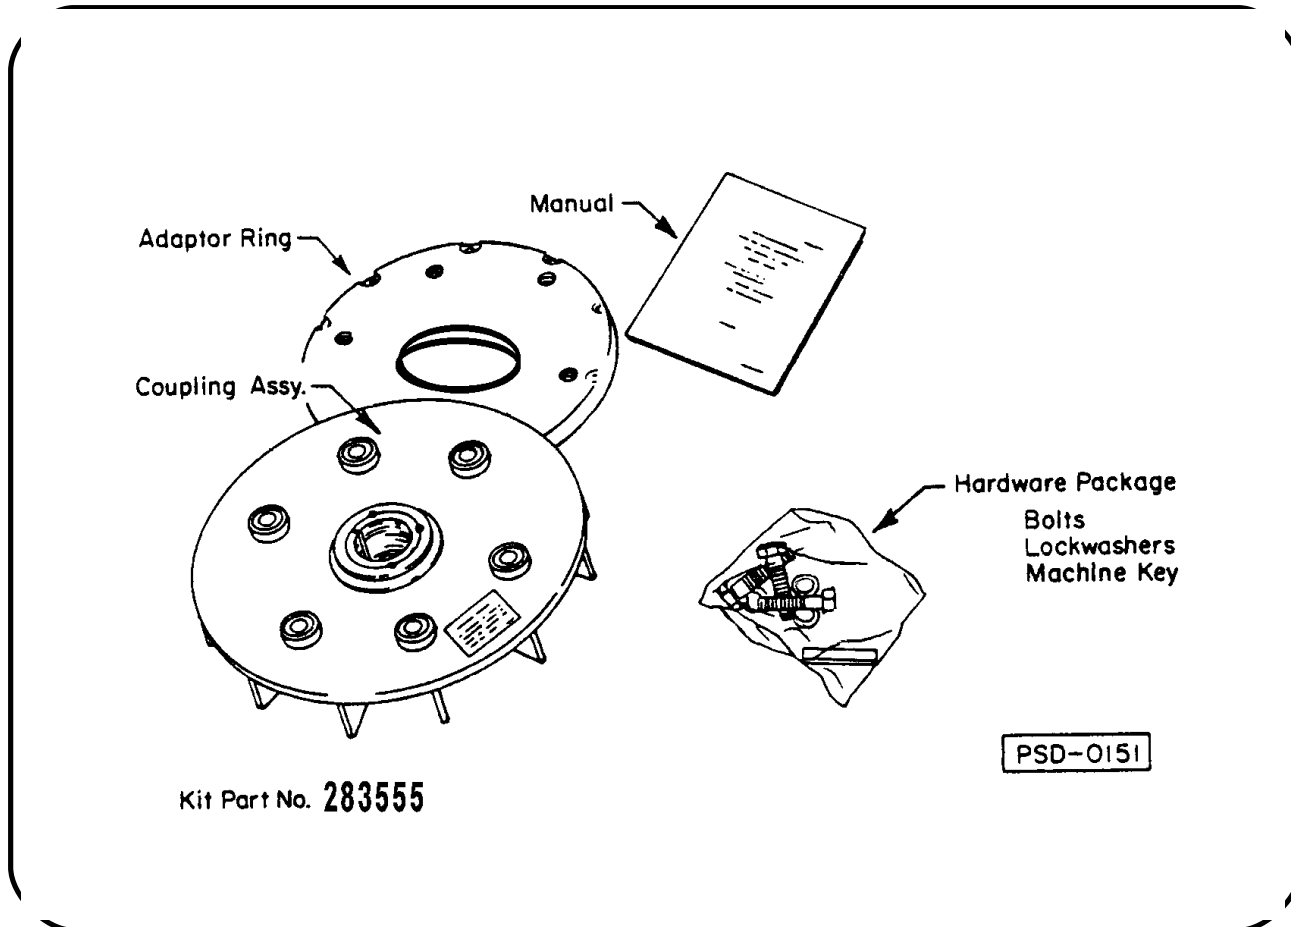


**Coupling Kit**  
**Figure 4**


- (8) Refer to Figure 9. Place a straightedge across the two adjacent bushings and measure the distance from the bushings to the mounting face of the generator fan housing. Slide the coupling assembly on the shaft until this dimension is 1/16-inch (1.6 mm) **LESS** than the dimension recorded in step 7 above. The tapered hub will be pulled onto the split bushing 1/16-inch (1.6 mm) when the 3/8-16 bolts are completely tightened.
- (9) Tighten the 3/8-16 bolts (1, Figure 3) alternately and evenly as follows:
  - a. Set a torque wrench to 30 foot-pounds (41 N-m) and tighten all three 3/8-16 bolts to that value. Block the coupling against clockwise rotation with a bar, as illustrated in Figure 10. Observe the **CAUTION** above when it is necessary to rotate the shaft.
  - b. Repeat step (a) above until 3/8-16 bolts can no longer be tightened.
  - c. Recheck the dimension in Figure 9 to be sure it is the same as the dimension in (7) above.

**CAUTION**


Remove armature block installed in para. 4.b.(3). otherwise, damage to the armature could result.

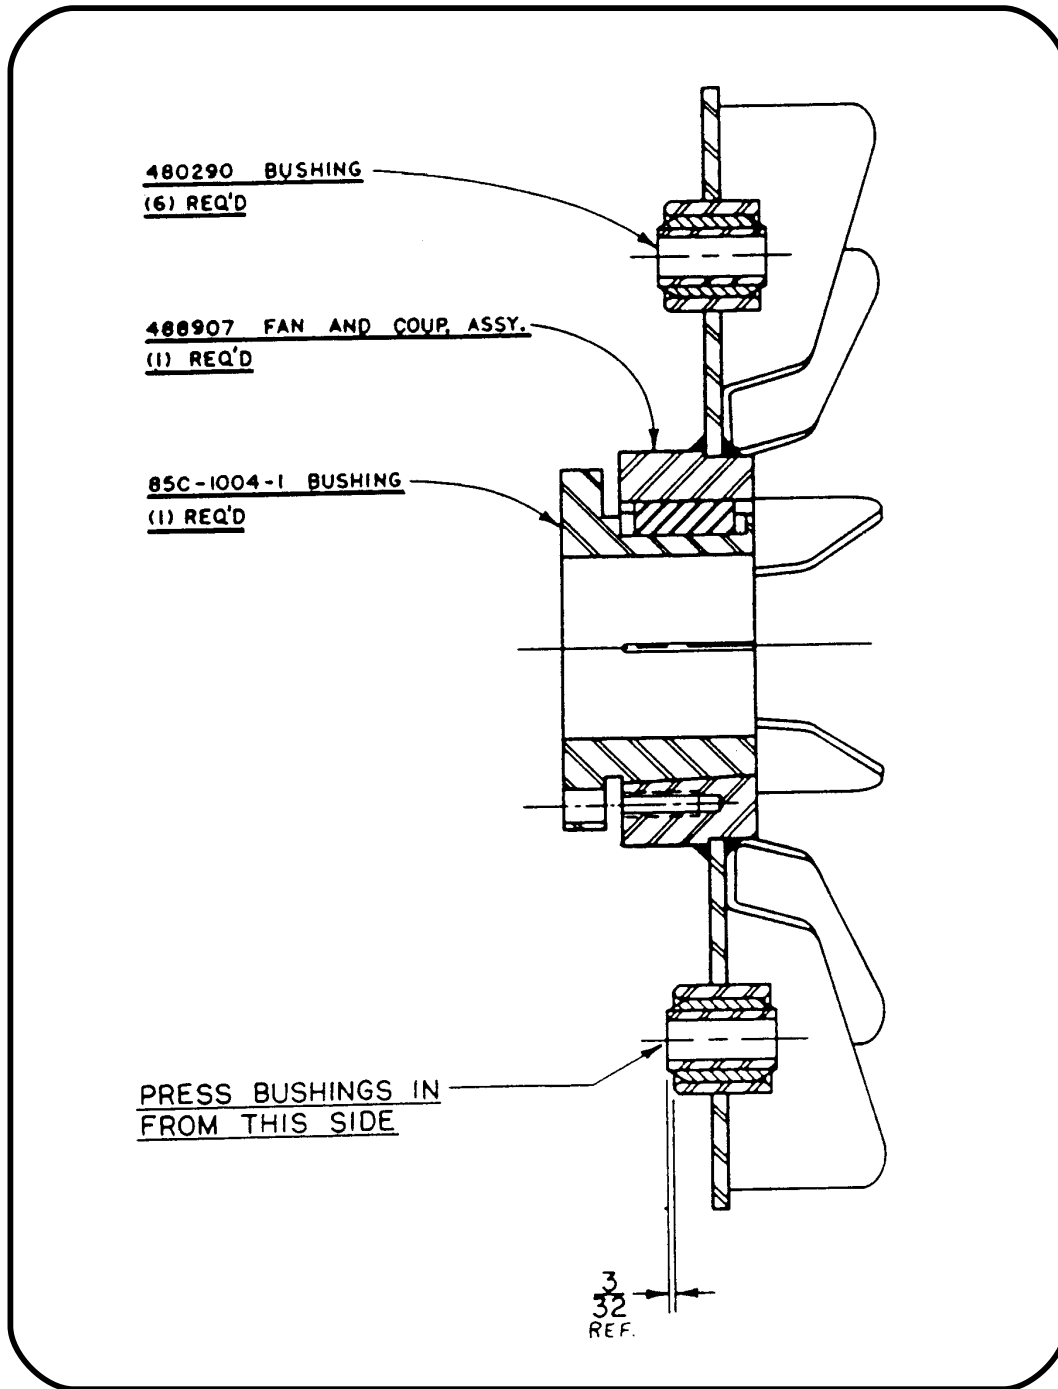


Bushing Installation  
Figure 5

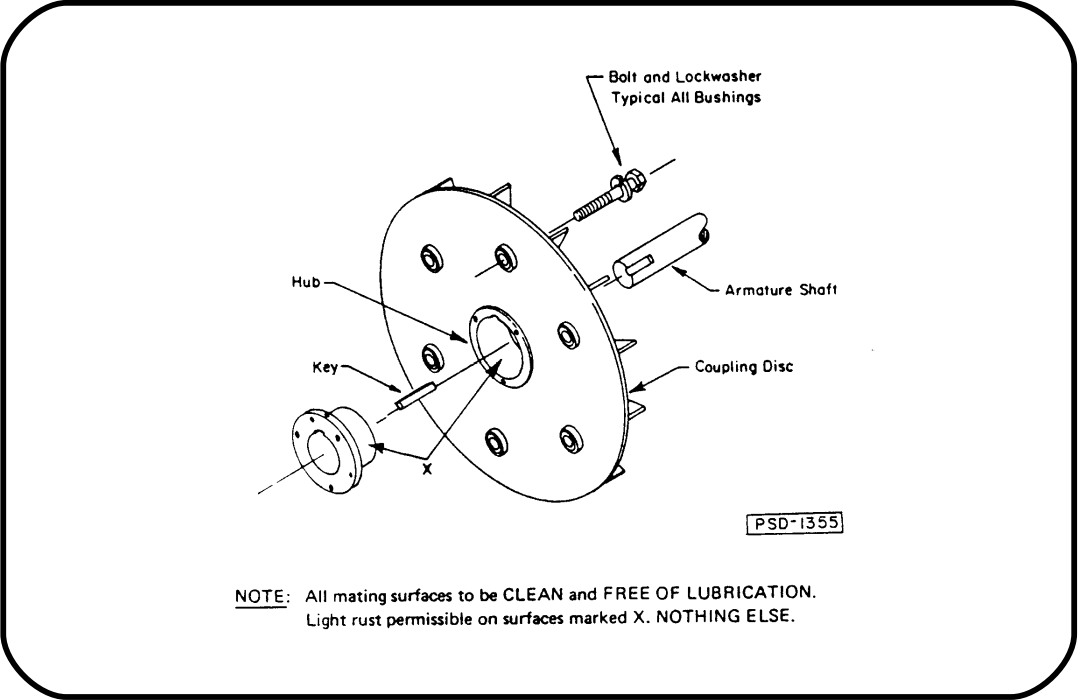


**Assembly Procedure**  
**Figure 6**

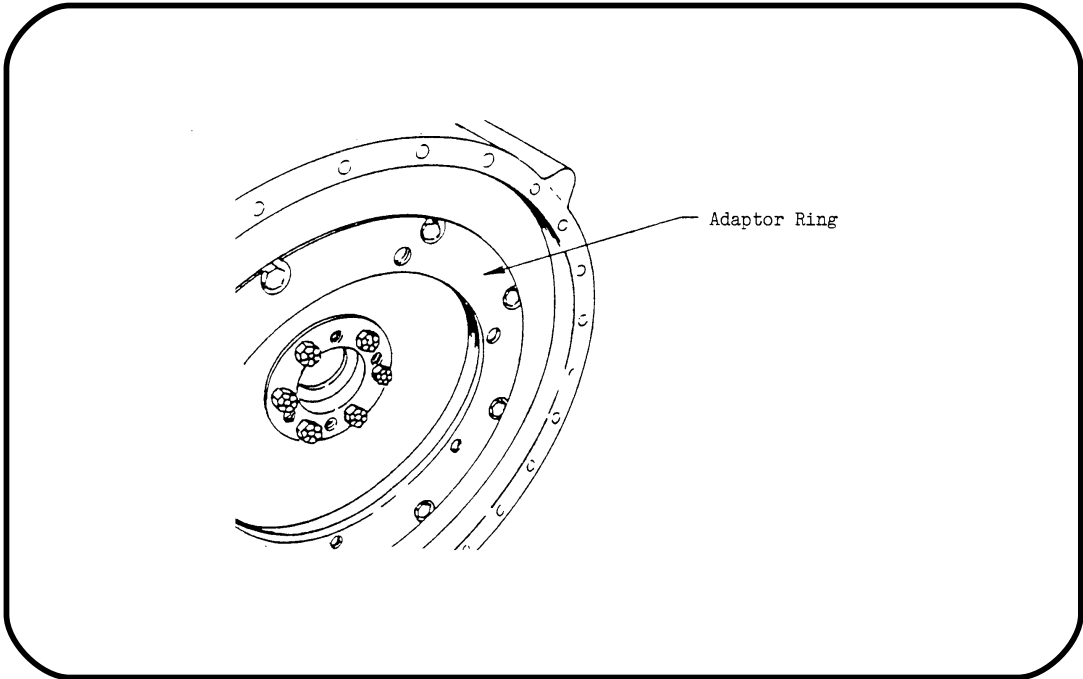

**Flywheel Adapter**  
**Figure 7**

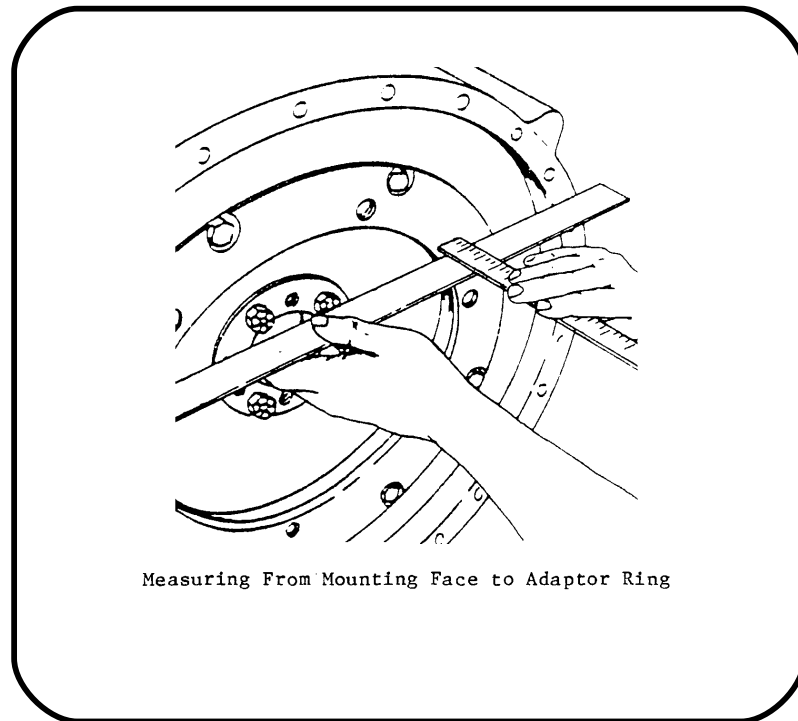

**Engine Measurement**  
**Figure 8**

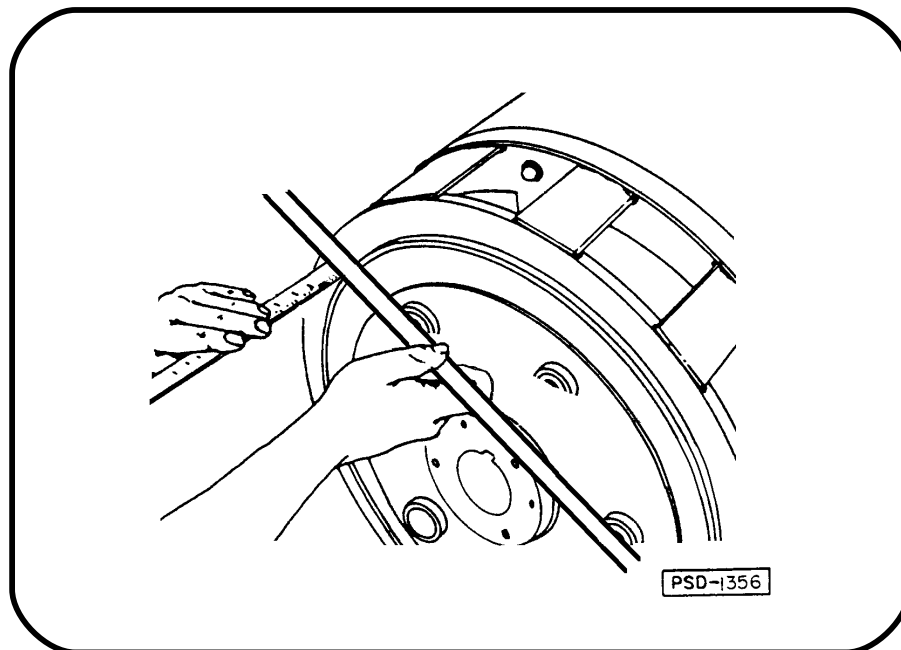

**Measuring from Mounting Face to Bushing**  
**Figure 9**

## 5. Reassemble Engine and Generator

### CAUTION

Use of the proper coupling bolts is very important. Failure to use the proper bolts, as outlined below, can result in coupling failure and damage to the generator set.

Use **5/8-11 SAE GRADE 5** hex-head bolts, 2-3/4 inches (70 mm) long. These bolts are included in the coupling kit, and are available from **Hobart Brothers** as Part No. **W-11102-18**.

- a. Insert the proper coupling bolts with lock washers through the bushings from the FAN side of the coupling.
- b. Using a hoist, align the generator fan housing flange with the flange on the engine flywheel housing and insert two of the attaching bolts, one on each side of the flange. Start the bolts into the tapped holes in the flywheel housing just enough to ensure thread engagement. **DO NOT TIGHTEN**.
- c. Turn all of the coupling bolts into the tapped holes in the flywheel, finger tight. **DO NOT** tighten with a wrench.
- d. Insert all remaining attaching bolts (two installed in Step B, above) through the generator flange, engaging the tapped holes in the flywheel housing, and tighten them all securely.
- e. Refer to Figure 2. Insert a long piece of wood through the fan housing to block the armature against clockwise rotation. Torque all of the coupling bolts to 85 foot-pounds (115 N-m).

## 6. Run-in and Periodic Check

- a. Mount the engine-generator assembly in a suitable test area and operate it for a 2-hour run-in.
- b. Shut down the engine after 2 hours and re-torque all coupling bolts to 85 foot-pounds (115 N-m) to compensate for normal torque relaxation.
- c. Return the unit to normal service.
- d. After 200 hours of operation, check all coupling bolts with a torque wrench set at 85 foot-pounds (115 N-m).
- e. Return the unit to normal service.
- f. After each additional 2,000 hours of operation (or every year) recheck all coupling bolts to maintain the same torque value.



---

## Section 3. Generator Assembly

---

### 1. General

This section provides information and instructions for removal and installation of the generator assembly used on Part Number 500051 generator sets.

### 2. Procedure for Generator Assembly Removal


#### a. Procedure for Gaining Access to the Generator

#### **WARNING**

Before starting removal of the generator assembly, position the front section of the generator set under a hoist which is capable of lifting at least 940 pounds (426 kg), which is the weight of the generator assembly.

To gain access to the generator assembly, refer to Figure 1 and Connection Diagram 287817 in Chapter 5 and proceed as follows:

- (1) Disconnect battery leads from the generator set.
- (2) Disconnect clearance light wires from the top canopy (2).
- (3) Remove rear panel cover (1)
- (4) Remove top canopy panel (2).
- (5) Remove the left front (14) and right front (3) doors.
- (6) Remove the following: right front panel (16), left front panel (13). Remove the clear power module cover (8) and loosen cable clamps from the clamp panel (12), so that the output power connectors can be disconnected from the load contactor on the power module (9).
- (7) Disconnect plug connectors from the back of the control box (4), and remove wires going to TB-5. Disconnect plug from power module (9).
- (8) Disconnect and Remove the control box (4).
- (9) Remove the air cleaner (15) and the pipe/hoses connecting it to the engine. Note: cover the turbo inlet while the air cleaner is removed.
- (10) Route wire harness through the bulkhead panel (5) towards the engine compartment, so that the front canopy panel (6), the control box support panel (7), and the bulkhead panel (5) can be lifted off the unit.
- (11) Remove the two keps nuts mounting the top of the power module (9) to the control box mounting panel (7).
- (12) Remove the front canopy panel (6), the control box support panel (7), and the bulkhead panel (5). These panels can be removed as one assembly as shown in Fig. 1.
- (13) Remove the generator stator leads from the power module (9), and remove the power module.
- (14) Remove generator wrapper (11).

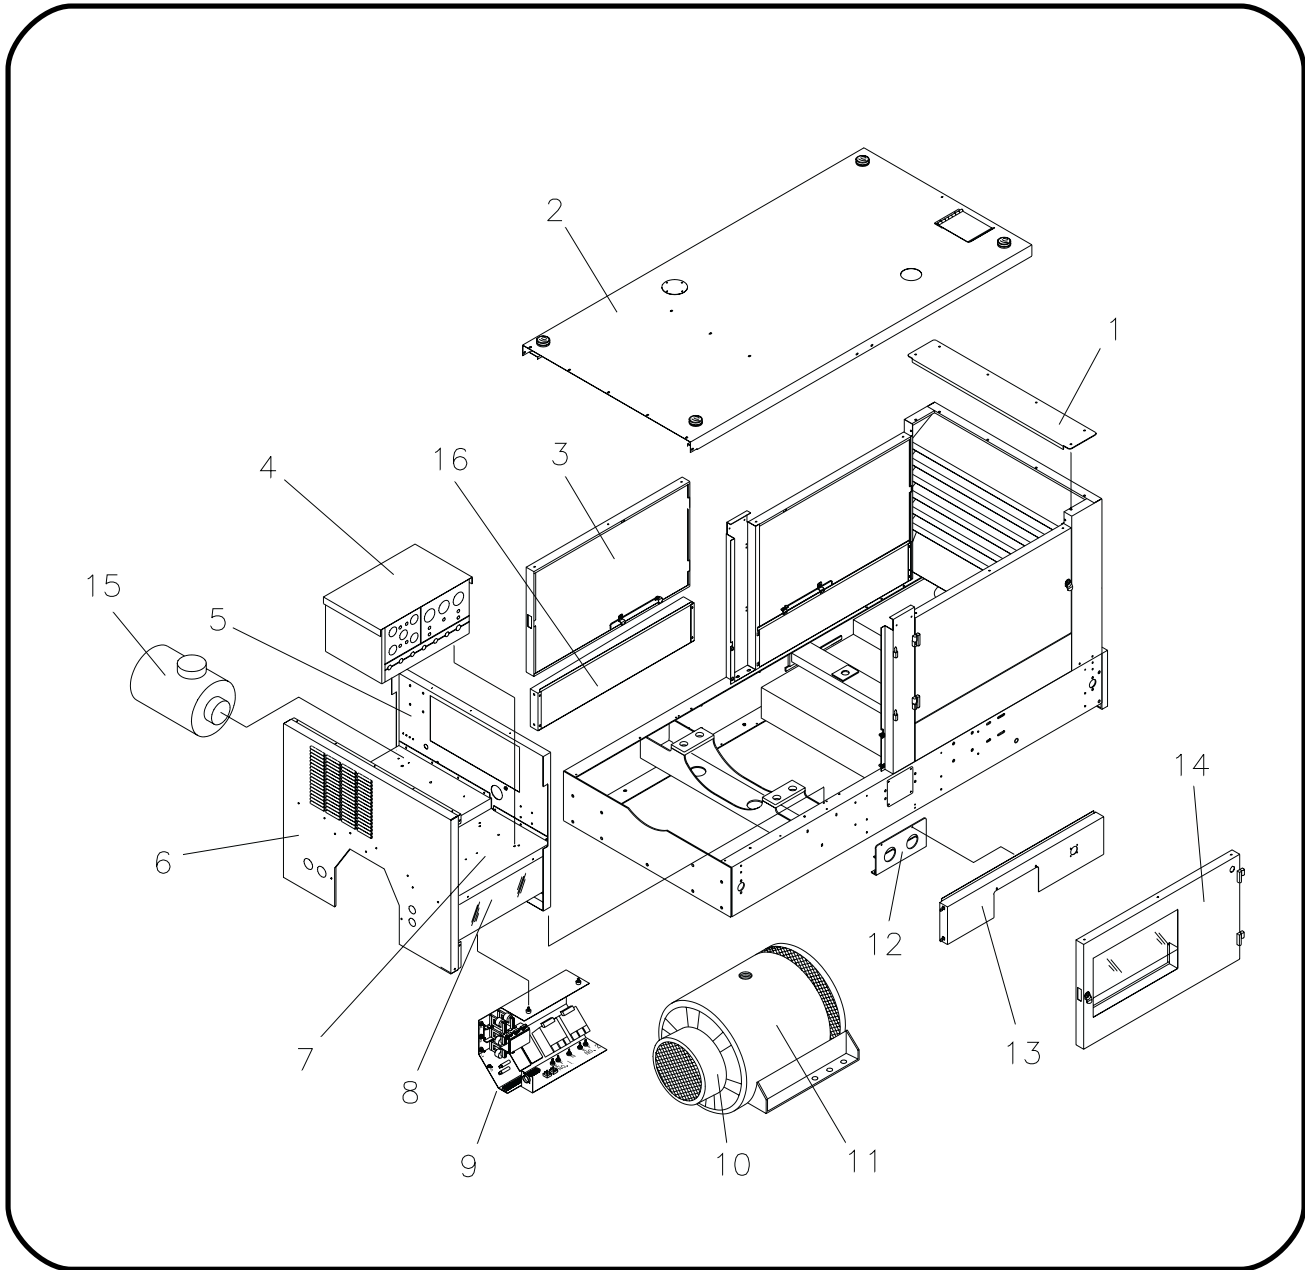


- |                             |                                |
|-----------------------------|--------------------------------|
| 1. Rear panel cover         | 9. Power Module                |
| 2. Canopy Top Assembly      | 10. Generator Assembly         |
| 3. Right Front Door         | 11. Generator Wrapper          |
| 4. Control Box Assembly     | 12. Cable Clamp Mounting Panel |
| 5. Bulkhead Panel           | 13. Left Front Lower Panel     |
| 6. Front Canopy Panel       | 14. Control Box Door           |
| 7. Control Box Mtg Panel    | 15. Air Cleaner                |
| 8. Clear Power Module Cover | 16. Right Front Lower Panel    |

**Assembly Removal Required for Access to Generator**  
**Figure 1**

**b. Removing the generator Assembly**

- (1) Remove the four 5/8 - 11 x 4-1/2 bolts which mount the generator assembly to the frame of the generator set.
- (2) Support the engine at the flywheel housing with wooden blocks.
- (3) Using the hoist, support the generator assembly as shown in Figure 2. For lifting convenience, a 1/2 - 13 threaded hole is drilled in the top of the generator housing. Insert a 1/2 - 13 eye-bolt in the hole and attach the hoist chain to the eye-bolt as shown in Figure 2.
- (4) Remove the 5/8 - 11 x 4-1/2 bolts generator-to-flywheel coupling bolts.
- (5) Detach the generator housing from the engine. Do this by removing the six M10 - 1.5 x 35 metric bolts.
- (6) Carefully lift and separate the generator from the engine.

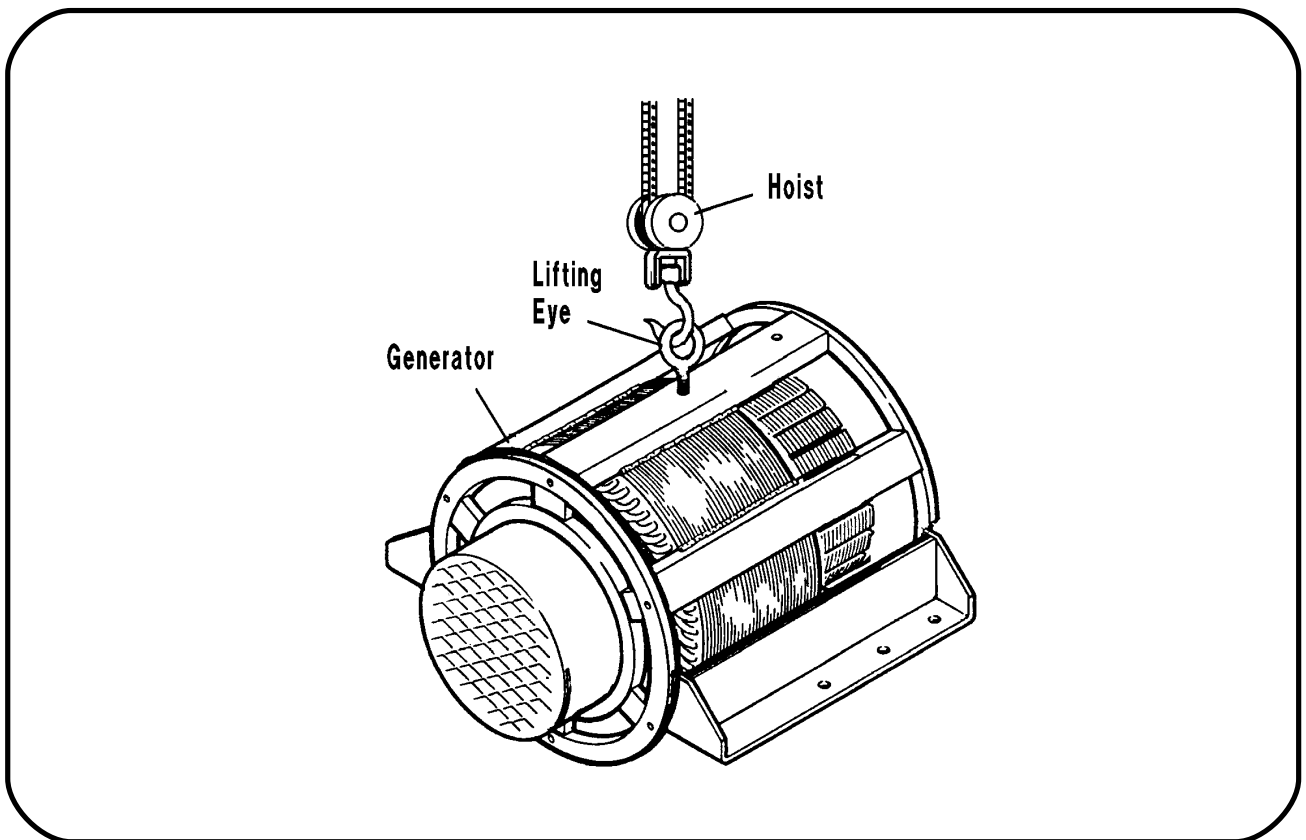

**Generator Lifting Arrangement  
Figure 2**

### 3. Installing a Generator Assembly

Installation of a generator assembly is essentially a reversal of the procedure for removal of the generator assembly: the re-mounting of the generator assembly to the frame of the generator set, and the re-mounting of the assemblies that were removed to gain access to the generator assembly. To install the generator assembly, refer to Connection Diagram 287944, and proceed as follows:

#### a. Remounting the Generator Assembly

- (1) Support engine at flywheel housing with wooden blocks.
- (2) Using the hoist, support the generator assembly and lower it carefully and slowly into position for attachment to the engine.
- (3) While still supporting the generator assembly with the hoist, attach the generator housing to the engine, using the six M10 - 1.5 x 35 metric bolts.
- (4) Attach the generator to the flywheel coupling, using the six 5/8 - 11 x 4-1/2 bolts.
- (5) Mount the generator housing to the frame of the generator set, using the four 5/8 - 11 x 4-1/2 bolts.
- (6) Install the generator wrapper (11, Fig. 1) on the generator assembly (12, Fig. 1), using 1/4 - 20 x 1/2 tap-tite screws.

#### b. Remounting the previously removed assemblies

- (1) Remount the remaining pieces of the unit in reverse order of disassembly procedure listed in para. 2. a.

# Chapter 4. Illustrated Parts List

---

---

---

## Section 1. Introduction

---

### 1. General

The Illustrated Parts List identifies, describes, and illustrates main assemblies, subassemblies, and detail parts of a Diesel Engine-Generator Set manufactured by Hobart Brothers Company, Ground Power Division, Troy, Ohio.

### 2. Purpose

The purpose of this list is to provide parts identification and descriptive information to maintenance and provisioning personnel for use in provisioning, requisitioning, purchasing, storing, and issuing of spare parts.

### 3. Arrangement

Chapter 4 is arranged as follows:

- Section 1 - Introduction
- Section 2 - Manufacturer's Codes
- Section 3 - Parts List
- Section 4 - Numerical index

### 4. Explanation of Parts List

#### a. Contents

The parts list contains a breakdown of the equipment into assemblies, subassemblies, and detail parts. All parts of the equipment are listed except:

- (1) Standard hardware items (attaching parts) such as nuts, screws, washers, etc., which are available commercially.
- (2) Bulk items such as wire, cable, sleeving, tubing, etc., which are also commercially available.
- (3) Permanently attached parts which lose their identity by being welded, soldered, riveted, etc., to other parts, weldments, or assemblies.

#### b. Parts List Form

This form is divided into six columns. Beginning at the left side of the form and proceeding to the right, columns are identified as follows:

##### (1) FIGURE-ITEM NO. Column

This column lists the figure number of the illustration applicable to a particular parts list and also identifies each part in the list by an item number. These item numbers also appear on the illustration. Each item number on an illustration is connected to the part to which it pertains by a leader line. Thus the figure and item numbering system ties the parts lists to the illustrations and vice versa. The figure and index numbers are also used in the numerical index to assist the user in finding the illustration of a part when the part number is known.

(2) HOBART PART NUMBER Column

All part numbers appearing in this column are Hobart numbers. In all instances where the part is a purchased item, the vendor's identifying five-digit code and his part number will appear in the "NOMENCLATURE" column. Vendor parts which are modified by Hobart will be identified as such in the "NOMENCLATURE" column. In case Hobart does not have an identifying part number for a purchased part, the "HOBART PART NUMBER" column will reflect "No Number" and the vendor's number will be shown in the "NOMENCLATURE" column. Parts manufactured by Hobart will reflect no vendor or part number in the "NOMENCLATURE" column.

(3) AIRLINE PART NUMBER Column

This column will appear blank. Eleven character spaces have been reserved for filling in part numbers that may have been assigned by individual airlines.

(4) NOMENCLATURE Column

The item identifying name appears in this column. The indenture method is used to indicate item relationship. Thus, components of an assembly are listed directly below the assembly and indented one space. Vendor codes and part numbers for purchased parts are also listed in this column when applicable. Hobart modification to vendor items is also noted in this column.

(5) EFF (Effective) Column

This column is used to indicate the applicability of parts to different models of equipment. When more than one model of equipment is covered by a parts list, there are some parts which are used on only one model. This column is used for insertion of a code letter A, B, etc., to indicate these parts and to identify the particular model they are used on. Since this manual covers only one generator set specification, this column is not used in this manual.

This column is not applicable to this manual.

(6) UNITS PER ASSEMBLY Column

This column indicates the quantity of parts required for an assembly or subassembly in which the part appears. This column does not necessarily reflect the total used in the complete end item.

## Section 2. Manufacturer's Codes

### 1. Explanation of Manufacturer's (Vendor) Code List

The following list is a compilation of vendor codes with names and addresses for suppliers of purchased parts listed in this publication. The codes are in accordance with the Federal Supply Codes for Manufacturer's Cataloging Handbook H4-1, (CAGE CODES) and are arranged in numerical order. Vendor codes are inserted in the nomenclature column of the parts list directly following the item name and description. In case a manufacturer does not have a code, the full name of the manufacturer will be listed in the nomenclature column.

Code	Vendor's Name & Address	Code	Vendor's Name & Address
00779	AMP Inc. P.O. Box 3608 Harrisburg, PA 17105	14552	Microsemi Corp 2830 S. Fairview St. Santa Ana, CA 92704-5948
016T7	Amaton Inc. 446 Blake St. New Haven, CT 06515	14799	Square D Co. Chicago Assembly Plant 9522 W. Winona Schiller Park, IL 60176-1025
02660	Amphenol Corp. 720 Sherman Ave Hamden, CT 06514-1146	16238	Lord Mfg. Co. Inc. Sterling Road South Lancaster, Mass 01561
02768	ITW Fastex Division 195 Algonquin Rd. Des Plaines, IL 60016-6103	16476	Datcon Instrument Co. P.O. Box 128 East Petersburg, PA 17520
0A569	Davco Mfg. Corp. 1600 Woodland Dr. N Saline, MI 48176	17284	Mercury Metal company 1201 S. Mercury Dr. Schaumburg, IL 60193
0HZP9	Diesel Radiator Co. 1985 Janice Ave. Melrose Park, IL 60160	18265	Donaldson Co. Inc. 1400 W. 94th St. P.O. Box 1299 Minneapolis, MN 55440-1299
11641	Furnas Electric Co. 1004 McKee St. Batavia, IL 60510	1F4R5	Vantage Parts Inc. 5291 Moreland Ave. Ellenwood, GA 30294
13445	Cole-Herse 20 Old Colony Ave. Boston, MA 02127	25710	Deka Plastics Inc. 914 Westfield Ave. Elizabeth, NJ 07208-1222
13902	Smith Valve Corp. 1 Apple HL Suite 316 Natick, MA 01760-2072	28520	Heyco Molded Products. 750 Boulevard P.O. Box 160 Kenilworth, New Jersey 07033-1721
		2B928	Barber Colman Co. Pasadena, TX 77501

Code	Vendor's Name & Address
2N562	Power Transmission Sales Inc. 351 Washington P.O. Box 229 Chagrin Falls, OH 44022-4446
30104	Automotive Controls Corp. 1300 W. Oak St. P.O. Box 788 Independence, KS 67301-2347
30327	Imperial Eastman Corporation 6300 W. Howard Street Chicago, IL 60648
30430	Marathon Electric Mfg. Corp. 398 Beach Rd. Burlingame, CA 94010-2004
40121	Peterson Mfg. Co. Inc. 700 W. 143rd St. P.O. Box 8 Plainfield, IL 60544-9733
41197	Madine Manufacturing Company 1500 Dekoven Avenue Racine, Wisconsin 53401
49234	Protectoseal Company 1920 S. Western Chicago, Illinois 60608
5PO59	Tech Products Corp. 2348 Sandridge Dr., Dayton, Ohio 45439
50508	Magnetic Components Inc. 9520 Ainslie St. Schiller Park, IL 60176-1116
55752	Parker Hannifin Corp. Racor Div. 3400 Finch Rd. P.O. Box 3208 Modesto, CA 95353-3208
57448	Stephens & Adamson Mfg. Company 275 Ridgeway Avenue Aurora, Illinois 60507
57733	Stewart-Warner Corporation 1826 Diversey Parkway Chicago, Illinois 60614

Code	Vendor's Name & Address
61706	EAO Switch Corp. 198 Pepes Farm Rd. P.O. Box 552 M O Milford, CT 06460-3670
66180	Automatic Timing and Controls 3312 Bloomingdale Melrose Park, IL 60160-1030
7M613	Wright F.B. Co. of Cincinnati 4689 Ashley Dr. Hamilton, Oh 45011-9706
72582	Detroit Diesel Corp 13400 W. Outer Dr. Redford, MI 48239-4001
74542	Hoyt Electrical Instruments P.O. Box 8798 Penacook, NH 03303
75418	Kysor Industrial Corporation 1100 W. Wright Street Cadillac, Michigan 49601
77342	Potter and Brumfield Inc 200 S. Richland Creek Dr. Princeton, IN 47671-0001
81074	Holub Industries, Inc. 413 DeKalb Avenue Sycamore, Illinois 60178
86797	Rogan Corp 3455 Woodhead Dr. Northbrook, IL 60062-1812
91637	Dale Electronics, Inc. P.O. Box 609 Columbus, Nebraska 68601
94222	Southco Inc. 210 N. Brinton Lk. Rd. Concordville, PA 19331
E0615	Kraus and Naimer 42 Miramar Avenue P.O. Box 15-009 Wellington, New Zealand



---

## Section 3. Illustrated Parts List

---

### 1. Explanation of Parts List Arrangement


The parts list is arranged so that the illustration will appear on a left-hand page and the applicable parts list will appear on the opposite right-hand page. Unless the list is unusually long, the user will be able to look at the illustration and read the parts list without turning a page.

### 2. Symbols and Abbreviations

The following is a list of symbols and abbreviations used in the parts list:


- \* - Item not illustrated
- A, or AMP - Ampere
- AC - Alternating current
- AR - As required
- DC - Direct current
- Fig. - Figure
- hd. - Head
- hex - Hexagon
- Hz - Hertz (cycles-per-second)
- I.D. - Inside diameter
- IN - Inch
- KVA - Kilovolt-ampere
- uF - Microfarad
- No. - Number
- NHA - Next higher assembly
- PRV - Peak reverse voltage
- PSI - Pounds per square inch
- Ref - Reference (the item has been listed previously)
- TM - Technical Manual
- T-R - Transformer-rectifier
- V - Volt (when used as a prefix to a five-digit number, indicates vendor code)

**NOTE:** An item which does not reflect an index number is a assembly which is not illustrated in its assembled state, or it is similar (right-hand, left-hand, top, etc.) to an item which is illustrated.

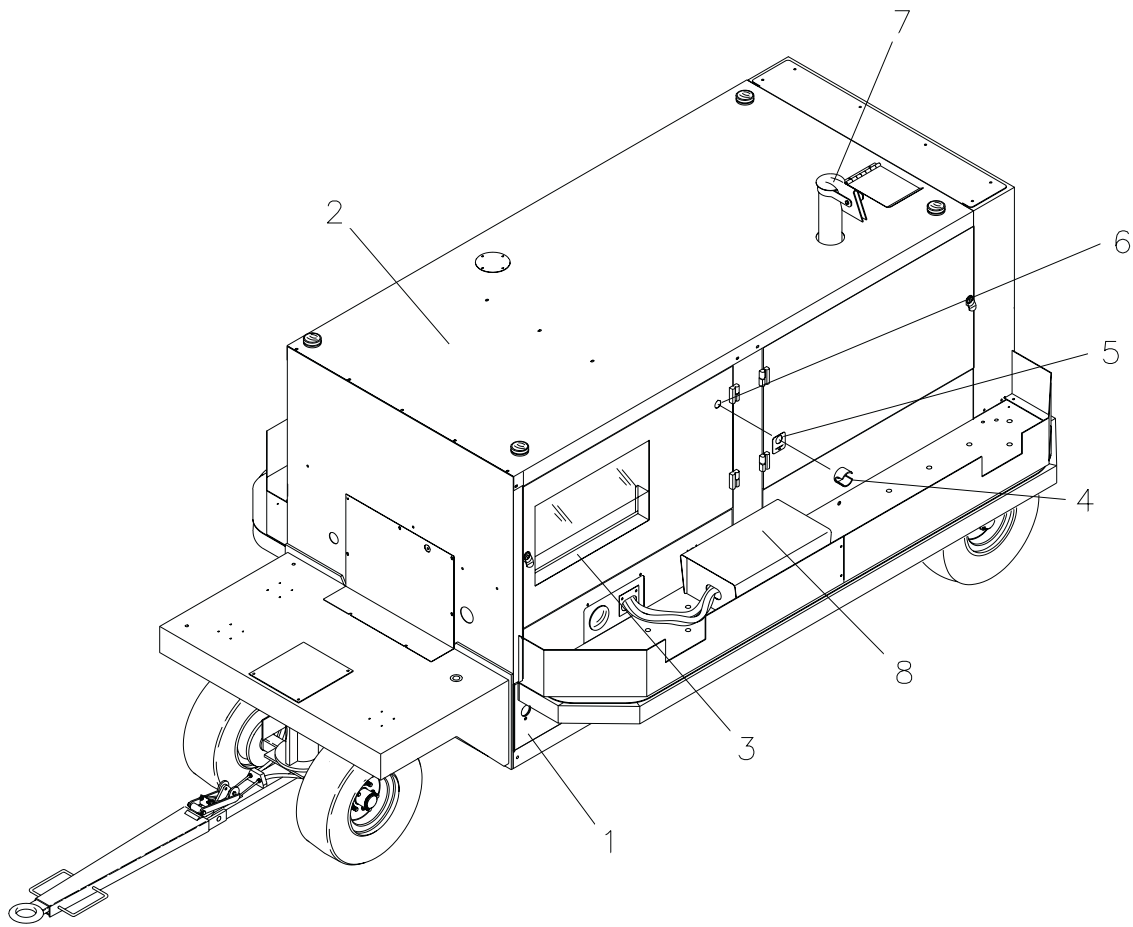

Generator Set  
Figure 1


FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6	REF	ASSY
1 -	500240-001		<b>GENERATOR SET FOR TRAILER MOUNTING</b>						REF	
1 - 1	No Number		. FRAME ASSEMBLY (See Fig. 2)						REF	
1 - 2	No Number		. CANOPY ASSEMBLY (See Fig. 3)						REF	
1 - 3	No Number		. GENERATOR SET INTERIOR COMPONENTS (See Fig. 4)						REF	
1 - 4	285125		. GUARD, MUSHROOM BUTTON (V14799 #K564M)						1	
1 - 5	285681		. PLATE, LEGEND, EMERGENCY STOP						1	
1 - 6	77A1157		. SWITCH, MAINTAINED, PUSH-PULL (V14799 #KR-9R-H6)						1	
1 - 7	DDW495-001		. RAIN CAP, EXHAUST (V17284 #FB0032)						1	
1 - 8	287946		. ENCLOSURE, POWER DISTRIBUTION ASSY (SEE FIGURE 19)						1	
* 1 - 9	287048		. LABEL, TERMINAL BLOCK						1	
* 1 - 10	402987		. LABEL, HOBART						3	
* 1 - 11	78A1000		. LABEL, I.D.						1	
* 1 - 12	287459		. LABEL, GENERAL WARNING						1	
* 1 - 13	79A1110		. LABEL, OPTIONS						1	
* 1 - 14	76B1148		. LABEL, DIESEL FUEL						1	
* 1 - 15	430077-002		. LABEL, HANDLING						1	
* 1 - 16	287460		. LABEL, HIGH VOLTAGE						1	
* 1 - 17	287461		. LABEL, FUEL						1	
* 1 - 18	287462		. LABEL, RADIATOR						1	
* 1 - 19	287463		. LABEL, HOT MUFFLER						1	
* 1 - 20	287464		. LABEL, MOVING PARTS						2	
* 1 - 21	287466		. LABEL, EMERGENCY STOP						1	
* 1 - 22	282658		. LABEL, WARNING, CLEARANCE						1	
* 1 - 23	282659		. LABEL, GOVERNOR DIESEL FUEL						1	
* 1 - 24	283533		. LABEL, SUPPORT CENTER						1	
* 1 - 25	287454		. LABEL, CAUTION, ENGINE SPEED						1	
* 1 - 26	408665-001		. REFLECTOR, RED						8	
* 1 - 27	408665-002		. REFLECTOR, AMBER						24	
* 1 - 28	287696		. LABEL, HEARING PROTECTION						1	
* 1 - 29	287465		. LABEL, WARNING, DRAWBAR						2	
* 1 - 30	287571		. LABEL, TIRE PRESSURE						4	
* 1 - 31	287709		. COVER, OPENING, FRONT						1	
* 1 - 32	287947		. LABEL, WARNING, 416 VAC						1	
* 1 - 33	287948		. LABEL, CAUTION, 25 KVA						1	
<b>* NOT ILLUSTRATED</b>										

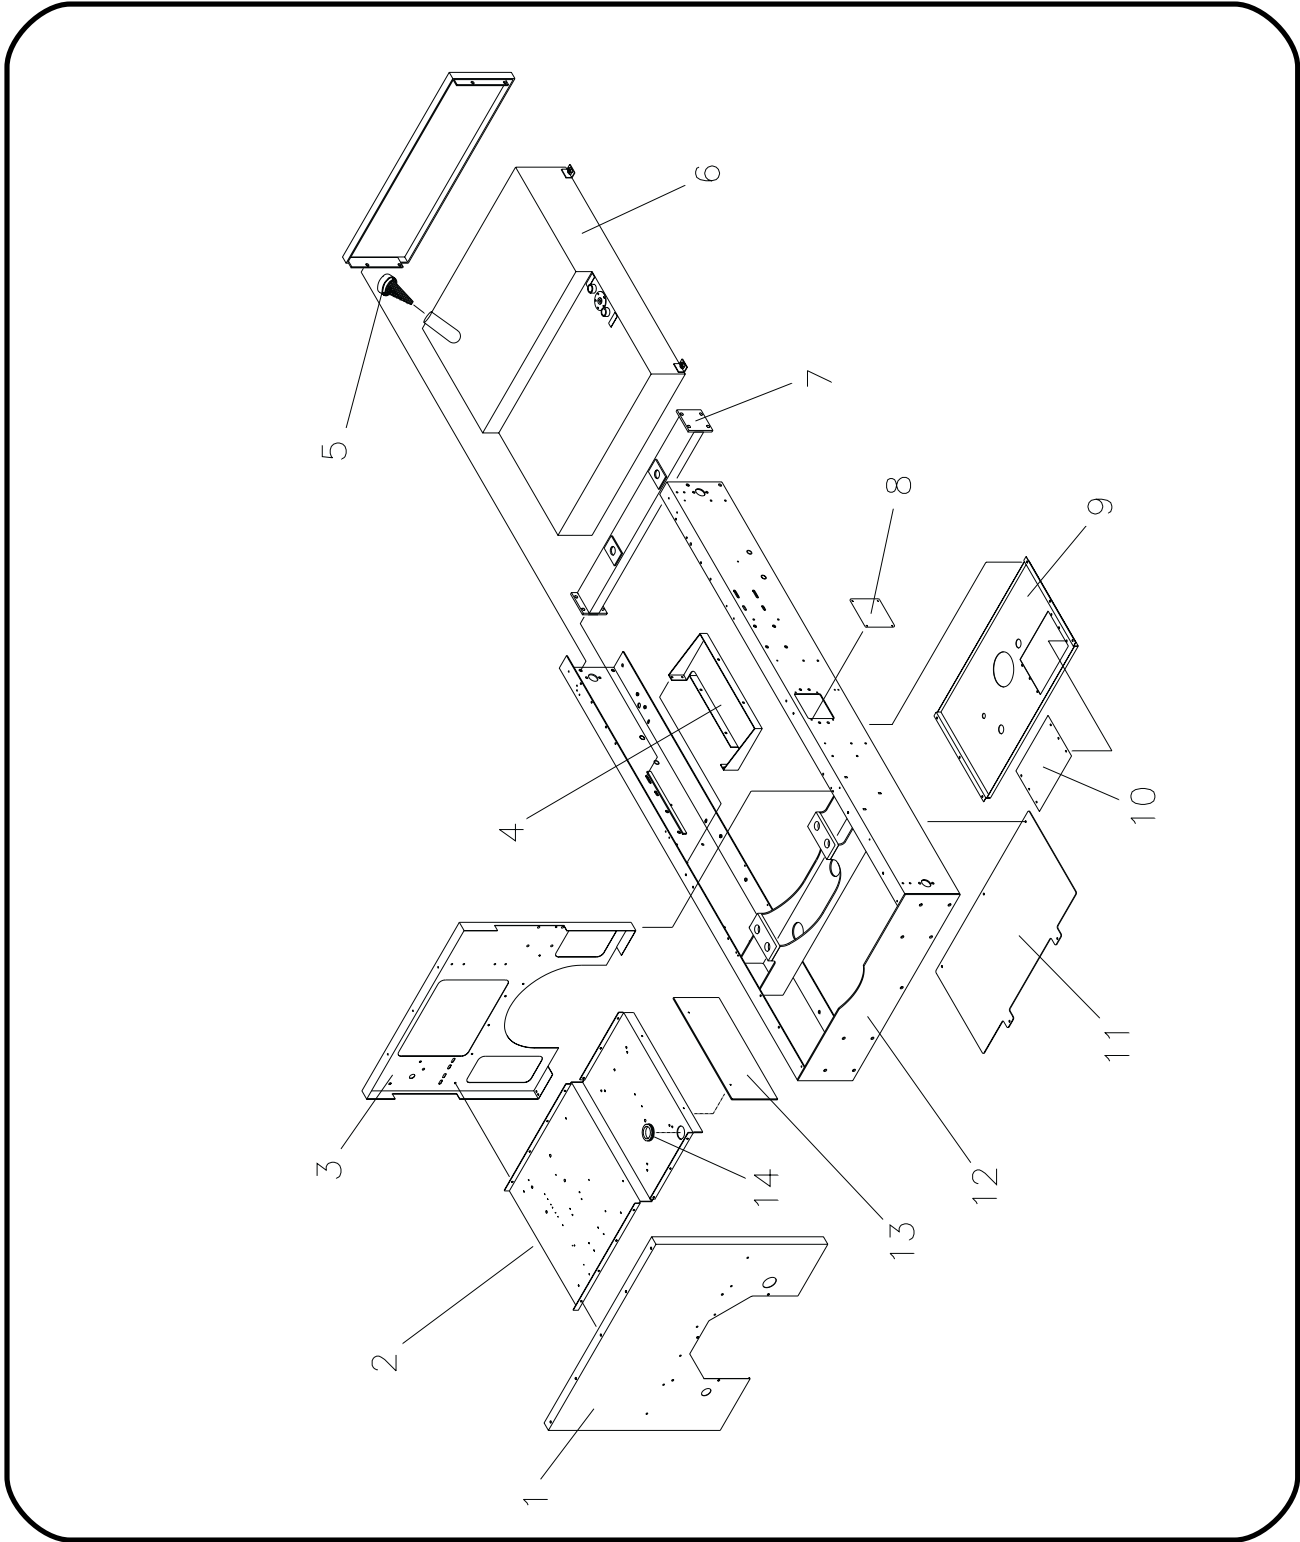

**Frame Assembly**  
**Figure 2**


FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6	REF	
	<b>2 -</b>	<b>No Number</b>	<b>FRAME ASSEMBLY</b>							<b>REF</b>
	2 - 1	287706	.							1
*		287738-008	.							1
*		287738-009	.							1
*		287738-010	.							1
	2 - 2	287802	.							1
	2 - 3	287707	.							1
	2 - 4	287795	.							1
	2 - 5	282562	.							1
	2 - 6	287781	.							1
	2 - 7	287424	.							1
	2 - 8	287506	.							1
	2 - 9	287739	.							1
*		287738-003	.							1
	2 - 10	287437	.							1
	2 - 11	287798	.							1
*		287738-015	.							1
	2 - 12	287713	.							1
	2 - 13	287803	.							1
	2 - 14	402037-028	.							1

\* NOT ILLUSTRATED

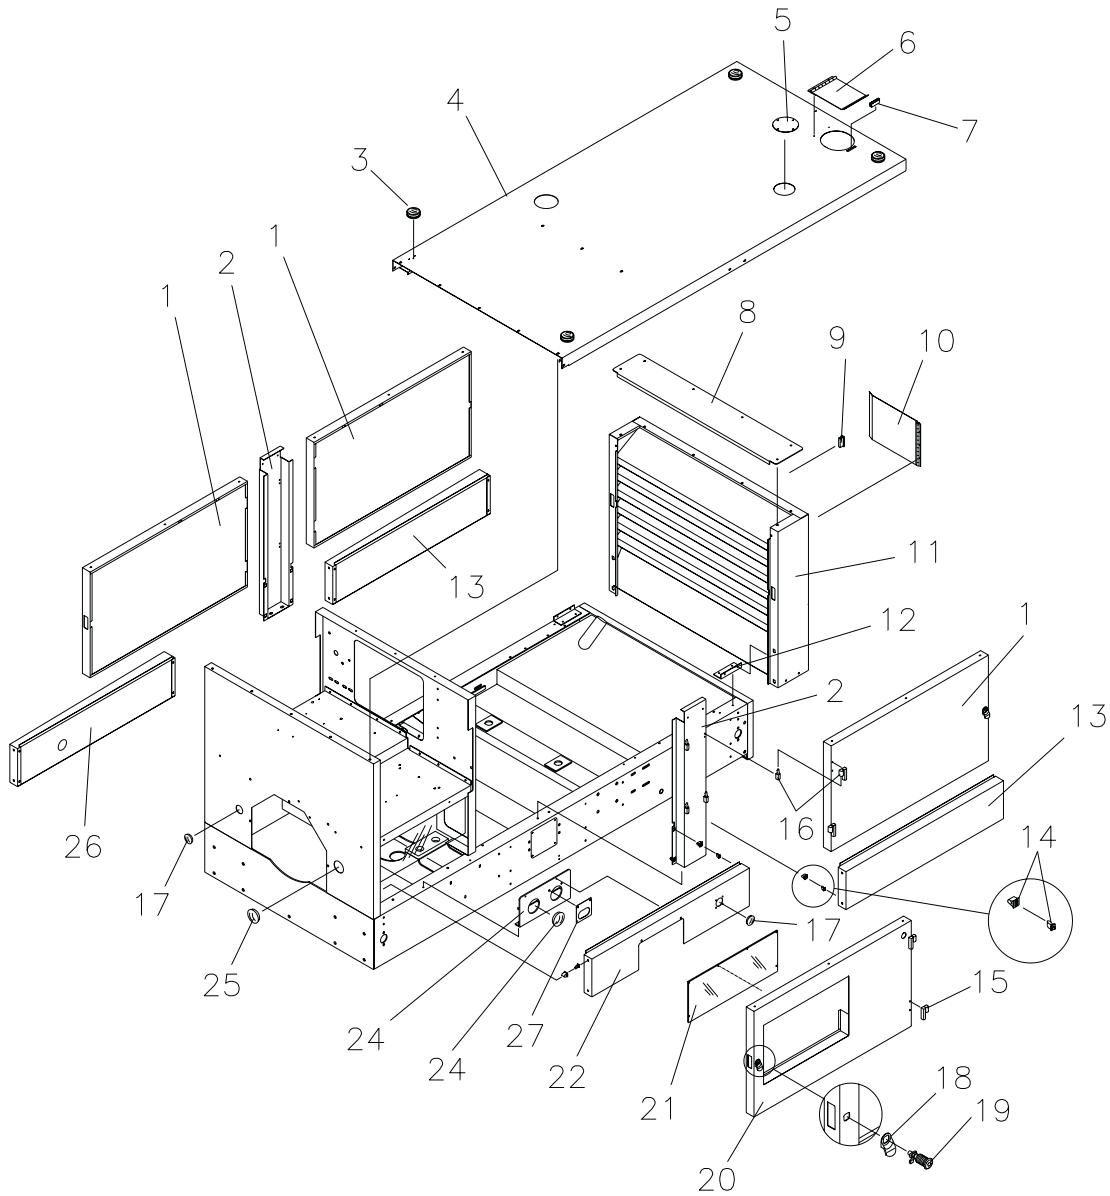


**Canopy Assembly**  
**Figure 3**

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY
			1	2	3	4	5	6	
3 -	No Number		CANOPY ASSEMBLY						REF
3 - 1	287701		. DOOR, ASSEMBLY						3
*	287738-001		. INSULATION, DOORS						3
3 - 2	287699		. PANEL, SUPPORT, DOORS						2
*	287738-011		. INSULATION, DOOR SUPPORT						2
3 - 3	282732-001		. LIGHTS, CLEARANCE, AMBER (V40121 #2378A)						4
3 - 4	287705		. TOP, CANOPY ASSEMBLY						1
*	287738-006		. INSULATION, TOP, REAR						1
*	287738-007		. INSULATION, TOP, FRONT						1
3 - 5	287422		. COVER, CANOPY, EXHAUST						2
3 - 6	283647		. DOOR, ACCESS, RADIATOR ASSEMBLY						1
3 - 7	403127		. CATCH, MAGNETIC (V94222 #02-10-201-10)						1
3 - 8	287889		. COVER, LOUVER ASSEMBLY						1
3 - 9	403127		. CATCH, MAGNETIC (V94222 #02-10-201-10)						1
3 - 10	287794		. DOOR, ACCESS, FUEL CAP						1
3 - 11	287819		. PANEL, REAR ASSEMBLY						1
3 - 12	287793		. BRACKET, REAR PANEL MTG.						2
3 - 13	287703		. PANEL, LOWER, ASSEMBLY						2
*	287738-004		. INSULATION, LOWER PANEL						2
3 - 14	287785		. FASTENER, PANEL, ACCESS (VA5733 #7800-00 & #263-000006-00-0017)						16
3 - 15	283824		. HINGE, RIGHT HAND (V94222 #96-10-510-50)						4
3 - 16	283597		. HINGE, LEFT HAND (V94222 #96-10-520-50)						4
3 - 17	403091-008		. HOLE PLUG (V28520 #DP-1750)						2
3 - 18	287526-002		. TAB, DOOR PULL (V94222 #E3-27-1)						4
3 - 19	287542-001		. DOOR LATCH (V94222 #E3-16-15)						4
3 - 20	287710		. DOOR, CONTROL						1
*	287738-002		. INSULATION, CONTROL DOOR						1
3 - 21	286834		. COVER, CONTROLS						1
3 - 22	287704		. PANEL, SIDE, LEFT FRONT						1
*	287738-005		. INSULATION, SIDE, LEFT FRONT						1
3 - 23	287698-001		. HOLE PLUG (V28520 #2455)						1
3 - 24	287786		. PANEL, CABLE SUPPORT						1
*	7J422-000		. CABLE CLAMP						4
3 - 25	403091-017		. HOLE PLUG (V28520 #DP-2.5)						2
3 - 26	287702		. PANEL, SIDE, TR						1
3 - 27	287949		. PLATE, OUTPUT CABLE						1
* NOT ILLUSTRATED									

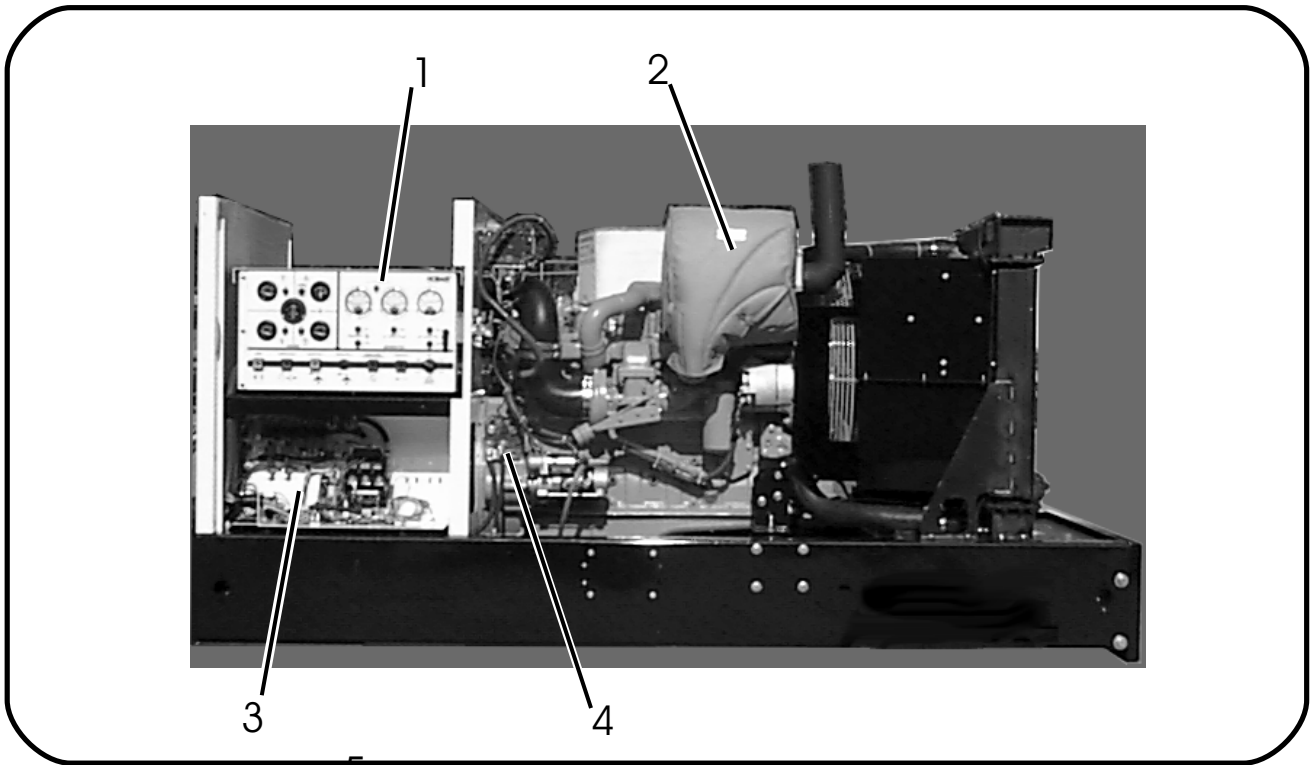


Interior Components (Left Side)  
Figure 4A

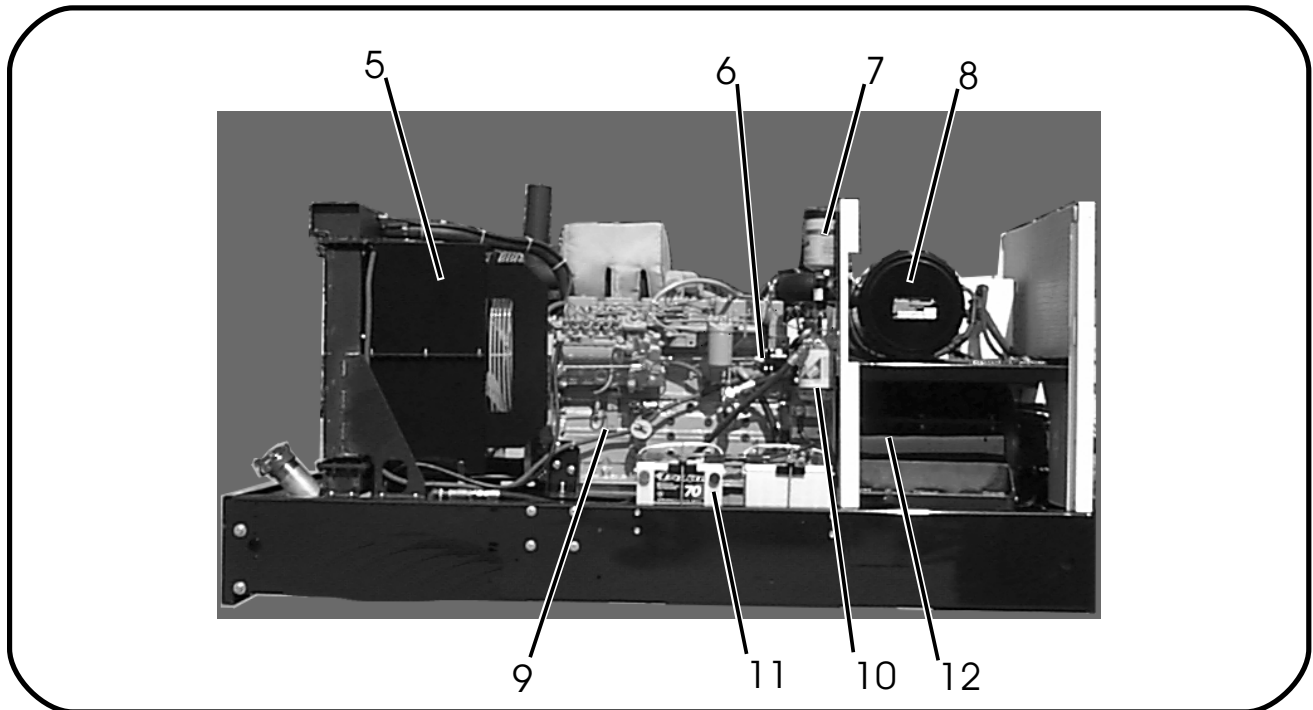

Interior Components (Right Side)  
Figure 4B








FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY
			1	2	3	4	5	6	
<b>4A -</b>	<b>No Number</b>		<b>INTERIOR COMPONENTS (LEFT SIDE)</b>						<b>REF</b>
4A - 1	287749-006		.	CONTROL BOX ASSEMBLY (See Fig. 5)					REF
*	HF-2752		.	MOUNT, RUBBER (V5P059 #51153)					4
4A - 2	No Number		.	EXHAUST COMPONENTS (See Fig. 16)					REF
4A - 3	287793		.	POWER MODULE ASSEMBLY (See Fig. 11)					REF
*	HF-2752		.	MOUNT, RUBBER (V5P059 #51153)					2
4A - 4	No Number		.	GROUNDING PLATE AND CABLES (See Fig. 12)					REF
*	4A - 5	408173	.	SOLENOID					1
*	4A - 6	285200	.	DIODE ASSEMBLY					1
<b>4B -</b>	<b>No Number</b>		<b>INTERIOR COMPONENTS (RIGHT SIDE)</b>						<b>REF</b>
4B - 5	No Number		.	COOLING SYSTEM COMPONENTS (See Fig 10)					REF
4B - 6	287532-001		.	KIT, GOVERNOR . (See Fig. 7 and 8)					REF
4B - 7	No Number		.	COLD WEATHER START					
			.	COMPONENTS (See Fig. 19)					A,B,C,D REF
4B - 8	No Number		.	AIR INTAKE COMPONENTS (See Fig. 15)					REF
4B - 9	No Number		.	ENGINE COMPONENTS (See Fig. 13)					REF
4B - 10	No Number		.	FUEL SYSTEM COMPONENTS (See Fig. 9)					REF
4B - 11	No Number		.	BATTERY COMPONENTS (See Fig. 14)					REF
4B - 12	285120A-006		.	GENERATOR ASSEMBLY (See Fig. 17)					REF
*	4B - 13	287747	.	WIRE HARNESS, CONT. BOX TO PWR. MOD.					1
*	4B - 14	287748	.	WIRE HARNESS, OPTIONS					1
*	4B - 15	401911-020	.	TERMINAL BLOCK (V30430 #0220081)					1
<b>* NOT ILLUSTRATED</b>									

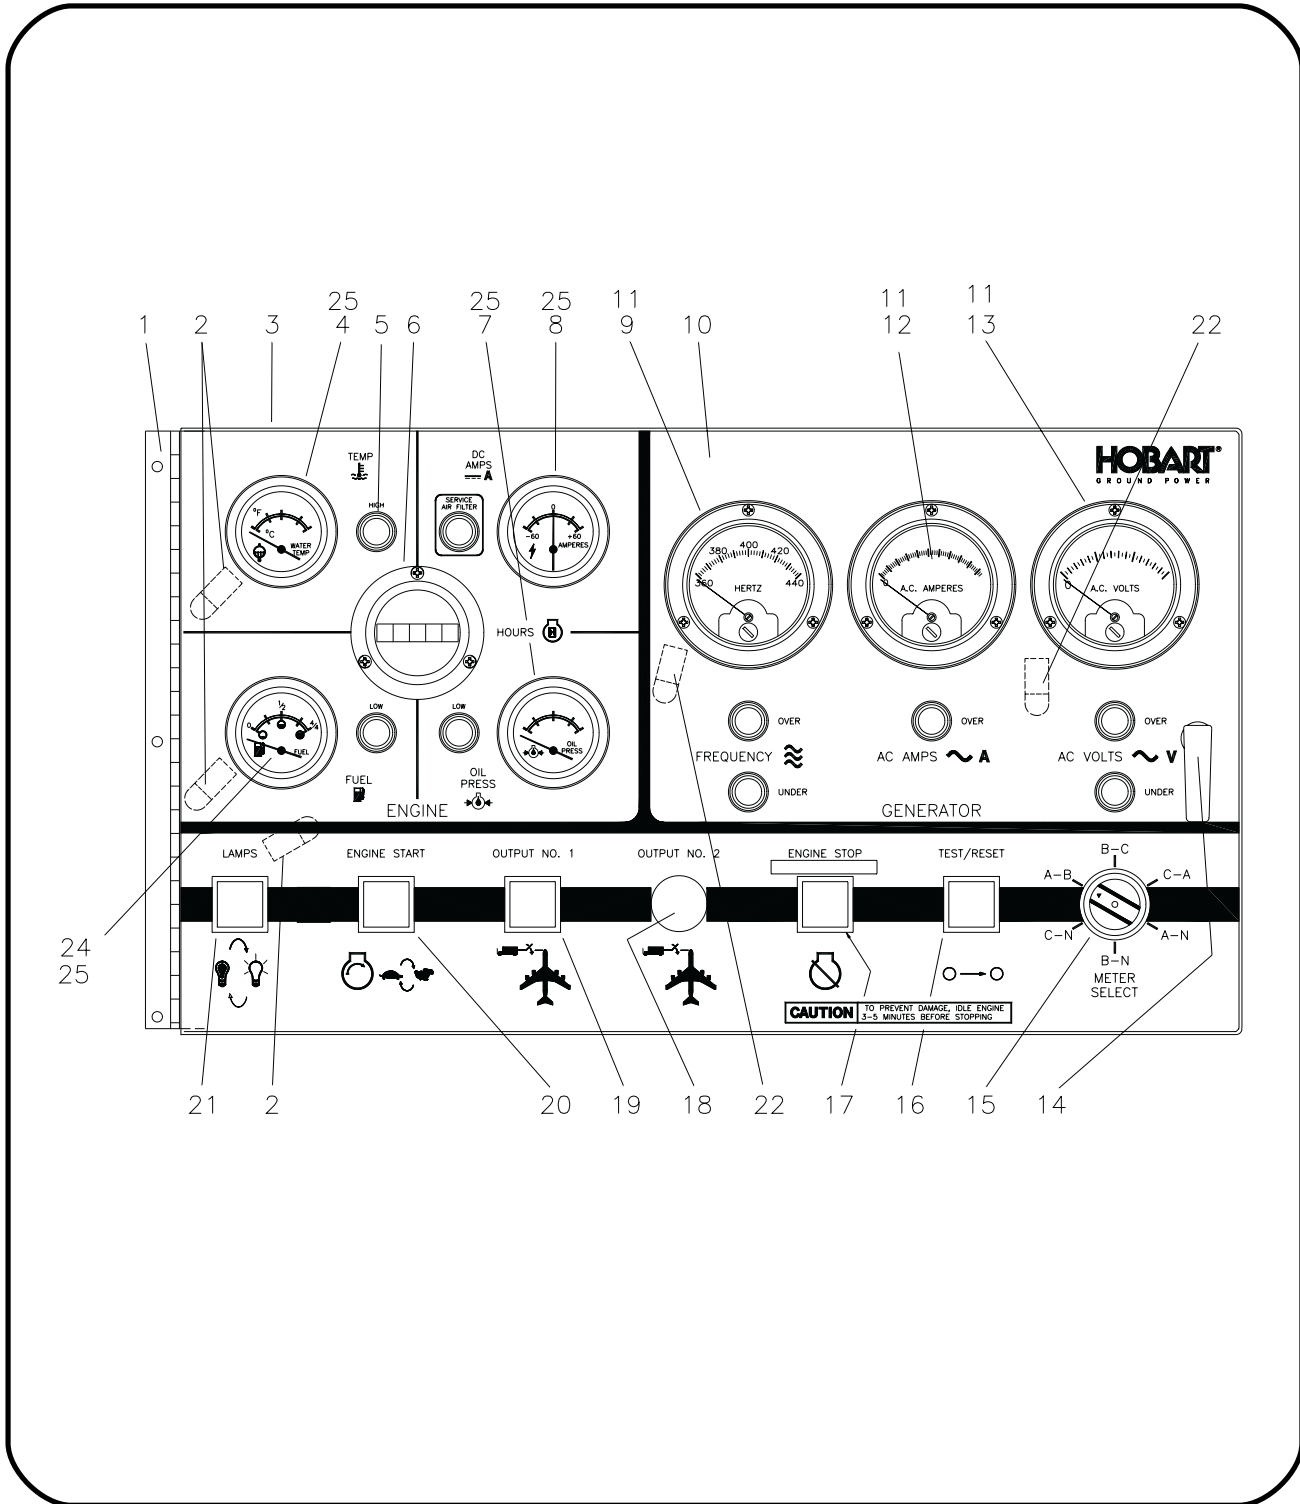


Control Box Door Assembly  
 Figure 5

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		
<b>5 -</b>	<b>287749-006</b>		<b>CONTROL BOX ASSEMBLY</b>						<b>1</b>	
5- 1	287752-006		. . CONTROL BOX DOOR ASSEMBLY						1	
5- 2	W10051-013		. . CLAMP, WIRE, 7/8" (V81074 #MPC-14)						3	
5- 3	287753		. . PANEL, DOOR, CONTROL BOX, ASSY.						1	
5- 4	287908		. . GAUGE, WATER TEMP. (V16476 #06343-01)						1	
5- 5	HF2518-002		. . LIGHT, PILOT, RED, ASSY.						9	
5- 6	W9917-018		. . METER, RUNNING TIME						1	
5- 7	78A1117-002		. . GAUGE, OIL PRESSURE (V16476 #06395-01)						1	
5- 8	78A1115-001		. . AMMETER, ENGINE (V16476 #06354-01)						1	
5- 9	283167		. . METER, FREQUENCY						1	
5-10	285080		. . LABEL, CONTROL BOX						1	
5-11	285172		. . LIGHT, STRIP						3	
5-12	287926		. . AMMETER, GENERATOR, AC (V74542 #2735/R)						1	
5-13	W8105A-008		. . VOLTMETER, AC						1	
5-14	285501		. . LATCH, SWELL (V94222 #19-14-10)						1	
5-15	79C1158		. . SWITCH, SELECTOR, METER(VE0615 #USA-900)						1	
5-16	See Figure 5A		. . SWITCH,TEST/RESET						REF	
5-17	See Figure 5A		. . SWITCH, ENGINE STOP						REF	
5-18	287038-001		. . HOLE PLUG						1	
5-19	See Figure 5A		. . SWITCH, OUTPUT NO. 1						REF	
5-20	See Figure 5A		. . SWITCH, ENGINE START						REF	
5-21	See Figure 5A		. . SWITCH, LAMPS						REF	
5-22	W10051-010		. . CLAMP, WIRE, 5/8"						2	
5-23	NOT USED									
2-24	494134-001		. . GAUGE, FUEL LEVEL						1	
2-25	284486-001		. . LIGHT, GAUGE						4	

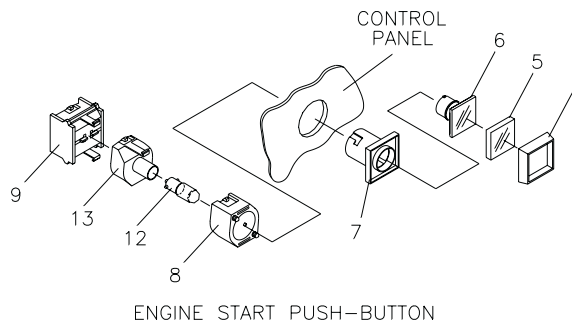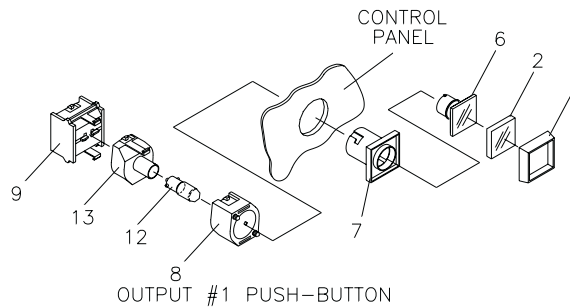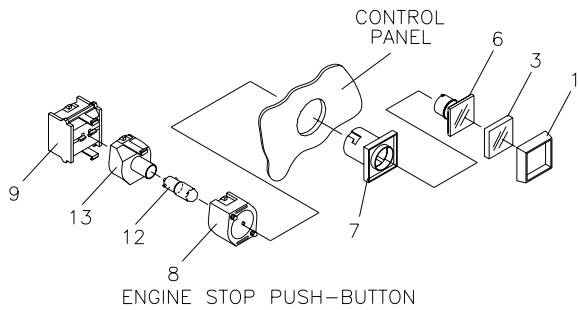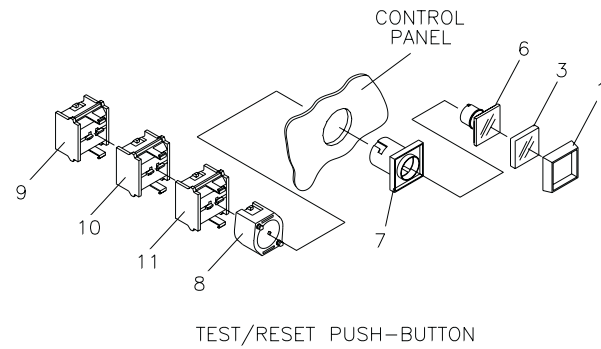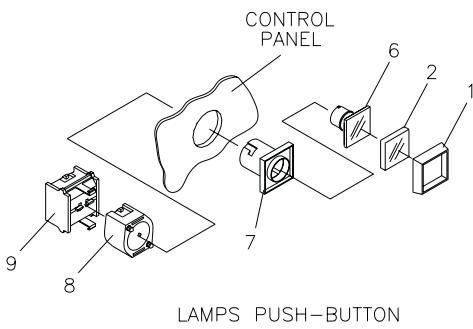


**Push-Buttons Details**  
**Figure 5A**

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6	REF	
<b>5A -</b>	<b>No Number</b>		<b>. LAMPS PUSH-BUTTON DETAILS</b>						<b>REF</b>	
5A- 1	285029-001		.. FRAME, BEZEL (V61706 #704-701.0)						1	
5A- 2	285030-002		.. LENS, YELLOW(V61706 #704-702.4)						1	
5A- 3	285030-001		.. LENS, RED(V61706 #704-702.2)						1	
5A- 4	NOT USED									
5A- 5	285030-003		.. LENS, GREEN (V61706 #704-702.5)						1	
5A- 6	285031-001		.. HOLDER, LENS (V61706 #704-709.7)						1	
5A- 7	285032-001		.. ACTUATOR, SLEEVE (V61706 #704-731.0)						1	
5A- 8	285033		.. FLANGE, MOUNTING (V61706 #704-950.5)						1	
5A- 9	284475-001		.. BLOCK, CONTACT, N.O.(V61706 #704-900.3)						1	
5A-10	284475-003		.. BLOCK, CONTACT, N.O.(V61706 #704-910.3)						1	
5A-11	284475-002		.. BLOCK, CONTACT, N.O.(V61706 #704-900.3)						1	
5A-12	400613-004		.. BULB, TYPE 1815						1	
5A-13	285034-001		.. LAMP HOLDER (V61706 #704-950.0)						1	

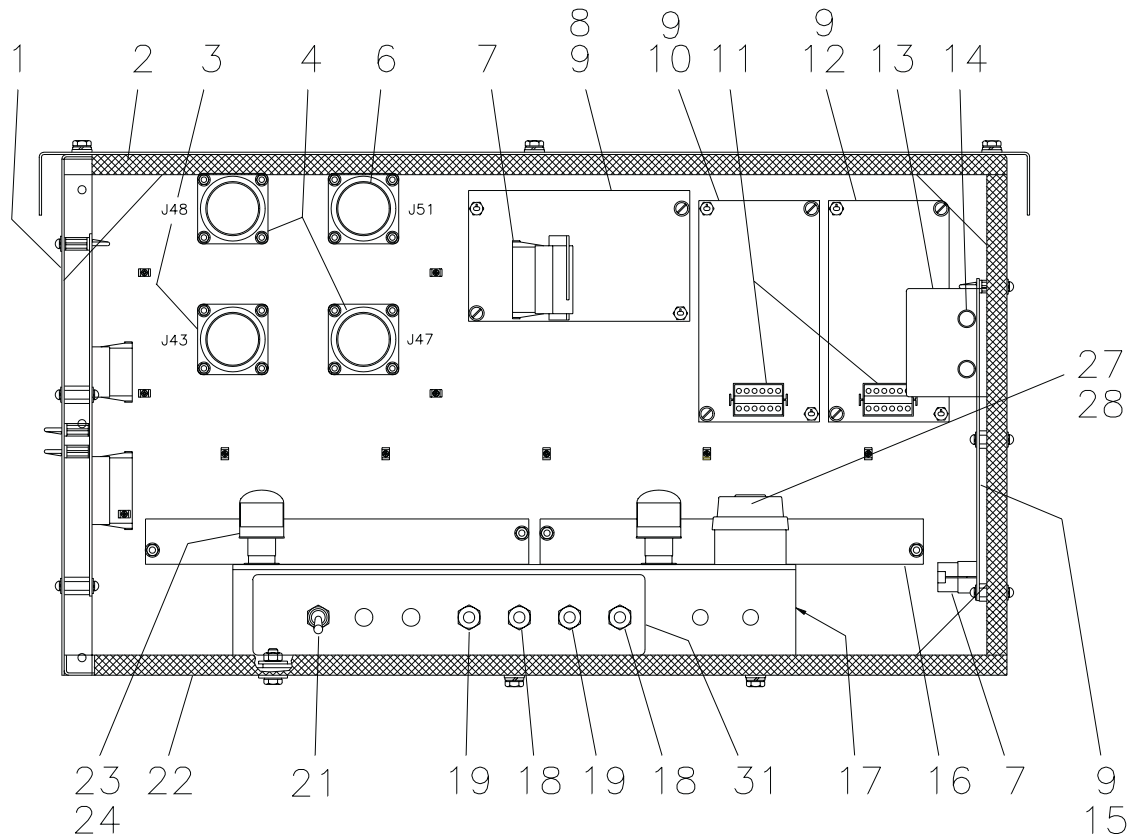


FACING FRONT OF GENERATOR SET CONTROL P.C. BOARD, MOUNTED ON INSIDE OF CONTROL BOX.

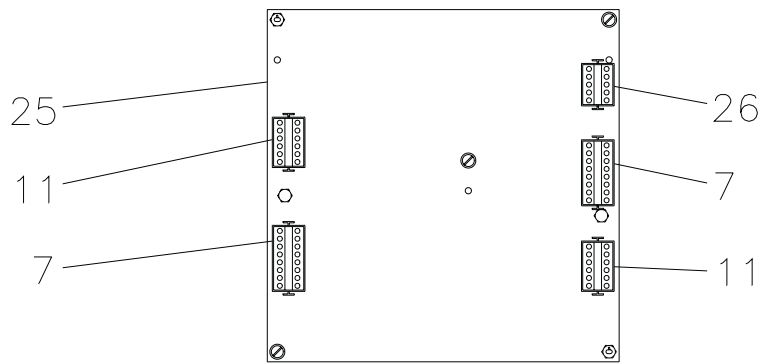


**Control Box Interior Components**  
**Figure 6**

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6	REF	
<b>6 -</b>	<b>287749-006</b>		<b>CONTROL BOX ASSEMBLY (INTERIOR COMPONENTS)</b>						<b>REF</b>	
6- 1	284970		.	WRAPPER, CONTROL BOX, ASSY					1	
6- 2	284935		.	TOP, CONTROL BOX					1	
6- 3	79B-1159-1		.	RECEPTACLE, 37-PIN					1	
6- 4	79B-1159-2		.	RECEPTACLE, 37-SOCKET					2	
* 6- 5	79A-1164		.	PLUG, KEYING					2	
6- 6	79B-1159-6		.	RECEPTACLE, 7-PIN					1	
6- 7	401564-005		.	HOUSING, CONNECTOR, 16-CIRCUIT					4	
6- 8	387736C		.	BOARD, PC, MEMORY & TIME DELAY					1	
6- 9	375426-003		.	SPACER, PC BOARD (V016T7 #8575-N-0632-0)					24	
6-10	482039C		.	BOARD, PC, OVER-UNDER FREQUENCY					1	
6-11	401564-004		.	HOUSING, CONNECTOR, 12-CIRCUIT					4	
6-12	482038A		.	BOARD, PC, OVER-UNDER VOLTAGE					1	
6-13	285627		.	LABEL, REGULATOR					1	
6-14	406807-002		.	KNOB, RED (V86797 #200085A)					2	
6-15	282800A-001		.	BOARD, PC, VOLTAGE REGULATOR, ASSY.					1	
6-16	401911-020		.	BLOCK, TERMINAL, 20-STATION (V30430 #0220081)					2	
6-17	284937		.	BRACKET, MOUNTING, SWITCHES					1	
6-18	283978-002		.	CIRCUIT BREAKER, 10A (V77342 #W23-X1A16-10)					2	
6-19	283978-001		.	CIRCUIT BREAKER, 5A (V77342 #W23-X1A16-5)					2	
6-20	NOT USED									
6-21	400292-006		.	SWITCH, TOGGLE, 4PDT					1	
6-22	40201		.	INSULATION, STRIP, NEOPRENE, 1/8 X 1/2					58"	
6-23	30GH-1262		.	SOCKET, LIGHT PANEL (V13445 #DL-21)					2	
6-24	50GHP-206		.	LAMP, PILOT LIGHT					2	
6-25	284908B		.	BOARD, PC, GENERATOR SET CONTROL, ASSY.					1	
6-26	401564-003		.	HOUSING, CONNECTOR, 10-CIRCUIT					1	
6-27	287075-001		.	RELAY, TIME DELAY, ENGINE SHUTDOWN (V66180 #405A100E1X)					1	
6-28	405699		.	BASE, RELAY (V02660 #146-103)					1	
* 6-29	489658-002		.	DIODE, ASSY.					2	
* 6-30	401923-003		.	CONNECTOR, WIRE, CLOSED-IN					2	
6-31	285186		.	LABEL, SWITCH BRACKET					1	
* 6-32	181158		.	TUBING, Z-FLEX, 1"					4"	
* 6-33	400826-001		.	TIE, ANCHOR, CABLE, PLASTIC					23	
* 6-34	400828-001		.	TIE, CABLE, PLASTIC					50	
* 6-35	287766		.	HARNESS, CONTROL BOX ASSEMBLY					1	
* 6-36	286611		.	LABEL, BLANK					1	

\* NOT ILLUSTRATED

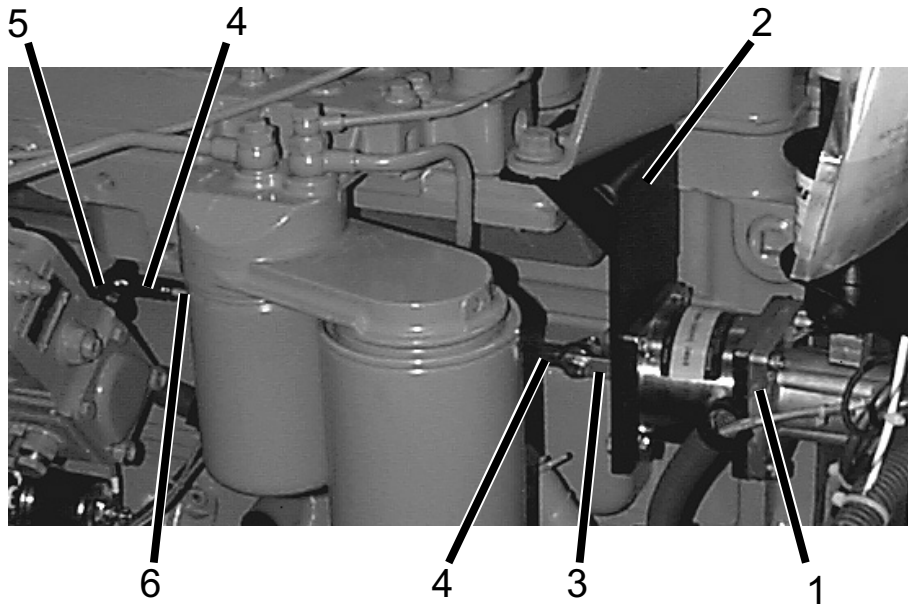

GOVERNOR ACTUATOR

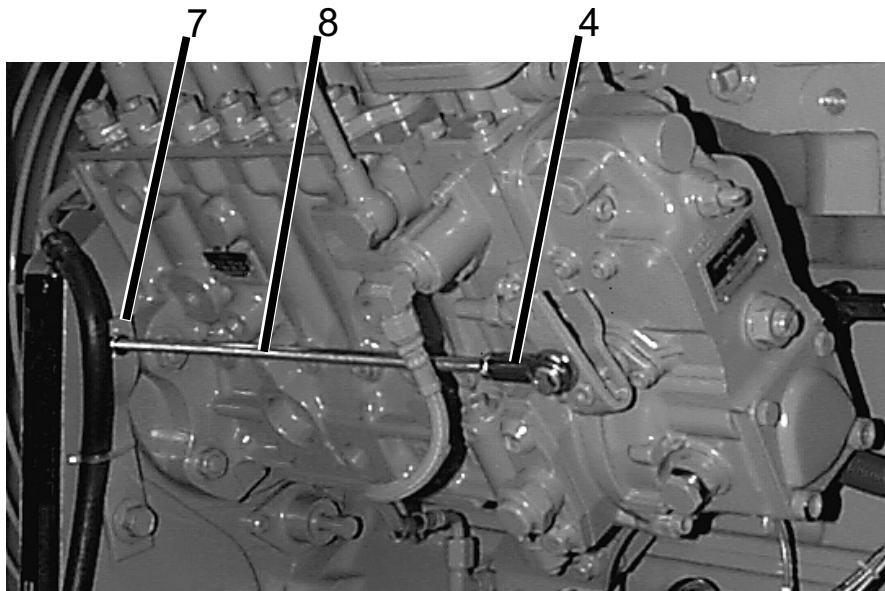


THROTTLE HOLDBACK


Governor Kit  
Figure 7



FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		
7-	287532-001		KIT, GOVERNOR (Also See Fig. 8)							1
7 - 1	281772		. ELECTRIC GOVERNOR ACTUATOR (V2B928 #DYNC 10502-000-0-12)							1
7 - 2	284223		. BRACKET, GOVERNOR ACT. MTG.							1
7 - 3	281775		. CLEVIS, ACTUATOR ROD (V2B928 #DYNK 218-1)							1
7 - 4	281776		. JOINT, BALL, GOVERNOR LINKAGE (V2B928 #DYNZ 7-1)							3
7 - 5	287649		. LEVER, FUEL PUMP STOP							1
7 - 6	287717-003		. THROTTLE LINKAGE ARM							1
7 - 7	285436		. BRACKET, STOP ROD							1
7 - 8	287717-005		. ROD, STOP							1

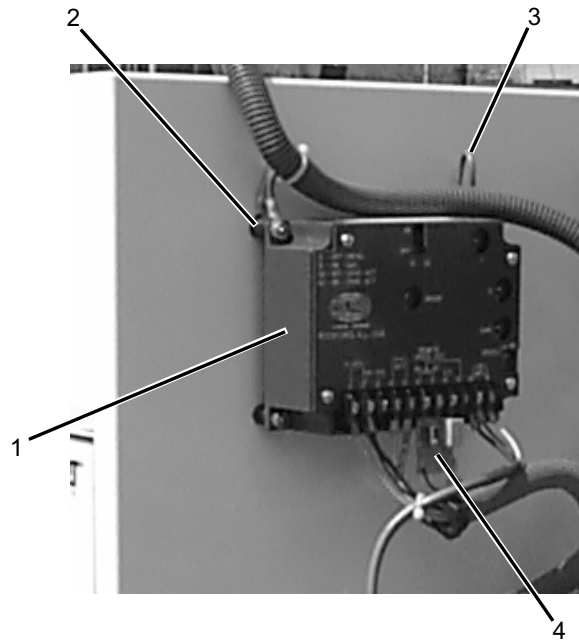


Governor Controller  
(Left Side of Unit)

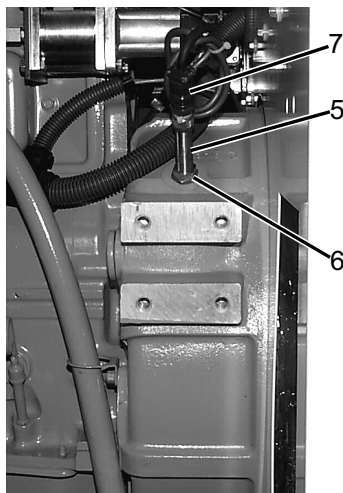

Magnetic Pickup  
(Right side of Engine)


Governor Kit (Continued)  
Figure 8

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		
<b>8-</b>	<b>287532-001</b>		<b>KIT, GOVERNOR (CONTINUED)</b>						<b>REF</b>	
8 - 1	283990-001		.	CONTROLLER, GOV. ELECTRIC (V2B928 #DYN1-10756-000-0-12)						1
8 - 2	84A1075		.	MOUNT, RUBBER						4
8 - 3	482989		.	STRAP, CONTROLLER						2
8 - 4	181891-003		.	BOARD, PC SPEED ADJUST						1
8 - 5	285062-001		.	SENSOR, MAGNETIC PICKUP (V2B928 #3040AN25)						1
8 - 6	281751-003		.	ADAPTER, MAGNETIC PICKUP						1
8 - 7	285063A-003		.	CABLE ASSEMBLY						1

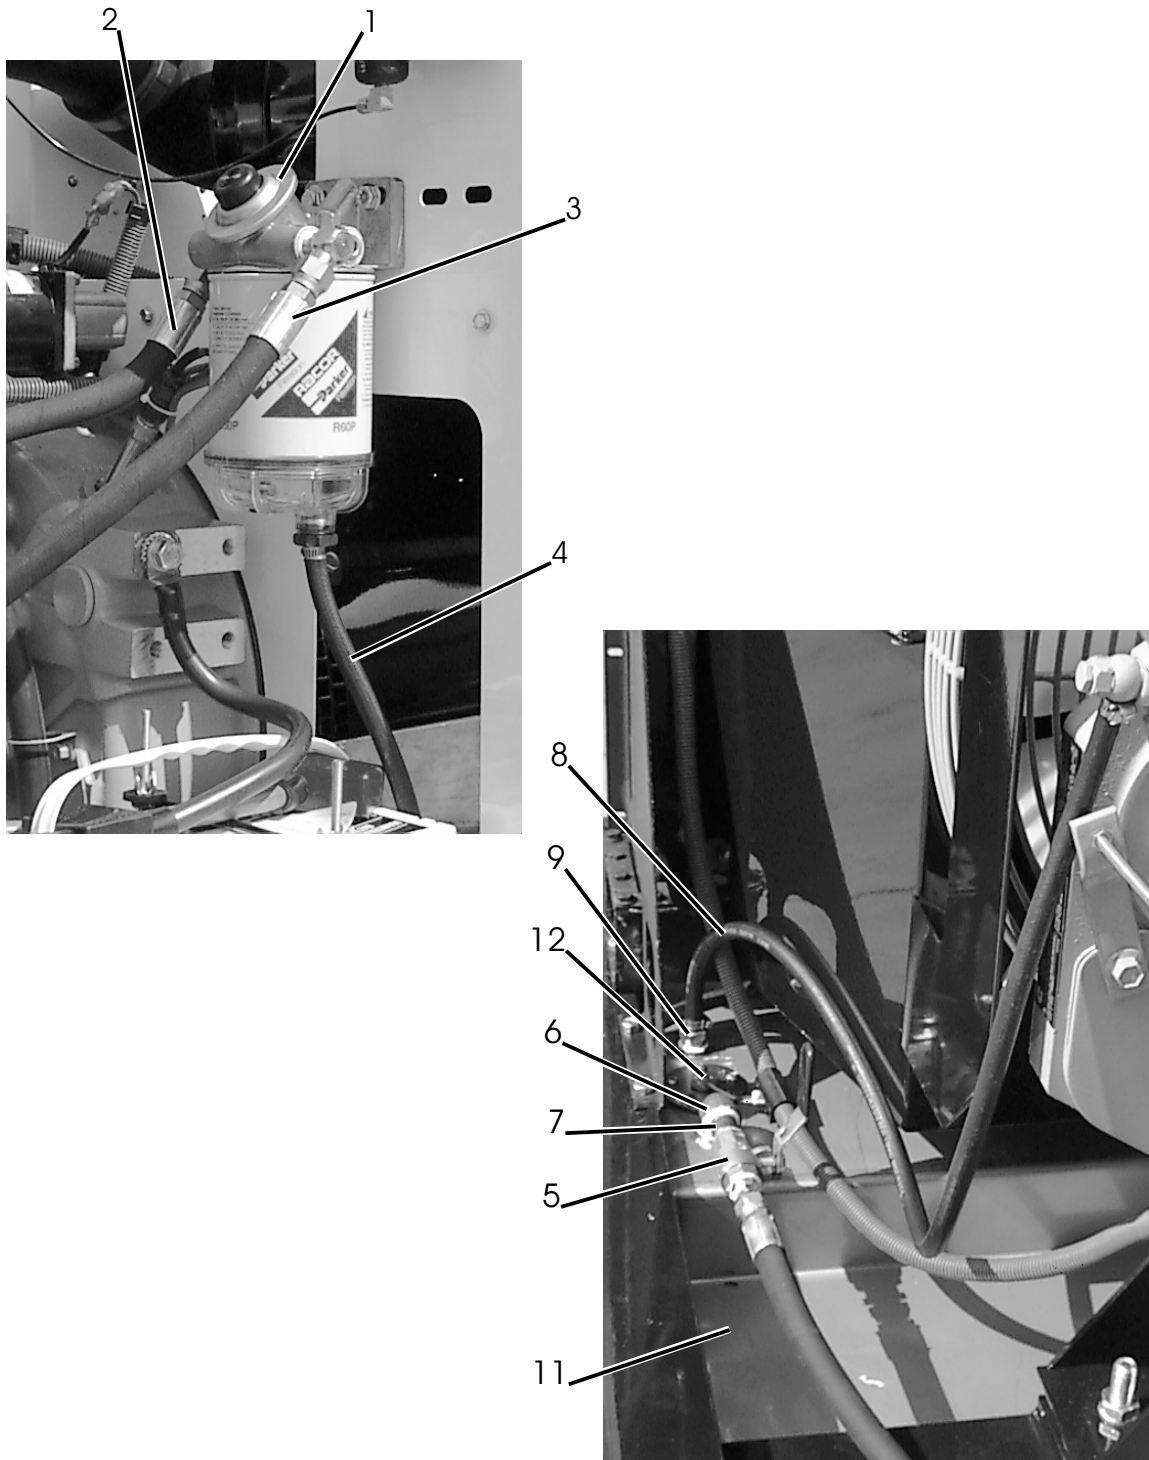


Fuel System Components  
Figure 9

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6	REF	REF
<b>9- No Number</b>			<b>FUEL SYSTEM COMPONENTS</b>						<b>REF</b>	
Note: All fuel lines (items 2, and 3) are supplied with fittings on each end as one complete assembly.										
9 - 1	287639		.	FILTER, FUEL/WATER SEPARATOR (V55752 # 460R30)					1	
9 - 2	287641		.	LINE, FILTER TO PUMP					1	
9 - 3	287804		.	FUEL LINE, TANK TO FILTER					1	
9 - 4	056544		.	HOSE, LOW PRESSURE					21"	
*	W10869-014		.	HOSE CLAMP					1	
9 - 5	400819-003		.	VALVE, BALL, 1/2" (V13902 #F-125R)					1	
9 - 6	12CW2077-003		.	ELBOW, 1/2 N PT, ST, 90DEG.					1	
9 - 7	W10760-003		.	NIPPLE, PIPE, 1" X 1/2					1	
9 - 8	056544		.	LINE, FUEL RETURN					36"	
*	W10869-014		.	HOSE CLAMP					2	
9 - 9	286851		.	FITTING, HOSE, BARBED, BRASS					1	
9 - 10	NOT USED									
9 - 11	287781		.	FUEL TANK, 65 GAL., STAINLESS STEEL					1	
9 - 12	486719-005		.	FUEL SENDER					1	
*	9 - 13	286897-004	.	PRIMARY FUEL FILTER					REF	
*	9 - 14	286897-005	.	SECONDARY FUEL FILTER					REF	
<b>* NOT ILLUSTRATED</b>										

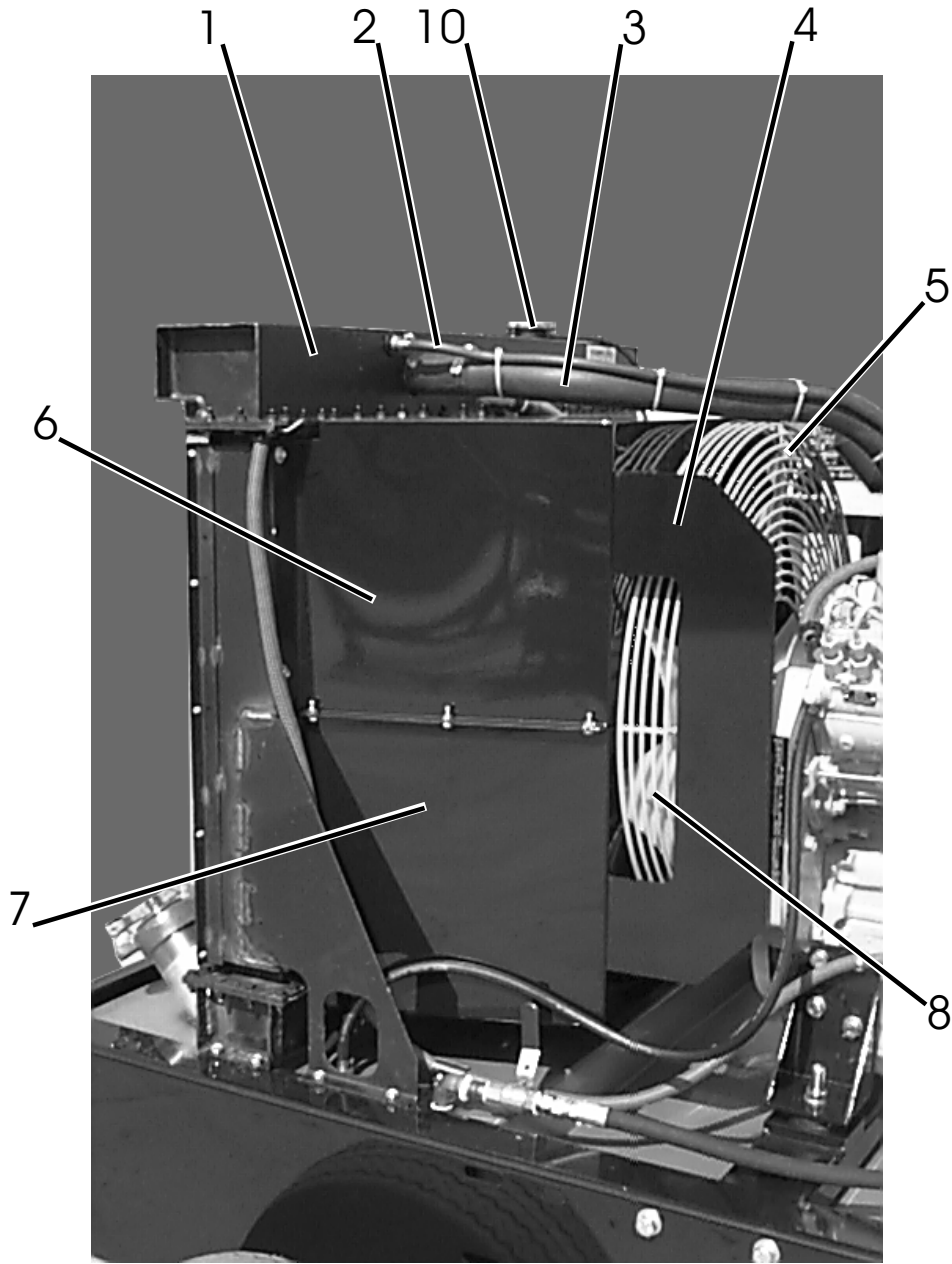

**Cooling System Components**  
**Figure 10**

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6	REF	ASSY
<b>10-</b>	<b>No Number</b>		<b>COOLING SYSTEM COMPONENTS</b>						<b>REF</b>	
10 - 1	287780		.	.	.	.	.	.	.	1
10 - 2	No Number		.	.	.	.	.	.	.	REF
	W-7814-000		.	.	.	.	.	.	.	1
	W-7814-011		.	.	.	.	.	.	.	1
	402927-003		.	.	.	.	.	.	.	2
	56534		.	.	.	.	.	.	.	30"
	W-10869-014		.	.	.	.	.	.	.	2
10 - 3	287659		.	.	.	.	.	.	.	1
*	W10869-003		.	.	.	.	.	.	.	2
*	287660		.	.	.	.	.	.	.	1
*	W10869-005		.	.	.	.	.	.	.	2
10 - 4	287453		.	.	.	.	.	.	.	1
*	287656		.	.	.	.	.	.	.	1
10 - 5	287612		.	.	.	.	.	.	.	1
10 - 6	287619		.	.	.	.	.	.	.	1
10 - 7	287620		.	.	.	.	.	.	.	1
10 - 8	286654		.	.	.	.	.	.	.	1
* 10 - 9	283873		.	.	.	.	.	.	.	2
*	56535		.	.	.	.	.	.	.	38"
*	W-10869-014		.	.	.	.	.	.	.	1
*	80A1117		.	.	.	.	.	.	.	1
*	W10051-007		.	.	.	.	.	.	.	2
* 10 - 10	287333		.	.	.	.	.	.	.	1
* 10 - 11	287805		.	.	.	.	.	.	.	1
* 10 - 12	287806		.	.	.	.	.	.	.	1
<b>* NOT ILLUSTRATED</b>										

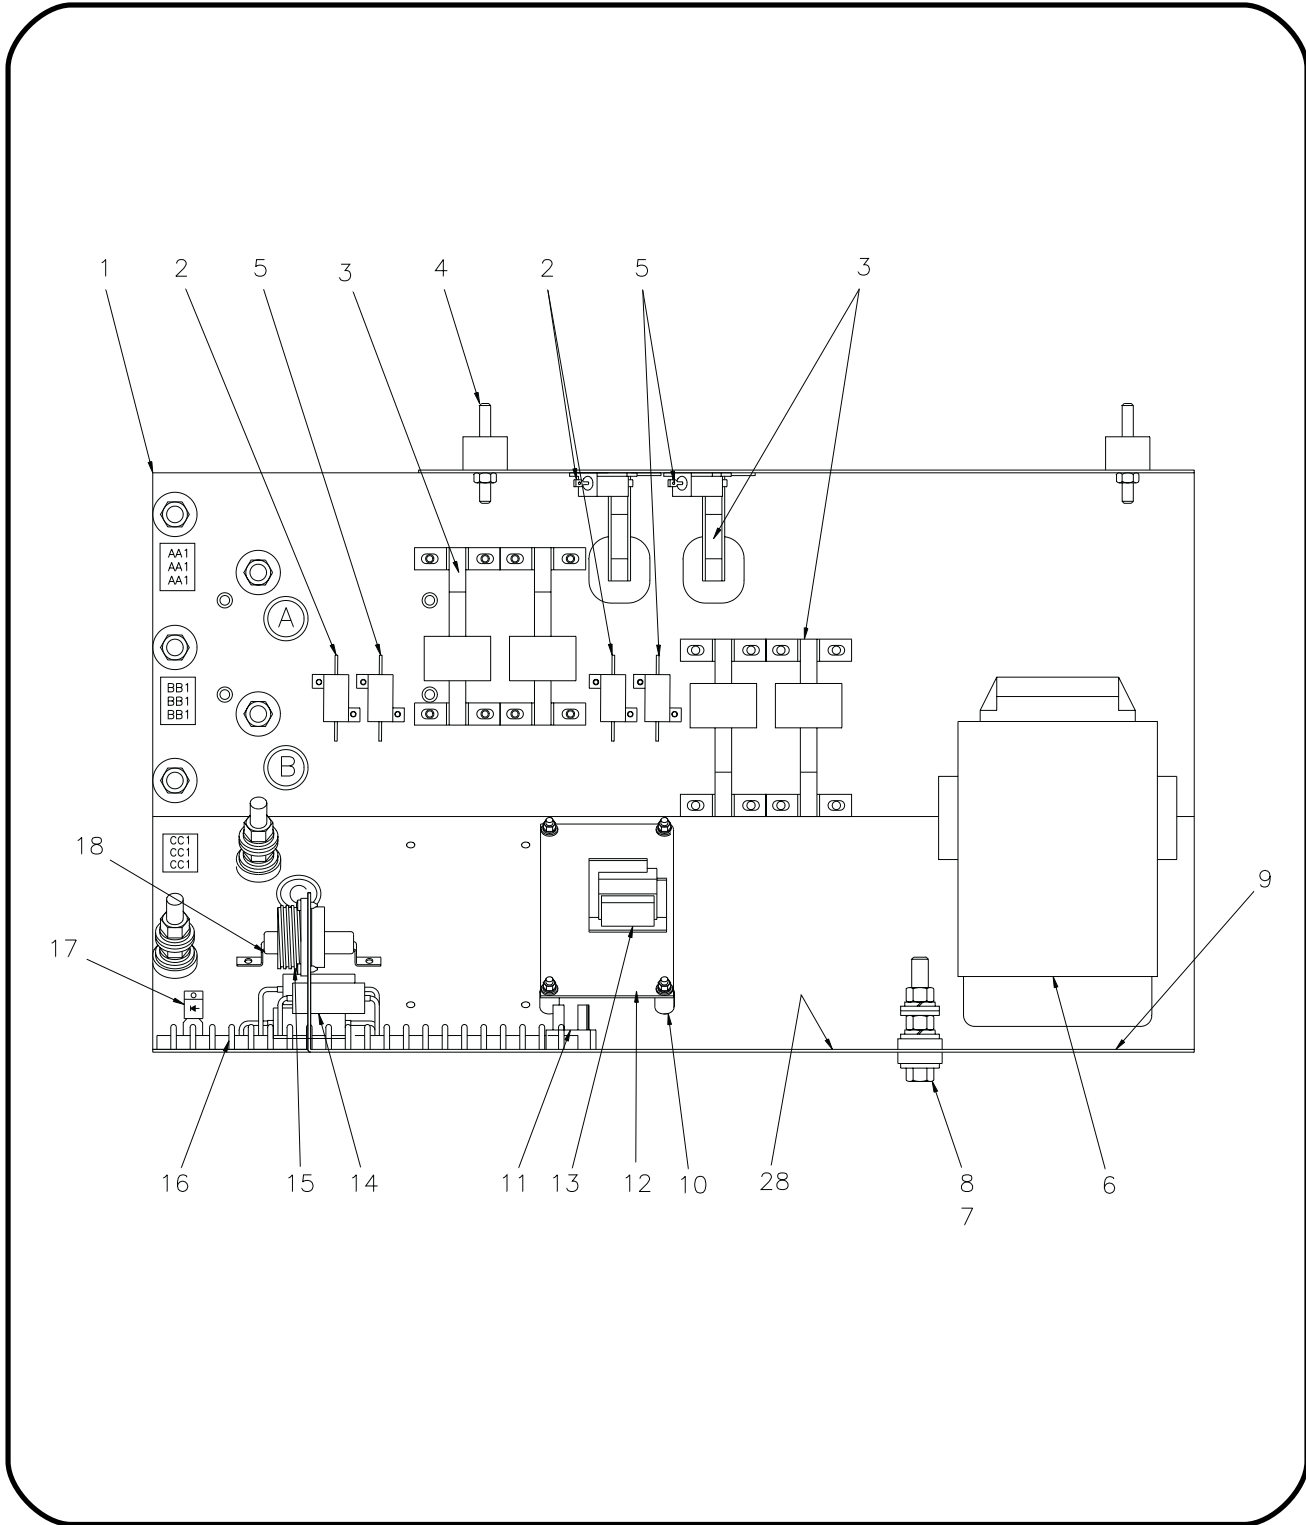


**Power Module Assembly  
(Single Output)  
Figure 11**




FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		
11 -	287933		<b>OUTPUT MODULE PANEL ASSEMBLY</b>						<b>1</b>	
11 - 1	283127		. PANEL, OUTPUT MODULE						1	
11 - 2	404402-008		. RESISTOR, 50 OHM, 20 WATT (V91637 #RH-25, 50 OHM)						3	
11 - 3	1CZ148		. TRANSFORMER, CURRENT LINE DROP & OVERLOAD (V50508 #90-6170)						6	
11 - 4	HF2752		. MOUNT, SHOCK, RUBBER (V16238 #J-4624-105)						2	
11 - 5	404402-002		. RESISTOR, 25 OHM, 20 WATT (V91637 #RH-25, 25OHM)						3	
11 - 6	282130-001		. CONTACTOR, LINE, 3-POLE (V11641 #421F109137R)						1	
11 - 7	A25		. WASHER, INSULATING						16	
11 - 8	AW626		. BUSHING, INSULATING						8	
11 - 9	287721-001		. LABEL, OUTPUT #1						1	
11 - 10	84A1075		. MOUNT, SHOCK, RUBBER (V5P059 #51083)						4	
11 - 11	404065-002		. RECTIFIER, SILICON (V14552 #MB354CA)						1	
11 - 12	387738A		. BOARD, PC, OVERLOAD, ASSEMBLY						1	
11 - 13	401564-004		. HOUSING, SOCKET (V00779 #1-480287-0)						1	
11 - 14	180593-002		. CAPACITOR, 0.1 MFD, 500 VAC, ASSEMBLY						3	
11 - 15	287932		. RECEPTACLE ASSEMBLY, HARNESS						1	
11 - 16	401911-020		. BLOCK, TERMINAL (V30430 #0220081)						1	
11 - 17	282089-010		. DIODE, FLYBACK						1	
11 - 18	W9746-003		. RESISTOR, 100-OHM, 25-W (V91637 #HL-25-062-100-5%)						1	
* 11 - 19	HF2752		. MOUNT, RUBBER (V5P059 #51153)						2	

\* NOT ILLUSTRATED

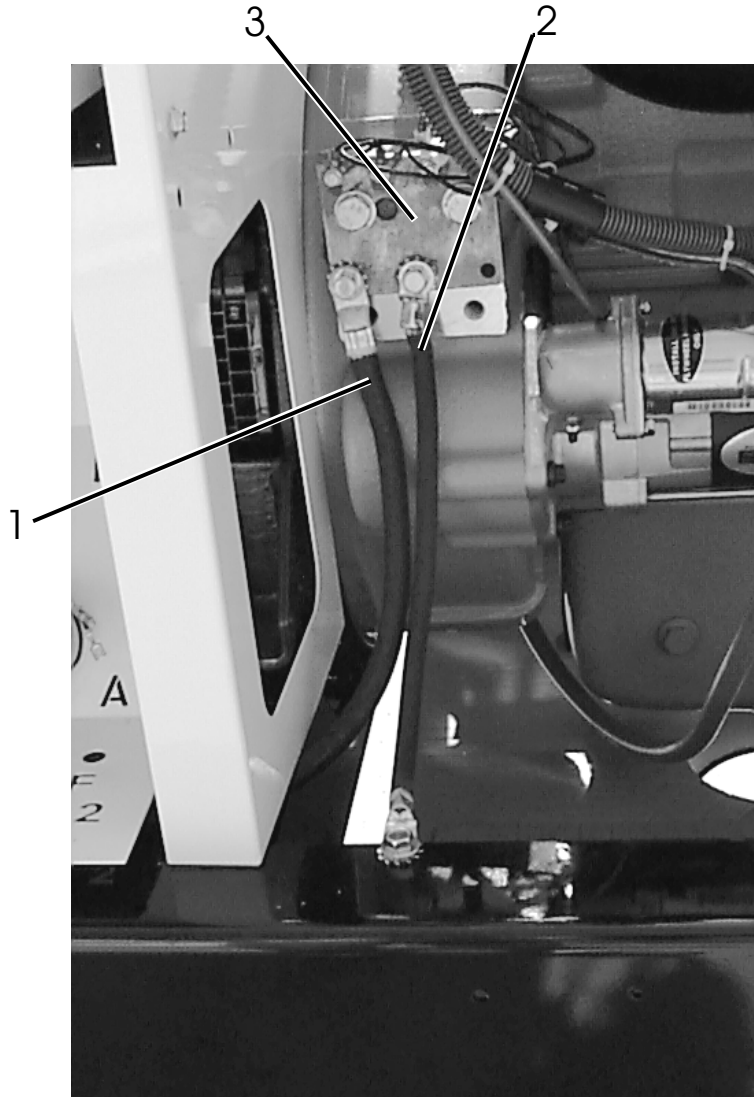


Grounding Plate  
and Cables  
Figure 12


FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		
<b>12 -</b>	<b>No Number</b>		<b>GROUND PLATE COMPONENTS</b>						<b>REF</b>	
12 - 1	W9360-289		.	CABLE, #111, POWER MOD. TO GROUND					1	
12 - 2	W9407-446		.	CABLE, ENGINE TO GROUND					1	
12 - 3	287735		.	PLATE, GROUND					1	

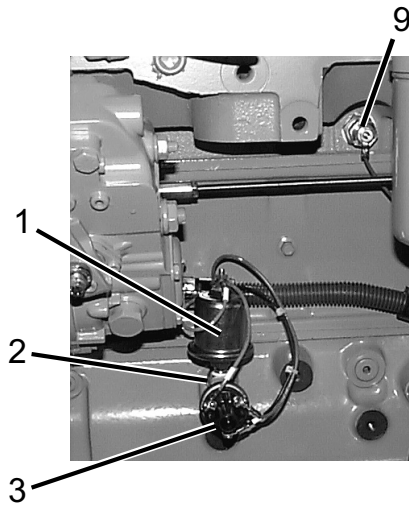

Right Side of Engine

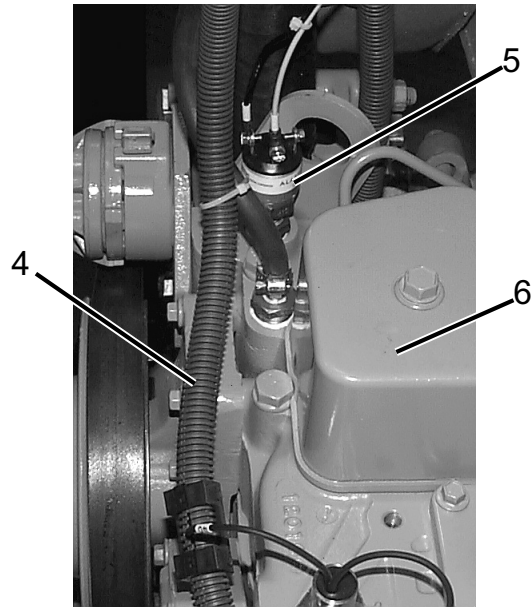


Top Front of Engine

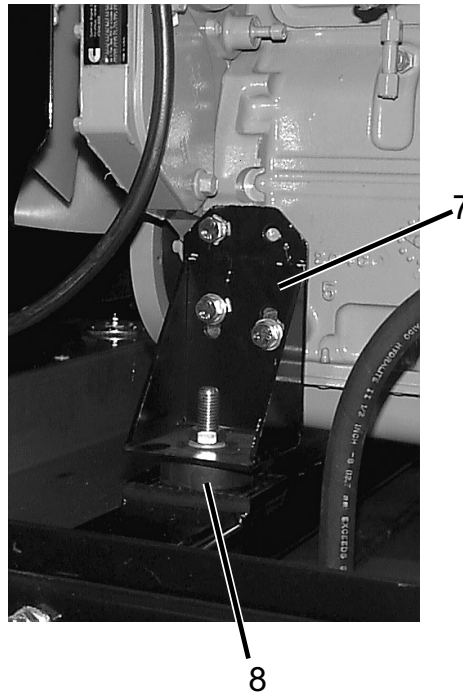


Engine Components  
Figure 13

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		
<b>13 -</b>	<b>No Number</b>		<b>ENGINE COMPONENTS</b>						<b>REF</b>	
13 - 1	78B1118-002		.	OIL PRESSURE SENDER (V16476 #16476)					1	
13 - 2	W10910-0		.	TEE FITTING					1	
*	287419		.	ADAPTER, M10 X 1/8"					1	
*	W10750-001		.	NIPPLE, PIPE, 1/8"					1	
13 - 3	403809-001		.	SWITCH, OIL PRESSURE (V75418 #1042-08210-10)					1	
13 - 4	287708		.	ENGINE HARNESS					1	
13 - 5	403782-002		.	SWITCH, SHUT DOWN					1	
*	W7814-004		.	ADAPTER, 3/8" X 1/2"					1	
13 - 6	287568		.	ENGINE, CUMMINS					1	
*	287438		.	VALVE, OIL DRAIN (V1F4R5 #F104N)					1	
13 - 7	282852		.	MOUNT, ENGINE					2	
13 - 8	480603-002		.	SHOCK MOUNT (GREEN)					2	
*	480628		.	WASHER, SHOCK MOUNT					2	
13 - 9	287909		.	SENDER, WATER TEMP. (V16476 #02019)					1	
*	W7814-004		.	ADAPTER, 3/8" X 1/2"					1	
* NOT ILLUSTRATED										

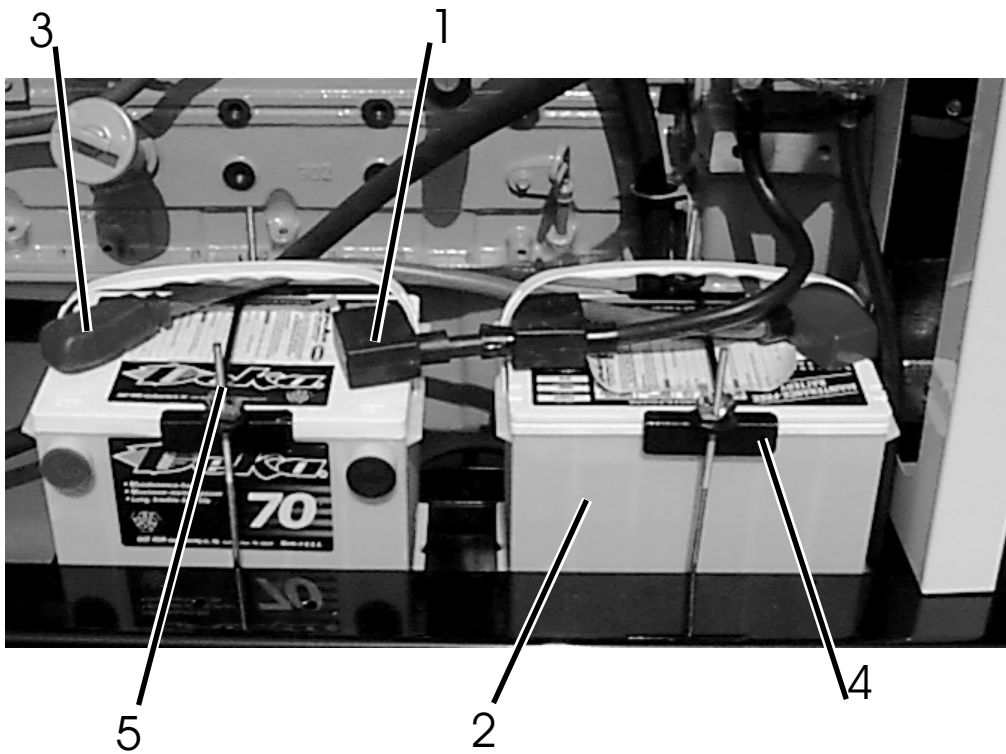

Battery Components  
Figure 14


FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		
<b>14 -</b>	<b>No Number</b>		<b>BATTERY COMPONENTS</b>						<b>REF</b>	
14 - 1	287797		.	NEGATIVE BATTERY CABLE ASSY.						1
14 - 2	281881-001		.	BATTERY, 12V (V25710 #724DT)						2
14 - 3	287740		.	POSITIVE BATTERY CABLE						1
14 - 4	287796		.	BATTERY HOLD DOWN (V25710 #BHCB)						2
14 - 5	494295		.	BATTERY SUPPORT ROD						2

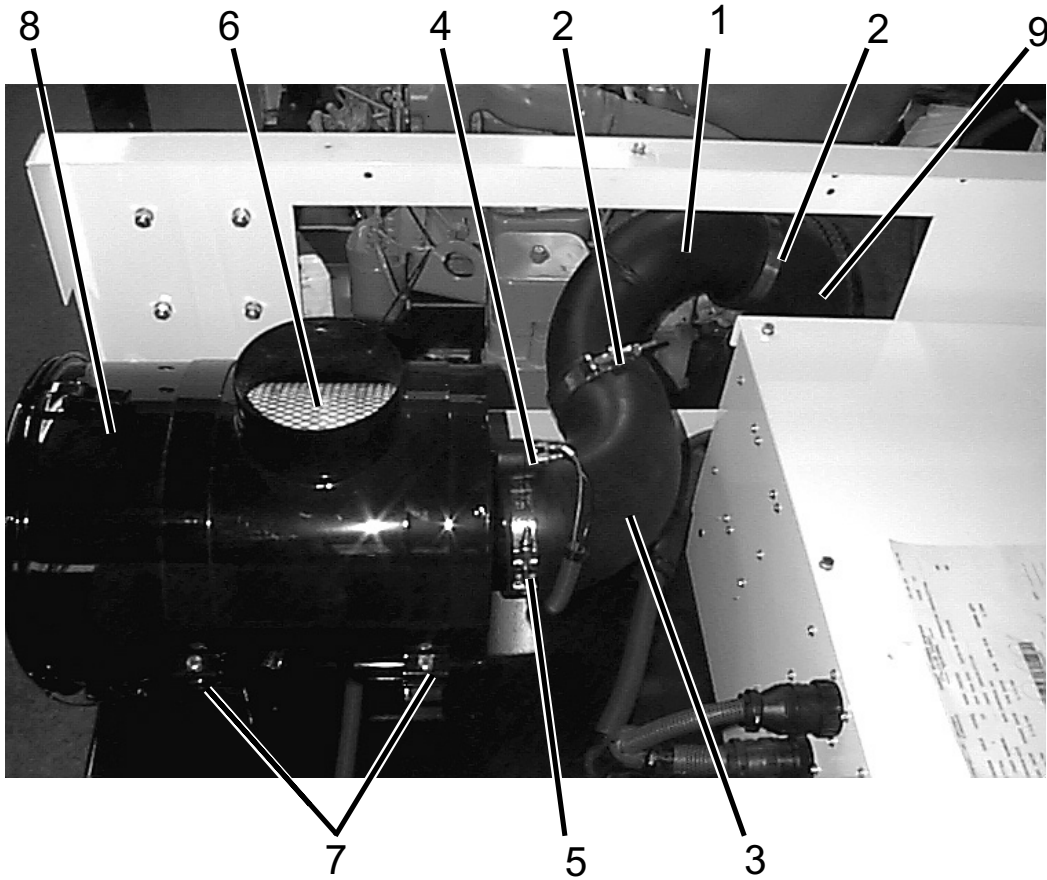

**Air Cleaner Components**  
(Viewed from the top front of unit)  
Figure 15




FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6	REF	ASSY
<b>15 -</b>	<b>No Number</b>		<b>AIR CLEANER COMPONENTS</b>						<b>REF</b>	
15 - 1	287531		.	PIPE, AIR INTAKE ASSEMBLY					1	
15 - 2	280732-006		.	CLAMP, T-BOLT					5	
15 - 3	284925		.	REDUCER, RUBBER, 90° ELBOW					1	
15 - 4	282918		.	ELECTRIC RESTRICTION INDICATOR (V18265 #REX77-0062)					1	
15 - 5	280732-007		.	CLAMP, T-BOLT					1	
15 - 6	287548		.	AIR CLEANER REPLACEMENT (V18265 #P18-1028)				REF		
15 - 7	284923		.	MOUNT, AIR CLEANER BAND (V18265 #AAH00-0349)					2	
15 - 8	286061		.	CLEANER, AIR (V18265 #EBB12-0271)					1	
15 - 9	287371		.	ELBOW, 4" I.D.					2	
* 15 -10	284461		.	CONNECTOR, SHORT PIPE					1	
<b>* NOT ILLUSTRATED</b>										

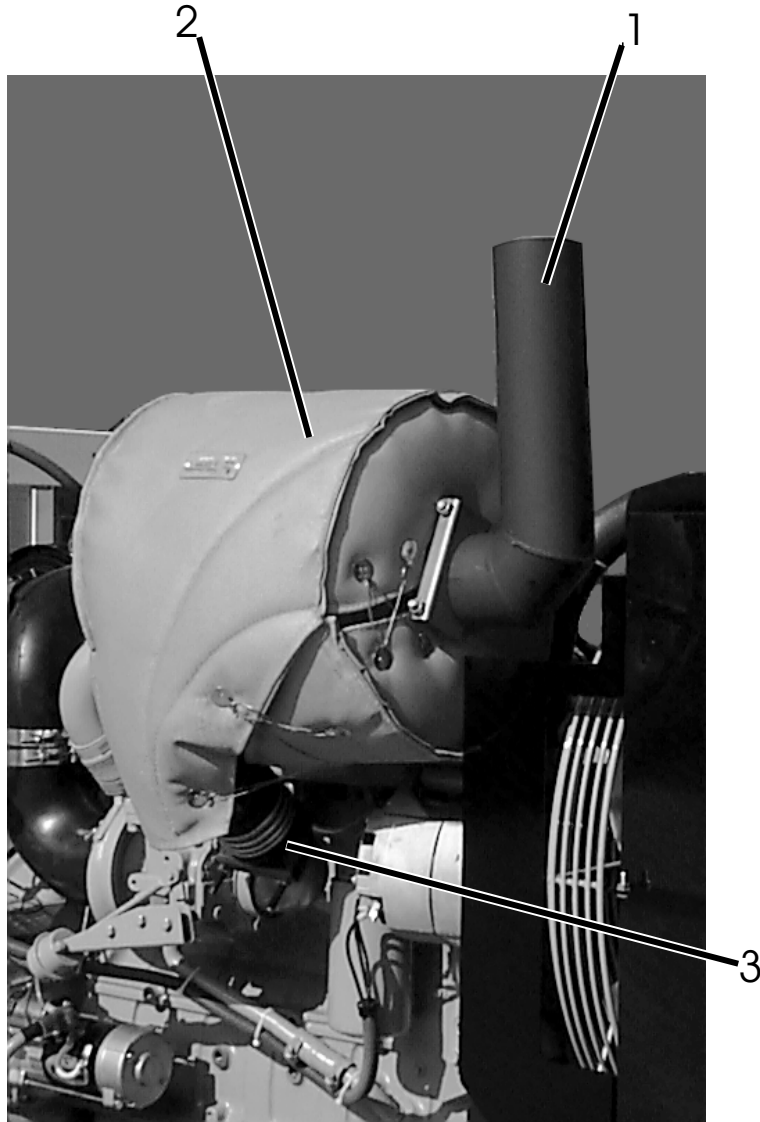


Muffler and Exhaust Components  
Figure 16

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		
<b>16 -</b>	<b>No Number</b>		<b>MUFFLER &amp; EXHAUST COMPONENTS</b>						<b>REF</b>	
16 - 1	287596		.	MUFFLER,	EXHAUST					1
16 - 2	287597		.	MUFFLER WRAPPER						1
16 - 3	287624		.	PIPE, EXHAUST,	TURBO TO SILENCER					1
*	404154-013		.	CLAMP, PIPE						2
*	404154-015		.	CLAMP, PIPE						1
* NOT ILLUSTRATED										

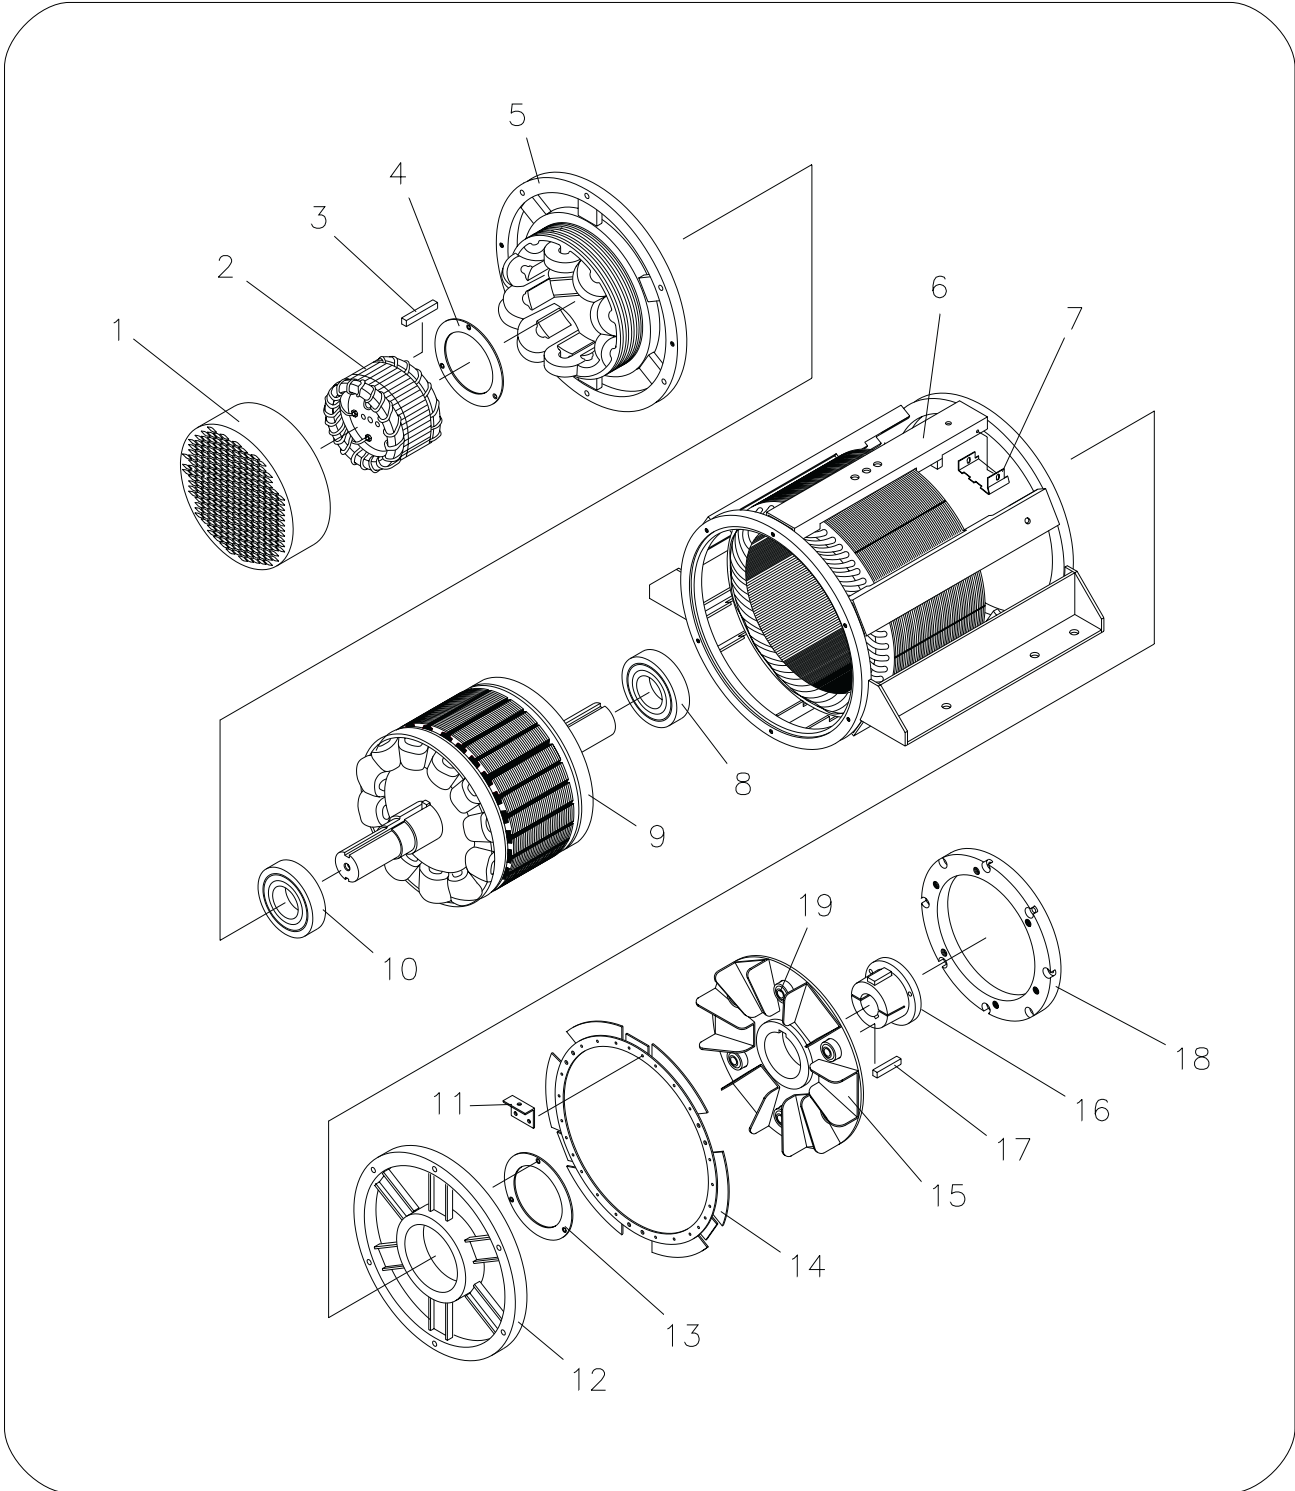


**Generator Assembly  
Figure 17**

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY
			1	2	3	4	5	6	
17 -	285120A-006		GENERATOR, 2400 RPM, 90kVA, DUAL BEARING						1
	286092		GENERATOR, 90KVA, (REPLACEMENT ONLY)						REF
17- 1	281698		.	COVER, EXCITER					1
17- 2	282132		.	EXCITER ARMATURE ASSEMBLY					1
17- 3	180696-002		.	KEY, EXCITER					1
17- 4	282128		.	RETAINER, BEARING					1
17- 5	285121		.	EXCITER HOUSING					1
17- 6	287724		.	HOUSING AND STATOR ASSEMBLY					1
17- 7	283620		.	AIR DEFLECTOR					6
17- 8	W10072-068		.	BEARING, GENERATOR					1
17- 9	281690A-006		.	ARMATURE ASSEMBLY					1
17- 10	W10072-068		.	BEARING, GENERATOR					1
17- 11	283560		.	BRACKET, SHROUD MTG.					3
17- 12	287729		.	FRONT BEARING SUPPORT					1
17- 13	282128		.	RETAINER, BEARING					1
17- 14	283546		.	SHROUD, FAN, ASSEMBLY					1
17- 15	281701		.	KIT, FLEX COUPLING					1
17- 16	85C1004-001		.	. BUSHING, SPLIT TAPER (PART OF ITEM 15)					1
17- 17	85B1039		.	KEY, BUSHING					1
17- 18	386612		.	FLEX COUPLING RING SPACER					1
17- 19	483756		.	KIT, BUSHING REPLACEMENT (6 BUSHINGS)					REF
* 17- 20	281699		.	COVER, GENERATOR					1
* 17- 21	480603-001		.	GENERATOR SHOCK MOUNT					4
* 17- 22	480628		.	WASHER, SHOCK MOUNT					4
* NOT ILLUSTRATED									

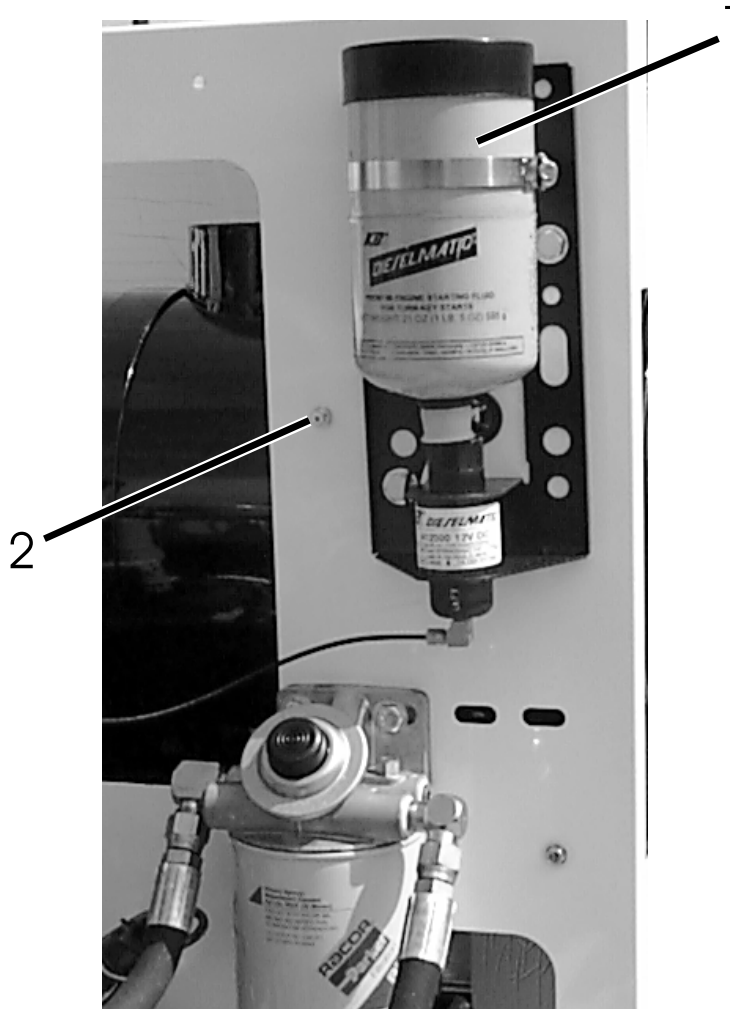

Quick Start Components  
Figure 18

FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		REF
18 -	No Number		COLD WEATHER START COMPONENTS						A,B,C,D	REF
18 - 1	408506		.	COLD WEATHER START KIT						1
18 - 2	409527-003		.	CIRCUIT BREAKER, 15A						1
* NOT ILLUSTRATED										

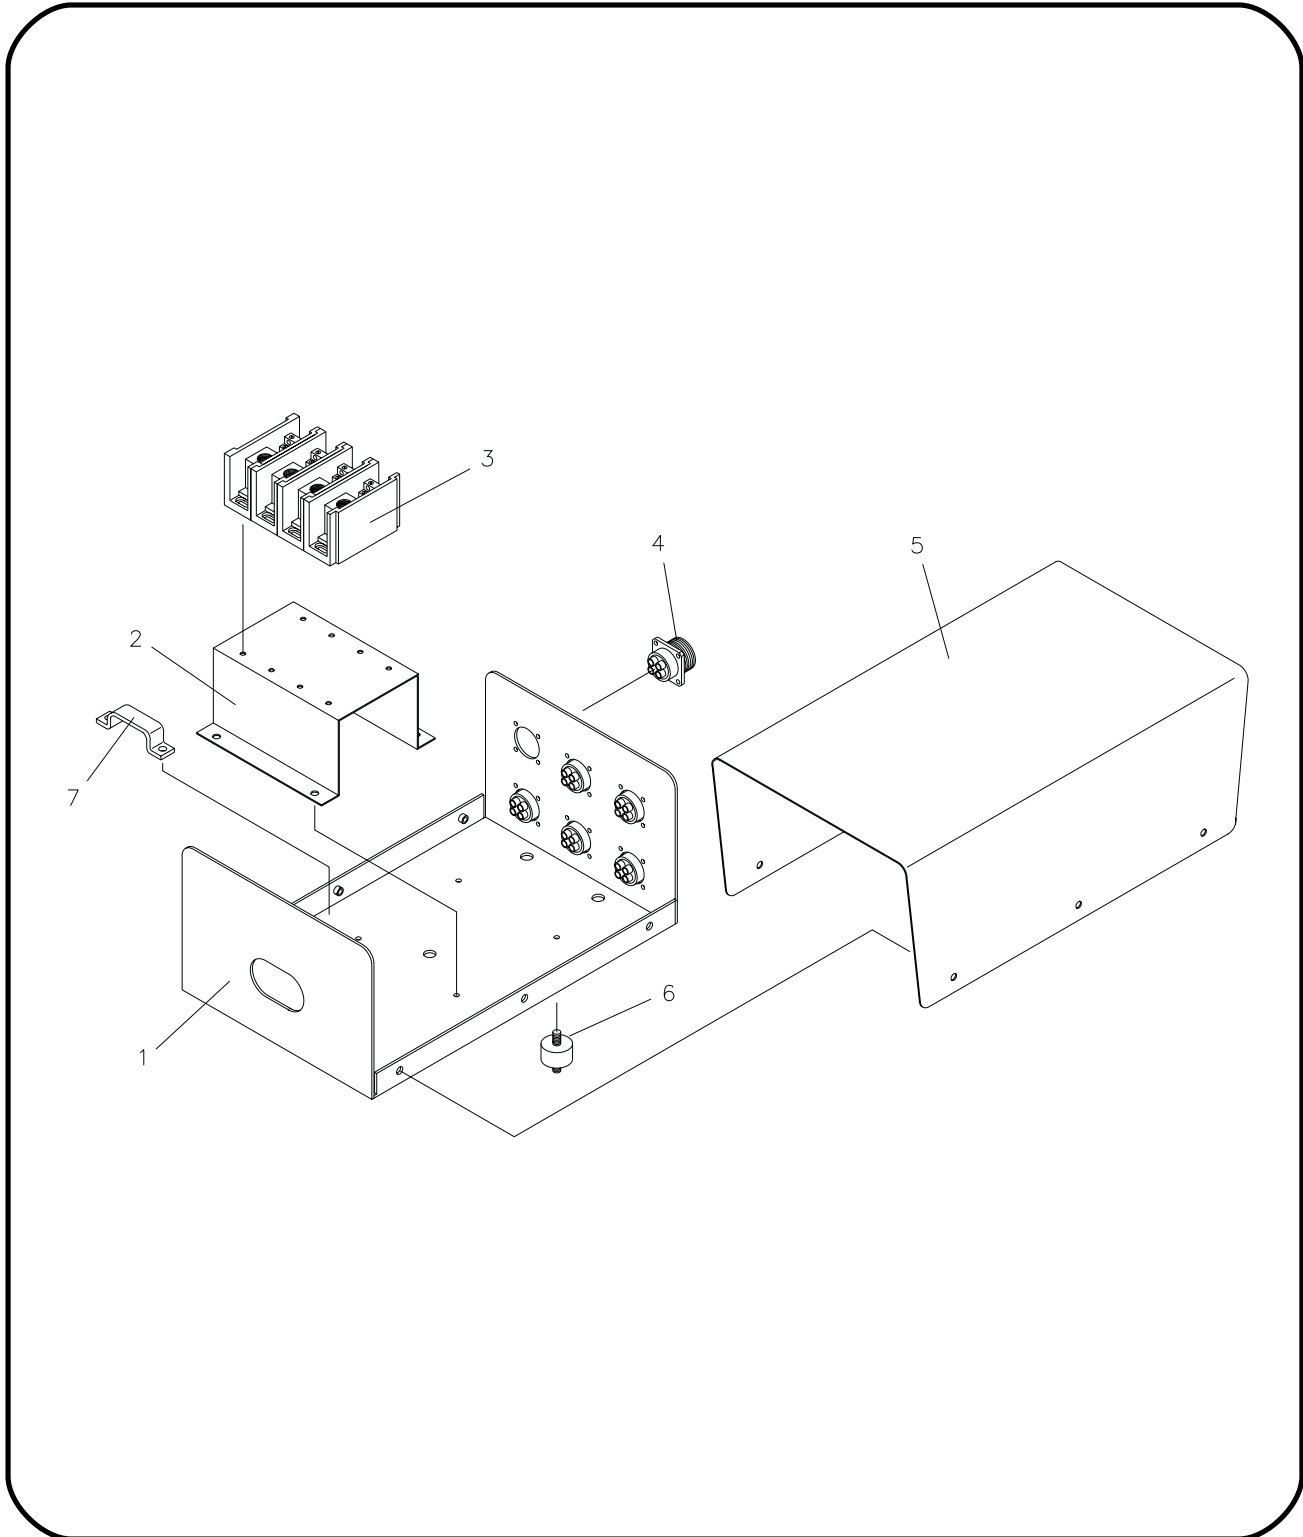

**Power Distribution Enclosure Assembly**  
**Figure 19**



FIGURE & ITEM NO.	HOBART PART NO.	AIRLINE PART NO.	NOMENCLATURE						UNITS PER EFF ASSY	
			1	2	3	4	5	6		
<b>19 -</b>	<b>287946</b>		<b>POWER DISTRIBUTION ENCLOSURE ASSEMBLY</b>						<b>1</b>	
19- 1	287937		.	BASE, CONNECTOR HOUSING					1	
19- 2	287939		.	BRACKET, BLOCK MOUNTING					1	
19- 3	287941		.	BLOCK, POWER DISTRIBUTION					1	
19- 4	287943		.	HARNESS, CONNECTOR ASSEMBLY					6	
19- 5	287938		.	COVER, CONNECTOR HOUSING					1	
19- 6	30GH417		.	MOUNT, RUBBER					4	
19- 7	7J422-000		.	CLAMP, CABLE					1	
* 19- 8	287985		.	CABLE, OUTPUT ASSEMBLY					1	
<b>* NOT ILLUSTRATED</b>										

*This page intentionally left blank.*

## Section 4. Numerical Index

### 1. Explanation of Numerical Index

The purpose of this index is to assist the user in finding the illustration and description of a part when the part number is known. Part numbers are arranged in numeric-alpha sequence. Thus, any number beginning with the letter "A" would be located toward the end of the index list. On the other hand, a part number starting with a "1" would be listed near the beginning of the list. The figure number and item number location of the part is directly opposite the part. If the part is used more than one place, each location beginning with the first is listed.

Figure & Item Number	Part Number	Figure & Item Number	Part Number
9 - 4	056544	10 - 9	283873
9 - 8	056544	6-19	283978-001
9 - 6	12CW2077-003	6-18	283978-002
11-14	180593-002	8-1	283990-001
17-3	180696-002	7-2	284223
6-32	181158	15 -10	284461
8-4	181891-003	5A- 9	284475-001
11-3	1CZ148	5A-11	284475-002
15-2	280732-006	5A-10	284475-003
15-5	280732-007	2-25	284486-001
17-9	281690A-006	6-25	284908B
17-1	281698	15-7	284923
17-20	281699	15-3	284925
17-15	281701	6- 2	284935
8 - 6	281751-003	6-17	284937
7-1	281772	6- 1	284970
7-3	281775	5A- 1	285029-001
7-4	281776	5A- 3	285030-001
14-2	281881-001	5A- 2	285030-002
11-17	282089-010	5A- 5	285030-003
17-13	282128	5A- 6	285031-001
17-4	282128	5A- 7	285032-001
11-6	282130-001	5A- 8	285033
17-2	282132	5A-13	285034-001
2-5	282562	8-5	285062-001
1 - 22	282658	8 - 7	285063A-003
1 - 23	282659	5-10	285080
3-3	282732-001	17-	285120A-006
6-15	282800A-001	4B-12	285120A-006
13 - 7	282852	17-5	285121
15-4	282918	1 - 4	285125
11-1	283127	5-11	285172
5- 9	283167	6-31	285186
1 - 24	283533	4A - 6	285200
17-14	283546	7 - 7	285436
17-11	283560	5-14	285501
3-16	283597	6-13	285627
17-7	283620	1 - 5	285681
3-6	283647	15-8	286061
3-15	283824	17-	286092

Figure & Item Number	Part Number
6-36	286611
10 - 8	286654
3-21	286834
9 - 9	286851
9 - 13	286897-004
9 - 14	286897-005
5-18	287038-001
1 - 9	287048
6-27	287075-001
10-10	287333
15 - 9	287371
13- 2	287419
3-5	287422
2-7	287424
2-10	287437
13 - 6	287438
10-4	287453
1 - 25	287454
1 - 12	287459
1 - 16	287460
1 - 17	287461
1 - 18	287462
1 - 19	287463
1 - 20	287464
1 - 29	287465
1 - 21	287466
2-8	287506
3-18	287526-002
15-1	287531
4B-6	287532-001
7-	287532-001
8-	287532-001
3-19	287542-001
15-6	287548
13 - 6	287568
1 - 30	287571
16-1	287596
16-2	287597
10-5	287612
10 - 6	287619
10 - 7	287620
16-3	287624
9-1	287639
9-2	287641
7-5	287649
10-4	287656
10 - 3	287659
10 - 3	287660
1 - 28	287696
3-23	287698-001
3-2	287699

Figure & Item Number	Part Number
3-1	287701
3 - 26	287702
3-13	287703
3-22	287704
3-4	287705
2-1	287706
2-3	287707
13 - 4	287708
1 - 31	287709
3-20	287710
2-12	287713
7-6	287717-003
7 - 8	287717-005
11- 9	287721-001
17-6	287724
17-12	287729
12-3	287735
3-1	287738-001
3-20	287738-002
2-9	287738-003
3-13	287738-004
3-22	287738-005
3-4	287738-006
3-4	287738-007
2-1	287738-008
2-1	287738-009
2-1	287738-010
3-2	287738-011
2-11	287738-015
2-9	287739
14-3	287740
4B - 13	287747
4B - 14	287748
4A-1	287749-006
5 -	287749-006
6 -	287749-006
5- 1	287752-006
5- 3	287753
6-35	287766
10-1	287780
2-6	287781
9 - 11	287781
3-14	287785
3 - 24	287786
3-12	287793
4A-3	287793
3-10	287794
2-4	287795
14-4	287796
14-1	287797
2-11	287798
2-2	287802

Figure & Item Number	Part Number	Figure & Item Number	Part Number
2-13	287803	16-3	404154-013
9-3	287804	16-3	404154-015
10 - 11	287805	11-5	404402-002
10 - 12	287806	11-2	404402-008
3-11	287819	6-28	405699
3-8	287889	6-14	406807-002
5- 4	287908	4A - 5	408173
13- 9	287909	18 - 1	408506
5-12	287926	1 - 26	408665-001
11-15	287932	1 - 27	408665-002
11-	287933	18 - 2	409527-003
19-1	287937	1 - 15	430077-002
19-5	287938	17-21	480603-001
19-2	287939	13 - 8	480603-002
19-3	287941	13 - 8	480628
19-4	287943	17-22	480628
19-8	287945	6-12	482038A
1 - 8	287946	6-10	482039C
19-	287946	8-3	482989
1 - 32	287947	17-19	483756
1 - 33	287948	9 - 12	486719-005
3 - 27	287949	6-29	489658-002
6-23	30GH-1262	2-24	494134-001
19-6	30GH417	14-5	494295
6- 9	375426-003	1-	500240-001
17-18	386612	6-24	50GHP-206
6- 8	387736C	10-2	56534
11-12	387738A	10 - 9	56535
6-21	400292-006	1 - 14	76B1148
5A-12	400613-004	1 - 6	77A1157
9 - 5	400819-003	1 - 11	78A1000
6-33	400826-001	5- 8	78A1115-001
6-34	400828-001	5- 7	78A1117-002
6-26	401564-003	13- 1	78B1118-002
11-13	401564-004	1 - 13	79A1110
6-11	401564-004	6- 5	79A-1164
6- 7	401564-005	6- 3	79B-1159-1
11-16	401911-020	6- 4	79B-1159-2
4B - 15	401911-020	6- 6	79B-1159-6
6-16	401911-020	5-15	79C1158
6-30	401923-003	19-7	7J422-000
6-22	40201	3 - 24	7J422-000
2-14	402037-028	10 - 9	80A1117
10-2	402927-003	11-10	84A1075
1 - 10	402987	8-2	84A1075
3-17	403091-008	17-17	85B1039
3 - 25	403091-017	17-16	85C1004-001
3-7	403127	11-7	A25
3-9	403127	11- 8	AW626
13- 5	403782-002	1 - 7	DDW495-001
13 - 3	403809-001	5- 5	HF2518-002
11-11	404065-002	11-19	HF2752

Figure & Item Number	Part Number
11-4	HF2752
4A-1	HF-2752
4A-3	HF-2752
10 - 9	W10051-007
5-22	W10051-010
5- 2	W10051-013
17-10	W10072-068
17-8	W10072-068
13- 2	W10750-001
9 - 7	W10760-003
10 - 3	W10869-003
10 - 3	W10869-005
9 - 4	W10869-014

Figure & Item Number	Part Number
9 - 8	W10869-014
10 - 9	W-10869-014
10-2	W-10869-014
13- 2	W10910-0
10-2	W-7814-000
13- 5	W7814-004
13- 9	W7814-004
10-2	W-7814-011
5-13	W8105A-008
12-1	W9360-289
12-2	W9407-446
11 - 18	W9746-003
5- 6	W9917-018

# Chapter 5. Manufacturers' Literature

---

---

## VENDOR LITERATURE


Engine                      Cummins Engine Operation Manual

## HOBART DIAGRAMS: Series 500240

DIAGRAM #	DIAGRAM
287944	Schematic and Connection, Engine, Generator, and Options
287750	Connection, Control Box
287936	Connection, Power Module

*This page intentionally left blank.*



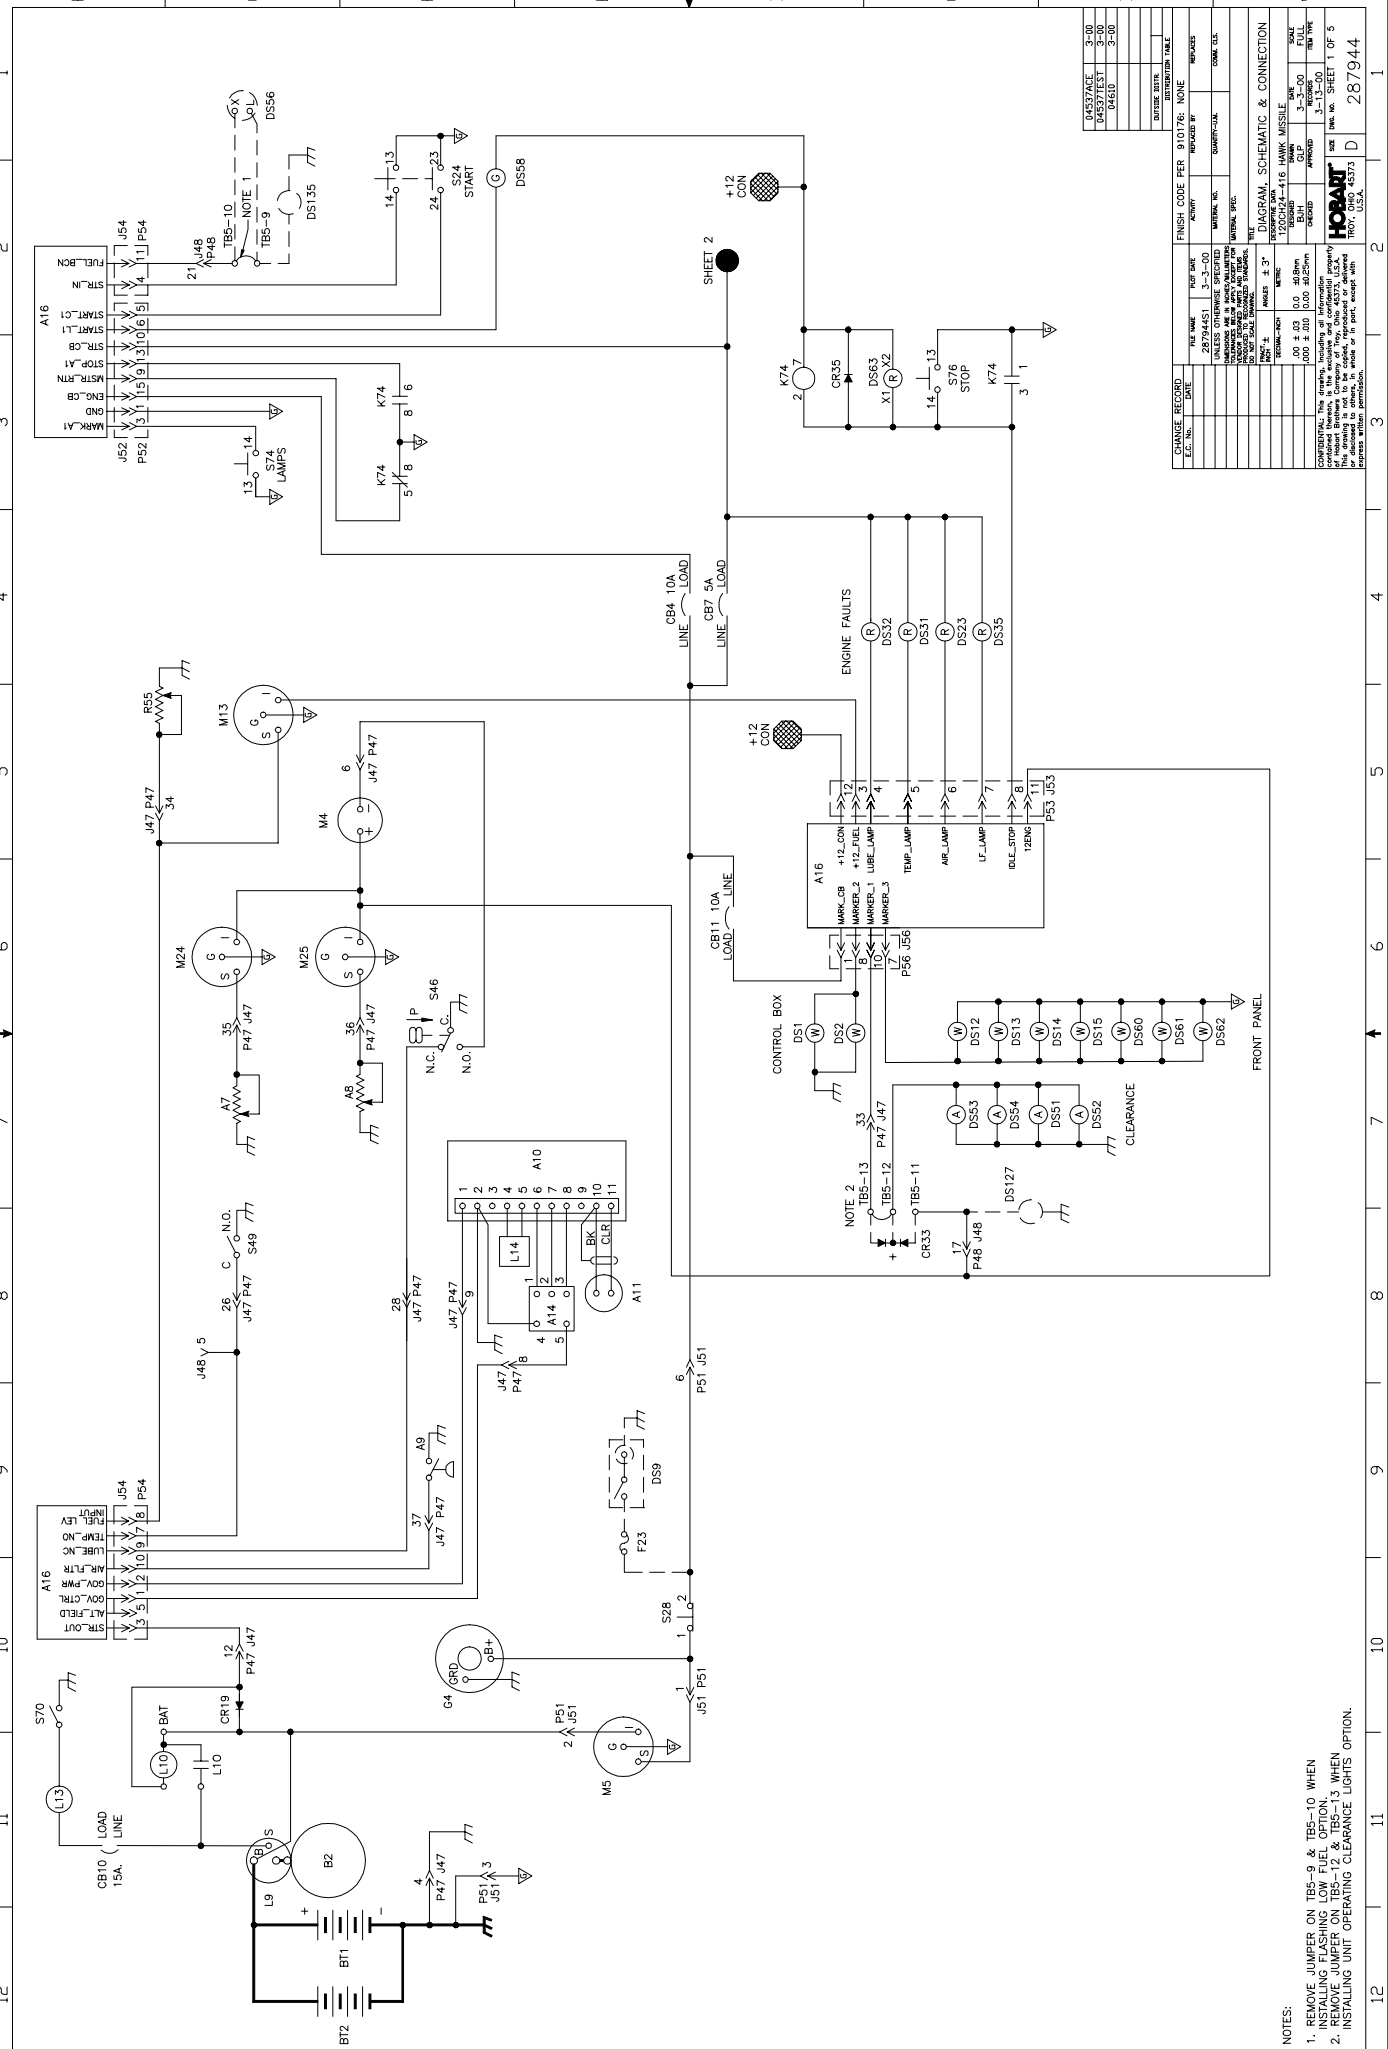

- NOTES:
1. REMOVE JUMPER ON TBS-9 & TBS-10 WHEN INSTALLING FLASHING LOW FUEL OPTION.
  2. REMOVE JUMPER ON TBS-12 & TBS-13 WHEN INSTALLING UNIT OPERATING CLEARANCE LIGHTS OPTION.

REV.	DATE	DESCRIPTION
1	3-10-60	ISSUED FOR FABRICATION
2	4-27-60	REVISED TO REFLECT CHANGES TO THE SCHEMATIC
3	6-16-60	REVISED TO REFLECT CHANGES TO THE SCHEMATIC

CHANGE RECORD		FINISH CODE PER 910176: NONE		REVISION TABLE	
E.C. No.	DATE	THE NAME	POST DATE	ACTIVITY	REVISION NO.
		287944E1	3-3-60	ISSUED FOR FABRICATION	1
					2
					3

TITLE: SCHEMATIC & CONNECTION		DRAWING NO.		TASK NO.	
PROJECT	DESCRIPTION	ISSUED BY	DATE	ISSUED BY	DATE
1500029-416	MARK MISSILE				
1500029-416	MARK MISSILE				
1500029-416	MARK MISSILE				
1500029-416	MARK MISSILE				
1500029-416	MARK MISSILE				
1500029-416	MARK MISSILE				

CONFIDENTIAL: This drawing, including all information contained hereon, is the property of the U.S. Government and is loaned to you for your information only. It is not to be distributed, copied, or otherwise used in whole or in part, without the express written permission.	
FORM NO. 616	3-13-60
FORM NO. 616	3-13-60
FORM NO. 616	3-13-60


287944

D

SHEET 1 OF 5


287944



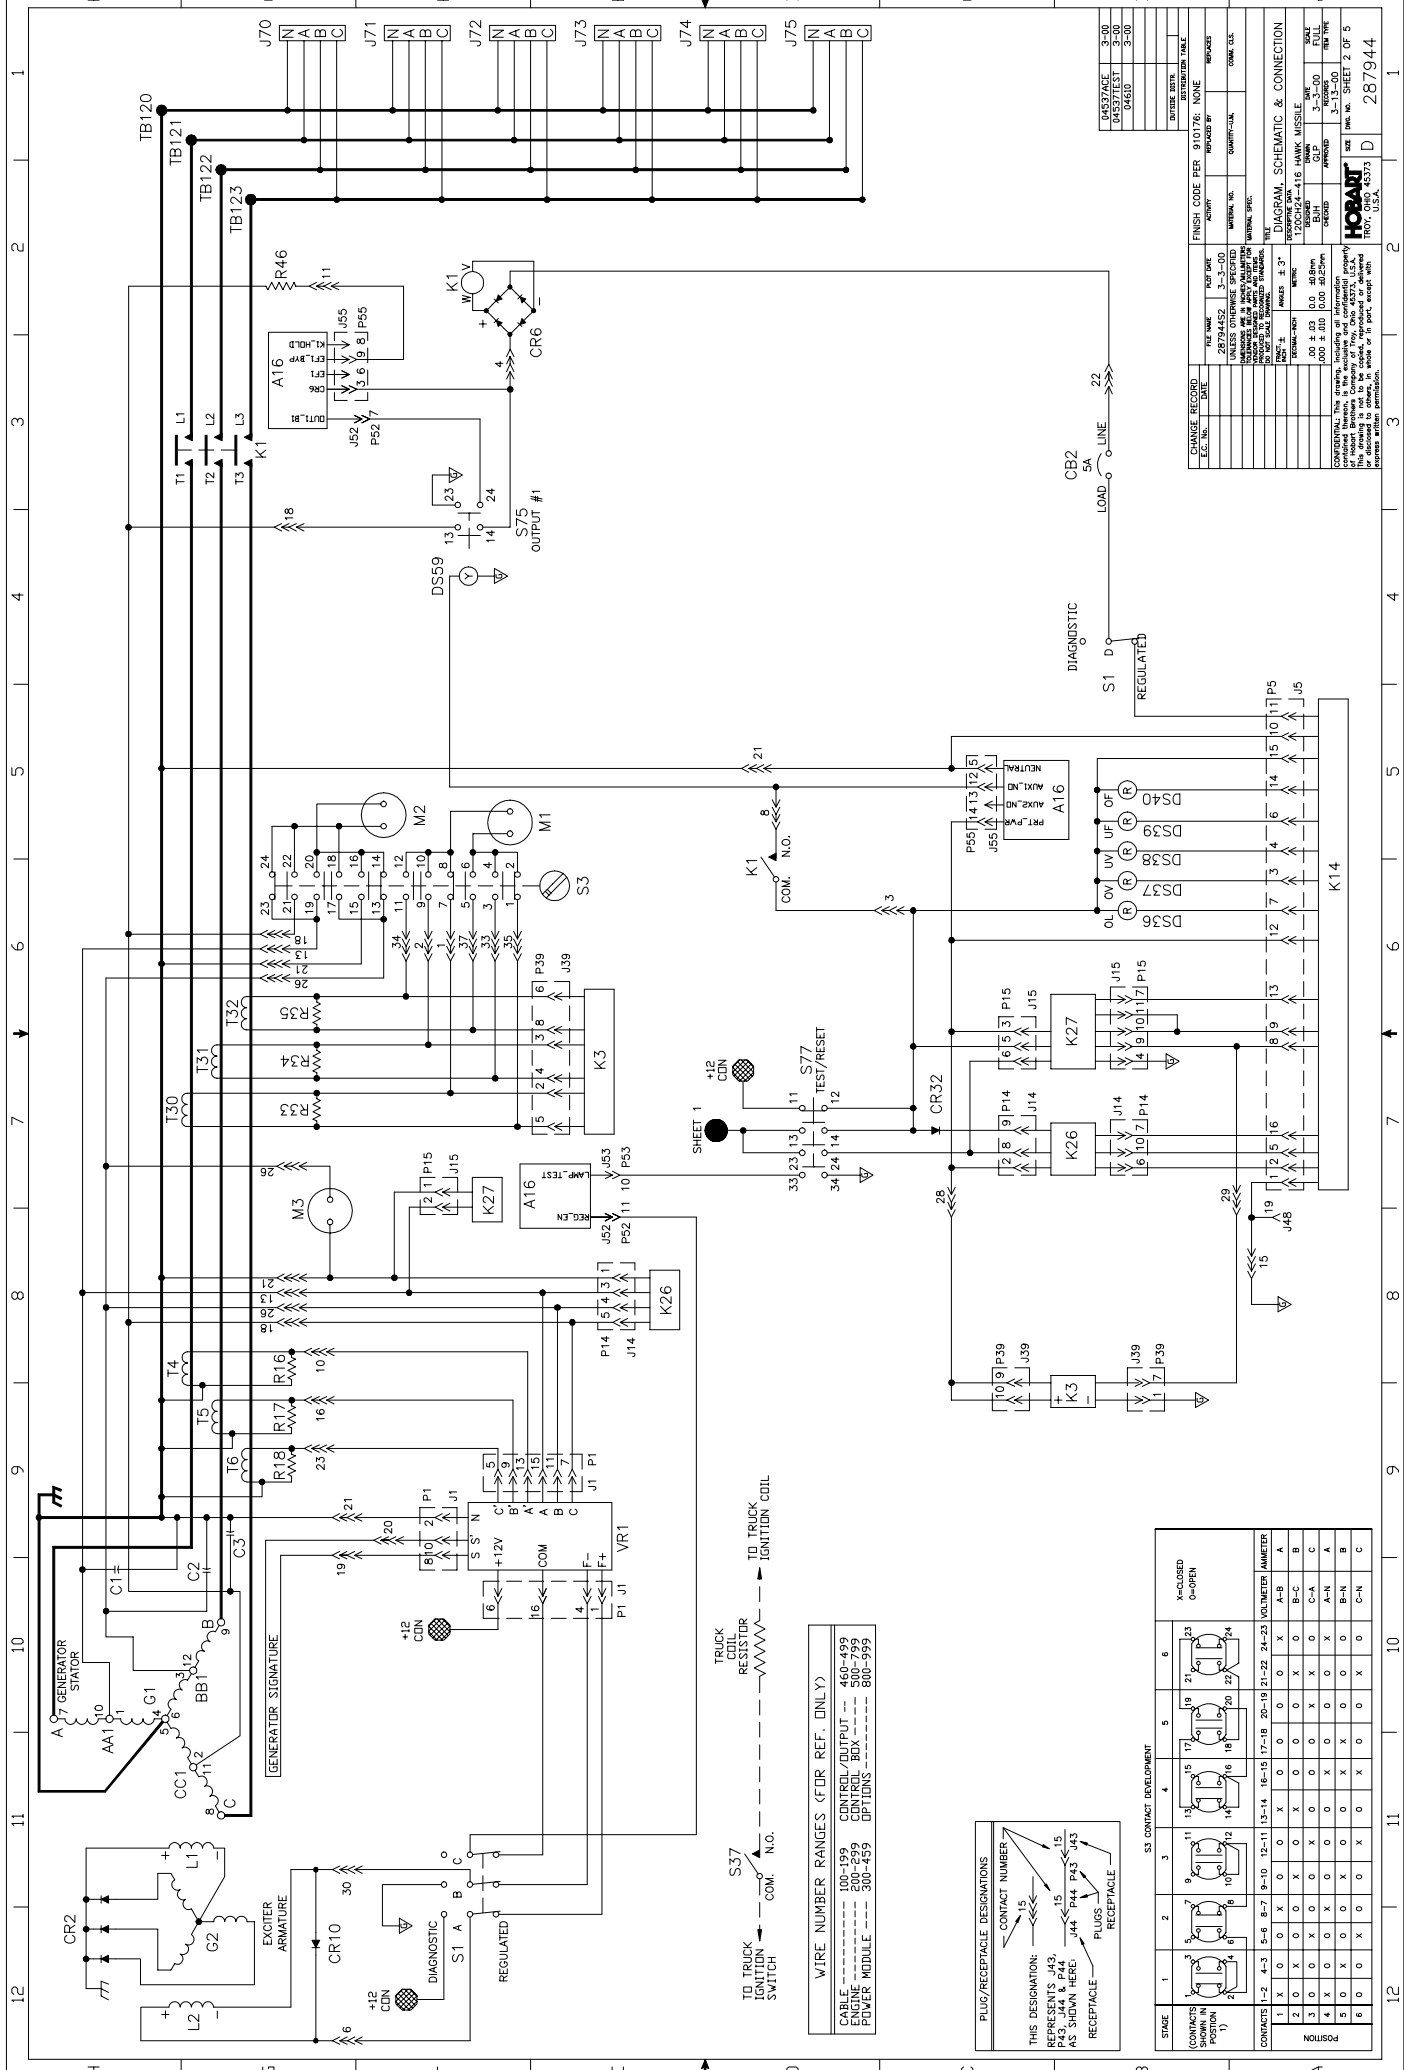

**WIRE NUMBER RANGES (FOR REF. ONLY)**

CABLE ----- 100-199    CONTROL/OUTPUT --- 460-499  
 ENGINE ----- 200-299    CONTROL BOX ----- 500-799  
 POWER MODULE ----- 300-459    OPTIONS ----- 800-999

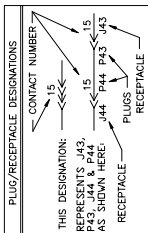

**53 CONTACT DEVELOPMENT**

STAGE	1	2	3	4	5	6
CONTACTS SHOWN IN POSITION	1	2	3	4	5	6
CONTACTS	1-2	4-3	5-8	2-7	9-10	12-11
POSITION	1	X	0	X	0	0
	2	0	X	0	0	0
	3	0	0	X	0	0
	4	0	0	0	X	0
	5	0	0	0	0	X
	6	0	0	0	0	0

17-18    20-19    21-22    24-23

19    21    23

10    11    12    13    14    15    16    17    18    19    20    21    22    23    24

X=CLOSED  
0=OPEN

**CHANGE RECORD**

E.C. No.	DATE	DESCRIPTION
1	3-3-60	INITIAL DESIGN
2	3-3-60	REVISED
3	3-3-60	REVISED
4	3-3-60	REVISED

**FINISH CODE PER 910176: NONE**

**DATE: 287944**

**REVISIONS:**

NO.	DATE	DESCRIPTION
1	3-3-60	INITIAL DESIGN
2	3-3-60	REVISED
3	3-3-60	REVISED
4	3-3-60	REVISED

**CONFIDENTIAL:** This drawing, including all information contained hereon, is the property of the General Motors Corporation and is not to be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of the General Motors Corporation.

H  
G  
F  
E  
D  
C  
B  
A

1 2 3 4 5 6 7 8 9 10 11 12

H  
G  
F  
E  
D  
C  
B  
A



H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z																																																		
A7	A8	A9	A10	A11	A14	A16	B2	BT1, BT2	C1-C3	CB2	CB4	CB7	CB10	CB11	CR2	CR6	CR10	CR19	CR32	CR33	CR35	DS1-DS2	DS9	DS12	DS13	DS14	DS15	DS23	DS31	DS32	DS35	DS36	DS37	DS38	DS39	DS40	DS51-DS54	DS56	DS58	DS59	DS60	DS61	DS62	DS63	DS127	DS135	F23	G1	G2	G4	GP1																	
SENSOR, WATER TEMPERATURE	SENSOR, OIL PRESSURE	SENSOR, AIR CLEANER SERVICE	CONTROL BOX, ELECTRIC GOVERNOR	MAGNETIC PICKUP, ELECTRIC GOVERNOR	SPEED ADJUSTMENT, ELECTRIC GOVERNOR	GENERATOR SET CONTROL P.C. BOARD	STARTER, ENGINE, 12 V.	BATTERY, 12 V.	CAPACITOR, GENERATOR, 01 MFD., 500 V.	CIRCUIT BREAKER, CONTACTORS, 5 A.	CIRCUIT BREAKER, ENGINE ELECTRICAL, 10 A.	CIRCUIT BREAKER, CONTROL CIRCUIT, 5 A.	CIRCUIT BREAKER, COLD WEATHER START, 15 A.	CIRCUIT BREAKER, MARKER LIGHTS, 10 A.	RECTIFIER, GENERATOR REVOLVING FIELD	RECTIFIER, LOAD CONTACTOR, #1 OUTPUT	DIODE, FLYBACK, EXCITER	DIODE, FLYBACK, AUXILIARY STARTER SOLENOID	DIODE, BLOCKING	RECTIFIER, BLOCKING *	DIODE, FLYBACK	LIGHT, PANEL (WHITE)	LIGHT, SPOT W/SWITCH (WHITE) *	LIGHT, CHARGING AMP METER (WHITE)	LIGHT, OIL PRESSURE GAUGE (WHITE)	LIGHT, TEMPERATURE GAUGE (WHITE)	LIGHT, FUEL GAUGE (WHITE)	INDICATOR, AIR CLEANER SERVICE (RED)	INDICATOR, HIGH TEMPERATURE (RED)	INDICATOR, LOW OIL (RED)	INDICATOR, LOW FUEL LEVEL (RED)	INDICATOR, OVERLOAD FAULT (RED)	INDICATOR, OVERVOLTAGE FAULT (RED)	INDICATOR, UNDERVOLTAGE FAULT (RED)	INDICATOR, UNDERFREQUENCY FAULT (RED)	INDICATOR, OVERFREQUENCY FAULT (RED)	LAMP, MARKER (AMBER)	FLASHER, LOW FUEL LEVEL BEACON LIGHT *	INDICATOR, PUSHBUTTON, ENGINE START (GREEN)	INDICATOR, PUSHBUTTON, #1 OUTPUT (YELLOW)	LIGHT, STRIP, FREQUENCY METER	LIGHT, STRIP, AMMETER	LIGHT, STRIP, VOLTMETER	INDICATOR, PUSHBUTTON, DELAYED ENGINE SHUTDOWN (RED)	INDICATOR, BEACON, UNIT RUNNING (AMBER, RED OR BLUE) *	INDICATOR, BEACON, LOW FUEL LEVEL (AMBER, RED OR BLUE) *	FUSE, SPOT LIGHT, IN-LINE, 10A. *	GENERATOR STATOR	EXCITER ARMATURE, GENERATOR	ALTERNATOR, ENGINE, 12 V.	GROUND PLATE																	
J1	J5	J14	J19	J35	J43	J44	J47	J48	J51	J52-J56	J70-J75	K1	K3	K14	K26	K27	K74	L1	L2	L9	L10	L13	L14	M1	M2	M3	M4	M5	M13	M24	M25	P1	P5	P14	P15	P39	P43	P44	P47	P48	P51	P52-P56	R16-R18	R33-R35	R46	R55	S1	S3	S24	S28	S29	S37	S46	S49	S74	S75	S77	T4-T6	T30-T32	TB1-TB2	TB3	TB5	TB120	TB121	TB122	TB123	VRI	
RECEPTACLE, VOLTAGE REGULATOR	RECEPTACLE, MEMORY AND TIME DELAY BOARD	RECEPTACLE, OVER-UNDERVOLTAGE BOARD	RECEPTACLE, OVER-UNDERFREQUENCY BOARD	RECEPTACLE, OVERLOAD BOARD, GENERATOR, MAIN	RECEPTACLE, POWER MODULE (AT CONTROL BOX)	RECEPTACLE, POWER MODULE	RECEPTACLE, ENGINE	RECEPTACLE, OPTIONS	RECEPTACLE, POWER	RECEPTACLE, GENERATOR SET CONTROL BOARD	RECEPTACLE, OUTPUT	LOAD CONTACTOR, #1 OUTPUT	RELAY, OVERLOAD, GENERATOR, MAIN	RELAY, MEMORY AND TIME DELAY, SOLID STATE	RELAY, OVER-UNDERVOLTAGE, SOLID STATE	RELAY, OVER-UNDERFREQUENCY, SOLID STATE	RELAY, TIME DELAY, ENGINE SHUTDOWN	FIELD, REVOLVING, GENERATOR	FIELD, EXCITER, GENERATOR	SOLENOID, STARTER	SOLENOID, STARTER, AUXILIARY	SOLENOID, COLD WEATHER START	ACTUATOR, ELECTRIC GOVERNOR	AMMETER, GENERATOR	VOLTMETER, GENERATOR	FREQUENCY METER	RUNNING TIME METER, ENGINE	AMMETER, BATTERY	GAUGE, FUEL, ELECTRIC	GAUGE, WATER TEMPERATURE	GAUGE, OIL PRESSURE	PLUG, VOLTAGE REGULATOR	PLUG, MEMORY AND TIME DELAY BOARD	PLUG, OVER-UNDERVOLTAGE BOARD	PLUG OVER-UNDERFREQUENCY BOARD	PLUG, OVERLOAD BOARD, GENERATOR, MAIN	PLUG, POWER MODULE (AT CONTROL BOX)	PLUG, POWER MODULE	PLUG, ENGINE	PLUG, OPTIONS	PLUG, POWER	PLUG, GENERATOR SET CONTROL BOARD	RESISTOR, LINE DROP, 50 OHM, 20 W	RESISTOR, OVERLOAD, MAIN GENERATOR, 25 OHM, 20 W	RESISTOR, HOLD CIRCUIT, 100 OHM, 25 W, #1 OUTPUT	ELECTRIC FUEL GAUGE	SWITCH, REGULATED-DIAGNOSTIC	SWITCH, METER SELECTOR	SWITCH, ENGINE START	SWITCH, PUSHBUTTON, EMERGENCY STOP	SWITCH, MICRO, PLUG BOX, #1 OUTPUT *	SWITCH, LUBE OIL PRESSURE, ENGINE	SWITCH, HIGH TEMPERATURE, ENGINE	SWITCH, ENGINE TEMPERATURE SENSOR	SWITCH, PUSHBUTTON, LAMPS AND FUEL CHECK	SWITCH, PUSHBUTTON, #1 OUTPUT	SWITCH, PUSHBUTTON, ENGINE STOP & ENGINE FAULT RESET	SWITCH, PUSHBUTTON, TEST/RESET	TRANSFORMER, CURRENT, LINE DROP	TRANSFORMER, CURRENT, OVERLOAD, MAIN GENERATOR	TERMINAL BLOCK, CONTROL BOX	TERMINAL BLOCK, POWER MODULE	TERMINAL BLOCK, OPTIONS	TERMINAL BLOCK, OUTPUT, NEUTRAL	TERMINAL BLOCK, OUTPUT, #A	TERMINAL BLOCK, OUTPUT, #B	TERMINAL BLOCK, OUTPUT, #C	VOLTAGE REGULATOR, GENERATOR

LEGEND

CHANGE RECORD		FINISH CODE PER 910176: NONE			REVISION TABLE		
REV. NO.	DATE	REV. NO.	REV. DATE	REV. NO.	REV. DATE	REV. NO.	REV. DATE
1							
2							
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							

\* WHEN FURNISHED

 

287944  
D

SHEET 3 OF 5  
287944



NOTES:

1. WIRES 801 & 802 ARE FOLDED INTO ZFLEX
2. \* WIRES FURNISHED.

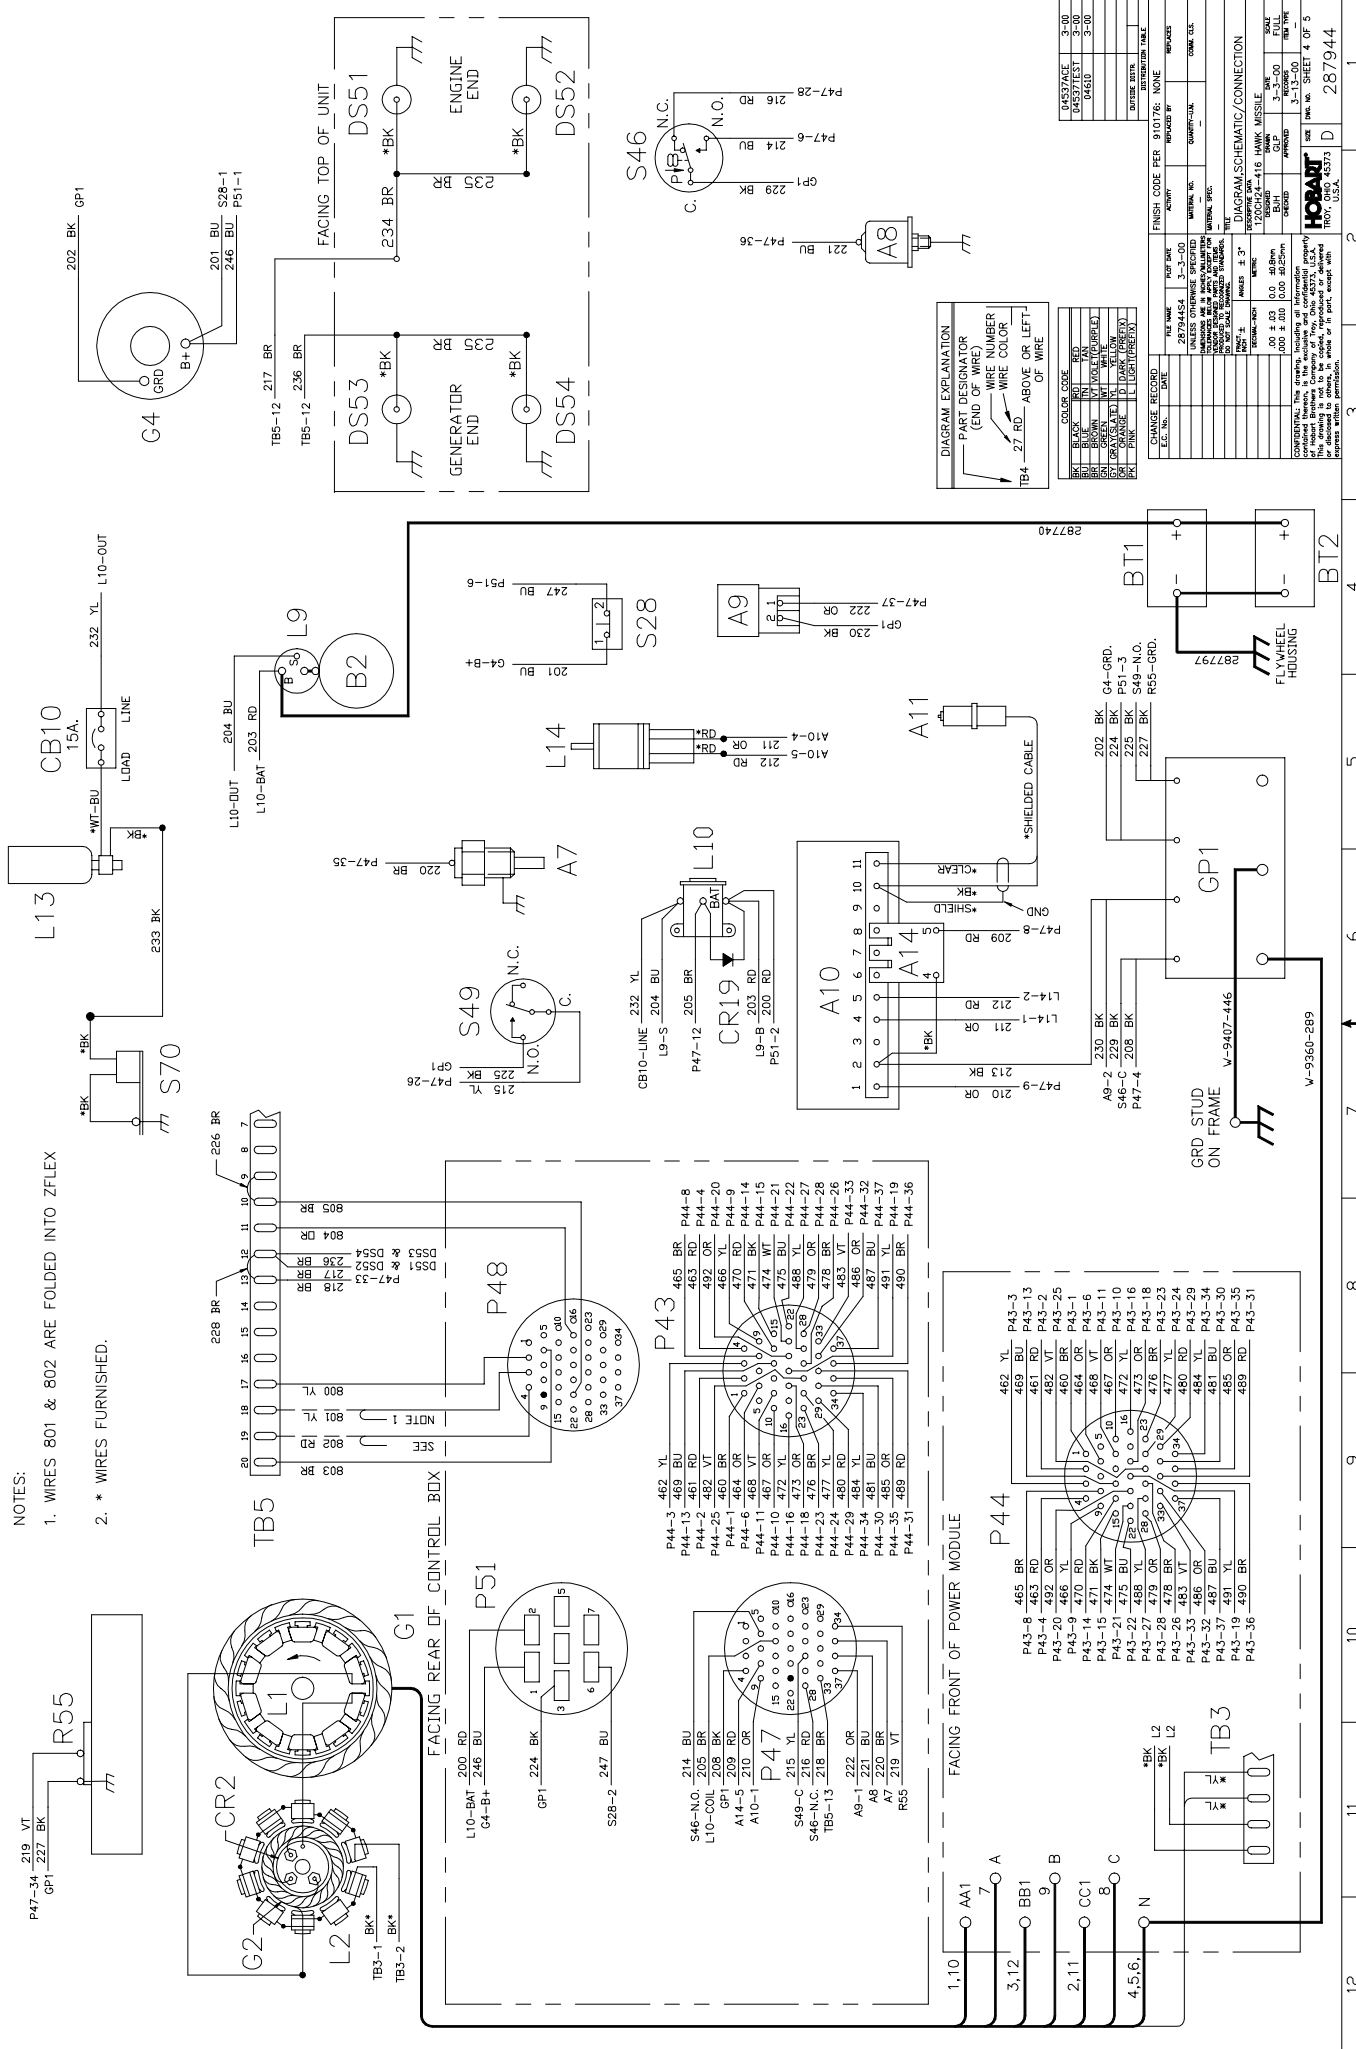

REV.	DATE	BY	CHKD.	DESCRIPTION
1	10/15/54	W. J. H.	J. M. H.	ISSUED FOR FABRICATION
2	11/15/54	W. J. H.	J. M. H.	REVISION
3	12/15/54	W. J. H.	J. M. H.	REVISION
4	01/15/55	W. J. H.	J. M. H.	REVISION
5	02/15/55	W. J. H.	J. M. H.	REVISION
6	03/15/55	W. J. H.	J. M. H.	REVISION
7	04/15/55	W. J. H.	J. M. H.	REVISION
8	05/15/55	W. J. H.	J. M. H.	REVISION
9	06/15/55	W. J. H.	J. M. H.	REVISION
10	07/15/55	W. J. H.	J. M. H.	REVISION
11	08/15/55	W. J. H.	J. M. H.	REVISION
12	09/15/55	W. J. H.	J. M. H.	REVISION


287944 D 287944









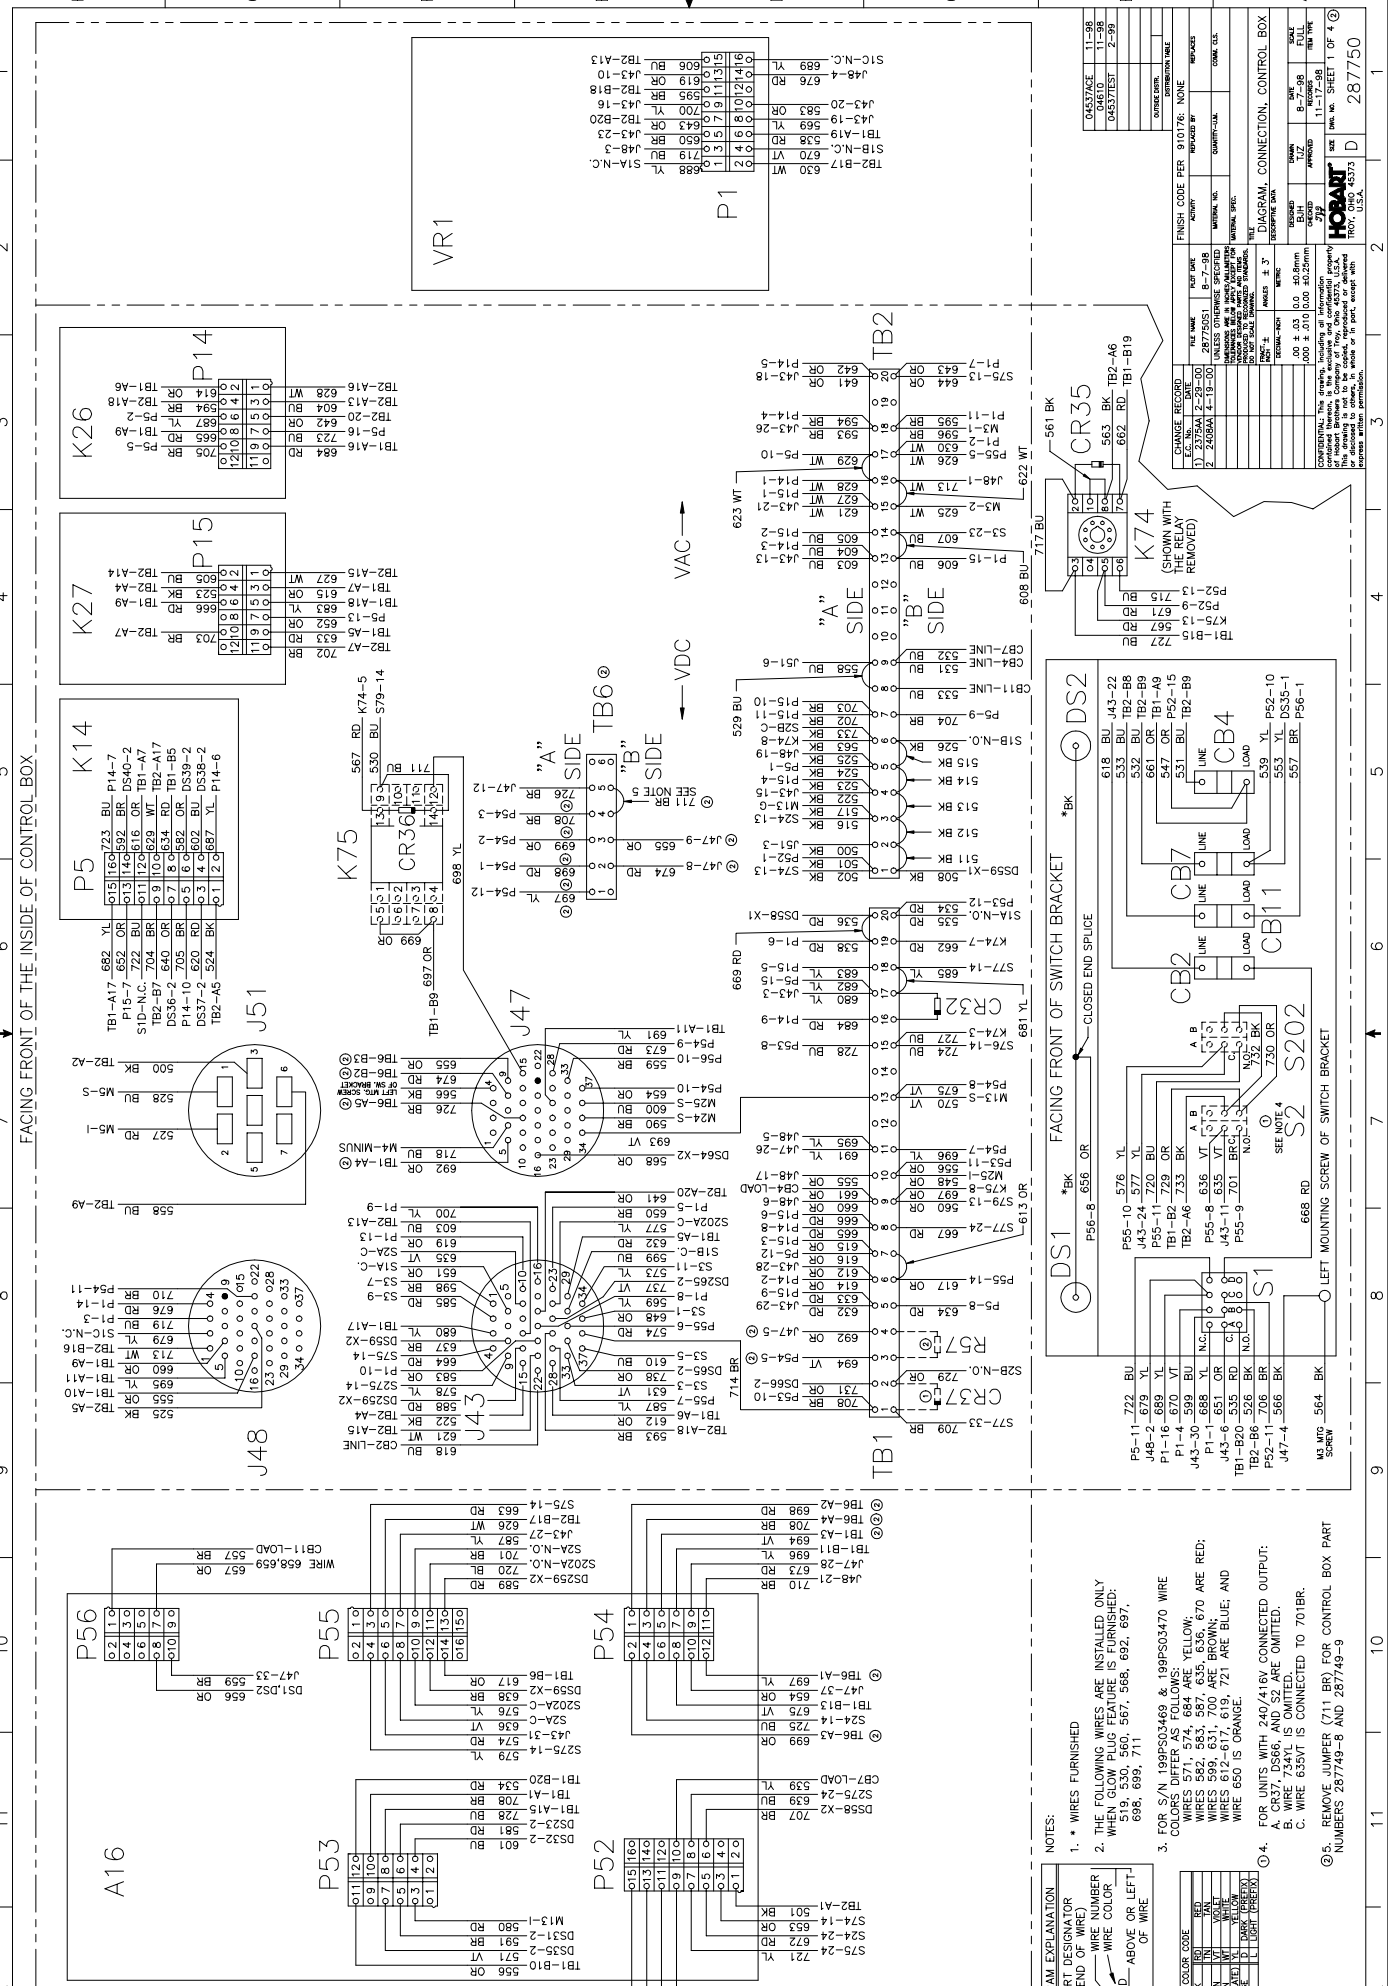

DATE	BY	DESCRIPTION
11-28-98	...	...
11-29-98	...	...
2-99	...	...

PART DESIGNATOR	END OF WIRE
DS1	...
DS2	...
DS3	...
DS4	...
DS5	...
DS6	...
DS7	...
DS8	...
DS9	...
DS10	...
DS11	...
DS12	...
DS13	...
DS14	...
DS15	...

WIRE COLOR	END OF WIRE
BLACK	...
BROWN	...
GREEN	...
RED	...
YELLOW	...
PINK	...
WHITE	...

1. * WIRES FURNISHED
2. WHEN FOLLOWING WIRES ARE INSTALLED ONLY
3. FOR S/N 199P503448 & 199P503470 WIRE
4. FOR S/N 240/148, CONNECTED OUTPUT:
5. REMOVE JUMPER (711 BR) FOR CONTROL BOX PART

PART DESIGNATOR	END OF WIRE
DS1	...
DS2	...
DS3	...
DS4	...
DS5	...
DS6	...
DS7	...
DS8	...
DS9	...
DS10	...
DS11	...
DS12	...
DS13	...
DS14	...
DS15	...


WIRE COLOR	END OF WIRE
BLACK	...
BROWN	...
GREEN	...
RED	...
YELLOW	...
PINK	...
WHITE	...

1. * WIRES FURNISHED
2. WHEN FOLLOWING WIRES ARE INSTALLED ONLY
3. FOR S/N 199P503448 & 199P503470 WIRE
4. FOR S/N 240/148, CONNECTED OUTPUT:
5. REMOVE JUMPER (711 BR) FOR CONTROL BOX PART



FACING REAR OF CONTROL PANEL

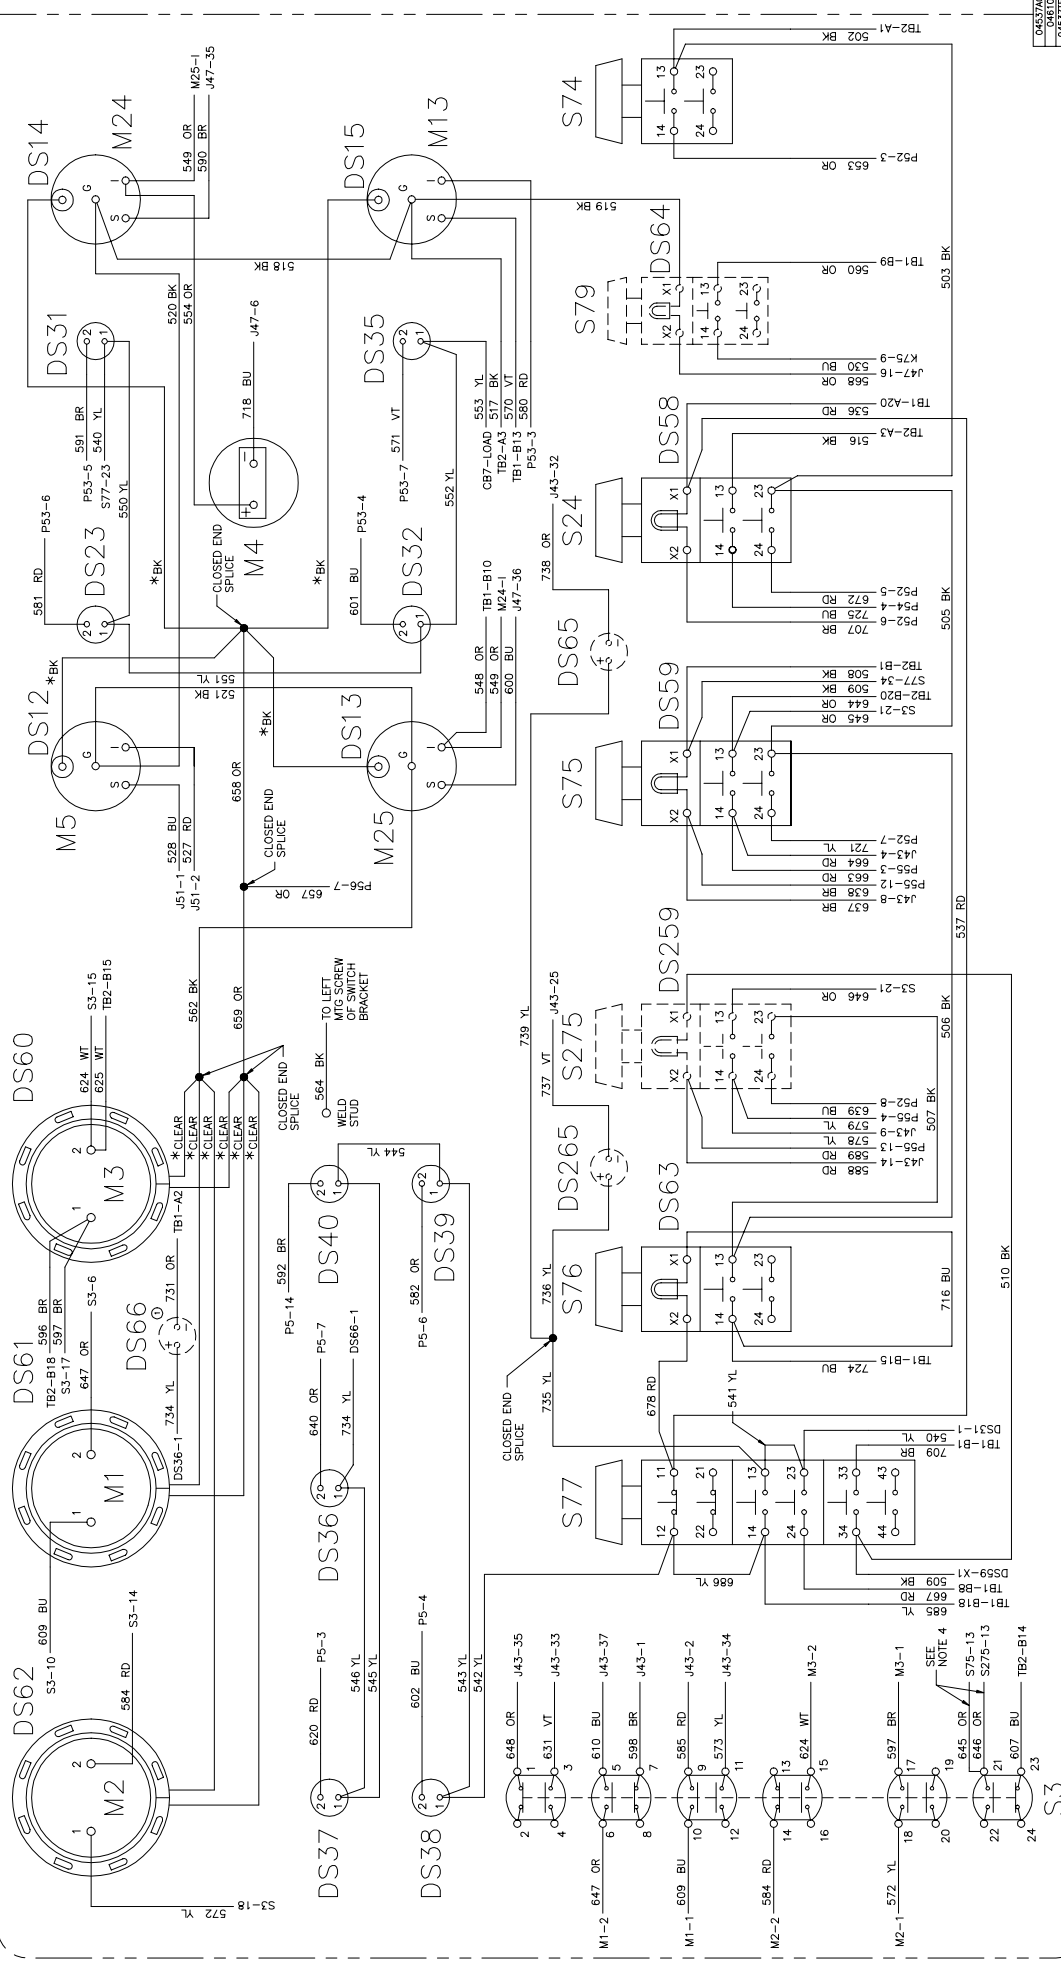

- NOTES:
1. WIRES FURNISHED
  2. THE FOLLOWING WIRES ARE INSTALLED ONLY WHEN FOLLOW PLUG FEATURE IS FURNISHED:  
519, 530, 560, 567, 568, 692, 697, 698, 699, 711
  3. REMOVE ALL MALE QUICK-CONNECT TERMINALS FROM S3
  4. INSTALL 2 BARE WIRES ON S3-21

- JUMPERS FURNISHED ON S3:
- | INTERNAL | EXTERNAL |
|----------|----------|
| 2 TO 4   | 2 TO 6   |
| 10 TO 12 | 8 TO 12  |
| 14 TO 16 | 13 TO 17 |
| 22 TO 24 | 16 TO 20 |
|          | 18 TO 22 |
|          | 19 TO 23 |

COLOR CODE	
BK	BLACK
BR	BROWN
BU	BLUE
GN	GREEN
GR	GRAY/SLATE
OR	ORANGE
PK	PINK
RD	RED
TR	TRAVEL
VT	VIOLET
WT	WHITE
YL	YELLOW
DK	DARK (PREFIX)
L	LIGHT (PREFIX)

DIAGRAM EXPLANATION	
—	PART DESIGNATOR (END OF LINE)
—	WIRE COLOR
—	ABOVE OR LEFT OF WIRE
—	27 RD

DATE	BY	REVISION
04/11/98	11-98	1
06/16/00	11-98	2
04/23/03	2-99	3

CHANGE RECORD		FINISH CODE PER 910176: NONE	
REV.	DATE	ACTIVITY	REASON
1	04/11/98	28776052	8-7-98
2	06/16/00	28776052	11-98
3	04/23/03	28776052	2-99

MATERIAL		MATERIAL	
QTY	DESCRIPTION	QTY	DESCRIPTION
1	AC ENGINE DRIVE	1	AC ENGINE DRIVE
1	AC MOTOR	1	AC MOTOR
1	AC MOTOR	1	AC MOTOR
1	AC MOTOR	1	AC MOTOR
1	AC MOTOR	1	AC MOTOR

CONFIDENTIAL: This drawing, including all information contained herein, is the property of Hobart Corporation. It is to be used only for the purpose intended and is not to be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Hobart Corporation.

28776052  
D  
287750



LEGEND

- A16 GENERATOR SET CONTROL P.C. BOARD
- CB2 CIRCUIT BREAKER, CONTACTORS, 5 A.
- CB4 CIRCUIT BREAKER, ENGINE ELECTRICAL, 10 A.
- CB7 CIRCUIT BREAKER, CONTROL CIRCUIT, 5 A.
- CB11 CIRCUIT BREAKER, MARKER LIGHTS, 10 A.
- CR32 DIODE, BLOCKING
- CR35 DIODE, FLY-BACK
- CR36 DIODE, FLY-BACK, GLOW PLUG (WHEN FURNISHED)
- CR37 DIODE, BLOCKING, E-F BYPASS (WHEN FURNISHED)
- DS1-DS2 LIGHT, PANEL (WHITE)
- DS12 LIGHT, CHARGING AMP METER (WHITE)
- DS13 LIGHT, OIL PRESSURE GAUGE (WHITE)
- DS14 LIGHT, TEMPERATURE GAUGE (WHITE)
- DS15 LIGHT, FUEL GAUGE (WHITE)
- DS23 INDICATOR, AIR CLEANER SERVICE (RED)
- DS31 INDICATOR, HIGH TEMPERATURE (RED)
- DS32 INDICATOR, LOW OIL (RED)
- DS35 INDICATOR, LOW FUEL LEVEL (RED)
- DS36 INDICATOR, OVERLOAD FAULT (RED)
- DS37 INDICATOR, OVERVOLTAGE FAULT (RED)
- DS38 INDICATOR, UNDERVOLTAGE FAULT (RED)
- DS39 INDICATOR, UNDERFREQUENCY FAULT (RED)
- DS40 INDICATOR, OVERFREQUENCY FAULT (RED)
- DS58 INDICATOR, PUSHBUTTON, ENGINE START (GREEN)
- DS59 INDICATOR, PUSHBUTTON, OUTPUT NO. 1 (GREEN)
- DS60 LIGHT, STRIP, FREQUENCY METER
- DS61 LIGHT, STRIP, AMMETER
- DS62 LIGHT, STRIP, VOLTMETER
- DS63 INDICATOR, PUSHBUTTON, DELAYED ENGINE SHUTDOWN
- DS64 INDICATOR, PUSHBUTTON, GLOW PLUG (WHEN FURNISHED)
- DS65 INDICATOR, NEUTRAL FAULT, OUTPUT NO. 1 (RED)(WHEN FURNISHED)
- DS66 INDICATOR, E-F BYPASS (RED) (WHEN FURNISHED)
- DS67 INDICATOR, ENGINE STOP (RED) (WHEN FURNISHED)
- DS68 INDICATOR, CHECK ENGINE (AMBER) (WHEN FURNISHED)
- DS259 IND., PUSHBUTTON, OUTPUT NO. 2 (GREEN)(WHEN FURN.)
- DS265 INDICATOR, NEUTRAL FAULT, OUTPUT NO. 2 (RED)(WHEN FURNISHED)
- J43 RECEPTACLE, POWER MODULE
- J47 RECEPTACLE, ENGINE
- J48 RECEPTACLE, OPTIONS
- J50 RECEPTACLE, "E" ENGINE (WHEN FURNISHED)
- J51 RECEPTACLE, POWER

- K14 RELAY, MEMORY AND TIME DELAY, SOLID STATE
- K26 RELAY, OVER-UNDERVOLTAGE, SOLID STATE
- K27 RELAY, OVER-UNDERFREQUENCY, SOLID STATE
- K74 RELAY, TIME DELAY, ENGINE SHUTDOWN
- K75 RELAY, GLOW PLUG (WHEN FURNISHED)
- M1 AMMETER, GENERATOR
- M2 VOLTMETER, GENERATOR
- M3 FREQUENCY METER
- M4 RUNNING TIME METER, ENGINE-GENERATOR
- M5 AMMETER, BATTERY
- M13 GAUGE, FUEL, ELECTRIC
- M24 GAUGE, WATER TEMPERATURE
- M25 GAUGE, OIL PRESSURE
- P1 PLUG, VOLTAGE REGULATOR
- P5 PLUG, MEMORY AND TIME DELAY BOARD
- P14 PLUG, OVER-UNDERVOLTAGE BOARD
- P15 PLUG OVER-UNDERFREQUENCY BOARD
- P52-P56 PLUG, GENERATOR SET CONTROL BOARD
- R37 RESISTOR, 8.1K, 1/8 TO 1 WATT (WHEN FURNISHED)
- R38 RESISTOR, 1K, 1/8 TO 1 WATT (WHEN FURNISHED)
- R39 RESISTOR, 1.2K, 1/8 TO 1 WATT (WHEN FURNISHED)
- R40, R43 RESISTOR, 6.19K, 1/8 TO 1 WATT (WHEN FURNISHED)
- R57 RESISTOR, ALTERNATOR FIELD, 68 OHM, 3W (WHEN FURNISHED)
- R77 POTENTIOMETER, FREQUENCY ADJUST, 10K OHM, LINER TAPPER (WHEN FURNISHED)
- S1 SWITCH, REGULATED-DIAGNOSTIC
- S2 SWITCH, TEST BANK, NO. 1 OUTPUT (WHEN FURNISHED)
- S3 SWITCH, METER SELECTOR
- S24 SWITCH, ENGINE START
- S74 SWITCH, PUSHBUTTON, LAMPS AND FUEL CHECK
- S75 SWITCH, PUSHBUTTON, OUTPUT NO. 1
- S76 SWITCH, PUSHBUTTON, ENGINE STOP & ENGINE FAULT RESET
- S77 SWITCH, PUSHBUTTON, TEST/RESET
- S79 SWITCH, PUSHBUTTON, GLOW PLUG (WHEN FURNISHED)
- S80 SWITCH, STARTER (WHEN FURNISHED)
- S81 SWITCH, FREQUENCY ADJUST (WHEN FURNISHED)
- S82 SWITCH, PUSHBUTTON, DATA REQUEST (WHEN FURNISHED)
- S202 SWITCH, TEST BANK, NO. 2 OUTPUT (WHEN FURNISHED)
- S275 SWITCH, PUSHBUTTON, OUTPUT NO. 2 (WHEN FURNISHED)
- TB1-TB2 TERMINAL BLOCK
- TB6 TERMINAL BLOCK
- TB7 TERMINAL BLOCK, "E" ENGINE (WHEN FURNISHED)

CHANGE RECORD		THE NAME		REV. DATE		FINISH CODE PER 910176: NONE	
U.S. No.	DATE	U.S. No.	DATE	ACTIVITY	REASON	DATE	REASON
1	2-7-98	2877503	8-7-98				
2	4-18-00	2877503	8-7-98				
3	4-18-00	2877503	8-7-98				


OFFICE COPY		DATE		BY	
NO.	DATE	NO.	DATE	NO.	DATE
045377E1	11-98				
045377E2	11-98				
045377E3	2-99				

HOBART		DATE		BY	
NO.	DATE	NO.	DATE	NO.	DATE
8-7-98	8-7-98				
11-17-98	11-17-98				





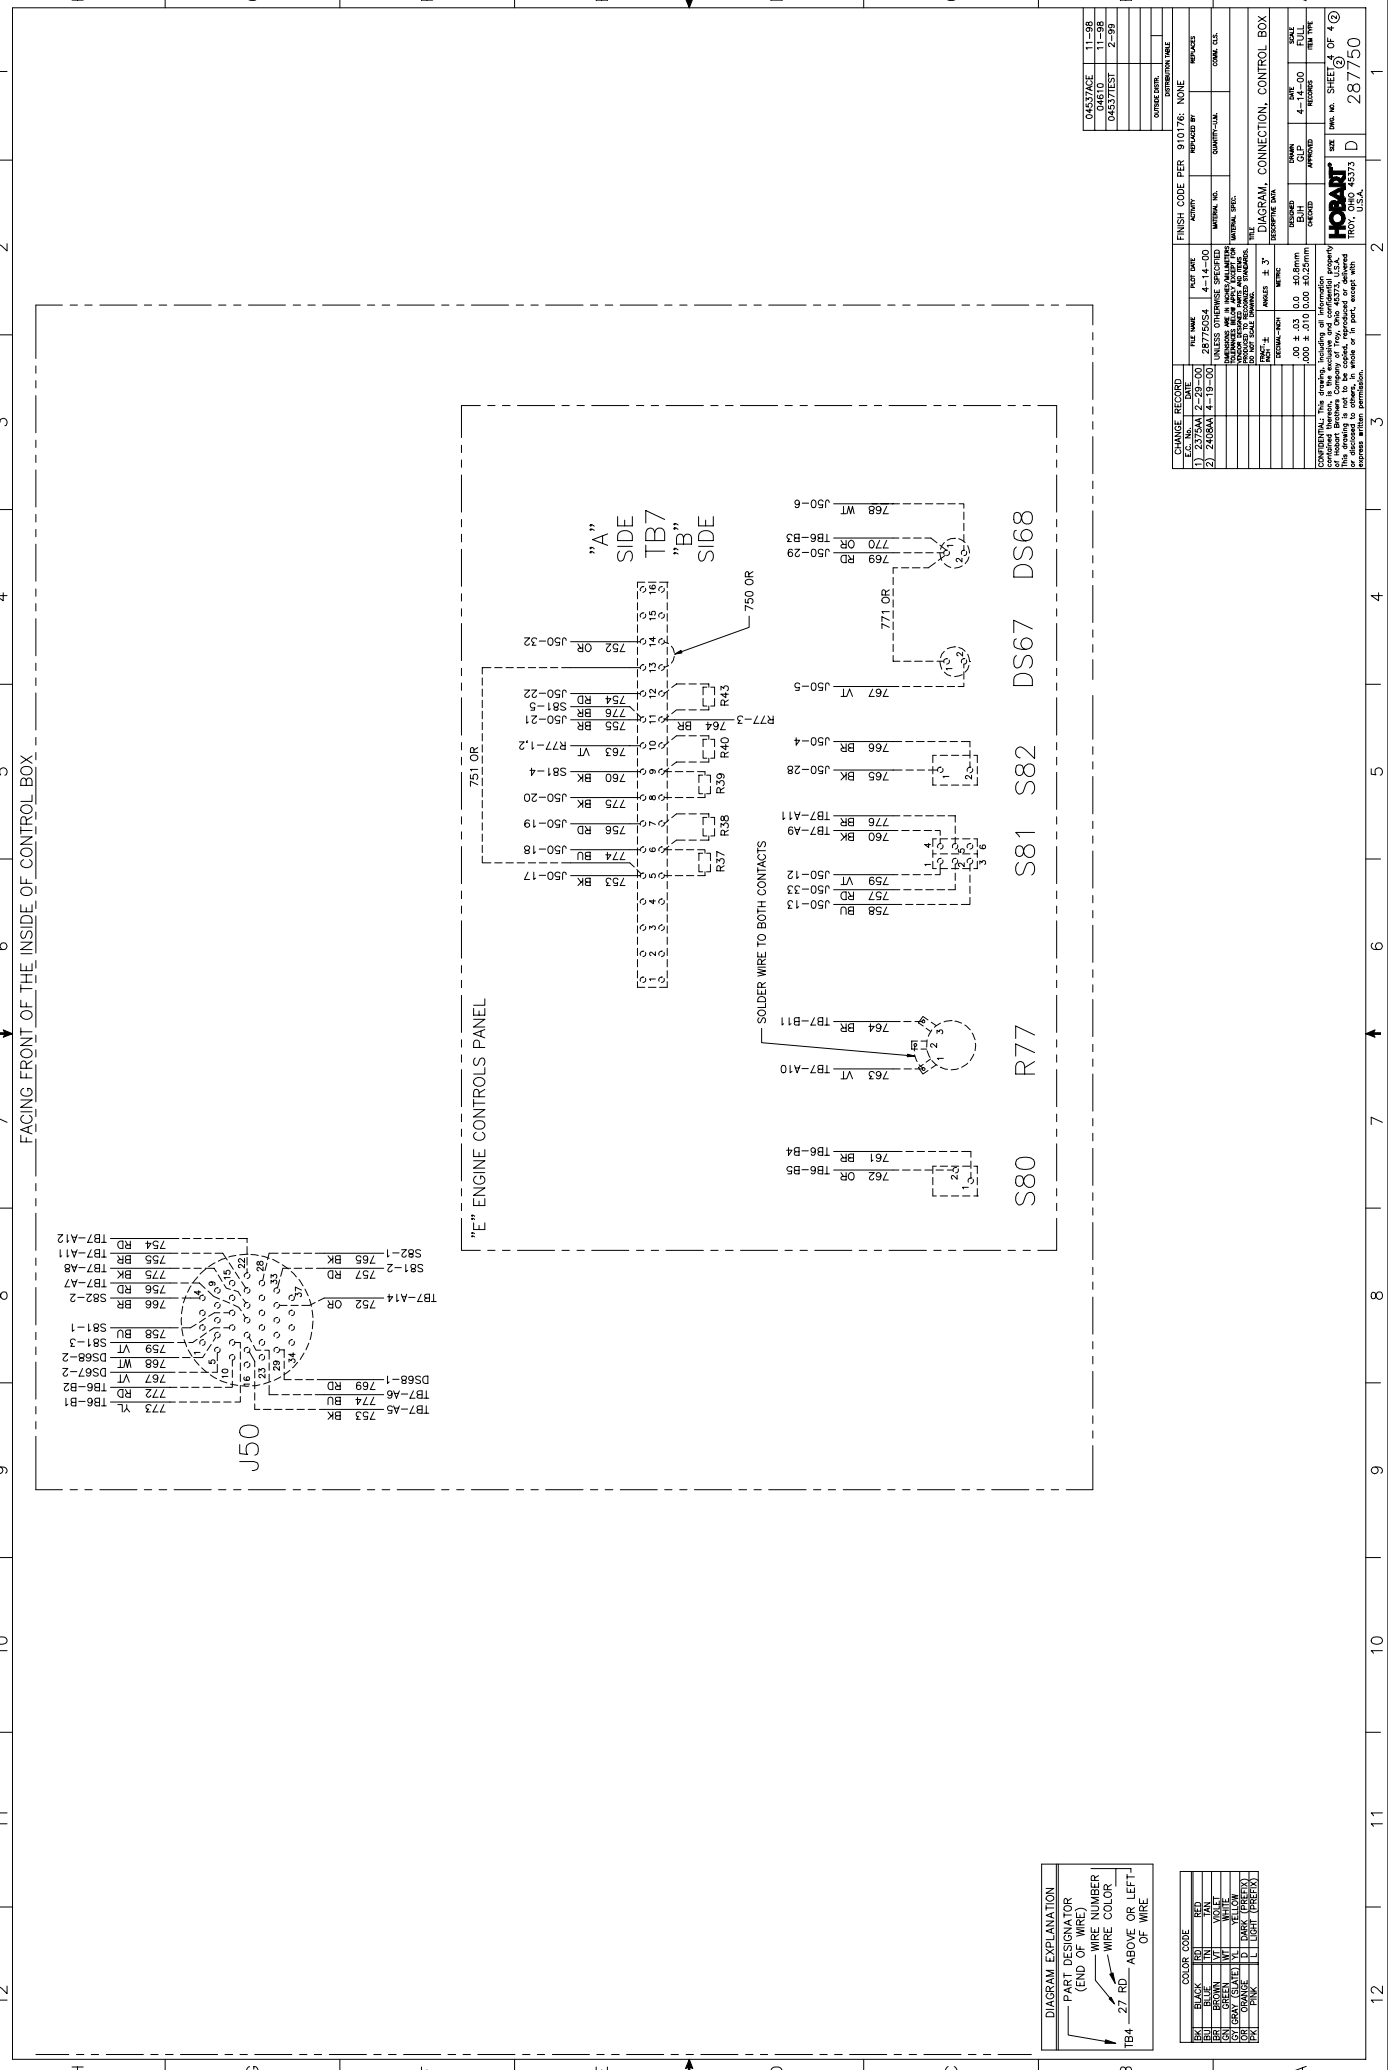

FACING FRONT OF THE INSIDE OF CONTROL BOX

H 1 2 3 4 5 6 7 8 9 10 11 12

H G F E D C B A

**DIAGRAM EXPLANATION**

- PART DESIGNATOR (END OF WIRE)
- WIRE NUMBER
- WIRE COLOR
- TB4-27 RD, ABOVE OR LEFT OF WIRE

**COLOR CODE**

BL	BLACK
BR	BROWN
BU	BLUE
GN	GREEN
GR	GRAY
OR	ORANGE
PK	PINK
RD	RED
VT	VIOLET
WT	WHITE
YL	YELLOW
LN	LIGHT GREEN
LT	LIGHT BLUE
LR	LIGHT RED

**CHANGE RECORD**

U.S. No.	DATE	REV. DATE	REV. BY
27-243	2-20-00	28776054	4-14-00
27-243A	4-19-00	ZUBSAM	4-19-00

**FINISH CODE PER 910176: NONE**

**PACKAGED BY:** \_\_\_\_\_

**QUANTITY:** \_\_\_\_\_

**DATE:** \_\_\_\_\_

**WORKING SPEC:** \_\_\_\_\_

**REVISIONS:**

NO.	DATE	REVISION
1	4-14-00	ISSUE
2	4-14-00	REVISED

**MANUFACTURER:** HOBART CORPORATION

**MODEL:** 777

**SIZE:** 2 1/2" x 2 1/2" x 2 1/2"

**WEIGHT:** 1.000 ± 0.100 (100 ± 10g)

**MATERIAL:** 303 S.S.

**FINISH:** POLISHED

**TESTING:** \_\_\_\_\_

**APPROVED:** \_\_\_\_\_

**DATE:** 4-14-00

**SHEET NO. OF 4**

**287750**

**HOBART**

**U.S.A.**







## Appendix A. Options/Features

The following is a list of options available for series 500240 generator sets. This chart contains the description, part number, and document number of the option. There is also a column to identify which option is contained in this Appendix.

OPTIONS / FEATURES EQUIPPED ON UNIT			
DESCRIPTION	PART NUMBER	DOCUMENT NUMBER	IN THIS SECTION
Trailer, with Tongue Actuated Brakes/Cable Trays	No Number	TO-257	
Trailer, with Lever Actuated Brakes/Cable Trays	No Number	TO-241	
Kit, Noise Reduction, Plenum	287911		
Kit, Unit Operating, Clearance Lights	287173-1		
Kit, Spotlight	287061		
Kit, Block Heater, 120V	287528-1	TO-256	
Kit, Block Heater, 240V	287528-2	TO-256	
Kit, Fire Extinguisher	283012	TO-252	
Kit, Pin Hitch	381441		
Kit, Pintle Hitch	76A-1361		
Support, Fork Lift Assembly	284373		
Kit, Tie-Down	284706		
Kit, Unit Operating, Non-Flashing Beacon	287063-X		
Kit, Low Fuel, Flashing/Non-Flashing Beacon	287062-X	TO-255	

*This page intentionally left blank*

---

## Unusual Service Conditions

---

This information is a general guideline and cannot cover all possible conditions of equipment use. The specific local environments may be dependent upon conditions beyond the manufacturer's control. The manufacturer should be consulted if any unusual conditions of use exist which may affect the physical condition or operation of the equipment.

### Among such conditions are :

#### 1. Exposure to:

- Combustible, explosive, abrasive or conducting dusts.
- Environments where the accumulation of lint or excessive dirt will interfere with normal ventilation.
- Chemical fumes, flammable or explosive gases.
- Nuclear radiation.
- Steam, salt-laden air, or oil vapor.
- Damp or very dry locations, radiant heat, vermin infestation, or atmospheres conducive to fungus growth.
- Abnormal shock, vibration or mechanical loading from external sources during equipment operation.
- Abnormal axial or side thrust imposed on rotating equipment shafts.
- Low and/or high ambient temperatures.

#### 2. Operation at:

- Voltages above or below rated voltage.
- Speeds other than rated speed.
- Frequency other than rated frequency.
- Standstill with rotating equipment windings energized.
- Unbalanced voltages.
- Operation at loads greater than rated.

#### 3. Operation where low acoustical noise levels are required.

#### 4. Operation with:

- Improper fuel, lubricants or coolant.
- Parts or elements unauthorized by the manufacturer.
- Unauthorized modifications.

#### 5. Operation in poorly ventilated areas.

*This page intentionally left blank*



---

## **Wet-Stacking in Generator Set**

---

### **1. Diesel Engines**

All diesel engines operated for extended periods under light load may develop a condition commonly referred to as wet-stacking. This condition results from the accumulation of unburned fuel in the exhaust system. It is recognizable by fuel oil wetness around the exhaust manifold, pipes, and muffler. Liquid fuel, in the form of droplets, may be spewed from the exhaust outlet.

Wet-stacking is common, and may be expected in diesel engines operated under light load. Light loads do not allow the engine to reach most efficient operating temperature for complete combustion of fuel. The unburned fuel collects in the exhaust system to create the wet condition known as wet-stacking.

To alleviate wet-stacking in lightly loaded engines, it is recommended that the machine be connected to a load bank after each 200 hours of use and operated under full rated load for one hour. This will burn away and evaporate the accumulation of fuel in the exhaust system. This clean-out procedure should be considered as a regular maintenance operation for machines operated under light load. The time schedule of 200 hours may be changed as required to suit each user's particular needs and operating conditions.

*This page intentionally left blank*