

# INSTALLATION INSTRUCTION

## MANUAL OUTDOOR AIR DAMPER ACCESSORY, 0% THRU 35% CAPABILITY MODEL 1FA0403

Supersedes: Nothing

530.18-N1.13V (698)

### FOR SINGLE PACKAGE EQUIPMENT AIR CONDITIONER MODELS D\*CE/D\*HB, D\*CG/D\*UC, D\*EE/D\*HC, D\*EG/D\*US, DHE, DHG AND HEAT PUMP MODELS B\*CH/B\*CB, B\*HN/B\*DF 3, 4, 5 & 6 TON

#### GENERAL

This instruction provides all the necessary information to properly field-install these manual fresh air damper accessory on the above indicated equipment.

The 0-35% manual outside air system is designed to replace the unit duct cover. No drilling on the unit or field assembly is required. The amount of outside air is controlled by simply adjusting the slide damper. The panel is fully insulated.

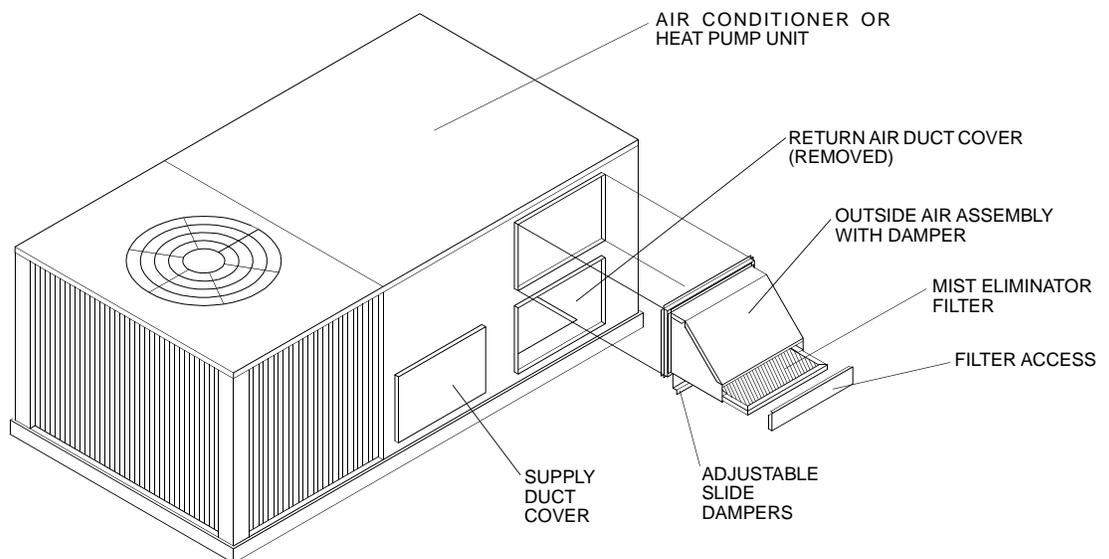


FIG. 1 - MANUAL OUTDOOR AIR DAMPER

#### INSTALLATION

Install these economizers per the following procedures.

1. Check for correct number of parts. See list below:  
One each - Outside Air Intake Hood with slide dampers and filter.
2. Remove return air duct cover from unit, and save the screws.

3. Install outside air assembly as shown in Figure 1 over duct opening with the screws removed in Step 2.
4. Adjust the slide damper to the desired position.

*NOTE: It will be necessary to remove intake hood top, so the second and third slide damper can be removed, if the full amount of outside air is required.*