

CPTS3813
CPTS1218

3/8IN X 13IN BELT SANDER **PONCEUSE À BANDE 3/8 PO X 13 PO** **LIJADORA DE BANDA 3/8 PULG X 13 PULG**

12IN X 18IN BELT SANDER **PONCEUSE À BANDE 1/2 PO X 18 PO** **LIJADORA DE BANDA 1/2 PULG X 18 PULG**

⚠ WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks, cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

The risk of exposure to these types of chemicals varies depending on how frequently you work with certain chemicals. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment, such as dust masks that are specifically designed to filter out microscopic particles.

⚠ AVERTISSEMENT

Les travaux de construction effectués à l'aide d'un outil électrique, comme le sablage, le sciage, le meulage et le perçage, produisent de la poussière qui contient des produits chimiques. De tels produits sont reconnus comme cancérigènes. Ils peuvent aussi causer des anomalies congénitales ou nuire d'une autre manière à la reproduction.

Voici quelques exemples de ces produits chimiques :

- le plomb contenu dans les peintures à base de plomb;
- la silice cristallisée contenue dans les briques, le ciment et d'autres produits de maçonnerie;
- l'arsenic et le chrome contenus dans le bois de sciage traité avec des produits chimiques.

Les risques d'exposition à ces produits chimiques varient selon la fréquence d'utilisation de certains matériaux. Pour réduire l'exposition, il est recommandé de travailler dans un endroit bien aéré et de porter de l'équipement de protection approuvé tel qu'un masque antipoussière spécialement conçu pour filtrer les particules microscopiques.

⚠ ADVERTENCIA

El polvo ocasionado por del lijado neumático, el aserrado, la rectificación, la perforación y otras actividades de construcción puede contener sustancias químicas conocidas como agentes causantes del cáncer, defectos de nacimiento y otros daños reproductivos. Algunos ejemplos de dichas sustancias químicas son:

- plomo de pintura a base de plomo,
- la silica cristalina proveniente del ladrillo, cemento y otros productos de mampostería, y
- el arsénico y el cromo proveniente de maderos tratados con sustancias químicas

El riesgo de ser expuesto a estos tipos de sustancias químicas varía según la frecuencia con la cual usted trabaja con ciertas sustancias químicas. Para disminuir la posibilidad de exposición a dichas sustancias químicas, usted debe trabajar en un área bien ventilada y con equipo aprobado de seguridad, tal como las mascarillas de polvo las cuales son diseñadas específicamente para filtrar las partículas microscópicas.

CARLYLE®

TABLE OF CONTENTS

Specifications	03
Warning Information, Owner And User Responsibility	04
Air Supply	05
Lubrication	05
Operating Instructions.....	05-06
Troubleshooting	07-08
Warranty Information	09
Exploded Parts Diagram CPTS3813	10
Parts List CPTS3813	11
Exploded Parts Diagram CPTS1218.....	12
Parts List CPTS1218	13



SPECIFICATIONS CPTS3813

Horsepower.....	0.7HP	Vibration Level	0.8m/s ²
Overall Length	12-3/4in	Air Consumption.....	3.2 CFM
Width	4.7in	Air Inlet Thread Size	1/4in NPT
Weight.....	1.7lb	Recommended Hose Size	3/8in I.D.
RPM.....	18,000	Recommended Air Pressure	90psi (6.2 bar)
Sound Level.....	80dBa		



SPECIFICATIONS CPTS1218

Horsepower.....	0.7HP	Vibration Level	0.8m/s ²
Overall Length	15-1/4in	Air Consumption	3.2 CFM
Width	4.7in	Air Inlet Thread Size	1/4in NPT
Weight	1.9lb	Recommended Hose Size	3/8in I.D.
RPM.....	18,000	Recommended Air Pressure	90psi (6.2 bar)
Sound Level	80dBa		

OPERATING MANUAL FOR CPTS3813, CPTS1218



WARNING INFORMATION



SAVE THIS MANUAL FOR FUTURE REFERENCE.



THIS INSTRUCTION MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. READ THIS INSTRUCTION MANUAL CAREFULLY AND UNDERSTAND ALL INFORMATION BEFORE OPERATING THIS TOOL.

It is the responsibility of the owner to make sure all personnel read this manual prior to using the device. It is also the responsibility of the device owner to keep this manual intact & in a convenient location for all to see & read. If the manual or product labels are lost or not legible, contact Carlyle for replacements. If the operator is not fluent in English, the product & safety instructions shall be read & discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends its contents.

Always operate, inspect and maintain this tool in accordance with American National Standards Institute Safety Code of Portable Air Tools (ANSI B186.1) and any other applicable safety codes and regulations.



For safety, top performance and maximum durability of parts, operate this tool at 90psig; 6.2 bar max air pressure with 3/8in diameter air supply hose.



Always wear safety goggles and breathing apparatus when operating or performing maintenance on this tool (users and bystanders).



To reduce exposure to sanding debris, work in a well ventilated area with proper personal protection equipment.



High sound levels can cause permanent hearing loss. Always use hearing protection as recommended by your employer or OSHA regulations while using this tool (users and bystanders).

Operators and maintenance personnel must be physically able to handle the bulk, weight and power of this tool.



Keep tool out of reach of children.



Air powered tools can vibrate in use. Vibration, repetitive motions or uncomfortable positions over extended periods of time may be harmful to your hands and arms. Discontinue use of tool if discomfort, tingling feeling or pain occurs. Seek medical advice before resuming use.



Air under pressure can cause severe injury. Never direct air at yourself or others. Always turn off the air supply, drain hose of air pressure and detach tool from air supply before installing, removing or adjusting any accessory on this tool, or before performing any maintenance on this tool. Failure to do so could result in injury.



Whip hoses can cause serious injury. Always check for damaged, frayed or loose hoses and fittings, and replace immediately. Do not use quick detach couplings at tool. See instructions for correct set-up.



Do not operate a damaged or worn tool. Do not use quick-detach couplings at tool. See instructions for correct set-up.

Place tool on the work before starting the tool. Do not point or indulge in any horseplay with this tool.



Slipping, tripping and/or falling while operating air tools can be a major cause of serious injury or death. Be aware of excess hose left on the walking or work surface.

Keep body working stance balanced and firm. Do not overreach when operating the tool.

Place the tool on the work before starting the tool. Do not point or indulge in any horseplay with this tool.

Anticipate and be alert for sudden changes in motion during start up and operation of any power tool.



Tool shaft may continue to rotate briefly after throttle is released. Avoid direct contact with accessories during and after use. Gloves will reduce the risk of cuts or burns.

Keep the tool in efficient operating condition.



Ensure the MAX rating (RPM) of the sanding accessories is higher than the tools rated RPM.

Sanding against sharp corners may damage the pad, rendering it useless.

Use only a sanding pad & sandpaper with this tool.

Do not force tool beyond its rated capacity.

Do not lock, tape or wire the "on/off" safety lever in the "on" position, as the lever must be free to return to the "off" position when released.



Do not carry tool by the hose. Protect the hose from sharp objects and heat.



Keep away from rotating end of tool. Do not wear jewelry or loose clothing. Secure long hair. Scalping can occur if hair is not kept away from tool and accessories. Choking can occur if neckwear is not kept away from tool and accessories.



This tool is not insulated against electric shock.



This tool must not be used in explosive atmospheres.



Do not lubricate tools with flammable or volatile liquids such as kerosene, diesel or jet fuel.

Use replacement parts and accessories recommended by Carlyle Tools.

Servicing and repairs should only be made by an authorized service center.

Do not use (or modify) the tool for any other purpose than that for which it was designed without consulting the manufacturer's authorized representative.

Do not remove any labels. Replace damaged labels.

Failure to heed these warnings may result in personal injury and/or property damage.



WARNING: This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.


OPERATING MANUAL FOR CPTS3813, CPTS1218

// AIR SUPPLY

Tools operate on a wide range of air pressures. It is recommended that air pressure measures 90 PSI at the tool with the trigger fully depressed and no load applied to the tool. Low pressure (under 90 psig; 6.2 bar) reduces the speed of all air tools. Low air pressure not only wastes time, but also costs money. Higher pressure (over 90 psig; 6.2 bar) raises performance beyond the rated capacity of the tool, which will shorten tool life and could cause injury. The recommended hookup procedure can be viewed in the above figure.

Always use clean, dry air. Dust, corrosive fumes, and/or water in the air line will cause damage to the tool. Drain the air tank daily. Clean the air inlet filter screen at least once per week.

The air inlet used for connecting the air supply has standard 1/4" NPT American Thread. Line pressure should be increased to compensate for unusually long air hoses (over 25 feet). Minimum hose diameter should be 3/8" I.D. Fittings should have the same inside dimensions and should be tightly secured. Ensure an accessible emergency shut off valve has been installed in the air supply line and make others aware of its location.

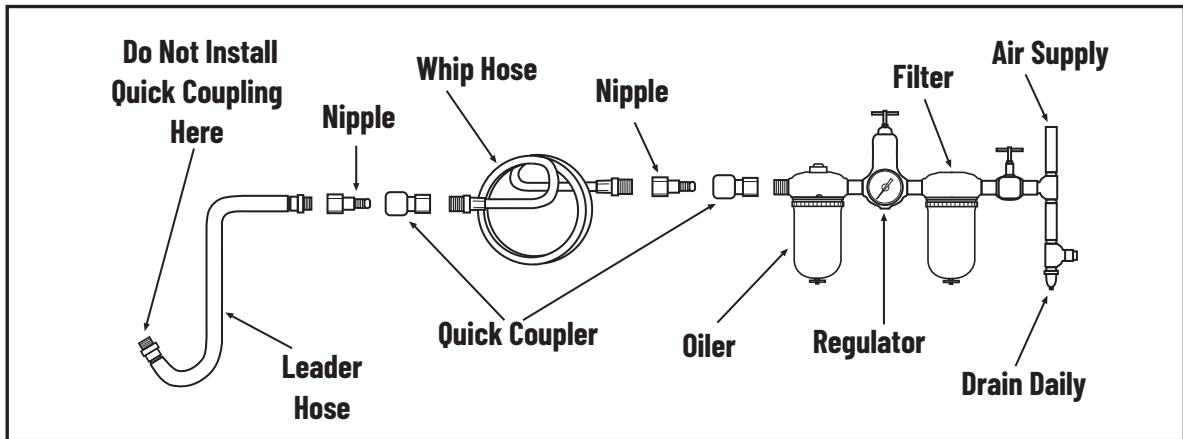

// LUBRICATION

Lubricate the air motor daily with NAPA air tool oil. If no air line oiler is used, run 1/2 oz. of oil through the tool. The oil can be squirted into the tool air inlet or into the hose at the nearest connection to the air supply, then run the tool.

WARNING: After an air tool has been lubricated, oil will discharge through the exhaust port during the first few seconds of operation. The exhaust port must be covered with a towel before applying air pressure to prevent serious injury.


// OPERATION

Always turn off the air supply, drain hose of air pressure and detach tool from air supply before installing, removing or adjusting any part or accessory on this tool, or before performing any maintenance on this tool.

NOTE: During operation, safety goggles should always be worn to guard against flying debris (users & bystanders).

INSTALLING SANDING BELT

1. Disconnect air supply
2. Remove rubber cover
3. Compress arm to the locked position
4. Slide belt over drive wheel and then over the contact wheel
5. Press the bottom of the stopper lever to release tension to the belt.
6. Replace rubber cover. After mounting sandpaper, start this Sander under a bench in order to make sure sandpaper is firmly attached.

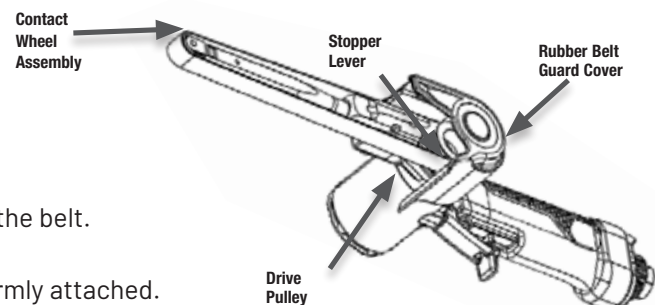


OPERATING MANUAL FOR CPTS3813, CPTS1218



OPERATION


ADJUST BELT TRACKING

1. CRITICAL – Loosen set screw first with 2mm hex key
2. Slightly depress throttle to run the tool slowly and adjust tracking to center the belt visually by turning hex screw (2mm hex key) CW or CCW
3. Once the belt is centered re-tighten the uppermost set screw with 2mm hex key

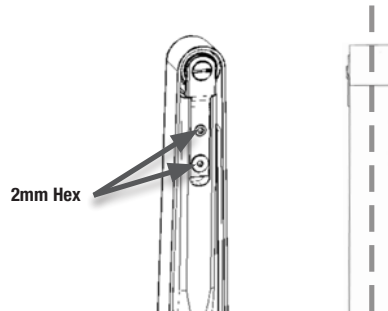


CONTACT WHEEL REPLACEMENT

1. Disconnect air supply
2. Remove belt
3. Using a flat bladed screwdriver unscrew (CCW) the contact wheel screw
4. Remove the old contact wheel and replace with new contact wheel
5. Re-install contact wheel screw and do not overtighten to avoid stripping threads
6. Re-install belt and adjust tracking per TRACKING ADJUSTMENT instructions
7. Replace rubber belt guard cover.

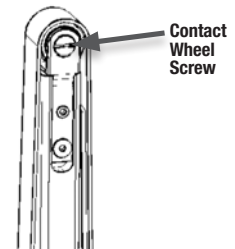


BELT ARM ASSEMBLY REPLACEMENT

1. Disconnect air supply
2. Remove rubber belt guard cover and belt
3. Remove the belt arm assembly by removing the arm assembly screw with 2mm hex key
4. Install new arm assembly
5. Torque to 25 in-lbs
6. Reinstall belt and replace rubber belt guard cover per
7. Adjust tracking if necessary.

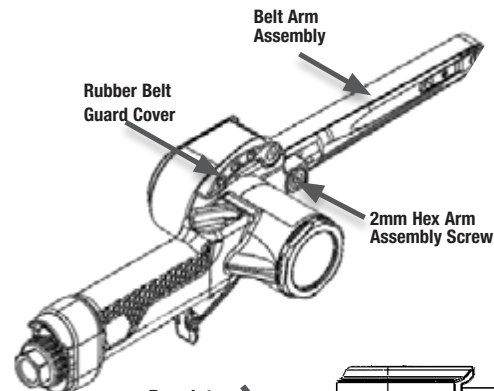



SPEED ADJUSTMENT

1. Turn the regulator knob counter clockwise to reduce speed
2. Turn the regulator knob clockwise to increase speed
3. Feather the speed in any setting via the throttle

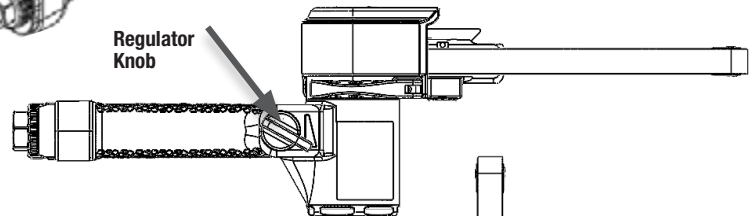

BELT ARM ASSEMBLY ROTATION

1. To improve accessibility, or improve comfort, rotate the belt arm assembly with the quick lever design
2. Open the lever by pulling upwards
3. Rotate belt arm assembly to desired position
4. Make sure the arm assembly is tight against the motor housing to maintain belt alignment
5. Close lever by pushing down
6. If arm assembly still rotates, tighten the lever set screw with a 2mm hex key

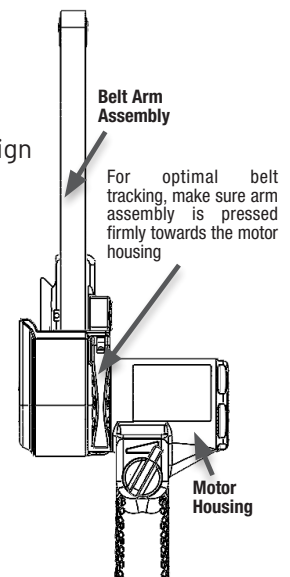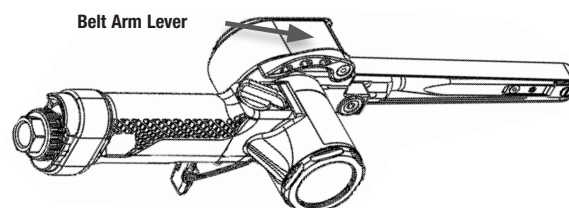

OPERATING MANUAL FOR CPTS3813, CPTS1218



TROUBLESHOOTING

IMPACT WRENCHES

TOOL DOES NOT RUN OR RUNS SLOWLY, AND/OR AIR FLOWS ONLY SLIGHTLY FROM EXHAUST — This condition is probably caused by insufficient air pressure, contaminants blocking the airflow or operation of motor parts, or a power regulator which has vibrated to a closed position.

YOU SHOULD: Check the air supply for sufficient pressure. Check the air inlet strainer for blockage. Pour a generous amount of air tool oil into air inlet. Operate tool in short bursts, in both forward and reverse directions. Repeat if necessary. If tool performance does not improve, the tool should be serviced by an authorized service center.

TOOL WILL NOT RUN, EXHAUST AIR FLOWS FREELY. This condition is probably caused by one or more rotor vanes stuck on accumulated sludge or varnish; motor rusted.

YOU SHOULD: Pour a generous amount of air tool oil into air inlet. Operate tool in short bursts in both forward and reverse directions. Lightly tap the motor housing with a plastic mallet. Detach the air supply. Try to free the motor by turning the drive shaft manually, if possible. If the tool remains jammed, it should be serviced by an authorized service center.

SOCKETS WILL NOT STAY ON. This condition is probably caused by a worn socket retainer ring or a soft backup o-ring

YOU SHOULD: Wear safety goggles. Detach the air supply. Using external retaining ring pliers, remove the old retaining ring. While holding the square drive with an appropriate wrench, use a small screwdriver to pry old retainer ring out of its groove. Always pry the ring away from your body, because it can be propelled outward at high velocity. Replace the backup o-ring and retainer ring with correct new parts (see breakdown). Place the retaining ring on a table and press the tool anvil into the ring with a rocking motion. Snap the ring into the groove by hand.

PREMATURE ANVIL WEAR. This is probably caused by using chromed sockets, which are not designed for use with impact tools, or worn sockets

YOU SHOULD: Stop using chrome sockets. Chrome sockets have a hard exterior surface and a soft core, which leads to a warped but very hard drive hole when used with impact tools. Chrome sockets will wear wrench anvils quickly and present a danger of splitting or breakage which can lead to injury or death.

TOOL SLOWLY LOSES POWER BUT RUNS AT FULL SPEED WHEN NOT UNDER LOAD. This condition is probably caused by worn clutch parts, inadequate lubrication, or worn engaging cam.

YOU SHOULD: FOR OIL LUBED WRENCHES: Check for presence of clutch oil (where oil is specified for the clutch) and remove oil fill plug. Tilt to drain all of the oil from the clutch case. Refill the case with NAPA air tool oil or that recommended by the manufacturer in the specified amount. Also check for excess clutch oil. Clutch cases only need to be filled 50%, and overfilling can cause drag on high speed clutch parts. A typical 1/2" Drive oil lubed wrench only requires 1/2 ounce of clutch oil. FOR GREASE LUBED WRENCHES: Check for excess grease by rotating drive shaft by hand. It should rotate freely, and excess grease is usually expelled automatically.

TOOL WILL NOT SHUT OFF. This condition is probably caused by a broken or misaligned throttle valve O-ring, or a bent or jammed throttle valve stem.

YOU SHOULD: Remove the throttle assembly and install a new o-ring. Lubricate the assembly with air tool oil and operate the trigger briskly. If operation cannot be restored, the tool should be serviced at an authorized service center.

AIR RATCHETS

MOTOR RUNS. SPINDLE DOESN'T TURN, OR TURNS ERRATICALLY — This condition is probably caused by worn teeth on the ratchet or pawl, a broken or weak pawl pressure spring, or weak drag springs which fail to hold the spindle while the pawl advances.

YOU SHOULD: Have replacement parts installed by an authorized service center.

TOOL DOESN'T RUN, RATCHET HEAD INDEXES CRISPLY BY HAND — This condition is probably caused by the accumulation of dirt or sludge in motor parts

YOU SHOULD: Pour a generous amount of air tool oil into the air inlet. Operate the throttle in short bursts. With the tool engaged on a bolt, alternately tighten and loosen the bolt by hand. If the tool remains jammed, it should be serviced at an authorized service center

AIR DRILLS

TOOL WILL NOT RUN, RUNS SLOWLY, AIR FLOWS SLIGHTLY FROM EXHAUST, SPINDLE TURNS FREELY — This condition is probably caused by a blocked air passage or jammed motor parts.

YOU SHOULD: Check the air inlet for blockages. Pour a generous amount of air tool oil into air inlet. Operate the trigger in short bursts. Detach the air supply. Turn the empty and closed drill chuck by hand. Reconnect air supply. If the tool's performance does not improve, it should be serviced by an authorized service center.

TOOL WILL NOT RUN. AIR FLOWS FREELY FROM EXHAUST. SPINDLE TURNS FREELY. This condition is probably caused by a broken rotor vane or jammed or broken gears.

YOU SHOULD: Pour a generous amount of air tool oil into air inlet. Operate the trigger in short bursts. Detach the air supply. Turn the empty and closed drill chuck by hand. Reconnect air supply. If the tool's performance does not improve, it should be serviced by an authorized service center.

TOOL SEIZED. SPINDLE WILL NOT

TURN — This condition is probably caused by a broken rotor vane or jammed or broken gears. **YOU SHOULD:** Have the tool serviced by an authorized service center.

OPERATING MANUAL FOR CPTS3813, CPTS1218



TROUBLESHOOTING

TOOL WILL NOT SHUT OFF – The throttle valve o-ring has probably come unseated.

YOU SHOULD: Replace the o-ring (see breakdown) or have tool serviced by an authorized service center.

AIR HAMMERS

TOOL WILL NOT RUN – This condition is probably caused by a clogged cycling valve or throttle valve.

YOU SHOULD: Check the air inlet for blockages. Pour a generous amount of air tool oil into air inlet. Operate the trigger in short bursts with the chisel in place and against a solid surface. Detach the air supply. Tap the nose or barrel lightly with a plastic mallet, reconnect the air supply, and repeat above steps. If the tool is still seized, insert a 6" piece of 1/8" diameter rod in the nozzle and lightly tap to loosen the piston in the rear direction. Reconnect air supply and repeat above steps.

CHISEL STUCK IN NOZZLE– This condition is probably caused by a deformed shank.

YOU SHOULD: Have tool serviced by an authorized service center.

NOTE: DISASSEMBLY OF THIS TOOL BY ANY OTHER THAN AN AUTHORIZED SERVICE CENTER WILL VOID THE WARRANTY ON THIS TOOL.

SANDERS/GRINDERS

TOOL HAS NO POWER OR RUNS SLOWLY. This condition is probably caused by insufficient air pressure, contaminants blocking the air flow, or speed regulator that has vibrated to a closed or off position.

YOU SHOULD: Check the air supply at the compressor and air lines to the tool for sufficient air pressure. Check the air inlet strainer for blockage and make sure speed regulator is in the open or on position. If power is not restored the tool should be serviced by an authorized service center.

TOOL SEIZED. PAD/SPINDLE WILL NOT TURN. This condition is probably caused by a broken rotor vane, jammed or broken gears, or seized bearing.

YOU SHOULD: Have the tool repaired by an authorized service center.

TOOL WILL NOT SHUT OFF/RUNS CONTINUOUSLY. The throttle valve seat has become loose or damaged.

YOU SHOULD: Replace o-ring or valve seat (see breakdown for proper parts) or have tool serviced by an authorized service center.

SANDS/GRINDS UNEVENLY. This condition is usually caused by loose pad/disc connection or worn or damaged pad/disc.

YOU SHOULD: Check pad/disc connection, ensure that connection is secure and tight. Replace worn or damaged pad/disc.

OPERATING MANUAL FOR CPTS3813, CPTS1218



WARRANTY


Important: DO NOT RETURN PRODUCT TO PLACE OF PURCHASE.

WARRANTY POLICY: This Carlyle Air Tool is warranted against defects in material and workmanship for a period of One (1) Year from the date of original purchase. We will replace, at our option, any part which proves to be defective in material or workmanship. Repairs or replacements are warranted as described above for the duration of the original warranty period. In the unlikely event a replacement unit is required during this One (1) year period, return the unit to your local NAPA Auto Parts Store for a replacement. This warranty does not apply to products which have been subjected to abuse, misuse, modification, neglect, lack of maintenance, use in a production-related service, or repaired by anyone other than an Authorized Carlyle Air Tool Service Center.

For complete listing of Authorized Master Repair Centers, see enclosed Customer Warranty Repair Form, or visit www.toolwarrantyrepair.com

PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.

// EXPLODED TOOL PARTS DIAGRAM

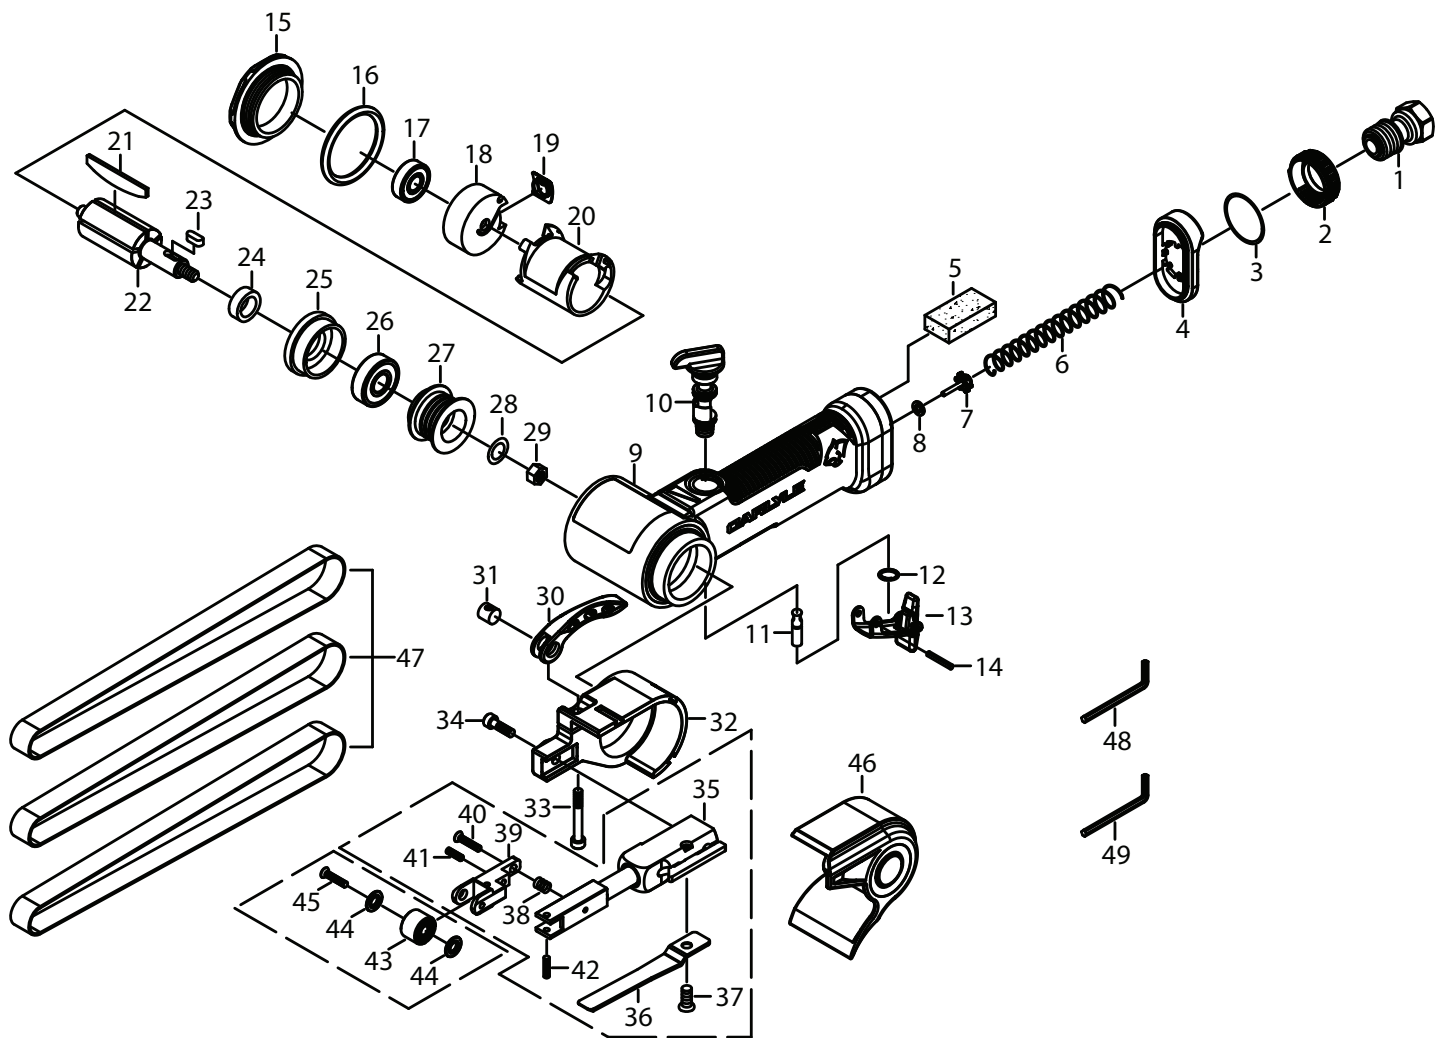


PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.



TOOL PARTS LIST

REF#	PART#	DESCRIPTION	QTY	REF#	PART#	DESCRIPTION	QTY
1	RS115401	AIR INLET	1				
2	RS115402	EXHAUST SLEEVE	1	51	RS030142A	"CONTACT WHEEL ASSEMBLY " (Metal Contact Wheel 3/8" x 13" Belts)"	1
3	RS115403	O-RING	1	n/s	RSCPTS3813PWL	PRODUCT WARNING LABEL	1
4	RS115404A	EXHAUST COVER SET	1	Also Available: RS030139A - CONTACT WHEEL ASSEMBLY (Rubber Coated Contact Wheel for 3/8" x 13" Belts)"			
5	RS251621	SILENCER	1				
6	RS030104	SPRING	1				
7	RS288315	VALVE	1				
8	RS820R15	WASHER	1				
9	RS115409	HOUSING	1				
10	RS115410	REGULATOR SET	1				
11	RS409003	VALVE STEM SET	1				
12	RS246515	SNAP RING	1				
13	RS115413	SAFTY THROTTLE LEVER	1				
14	RS287501	SPRING PIN	1				
15	RS030110	CAP	1				
16	RS030111	O-RING	1				
17	RS21114	BEARING (626ZZ)	1				
18	RS409005	REAR PLATE	1				
19	RS409006	PACKING	1				
20	RS115420	CYLINDER SET	1				
21	RS030114	ROTOR BLADE (EACH)	6				
22	RS030115	ROTOR	1				
23	RS030116	KEY	1				
24	RS820R25	BEARING SPACER	1				
25	RS030117	FRONT PLATE	1				
26	RS10920	BEARING (6000ZZ)	1				
27	RS115427	DRIVE PULLEY	1				
28	RS030119	WASHER	1				
29	RS030120	NUT	1				
30	RS030121	TRIGGER	1				
31	RS187551	BUSHING	1				
32	RS030122	GUARD HUB	1				
33	RS115433	SCREW	1				
34	RS030126	SCREW	1				
46	RS115446	GUARD COVER	1				
47		SANDING BELT (40#)	1				
		SANDING BELT (60#)	1				
		SANDING BELT (80#)	1				
48	RS030128	HEX (2mm)	1				
49	RS288548	HEX (3mm)	1				
50	RS030138B	BELT ARM ASSEMBLY (3/8" x 13") Incl. #35-#45	1				

PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.

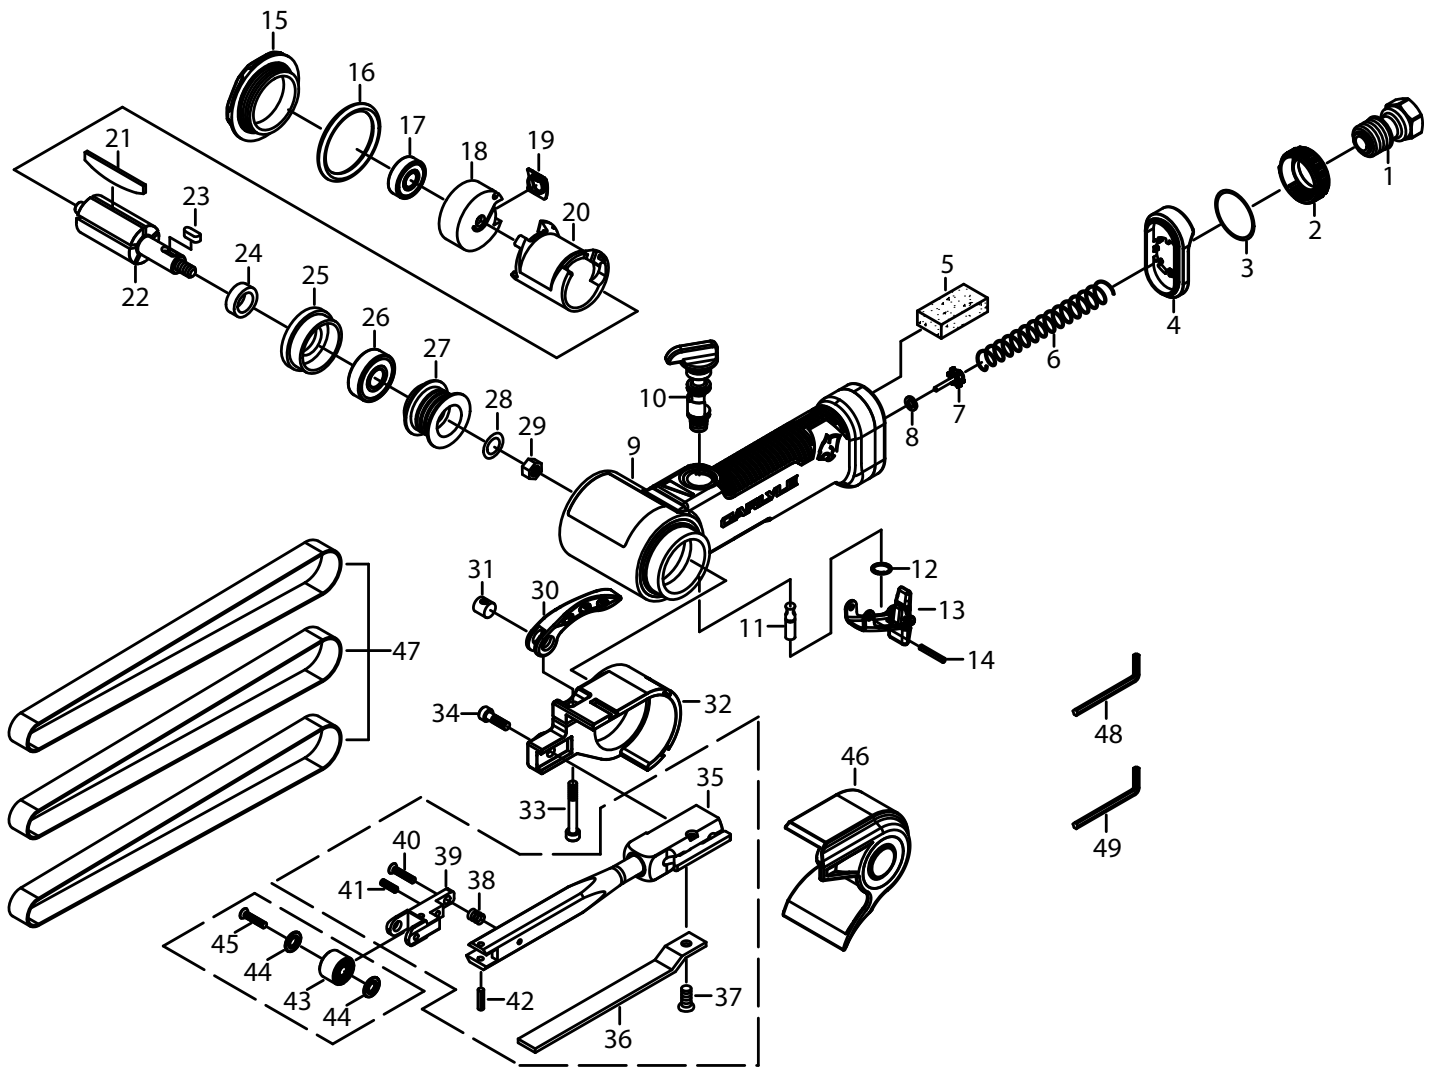

PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.



TOOL PARTS LIST

REF#	PART#	DESCRIPTION	QTY
1	RS115501	AIR INLET	1
2	RS115502	EXHAUST SLEEVE	1
3	RS115503	O-RING	1
4	RS115404A	EXHAUST COVER SET	1
5	RS251621	SILENCER	1
6	RS030104	SPRING	1
7	RS288315	VALVE	1
8	RS820R16	WASHER	1
9	RS115509	HOUSING	1
10	RS115510	REGULATOR SET	1
11	RS409003	VALVE STEM SET	1
12	RS246515	SNAP RING	1
13	RS115513	SAFTY THROTTLE LEVER	1
14	RS621011	SPRING PIN	1
15	RS030110	CAP	1
16	RS030111	O-RING	1
17	RS21114	BEARING (626ZZ)	1
18	RS409005	REAR PLATE	1
19	RS409006	PACKING	1
20	RS115520	CYLINDER SET	1
21	RS030114	ROTOR BLADE (EACH)	6
22	RS030115	ROTOR	1
23	RS030116	KEY	1
24	RS820R26	BEARING SPACER	1
25	RS030117	FRONT PLATE	1
26	RS10920	BEARING (6000ZZ)	1
27	RS115527	DRIVE PULLEY	1
28	RS030119	WASHER	1
29	RS030120	NUT	1
30	RS030121	TRIGGER	1
31	RS187551	BUSHING	1
32	RS030122	GUARD HUB	1
33	RS115533	SCREW	1
34	RS030126	SCREW	1
46	RS115546	GUARD COVER	1
47		SANDING BELT (40#)	1
		SANDING BELT (60#)	1
		SANDING BELT (80#)	1
48	RS030128	HEX (2mm)	1
49	RS288548	HEX (3mm)	1
50	RS030138B	BELT ARM ASSEMBLY (1/2" x 18") W/ RUBBER COATED CONTACT WHEEL	1

REF#	PART#	DESCRIPTION	QTY
51	RS030141A	RUBBER COATED CONTACT WHEEL ASSEMBLY (1/2" X 18")	1
N/S	RSCPTS1218PWL	PRODUCT WARNING LABEL	1

Also Available: RS030143A - CONTACT WHEEL ASSEMBLY
(metal wheel assembly for 1/2" X 18")

PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.



CARLYLE®

BUILT DIFFERENT

844.902.6900

CARLYLETOOLS.COM

Distributed by: // Distribuido por: // Distribué par:
Genuine Parts Company, Atlanta, GA 30339, USA
Made in Taiwan • Fait en Taiwan • Hecho en Taiwan