PUNCH AND FLANGE TOOL

— 5/16"(8mm)Punch Type —

Model #APF 600A

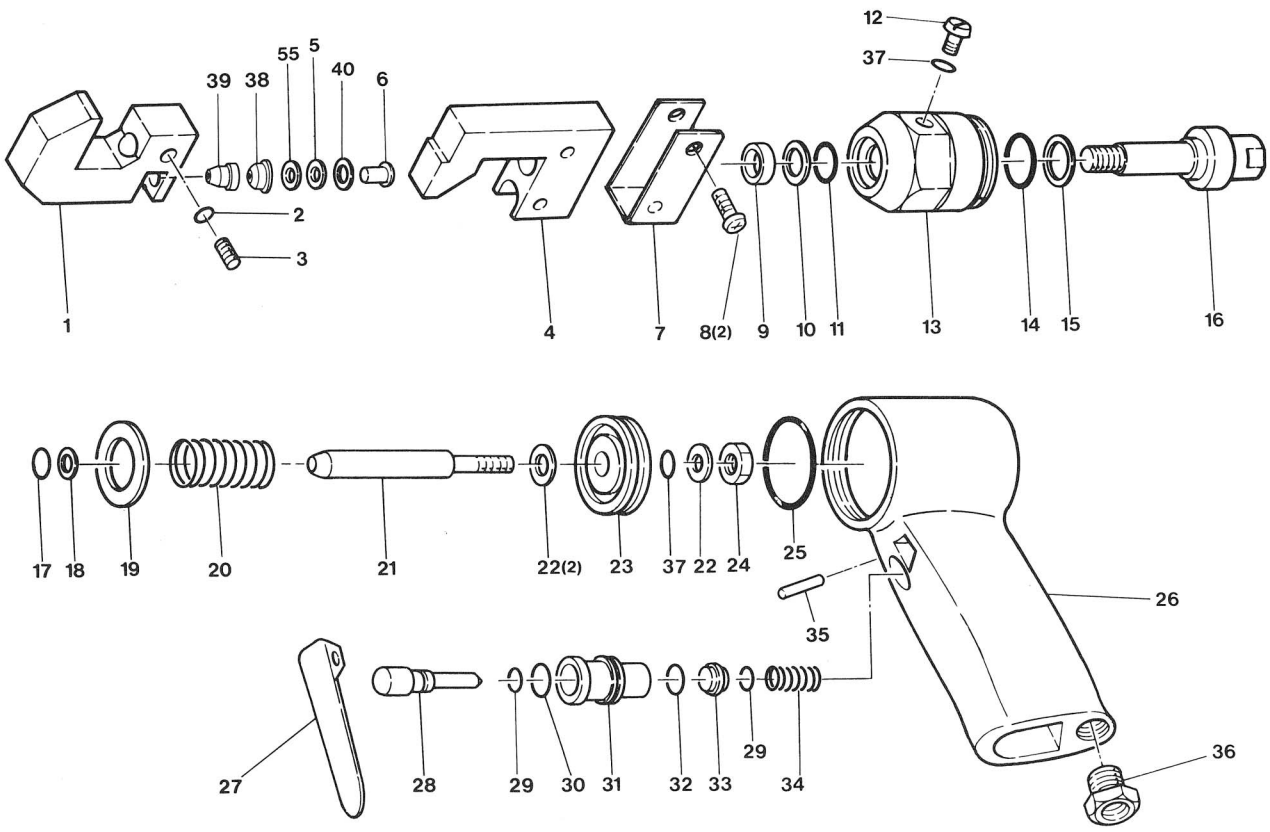

PARTS LIST:

Fig.	Parts No.	Description
1	APF600-01A	Clamp A
2	APF600-02	Bass Seal
3	APF600-03	Clamp A Set Screw
4	APF600-04A	Clamp B
5	APF600-05A	Spring Washer (Thin) (10)
6	APF600-06A	Punch Pin
7	APF600-07A	Guard
8	APF600-08	Guard Screw (2)
9	APF600-09	Housing Oil Seal
10	APF600-10	Back Up O-Ring (P-12)
11	APF600-11	Back Up Ring (P-12)
12	AW136-49	Oil Plug
13	APF600-13	Piston Housing
14	APF600-14	Back Up O-Ring (P-28)
15	APF600-15	Back Up Ring (P-28)
16	APF600-16	Hydraulic Piston
17	AR133-06	Back Up O-Ring (P-8)
18	APF600-18	Back Up Ring (P-8)
19	APF600-19	Piston Spacer
20	APF600-20	Piston Rod Spring
21	APF600-21	Piston Rod
22	APF600-22	Piston Rod Water (2)
23	APF600-23	Air Piston
24	APF600-24	Piston Rod Nut
25	APF600-25	Piston O-Ring
26	APF600-26	Body
27	AR134-05	Throttle Lever
28	APF600-28	Throttle Valve Pin
29	AW145-007	Throttle Valve O-Ring (2)
30	AD527-30	Throttle Bushing O-Ring
31	APF600-31	Throttle Bushing
32	AR760-03	Body Seal O-Ring
33	AR133-08	Throttle Valve
34	AR133-07	Throttle Valve Spring
35	ADG200-10	Throttle Lever Pin
36	AR134-01	Inlet Bushing
37	AR134-08	Oil Plug O-Ring
38	APF600-38A	Upper Punch Bushing
39	APF600-39A	Lower Punch Bushing
40	APF600-40A	Washer
55	APF600-55	Spring Washer (Thick) (2)

PUNCH/DIE REPLACEMENT KIT APF600A-PD

Incl: Index No's 5(10), 6, 38, 39, 40, 55(2)