


Install Guide

1) Attach the Posi-Tap to the JB4's power wire (2nd image) then attach the Connect Kit's blue wire to it.

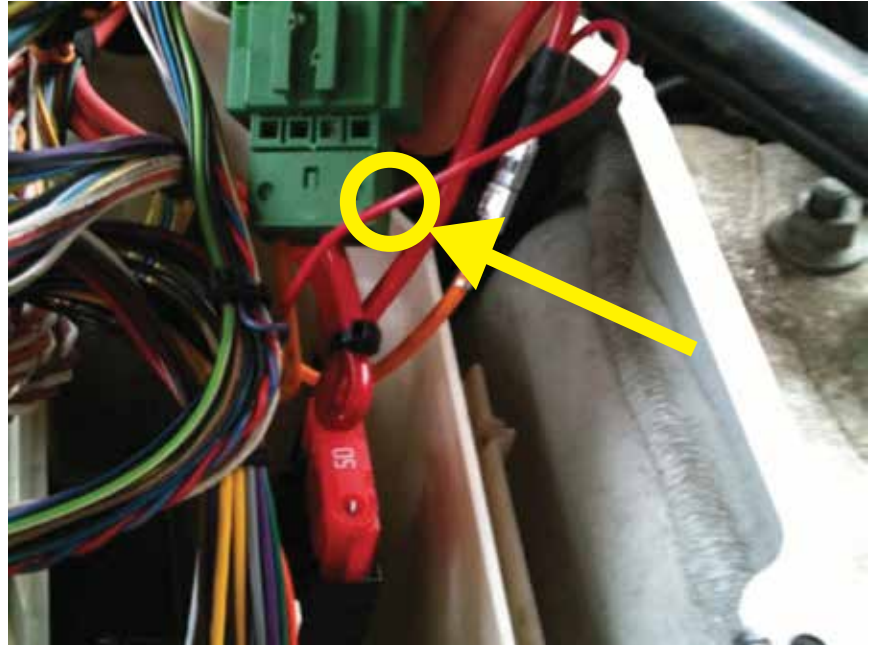

2) Plug the Connect Kit's DB9 connector into the JB4 and ensure both screws are secure.

*****Very Important*****

3) Ensure the Connect Kit ***IS NOT*** in direct contact with the metal JB4 enclosure or any other nearby metal. Aim the smaller side of the Connect Kit (circled below) **DIRECTLY** towards the driver's seat for best signal quality. Failure to do this may lead to connectivity issues.

