

\*\*\*\*\*

If your kit came with a black wire, simply put electrical tape over the end and disregard it.

Attach the Posi-Tap to the JB4's power wire (2nd image) then attach the JB4 Connect Kit's blue wire.

**Posi-Tap™**  
TAP CONNECTOR

- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- REUSABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED


**POWERS UP TO (4) LEADS AT ONCE!**

**QUICK & EASY**

- 1** Insert Hot Wire
- 2** Tighten
- 3** Strip Leads
- 4** Insert & Tighten

**NO CRIMPING**

**NO TOOLS NEEDED**

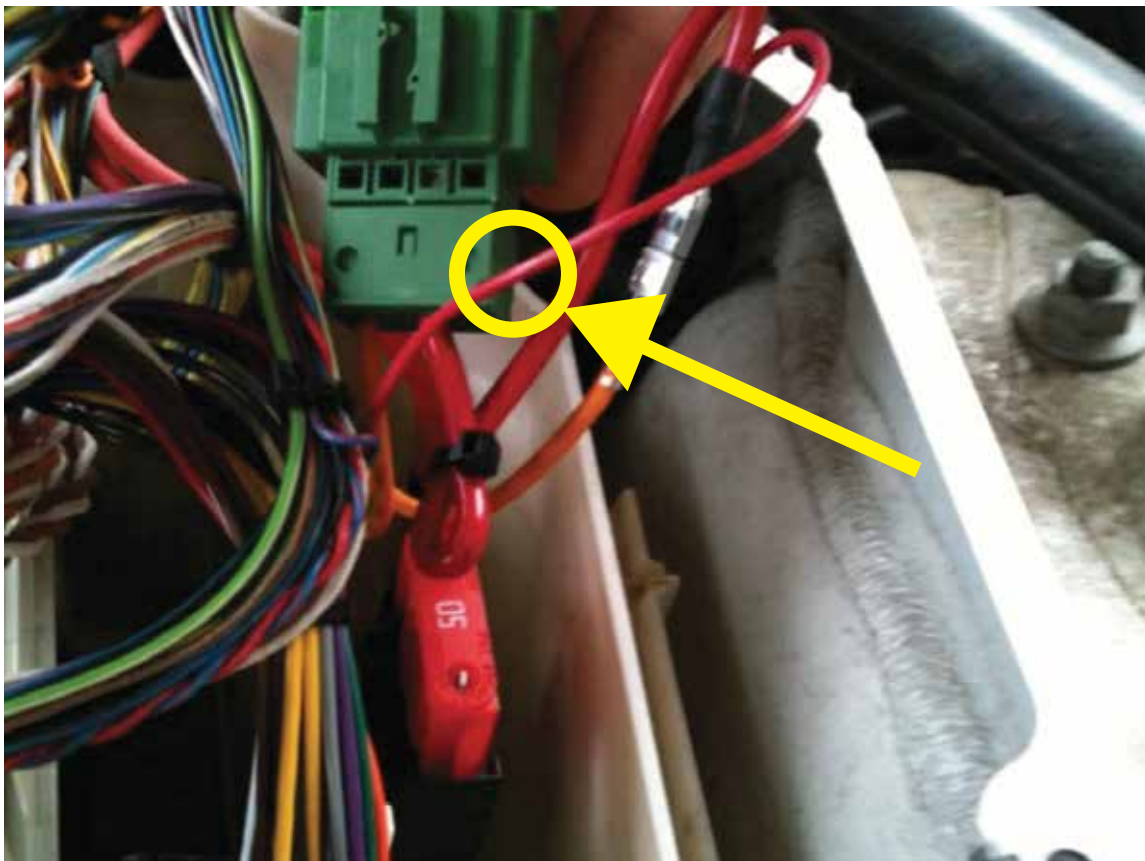

Plug the Connect Kit's DB9 connector into the JB4 and ensure it is screwed in.