



GOLDBERG BROTHERS

BARN DOOR HARDWARE

08/18

MP SERIES CATALOG





GOLDBERG BROTHERS

BARN DOOR HARDWARE

MP SERIES CATALOG

TABLE OF CONTENTS

Hardware sets	2	Flush pulls	5
Flat track	2	Privacy latch	5
Roller hangers	2	Pull and latch templates	5
MP Series accessories	3	Installation guides	6
Dealer displays	4	Warranty	16
Door pull handles	5	Color samples	inside back cover

Put your customers on the right track. Give them the quality and convenience of Goldberg Brothers barn door hardware. Our award-winning products help make efficient use of any indoor living or working space. Our rustic, yet elegant, industrial design provides a bold focal point to any décor.

We designed our MP Series barn door hardware product line for large construction and remodeling projects such as apartment complexes, hotels and office buildings, or anywhere cost is a concern and customization options are less of a priority. Designed to fit the most commonly used door sizes, MP Series products are a better value and outperform inferior, imported hardware. MP Series roller hangers are factory equipped with silent rollers. Hardware, hangers, and track are available in 3 of our most popular powder coat colors. All major steel components are made with up to 90% recycled materials.

Goldberg Brothers products have been proudly made in USA since 1897. Our commitment to quality, craftsmanship and value is built into everything we do.

MP SERIES: HARDWARE SETS AND HANGERS

Straight Strap Hardware Set (complete less track)

weight limit 125 lb



for 1½" to 1¾" thick doors

6008H-*

Set includes:

- 2 straight strap hangers with bolts and nuts
- wall mounting hardware set (6 lag bolts, spacers and washers)
- 2 track stops
- 2 anti-jump blocks with screws
- floor guide (T) with screws
- felt pads

Top Mount Hardware Set (complete less track)

weight limit 75 lb



for most common door sizes

6008HTM-*

Set includes:

- 2 over-track door hangers with screws
- wall mounting hardware set (6 lag bolts, spacers and washers)
- 2 track stops
- 2 anti-jump blocks with screws
- floor guide (T) with screws
- felt pads

Horseshoe Hardware Set (complete less track)

weight limit 250 lb



for 1½" to 1¾" thick doors

6008H2-*

Set includes:

- 2 horseshoe hangers with bolts and nuts
- wall mounting hardware set (6 lag bolts, spacers and washers)
- 2 track stops
- 2 anti-jump blocks with screws
- floor guide (T) with screws
- felt pads

MP Series Track



4' (for 2'0" wide door)		6008T4-*
4'8" (for 2'4" wide door)		6008T48-*
5' (for 2'6" wide door)		6008T5-*
5'4" (for 2'8" wide door)		6008T54-*
6' (for 3'0" wide door)		6008T6-*
7' (for 3'6" wide door)		6008T7-*
8' (for 4'0" wide door)		6008T8-*
biparting 6' (for pair of 1½' wide doors)		6008T6P-*
biparting 8' (for pair of 2' wide doors)		6008TRP-*
Long lengths	8'1" to 10'	6008T100-*
	10'1" to 16'	6008T160-*
Custom cut service (Order a standard track length longer than what you need. We will cut it down to the correct size for you.)	1 to 5 pieces	6001CCT1
	6 to 11 pieces	6001CCT2
	12 or more pieces	6001CCT4

Straight Strap Hanger (1 each, with bolts and nuts)



1½" x 9½" x 1¼"

6008R-*

Top Mount Hanger (1 each, with screws)



3½" x 4" x 1½"

6008RTM-*

Horseshoe Hanger (1 each, with bolts and nuts)




6" x 8¾" x 1¼"

6008R2-*

Replace the * in the part's catalog number with the code letter for the desired color when ordering. Silver Metallic=1, Black=6, Arch. Bronze=8

MP SERIES: TRACKS AND ACCESSORIES

Soft Stop (set of 2, with triggers and screws)

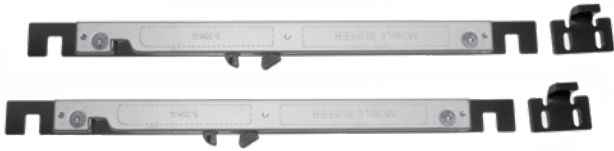

11" between center points of lag bolts (for tracks up to 7')	6008SOFT11
17" between center points of lag bolts (for tracks up to 8'+)	6008SOFT17

Track Stop (1 each)



1½"×1½"×¾"

6008S-*

Track Connecting Plate (1 each)



2¾"×1½"

6008C-*


Anti-Jump Blocks (clear acrylic, set of 2, with screws)



1"×1"×¼" each

6008J

Hollow Core Support Plate (set of 2)

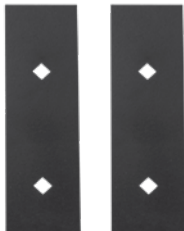

1½"×5" each

6008HCP-*

Wall Mounting Kit (set of 6 lag bolts, 6 washers, 18 spacers)



6008M-*

Floor T-Guide (aluminum, 1 each, with screws)



1½"×1½"×1"

6001G-*

T-Guide, 24" Long (aluminum, 1 each, with screws)



1½"×24"×1"

6001G2-*

Replace the * in the part's catalog number with the code letter for the desired color when ordering. Silver Metallic=1, Black=6, Arch. Bronze=8

MP SERIES: ACCESSORIES & DISPLAYS

Sidewall Bracket (1 each, with screws and nuts)

1½"×2"×2"



6001SW-*

Adjustable U-Guide (2 pieces, with screws)

⅞"×1"×1½"each



6001U-*


Touch-up Paint (1 bottle, with brush)

0.6 fl oz



6001P-*

MP Series Sales Kit

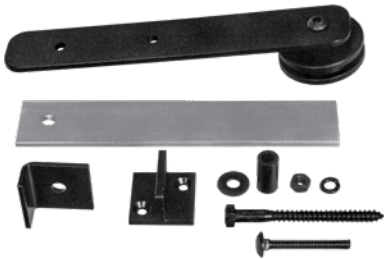

6008SK

MP Series Mini Display Panel

17"×10½"×3"




6008HDP

Replace the * in the part's catalog number with the code letter for the desired color when ordering. Silver Metallic=1, Black=6, Arch. Bronze=8

MP SERIES: PULL HANDLES, FLUSH PULLS & LATCHES

Pull Handle 7" (1 each, with bolts, washers and nuts)

See page 13 for dimensions

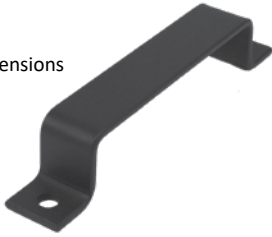

for 1 $\frac{3}{8}$ " thick door	6001PH307-*
for 1 $\frac{1}{4}$ " thick door	6001PH407-*
for 2 $\frac{1}{4}$ " thick door	6001PH507-*
Universal (fits all 3)	6001PH007-*

Pull Handle 11" (1 each, with bolts, washers and nuts)

See page 13 for dimensions



for 1 $\frac{3}{8}$ " thick door	6001PH311-*
for 1 $\frac{1}{4}$ " thick door	6001PH411-*
for 2 $\frac{1}{4}$ " thick door	6001PH511-*
Universal (fits all 3)	6001PH011-*

Pull Handle 16" (1 each, with bolts, washers and nuts)


See page 13 for dimensions



for 1 $\frac{3}{8}$ " thick door	6001PH316-*
for 1 $\frac{1}{4}$ " thick door	6001PH416-*
for 2 $\frac{1}{4}$ " thick door	6001PH516-*
Universal (fits all 3)	6001PH016-*

6" Flush Pull (1 each, with faceplate, dust box and screws)

See page 14 for dimensions

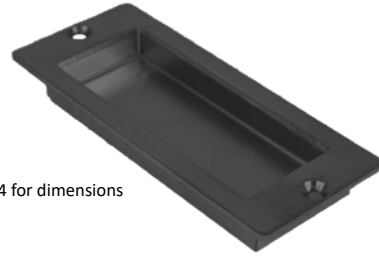

6"	6001FP06-*
----	------------

12" Flush Pull (1 each, with faceplate, dust box and screws)

See page 14 for dimensions



	6001FP12-*
--	------------

Privacy Latch (1 each, with faceplate, dust box, strike plate and screws)

See page 14 for dimensions



	6001PL-*
--	----------



Router Templates (set of 3, clear plastic)



flush pulls and privacy latch templates	6001TMP-2
---	-----------

Replace the * in the part's catalog number with the code letter for the desired color when ordering. Silver Metallic=1, Black=6, Arch. Bronze=8

Standard System Layouts

-  T-guide location (floor mount)
-  Connecting plate (track mount)

Note: the use and position of connecting plates may vary, depending on track lengths.

single door




1 standard hardware pack, 1 track = 2× the door width

single door larger than 4'




1 standard hardware pack, 2 or 3 tracks = 2× the door width, connecting plate(s), extra wall mount kit(s)

pair of biparting doors

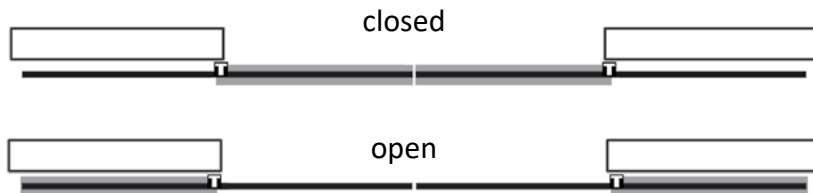

2 standard hardware packs, 2 tracks each 2× the door width, no connecting plate needed

pair of biparting doors larger than 4' each

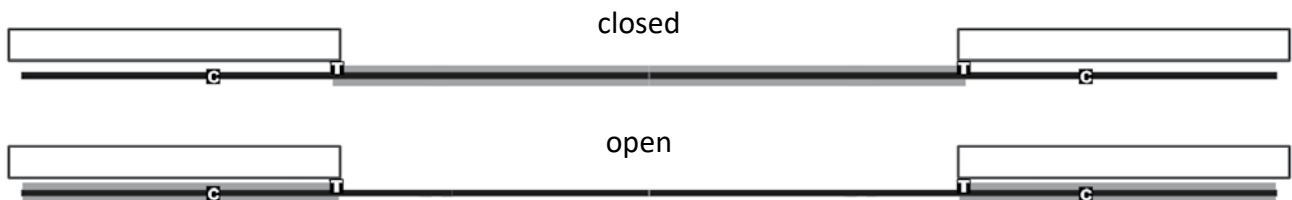

2 standard hardware packs, 4 or 6 tracks each = 2× the door width, connecting plate(s), extra wall mounting kit(s)


GOLDBERG BROTHERS, INC.

MP Series Straight Strap - Installation Instructions


Included Hardware

Straight strap hangers (2)	T-guide (1)	1 $\frac{3}{8}$ " Carriage bolts (4)	Washers (6)	Anti-jump blocks (2)	$\frac{1}{2}$ " Spacers (12)	Hex lag bolts (6)
Track stops (2)	T-guide screws (2)	1 $\frac{3}{4}$ " Carriage bolts (4)	Lock washers (4)	Anti-jump block screws (2)	1" Spacers (6)	Hex nuts (4)
Felt pads (2)						

Basic Installation Layouts

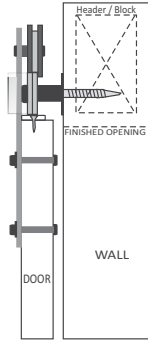

Standard Hardware Pack installed with no casing, base, or other trim.

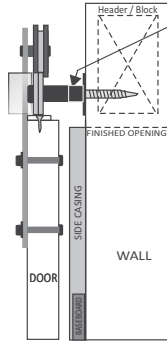

Standard Hardware Pack + $\frac{1}{2}$ " or 1" Extension Kit installed where casing, base, or other trim is $\frac{1}{2}$ " thick or greater.



$\frac{1}{2}$ " or 1" Extensions

Note: Use the provided installation layouts and table to determine which combination of spacers will be used to install the track on the wall.

Door Thickness	Extension	Spacer(s)
1 $\frac{3}{8}$ "	-	1"
1 $\frac{3}{8}$ "	$\frac{1}{2}$ "	1" + $\frac{1}{2}$ "
1 $\frac{3}{8}$ "	1"	1" + $\frac{1}{2}$ " + $\frac{1}{2}$ "
1 $\frac{3}{4}$ "	-	1" + $\frac{1}{2}$ "
1 $\frac{3}{4}$ "	$\frac{1}{2}$ "	1" + $\frac{1}{2}$ " + $\frac{1}{2}$ "


Door Prep and Hanger Installation

2 $\frac{1}{4}$ " from both sides of the top half of the door, measure down 1 $\frac{1}{2}$ " and 4" and drill $\frac{1}{8}$ " pilot holes followed by $\frac{3}{16}$ " pilot holes.

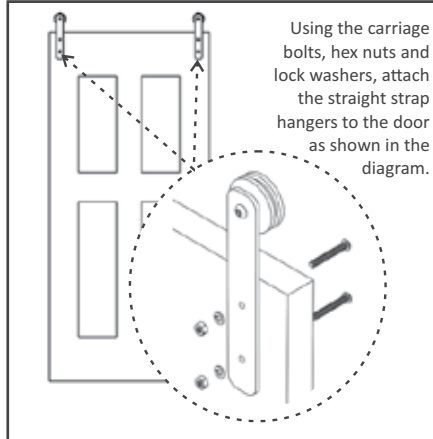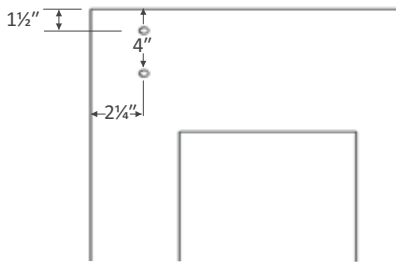


Using the carriage bolts, hex nuts and lock washers, attach the straight strap hangers to the door as shown in the diagram.

T-guide Installation

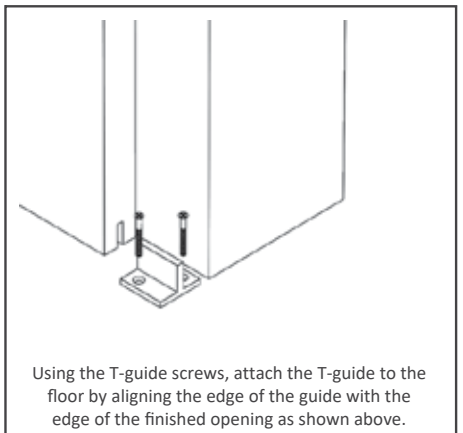


Using the T-guide screws, attach the T-guide to the floor by aligning the edge of the guide with the edge of the finished opening as shown above.

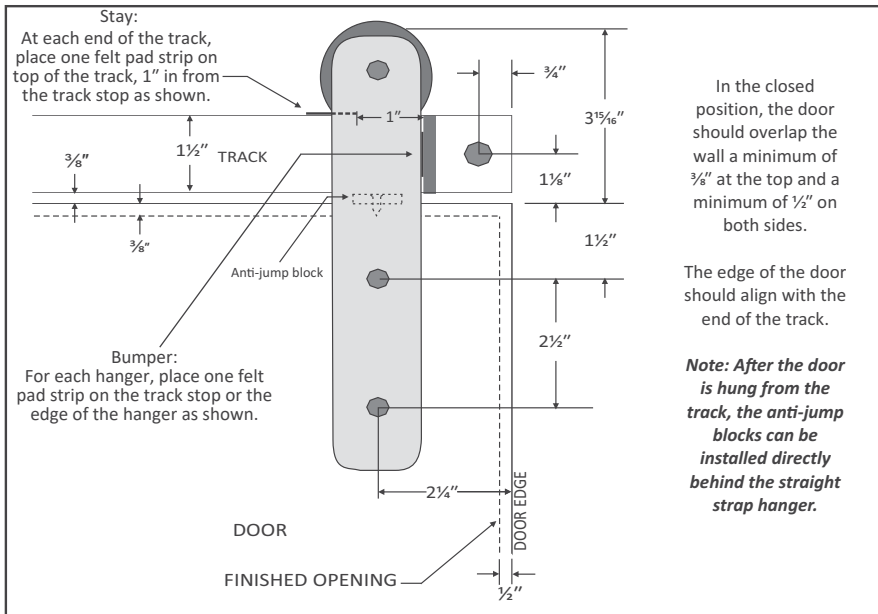

Stay:


At each end of the track, place one felt pad strip on top of the track, 1" in from the track stop as shown.

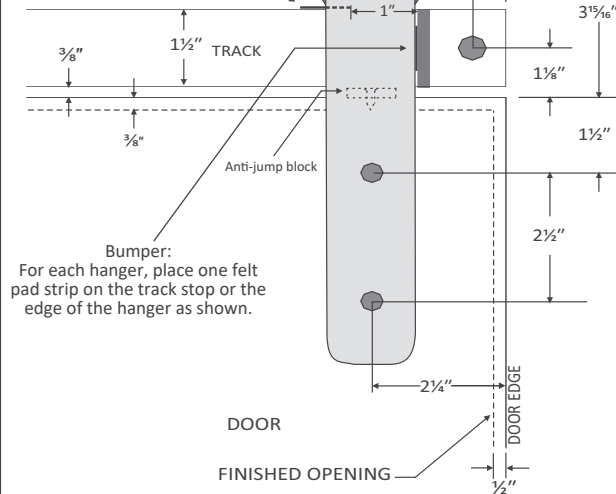

In the closed position, the door should overlap the wall a minimum of $\frac{3}{8}$ " at the top and a minimum of $\frac{1}{2}$ " on both sides.

The edge of the door should align with the end of the track.

Note: After the door is hung from the track, the anti-jump blocks can be installed directly behind the straight strap hanger.

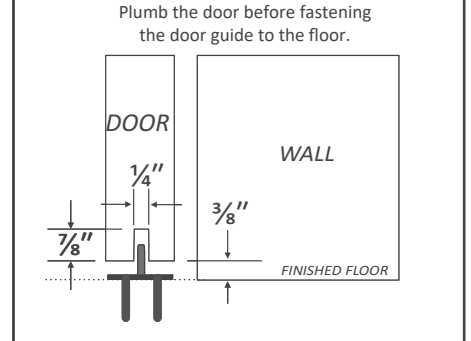

Plumb the door before fastening the door guide to the floor.

Goldberg Brothers barn door track and hardware sets come with a one-year manufacturer's warranty for defective parts under normal installation and use. Warranty is subject to repair or replacement of defective components at manufacturer's discretion and does not include installation costs.

Goldberg Brothers does not warrant the loss of finish at points where roller is in contact with track. Goldberg Barn Track is sold as a rustic finished hardware and Goldberg does not warrant the imperfections seen through the finish in the steel parts. It is part of the look.

With the exception of our stainless steel products, Goldberg Brothers does not warrant any products installed and used outdoors or where they are exposed to weather, running water or water condensation. Under these conditions, rust and other damage will naturally occur.

This warranty does not include loss or defects caused by elements outside the control of Goldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, improper installation, or anything else deemed out of the control of Goldberg Brothers, Inc.

Track Installation

Track Centerline

Mark the centerline* of the track on the wall using a level.

**The centerline of the Track is represented as the door height (DH) + 1 1/2" above finished floor.*

At each of the track connecting points, drill 1/8" pilot holes.

$DH + 1\frac{1}{2}" = \text{Track centerline}$

FINISHED FLOOR

Using a hex lag bolt, track stop, spacer and washer, connect one end of the track to the wall using the pre-drilled hole closest to the opening as shown in the diagram.

NOTE:
The end of the track should extend a minimum of 1/2" past the door opening as noted above.

Swing the track to the opposite end of the wall as shown.

Using the same method as before, connect the opposite end of the track to the wall.

Using the remaining hex lag bolts, spacers and washers, finish attaching the track at the remaining connecting points.

Lift the door and hang it from the track.

Optional Accessories

<p>Track Connecting Plate 1 each Part #6008C-*</p>	<p>Door Guide "U" 1 set Includes 2 "U" guides, 2 wood screws and 1 felt pad Part #6001U-*</p> <p>NOTE: Use the provided T-guide wood screws for U-guide installation.</p>	<p>Sidewall Guide Bracket 1 each Includes 1 bracket, 4 machine screws, 4 nuts and 1 felt pad Part #6001SW-*</p> <p>NOTE: Use the provided T-guide wood screws for side wall guide installa on.</p>
<p>MP Soft Stop 1 set Includes 2 Soft Stop mechanisms, 2 triggers and 4 wood screws Part #6008SOFT11 (4'-7" track) Part #6008SOFT17 (8'+ track)</p>		

* Indicates that the related part is available in various colors.

GOLDBERG BROTHERS, INC.

MP Top Mount - Installation Instructions

Included Hardware

Top mount hangers (2)
Top mount screws (8)


T-guide (1)
T-guide screws (2)

Washers (6)
Hex lag bolts (6)


Spacers (6)
Felt Pad (1)

Track stops (2)

Basic Installation Layouts

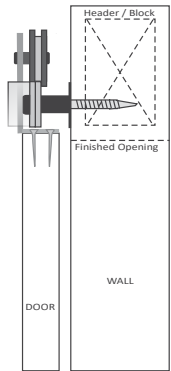

Standard Hardware Pack installed with no casing, base, or other trim.

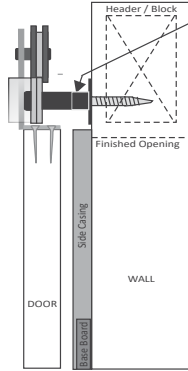

Standard Hardware Pack + 1/2" Extension Kit installed where casing, base, or other trim is up to 1/2" thick.



1/2" Extensions

Note: Use the provided installation layouts and table to establish what combination of spacers will be used to install the track on the wall.

Door Thickness	Extension	Spacer(s)
1 3/8"	-	1"
1 3/8"	1/2"	1" + 1/2"
1 3/8"	1"	1" + 1/2" + 1/2"
1 3/4"	-	1" + 1/2"
1 3/4"	1/2"	1" + 1/2" + 1/2"

Door Prep and Hanger Installation


Place the top mount 1/2" from both sides of the top half of the door. The centerline should be 2 1/4".

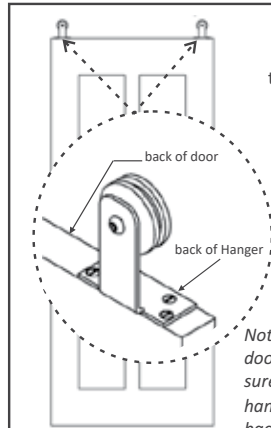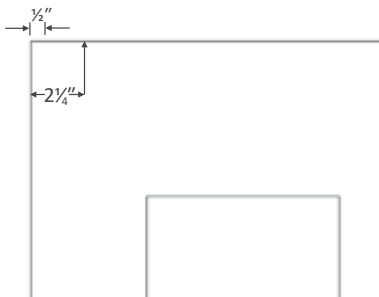



Using the top mount screws, attach the top mount hangers to the door as shown in the diagram.

Note: Due to varying door thicknesses, make sure the back edge of the hanger aligns with the back edge of the door.

T-guide Installation

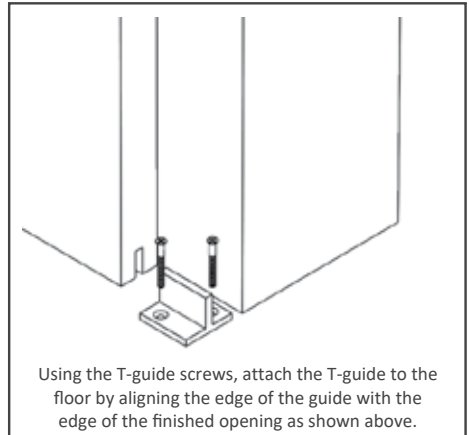

Using the T-guide screws, attach the T-guide to the floor by aligning the edge of the guide with the edge of the finished opening as shown above.

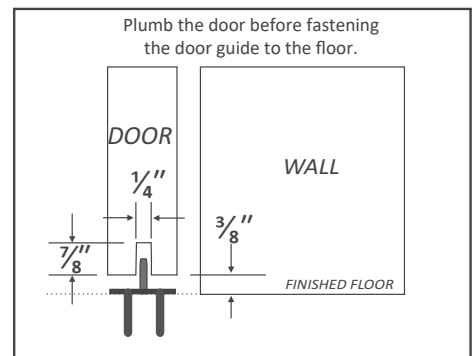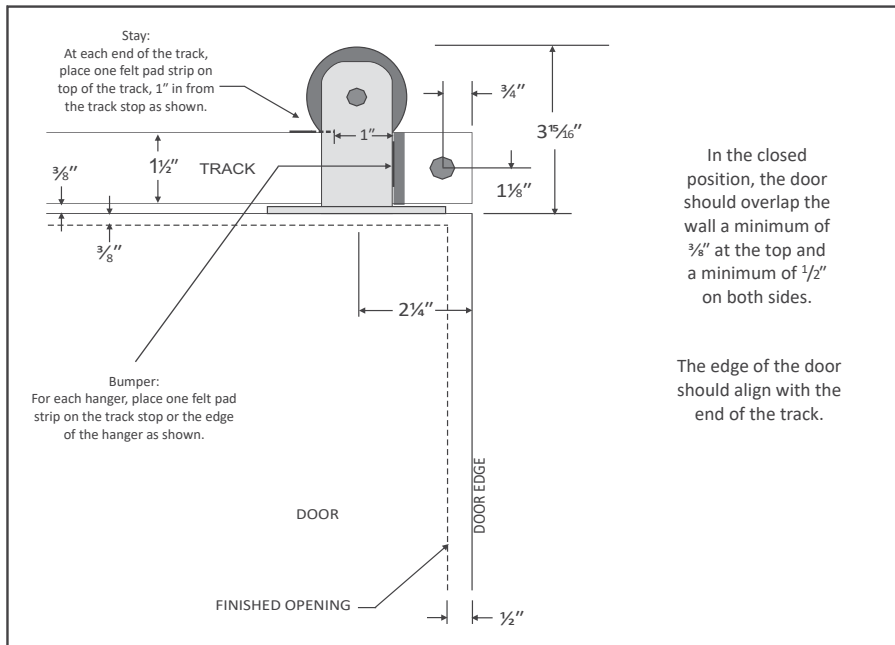






Goldberg Brothers barn door track and hardware sets come with a one-year manufacturer's warranty for defective parts under normal installation and use. Warranty is subject to repair or replacement of defective components at manufacturer's discretion and does not include installation costs.

Goldberg Brothers does not warrant the loss of finish at points where roller is in contact with track. Goldberg Barn Track is sold as a rustic finished hardware and Goldberg does not warrant the imperfections seen through the finish in the steel parts. It is part of the look.






With the exception of our stainless steel products, Goldberg Brothers does not warrant any products installed and used outdoors or where they are exposed to weather, running water or water condensation. Under these conditions, rust and other damage will naturally occur.

This warranty does not include loss or defects caused by elements outside the control of Goldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, improper installation, or anything else deemed out of the control of Goldberg Brothers, Inc.

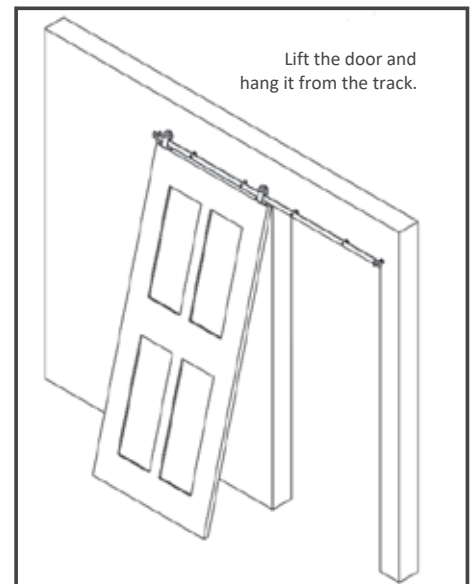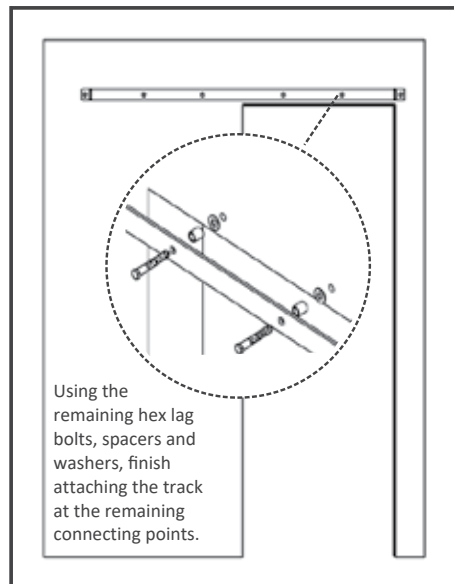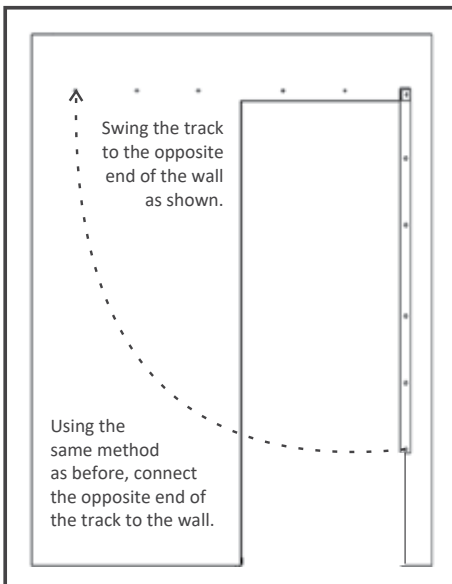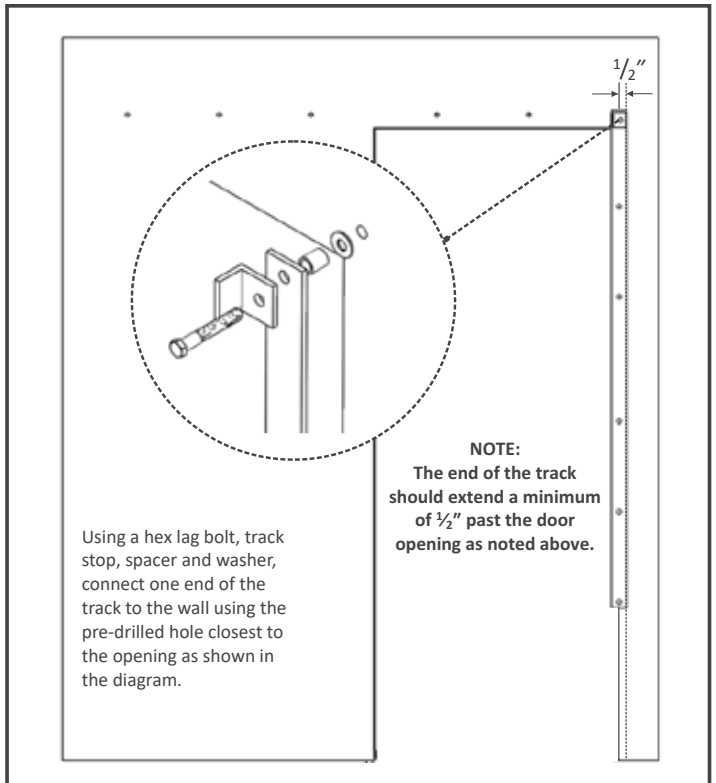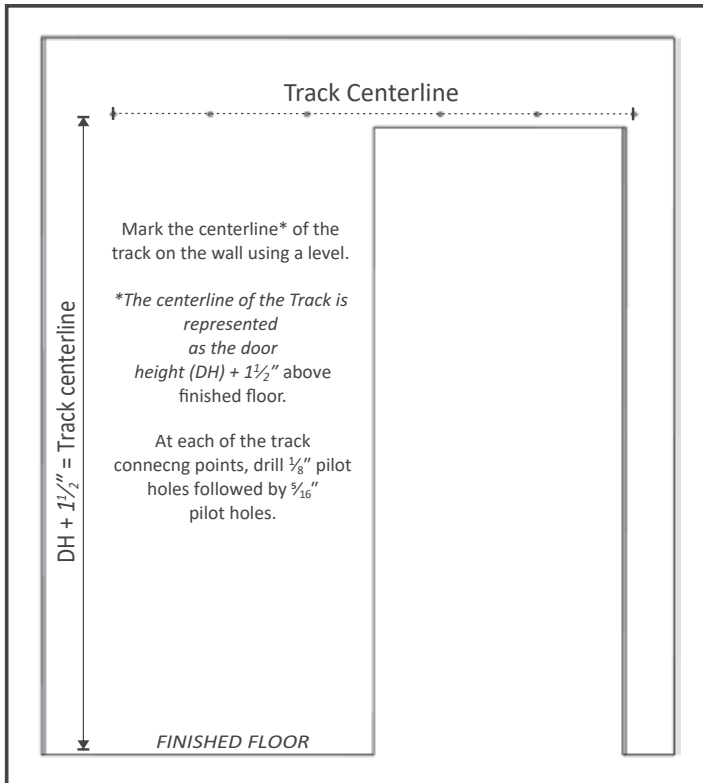Track Installation

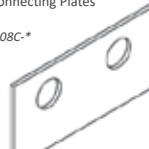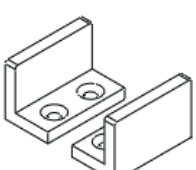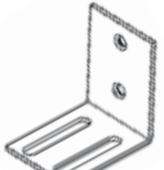

Optional Accessories

<p>Track Connecting Plates 1 each Part #6008C.*</p> 	<p>Door Guide "U" 1 set Includes 2 "U" guides, 2 wood screws and 1 felt pad Part #6001U.*</p> <p>NOTE: Use the provided T-guide wood screws for U-guide installation.</p> 	<p>Sidewall Guide Bracket 1 each Includes 1 bracket, 4 machine screws, 4 nuts and 1 felt pad Part #6001SW.*</p> <p>NOTE: Use the provided T-guide wood screws for sidewall guide installation.</p> 	
 <p>MP Soft Stop 1set Includes 2 Soft Stop mechanisms 2 triggers and 4 wood screws Part #6008SOFT11 (4'-7" track) Part #6008SOFT17 (8'+ track)</p>			 <p>Goldberg Brothers, Inc. 10488 W Centennial Rd, Suite 100 Littleton, CO 80127 (303) 321-1099</p>

* Indicates that the related part is available in various colors.


GOLDBERG BROTHERS, INC.

MP Series Horseshoe - Installation Instructions


Included Hardware

Horseshoe hangers (2)	T-guide (1)	1½" Carriage bolts (6)	Washers (6)	Anti-jump blocks (2)	½" Spacers (12)	Hex lag bolts (6)
Track stops (2)	T-guide screws (2)	1¾" Carriage bolts (6)	Lock washers (6)	Anti-jump block screws (2)	1" Spacers (6)	Hex nuts (6)

Basic Installation Layouts

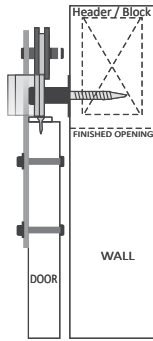

Standard Hardware Pack installed with no casing, base, or other trim.

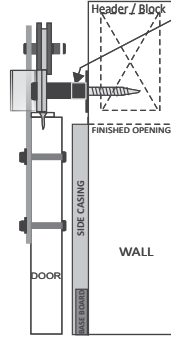

Standard Hardware Pack + ½" or 1" Extension Kit installed where casing, base, or other trim is ½" thick or greater.



½" or 1" Extensions

Note: Use the provided installation layouts and table to establish what combination of spacers will be used to install the track on the wall.

Door Thickness	Extension	Spacer(s)
1⅜"	-	1"
1⅜"	½"	1" + ½"
1⅜"	1"	1" + ½" + ½"
1⅜"	-	1" + ½"
1¾"	½"	1" + ½" + ½"


Door Prep and Hanger Installation

3" and 6¾" from both sides of the top half of the door, measure down 1" and drill ⅛" pilot holes followed by ¾" pilot holes. 4½" from both sides of the top half of the door, measure down 4" and drill ⅛" pilot holes followed by ⅝" pilot holes.

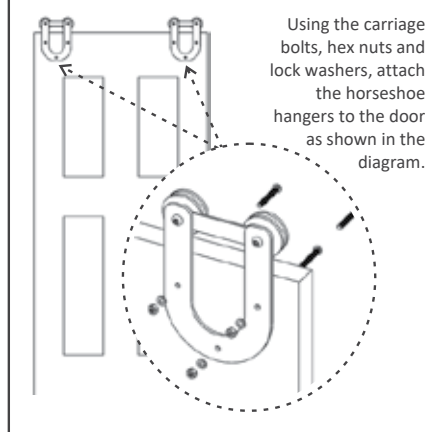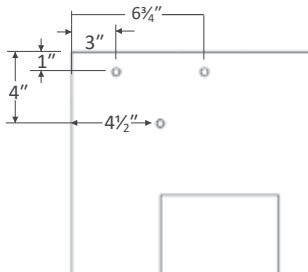


Using the carriage bolts, hex nuts and lock washers, attach the horseshoe hangers to the door as shown in the diagram.

T-guide Installation

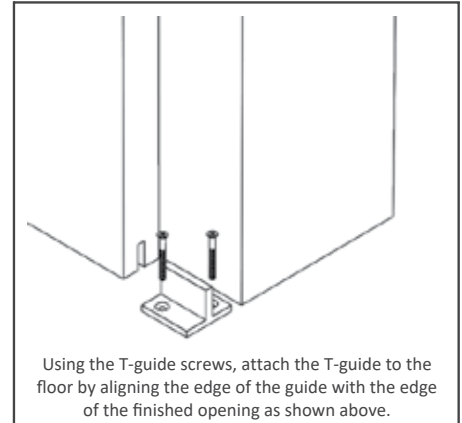

Using the T-guide screws, attach the T-guide to the floor by aligning the edge of the guide with the edge of the finished opening as shown above.

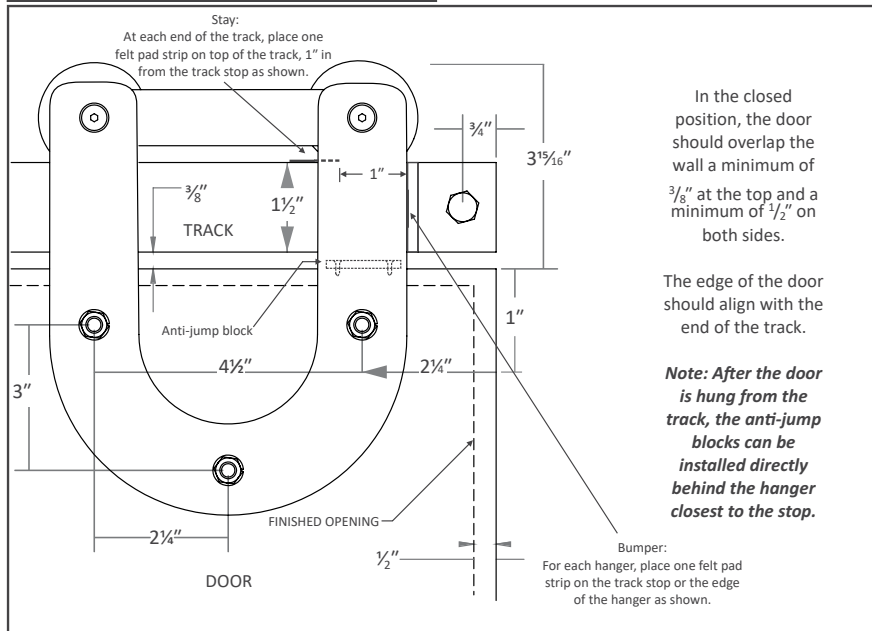


In the closed position, the door should overlap the wall a minimum of ⅜" at the top and a minimum of ½" on both sides.

The edge of the door should align with the end of the track.

Note: After the door is hung from the track, the anti-jump blocks can be installed directly behind the hanger closest to the stop.

Bumper: For each hanger, place one felt pad strip on the track stop or the edge of the hanger as shown.

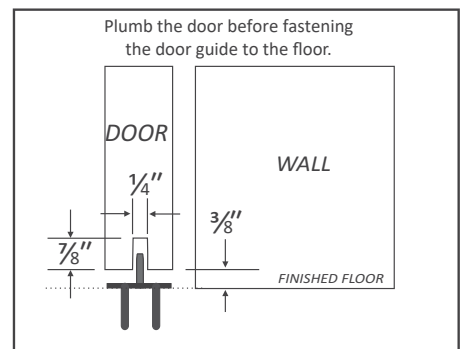

Plumb the door before fastening the door guide to the floor.



Goldberg Brothers barn door track and hardware sets come with a one-year manufacturer's warranty for defective parts under normal installation and use. Warranty is subject to repair or replacement of defective components at manufacturer's discretion and does not include installation costs.

Goldberg Brothers does not warrant the loss of finish at points where roller is in contact with track. Goldberg Barn Track is sold as a rustic finished hardware and Goldberg does not warrant the imperfections seen through the finish in the steel parts. It is part of the look.

With the exception of our stainless steel products, Goldberg Brothers does not warrant any products installed and used outdoors or where they are exposed to weather, running water or water condensation. Under these conditions, rust and other damage will naturally occur.


This warranty does not include loss or defects caused by elements outside the control of Goldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, improper installation, or anything else deemed out of the control of Goldberg Brothers, Inc.

Track Installation

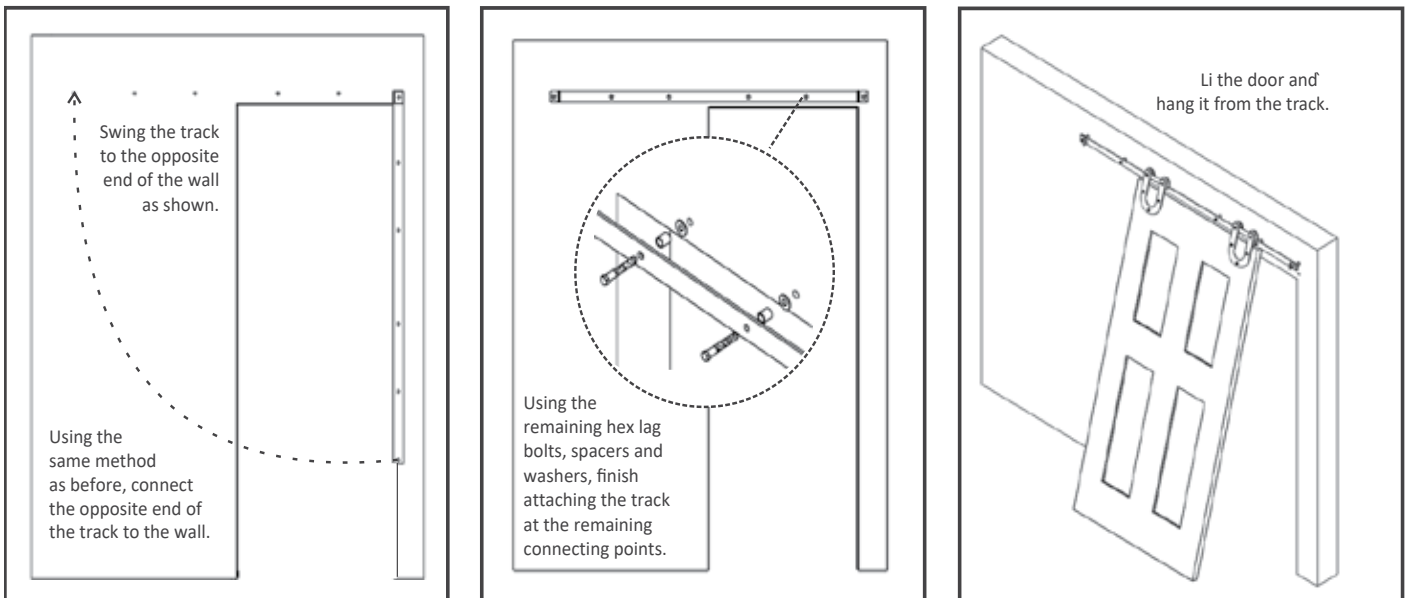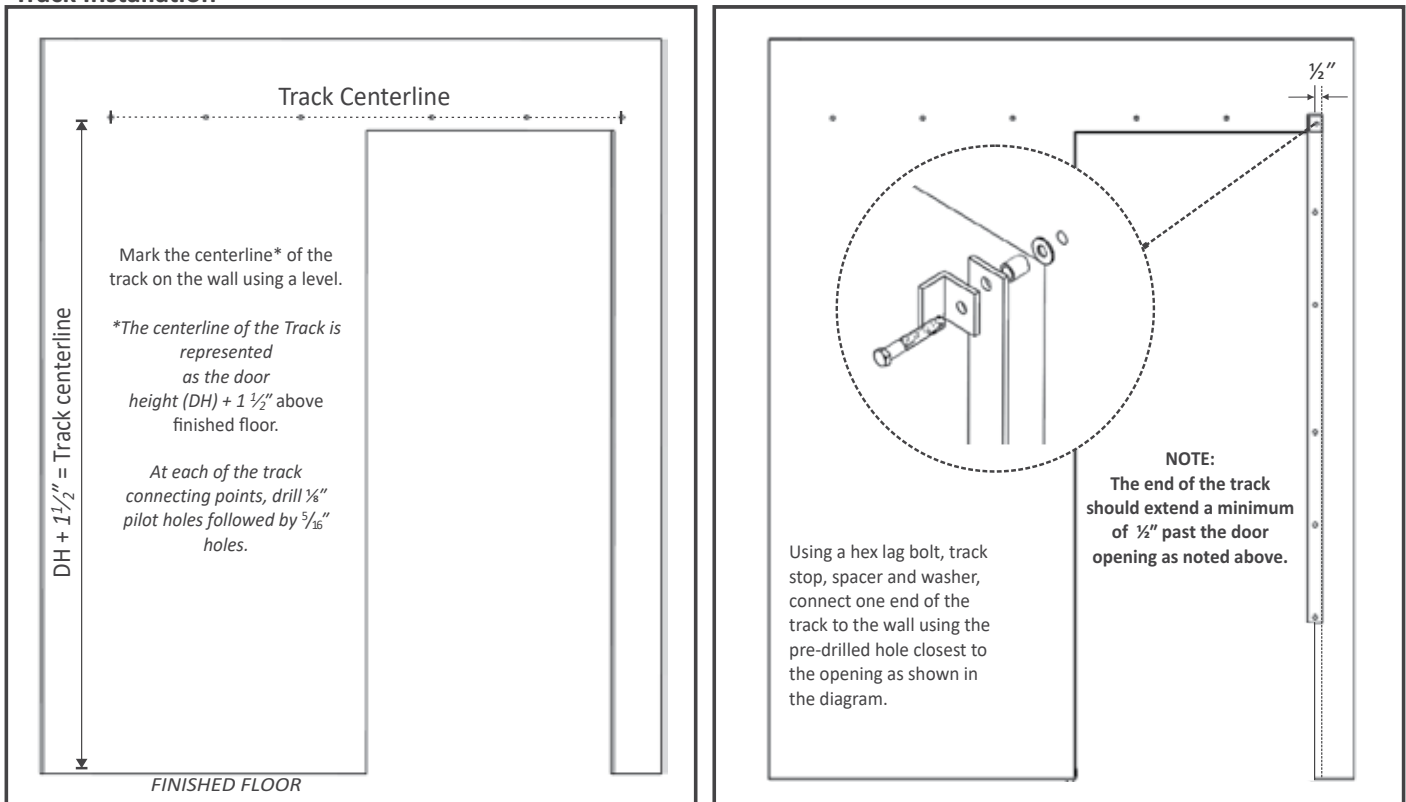


Optional Accessories

Track Connecting Plate
1 each
Part #6008C-*

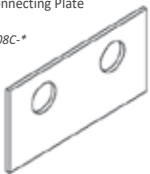


Door Guide "U"
1 set
Includes 2 "U" guides, 2 wood screws
and 1 felt pad
Part #6001U-*

NOTE: Use the provided
T-guide wood screws for U-guide
installation.

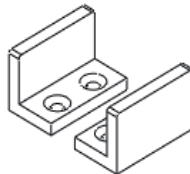

Sidewall Guide Bracket
1 each
Includes 1 bracket,
4 machine screws, 4 nuts and 1 felt pad
Part #6001SW-*

NOTE: Use the
provided T-guide
wood screws for
sidewall guide
installation.

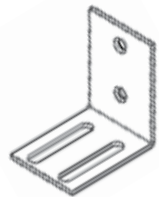


MP Soft Stop
1 set
Includes 2 Soft Stop mechanisms,
2 triggers and 4 wood screws
Part #6008SOFT11 (4'-7" track)
Part #6008SOFT17 (8'+ track)




Goldberg Brothers, Inc.
10488 W Centennial Rd, Suite 100
Littleton, CO 80127
(303) 321-1099

* Indicates that the related part is available in various colors.

Pull Handles

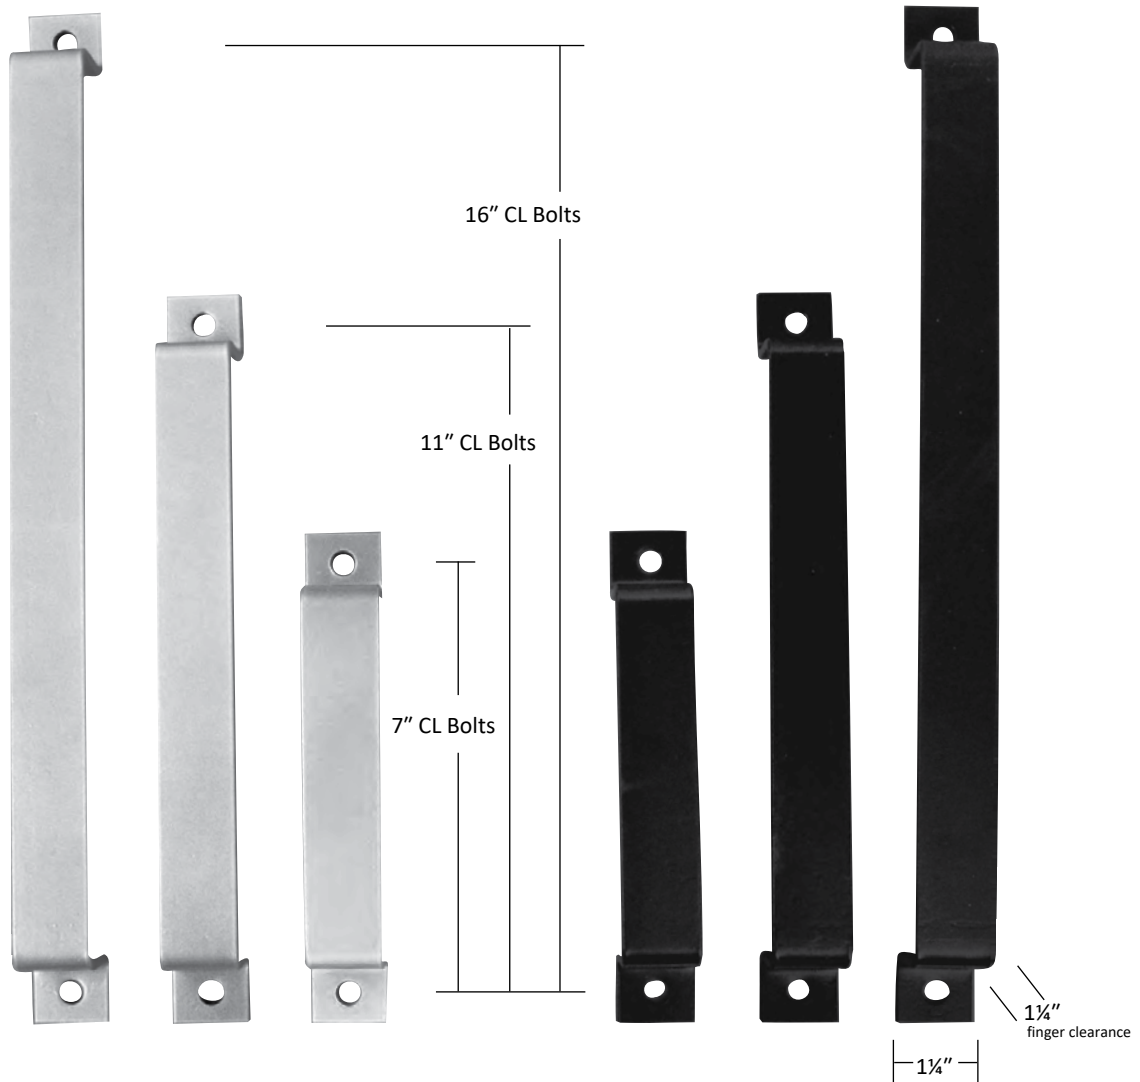

7" Pull Handle	1" 6001PH307-*	1 3/4" 6001PH407-*	2 1/4" 6001PH507-*	Universal 6001PH007-*
11" Pull Handle	1" 6001PH311-*	1 3/4" 6001PH411-*	2 1/4" 6001PH511-*	Universal 6001PH011-*
16" Pull Handle	1" 6001PH316-*	1 3/4" 6001PH416-*	2 1/4" 6001PH516-*	Universal 6001PH016-*



dust box mortise 6" FP = 5" x 2" x 1/2"
12" FP = 11" x 2" x 1/2"

Privacy Latch



A diagram showing a cross-section of a door edge. A black rectangular door is shown with two circular knobs. A diagonal line representing a strike is shown on the door's edge. To the right of the door is a vertical line representing the frame. A small circle indicates the point of contact between the strike and the frame. Dimensions are provided: the door is 1" wide and 1 1/2" high. The frame is 2 1/8" high and 1/2" wide. The text "jamb strike" is written below the door.

When door is on the outside of the room then the latch mounts to the door.
When door is on the inside of the room then the latch mounts to the wall.

GOLDBERG BROTHERS

BARN DOOR EDGE WRAP KITS

Wrap an existing door or build your own! Almost any type of wood can become a beautiful sliding door or shutter panel with Goldberg Brothers Barn Door Edge Wrap. Choose an assortment of individual boards, a set of tongue-and-groove or shiplap slats, decoratively carved wood, or even a reclaimed barn wood panel. Then wrap it with our distinctive, powder-coated steel channels to add a finishing touch to your home.

- Turns almost any wood or composite material into a finished sliding barn door
- Adds rigidity to your door to reduce warping
- Protects the edges of the door from wear and tear
- Available in 16 powder coat colors or raw steel
- Available for door or panel thicknesses from $\frac{3}{4}$ " up to $2\frac{1}{4}$ "
- Sold in 4 common sizes up to 8'0"×8'0"
- Easy to cut down to your specific door size
- Factory-built custom sizes available by special order
- Curved door kits available by special order



Each kit includes:

- 4 edge wrap channels
- all necessary mounting screws
- 1 adjustable U guide
- a set of shims* for use with Goldberg Brothers Standard, MP, or Shutter Series straight strap roller hangers (sold separately)

*Shims can also be used as drilling templates for mounting roller hangers to the door.



Some images are not to scale.

WARRANTY

1-YEAR MANUFACTURER'S WARRANTY

Goldberg Brothers barn door hardware products come with a one-year manufacturer's warranty for defective parts under normal installation and use. Warranty is subject to repair or replacement of defective part(s) at manufacturer's discretion and does not include installation costs. Goldberg Brothers does not warrant the loss of finish at points where roller is in contact with track. Goldberg Brothers barn door hardware is sold as a rustic-finished hardware and Goldberg Brothers does not warrant the imperfections seen through the finish in the steel parts. It is part of the look.

With the exception of our stainless steel products, Goldberg Brothers does not warrant any products installed and used outdoors or where they are exposed to weather, running water or water condensation. Under these conditions, rust and other damage will naturally occur.


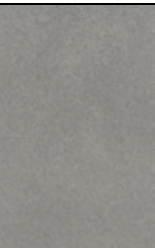

This warranty does not include loss or defects caused by elements outside the control of Goldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, improper installation, or anything else deemed out of the control of Goldberg Brothers, Inc.



GOLDBERG BROTHERS
BARN DOOR HARDWARE

MP SERIES HARDWARE COLORS

Products with SKUs that end with a dash and asterisk -* are available in multiple colors.
Replace the asterisk * with the desired color code.

STANDARD COLORS		
		
BLACK	SILVER METALLIC	ARCH BRONZE
Color code "6"	Color code "1"	Color code "8"

PLEASE NOTE:

- Due to variations in printers and display screens, all color representations above are approximate. Color sample cards are available. Ask your Goldberg Brothers sales representative for details.
- Raw steel does not have a protective coating. Rusting will occur.
- Steel components used with Matte Black Texture and Bronze Texture may have minor surface blemishes acquired during the manufacturing process. These superficial variations will be hidden by the powder coating and do not affect product performance.



GOLDBERG BROTHERS, INC.

- **Standard Series barn door hardware**
- **MP Series barn door hardware**
- **Stainless Steel Series barn door hardware**
- **Shutter Series barn door hardware**
- **Barn door hardware accessories**
- **Movie-themed home decor products**
- **Theater projection ports and film reels**
- **Custom metal fabrication**

10488 W. Centennial Rd., Suite 100

Littleton, CO 80127 USA

Phone (303) 321-1099 • Fax (303) 388-0749
goldbergbrothers.com • goldbergbarntack.com