




# GOLDBERG BROTHERS

## BARN DOOR HARDWARE

08/18

### STANDARD SERIES CATALOG

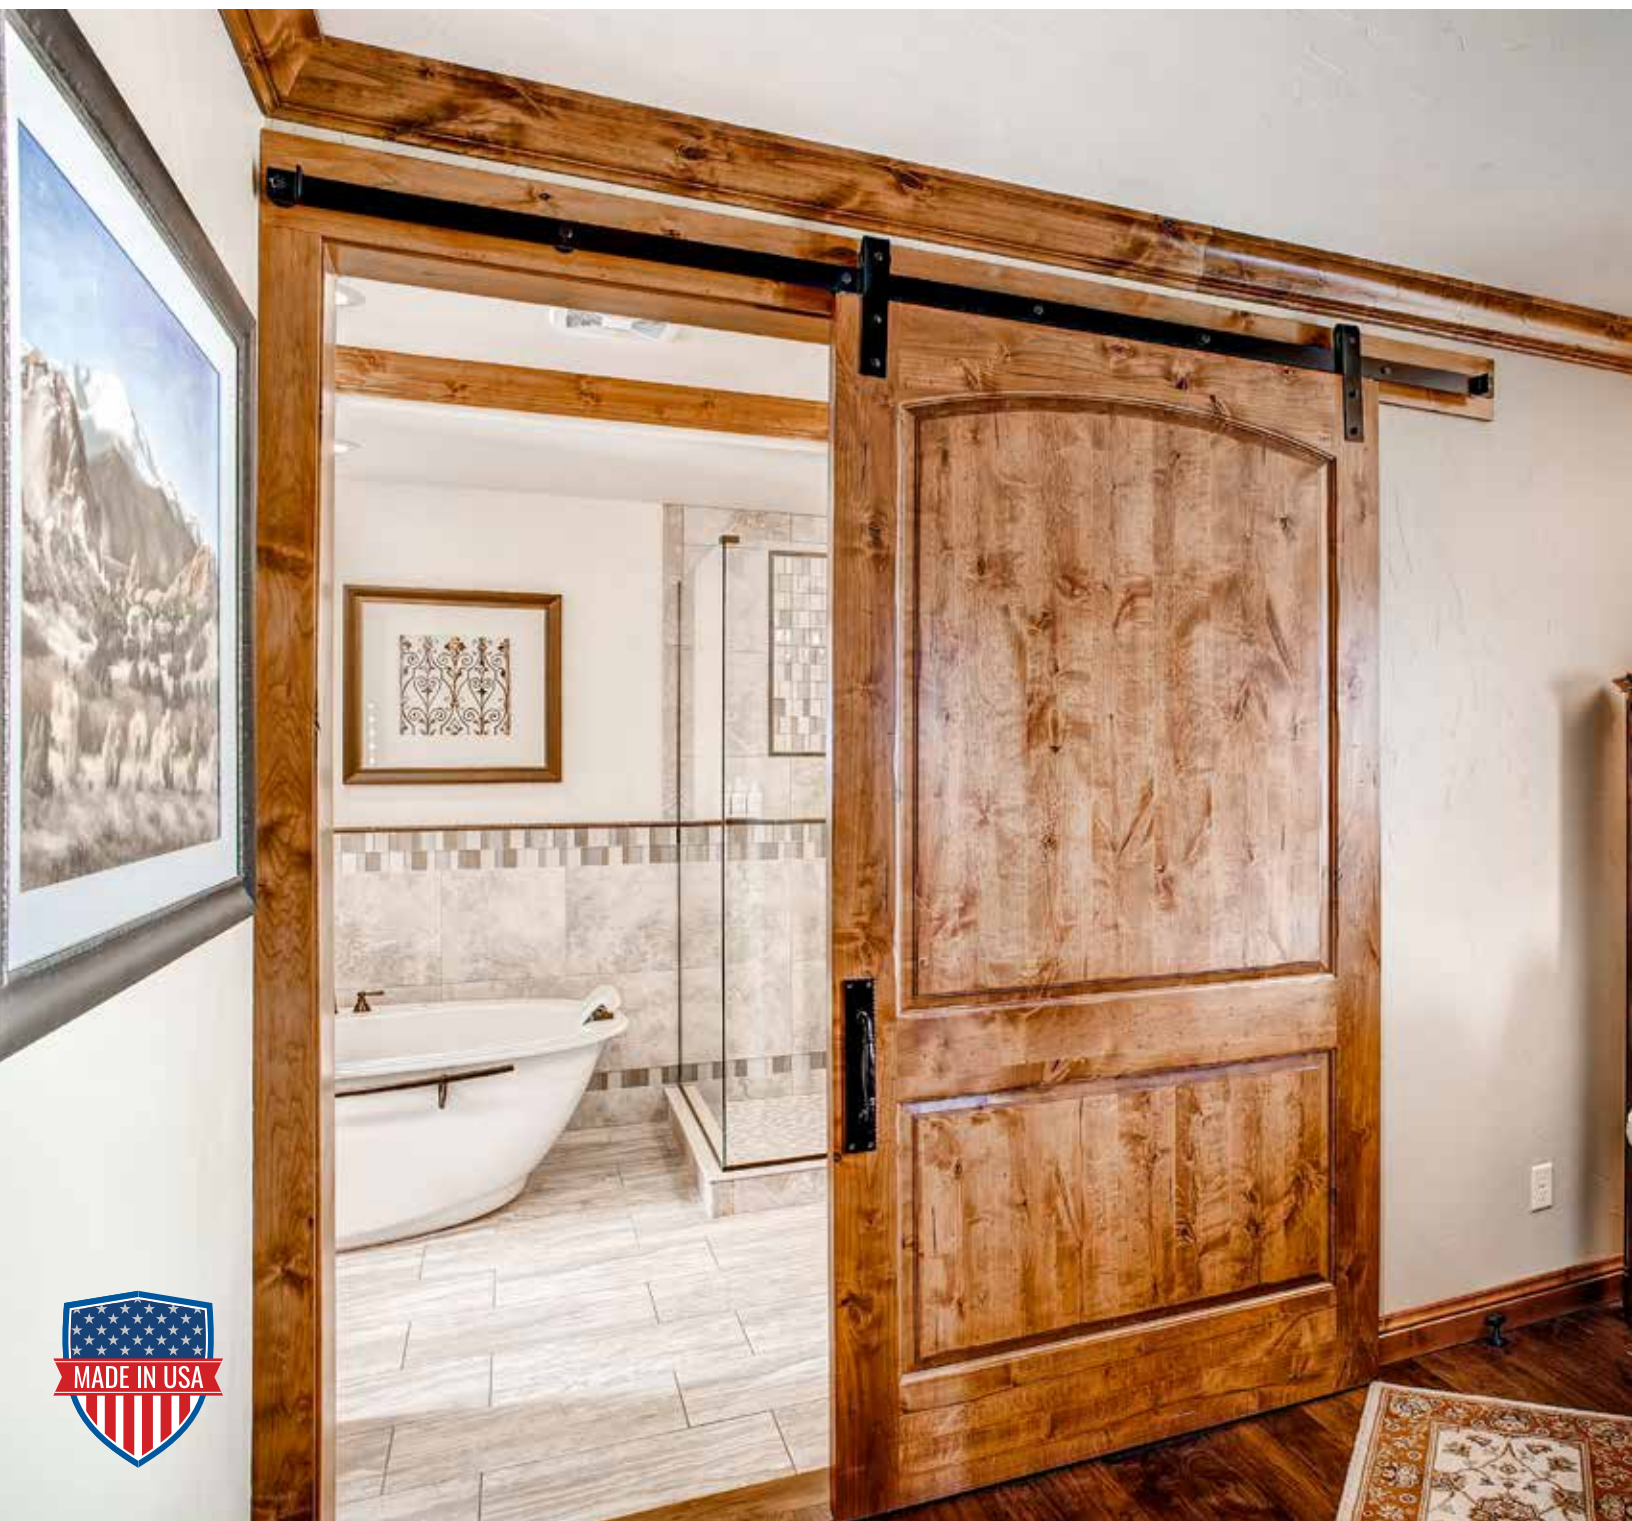





# GOLDBERG BROTHERS

## BARN DOOR HARDWARE

### STANDARD SERIES CATALOG

#### TABLE OF CONTENTS

Hardware sets	2	Privacy latch	7
Roller hangers	2	Pull and latch templates	7
Flat track	3	Accent trims	8
Silent rollers	3	Dealer displays	10
Standard Series accessories	3	Installation guides	11
Bypass hardware sets	6	Warranty	24
Bypass accessories	6	Color Samples	inside back cover
Door handles and flush pulls	7		

Put your customers on the right track. Give them the quality and convenience of Goldberg Brothers barn door hardware. Our award-winning products help make efficient use of any indoor living or working space. Our rustic, yet elegant, industrial design provides a bold focal point to any décor.

The Standard Series is our flagship line of barn door hardware products, appropriate for use with doors in most popular sizes. Standard Series hangers are equipped with durable steel rollers, or you can order silent rollers as a factory-installed option. Hardware, hangers, and track are available in raw steel or 16 different colors. All major steel components are made with up to 90% recycled materials.

Goldberg Brothers products have been proudly made in USA since 1897. Our commitment to quality, craftsmanship and value is built into everything we do.

## STANDARD SERIES: HARDWARE SETS & HANGERS

### J-Strap Hardware Set

weight limit 400 lb



for 1½" thick door	60013H-*
for 1¾" thick door	60014H-*
for 2¼" thick door	60015H-*
universal - for 1¾" or 1¼" thick door	60015UH-*

#### Set includes:

- 2 standard J strap hangers with bolts and nuts
- wall mounting hardware set (6 lag bolts, spacers and washers)
- 2 track stops
- 2 anti-jump blocks with screws
- floor guide (T) with screws
- felt pads

### J-Horseshoe Hardware Set

weight limit 600 lb




for 1½" thick door	60013H2-*
for 1¾" thick door	60014H2-*
for 2¼" thick door	60015H2-*

#### Set includes:

- 2 standard horseshoe hangers with bolts and nuts
- wall mounting set (6 lag bolts, spacers and washers)
- 2 track stops
- 2 anti-jump blocks with screws
- floor guide (T) with screws
- felt pads

### J-Top Mount Hardware Set

weight limit 100 lb

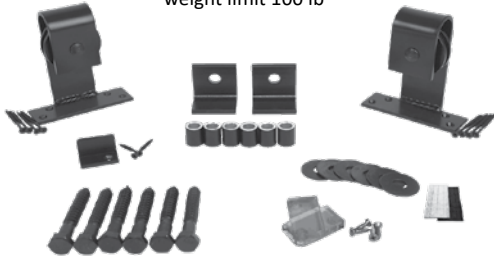

for most common door sizes	60010H -*
----------------------------	-----------

#### Set includes:

- 2 J top mount hangers with screws
- 2 track stops
- 2 anti-jump blocks with screws
- floor guide (T) with screws
- wall mounting hardware set (6 lag bolts, spacers and washers)

### J-Strap Roller Hanger (1 each with bolts and nuts)

2"×11½"×1½"



for 1½" thick door	60013R-*
for 1¾" thick door	60014R-*
for 2¼" thick door	60015R-*

### J-Top Mount Roller Hanger (1 each with screws)

4½"×5⅝"×1⅜"



for most common door sizes	60010R-*
----------------------------	----------

### J-Horseshoe Roller Hanger (1 each with bolts and nuts)

8"×10¾"×1½"



for 1½" thick door	60013R2-*
for 1¾" thick door	60014R2-*
for 2¼" thick door	60015R2-*

Replace the \* in the part's catalog number with the code letter for the desired color when ordering. See color codes on inside back cover.

## STANDARD SERIES: TRACK, ROLLERS & ACCESSORIES

### Flat Track (bar only)

2" x 1/4"



4' (for 2'0" wide door)		6001T4-*
5' (for 2'6" wide door)		6001T5-*
5'4" (for 2'8" wide door)		6001T54-*
6' (for 3'0" wide door)		6001T6-*
7' (for 3'6" wide door)		6001T7-*
8' (for 4'0" wide door)		6001T8-*
Biparting 6' (for pair of 1'6" wide doors)		6001T6P-*
Biparting 8' (for pair of 2'0" wide doors)		6001T8P-*
Long lengths	8'1" to 10'	6001T100-*
	10'1" to 16'	6001T160-*
Custom cut service (Order a standard track length longer than what you need. We will cut it down to the correct size for you.)	1 to 5 pieces	6001CCT1
	6 to 11 pieces	6001CCT2
	12 or more pieces	6001CCT4

### Delrin® Silent Rollers (1 pair, acetal resin, black)

5/8" x 2 1/2" each



	6001SR6
Available as a factory-installed substitution for steel rollers. Recommended for doors weighing 200 lb or less.	

### Wall Mounting Hardware (set of 6 bolts, washers, spacers)



for 1 3/8" thick door	3 1/2" bolts	60013M-*
for 1 1/4" thick door	4" bolts	60014M-*
for 2 1/4" thick door	4 1/4" bolts	60015M-*

### Track Extension Kit 1/2" (set of 6 bolts, washers, spacers)



for 1 3/8" thick door	4" bolts	60013E-*
for 1 1/4" thick door	4 1/2" bolts	60014E-*
for 2 1/4" thick door	5" bolts	60015E-*

### Track Extension Kit 7/8" (set of 6 bolts, washers, spacers)



for 1 3/8" thick door	4 1/2" bolts	60013EX-*
for 1 1/4" thick door	5" bolts	60014EX-*
for 2 1/4" thick door	6" bolts	60015EX-*

### Track Extension Kit 1 1/4" (set of 6 bolts, washers, spacers)



for 1 3/8" thick door	5" bolts	60013EXX-*
for 1 1/4" thick door	6" bolts	60014EXX-*
for 2 1/4" thick door	7" bolts	60015EXX-*

### Soft Stop (set of 2 with triggers and screws)



11" between center points of lag bolts (for tracks up to 7')	6001SOFT11-*
17" between center points of lag bolts (for tracks 8'+)	6001SOFT17-*
Custom length	6001SOFTCL-*
Soft Stop motion buffering devices slow down the door and hold it in place when opening or closing. Sold in pairs for mounting on both ends of a track.	

Replace the \* in the part's catalog number with the code letter for the desired color when ordering. See color codes on inside back cover.



## STANDARD SERIES: ACCESSORIES

Track Stop (1 each)

2"×2"×1½"



6001S-\*

Adjustable Track Stop (1 each, with set screws and tool)

2⅜"×2"×2"



6001SC-\*

Floor Guide (T) (aluminum, 1 each, with screws)

1½"×1½"×1"



6001G-\*

Floor T Guide 24" (aluminum, 1 each, with screws)


1½"×24"×1"



6001G2-\*

Continuous Floor Guide (1 each, aluminum)

1⅞"×¾"×98"

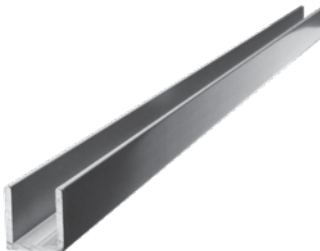

6001FGC

Continuous Floor Guide Pins (set of 2, with screws)

2"×¾"×½" each



600FGP

Adjustable U-Guide (2 pieces, with screws)

⅞"×1"×1½" each



6001U-\*

Side Wall Bracket (1 each, with screws and nuts)

1½"×2"×2"




6001SW-\*

Replace the \* in the part's catalog number with the code letter for the desired color when ordering. See color codes on inside back cover.

## STANDARD SERIES: ACCESSORIES

### Track Connecting Plate (1 each)

3"×1½"

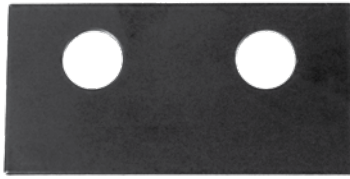

6001C-\*

Connects two shorter tracks to function as one longer track. Not required for biparting doors.

### Corner-Converging Bracket (1 each, with bolt and nuts)



6001OC-\*

### Track Z-Brackets (set of 2, with lag bolts)

1¼"×4½"×2" each



6001TZ-\*

### Hollow-Core Plates (set of 2)


2"×6⅞" each



6001HCP-\*

### Anti-Jump Blocks (clear acrylic, set of 2 with screws)


1"×2"×¼" each

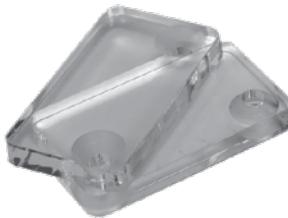

6001J

### Hanger Bolts Installation Template (1 each)


6½"×6½"×¼"

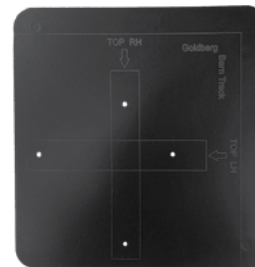

6001TMP-1

### Bumper/Stay Pads (set of 4, felt strips with adhesive back)

1"×¾" each strip

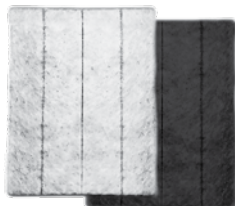

White

6001BS-1

Black

6001BS-6

### Touch-Up Paint (1 bottle, with brush)

0.6 fl oz each



6001P-\*

Replace the \* in the part's catalog number with the code letter for the desired color when ordering. See color codes on inside back cover.

## STANDARD SERIES: BYPASS SYSTEM & ACCESSORIES

### Bypass J-Strap Hardware Set



for 1½" thick door	60013HX-*
for 1¾" thick door	60014HX-*
for 2¼" thick door	60015HX-*

Set includes:

- 2 Bypass door hangers
- Bypass J-guide
- 3 grab/push stops
- 2 steel anti-jump blocks
- 2 track stops
- Standard track mounting hardware
- Bumper/stay pads

### Delrin® Silent Rollers (1 pair, acetal resin, black)




5/8"×2½" each

6001SR6

Available as a factory-installed substitution for steel rollers. Recommended for doors weighing 200 lb or less.

### Bypass Soft Stop Trigger Kit (set of 2)

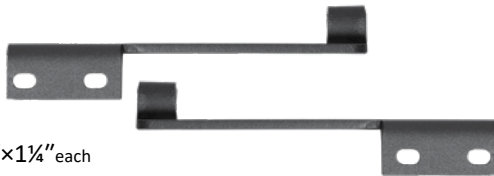

5"×1¼"×1¼" each

6001SOFTXTR-\*

Replaces the anti-jump block attached to each bypass J-strap Roller Hanger.

### Bypass Anti-jump blocks (set of 2, with nuts)



1½"×¾"×¾" each

6001JX-\*

### Bypass Roller Hanger (1 each with bolts and nuts)



2"×17/8"×1½"

for 1¾" thick door	60013RX-*
for 1¾" thick door	60014RX-*
for 2¼" thick door	60015RX-*

### Bypass Spacer Kit (no soffit)



for 1¾" thick door	60013MX-*
for 1¾" thick door	60014MX-*
for 2¼" thick door	60015MX-*

### Bypass J-Guide (1 each, with screws)



for 1¾" thick door	1½"×1¾"×1⅞"	60013GX-*
for 1¾" thick door	1½"×1¾"×1⅞"	60014GX-*
for 2¼" thick door	1½"×1¾"×2⅞"	60015GX-*

### Bypass Grab/Push Stops (set of 3, with screws)



1½"×¾"×¾" each

6001PSX-\*

Replace the \* in the part's catalog number with the code letter for the desired color when ordering. See color codes on inside back cover.



## STANDARD SERIES: PULL HANDLES, FLUSH PULLS & LATCHES

### Pull Handle 7" (1 each, with bolts, washers and nuts)

See page 21 for dimensions



for 1 $\frac{3}{8}$ " thick door	6001PH307-*
for 1 $\frac{1}{2}$ " thick door	6001PH407-*
for 2 $\frac{1}{4}$ " thick door	6001PH507-*
Universal (fits all 3)	6001PH007-*

### Pull Handle 11" (1 each, with bolts, washers and nuts)

See page 21 for dimensions



for 1 $\frac{3}{8}$ " thick door	6001PH311-*
for 1 $\frac{1}{2}$ " thick door	6001PH411-*
for 2 $\frac{1}{4}$ " thick door	6001PH511-*
Universal (fits all 3)	6001PH011-*

### Pull Handle 16" (1 each, with bolts, washers and nuts)


See page 21 for dimensions



for 1 $\frac{3}{8}$ " thick door	6001PH316-*
for 1 $\frac{1}{2}$ " thick door	6001PH416-*
for 2 $\frac{1}{4}$ " thick door	6001PH516-*
Universal (fits all 3)	6001PH016-*

### 6" Flush Pull (1 each, with face plate, dust box and screws)


See page 22 for dimensions

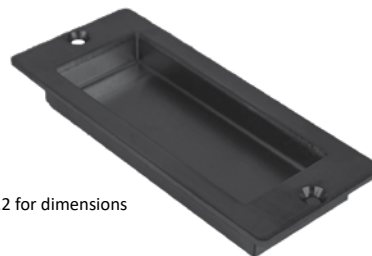

6"	6001FP06-*
----	------------

### 12" Flush Pull (1 each, with face plate, dust box and screws)

See page 22 for dimensions

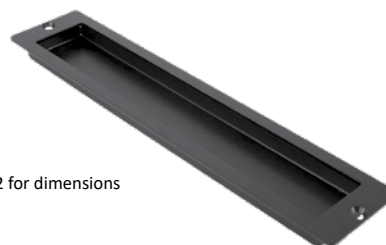

12"	6001FP12-*
-----	------------

### Privacy Latch (1 each, with faceplate, dust box, strike plate and screws)

See page 22 for dimensions



6001PL-*
----------

### Router Templates (set of 3, clear plastic)



flush pulls and privacy latch templates	6001TMP-2
---	-----------





Replace the \* in the part's catalog number with the code letter for the desired color when ordering. See color codes on inside back cover.

## STANDARD SERIES: ACCENT TRIMS



Customize your Goldberg Brothers Standard Series J-strap roller hangers with a pair of decorative accent trims. These fun accessories add your personal style to our barn door hardware. With dozens of designs available, you can even swap them out for different holidays and seasons. They are sold in either themed sets or identical pairs and are available in raw steel and all sixteen of our standard powder coat colors.

To install, simply remove the nuts and washers from the front of your installed roller hangers, slip the accent trims over the bolts, replace the washers and refasten the nuts.

<b>Cowboys Set</b>  5 1/4" x 8 1/2" 5 1/4" x 8 1/2"    6001AT102	<b>Horseshoe</b>  5 1/4" x 8 1/2"    6001AT101	<b>Lone Star</b>  5 1/4" diameter    6001AT002	<b>Arrowhead</b>  5 1/4" x 8 1/4"    6001AT003	<b>Horse Head</b>  6 1/4" x 7 3/4"    6001AT241
<b>Coyote</b>  4 1/4" x 9 1/4"    6001AT235	<b>Deer</b>  6" x 9 3/4"    6001AT231	<b>Bear</b>  6" x 11 1/4"    6001AT245	<b>Eagle Head</b>  6 1/4" x 8 1/4"    6001AT203	<b>Bird</b>  5 1/4" x 8 1/4"    6001AT201
<b>Birds on Limb</b>  6" x 10 1/4"    6001AT202	<b>Dolphin</b>  8 1/4" x 12 1/4"    6001AT281	<b>Seashell Set</b>  7 1/4" x 7 1/2" 5 1/4" x 8 1/4"    6001AT611	<b>Lighthouse</b>  4 1/4" x 8 1/4"    6001AT601	<b>Palm Tree</b>  5 1/2" x 10"    6001AT303

## STANDARD SERIES: ACCENT TRIMS

Pineapple



4"×8¼"

6001AT341

Tree



5"×8"

6001AT301

Pine Tree



6"×10¼"

6001AT302

Maple Leaf



6½"×7½"

6001AT331

Rose



5"×8½"

6001AT321

Cupid Set



6½"×10½"  
7"×8"

6001AT801

Sword



4¼"×14¼"

6001AT001

Football Set



6½"×11½"  
6½"×11"

6001AT511

Basketball Set



7½"×12½"  
7½"×16½"

6001AT521

Baseball Set



8"×8½"  
5"×11½"

6001AT501

Hockey Set



6½"×11½"  
8"×10½"

6001AT541

Skier Set



8"×10½"  
10"×12½"

6001AT561

Golf Set



6½"×11½"  
6½"×11"

6001AT531

Soccer Set



7½"×10½"  
8"×10½"

6001AT551

Surfer Set



9"×10½"  
7½"×9½"

6001AT571

Pantry Set



4½"×9½"  
7½"×8½"

6001AT151

Grape Vine



6½"×10"

6001AT142


Wine Bottle Set



2½"×9½"  
3¼"×8½"

6001AT141

GB Reel Set

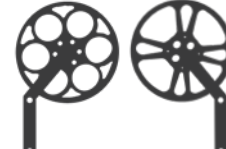

6½"×10½"  
7"×10½"

6001AT121

Theater Set



7½"×12½"  
4½"×11½"

6001AT122

Music Set



4"×9"  
3¼"×7½"

6001AT131


Do you have another design in mind?

We can turn your company logo or original artwork into a set of our accent trims. Contact us for details.



STANDARD SERIES: DEALER DISPLAYS

Full-Size Barn Door Display door not included

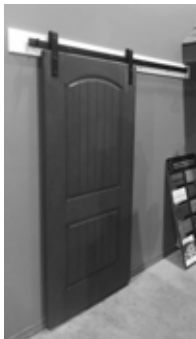

Order any size track and hardware at Display Discount Pricing

Half-Door Display complete with door (Soft Stop sold separately)

39"×30"×5¾"



Soft Stop image not to scale.



Half-Door Display, black

6001DD

optional 12" Soft Stop mechanism set

6001SOFTDD

Hardware Display Panel

20"×34"×1½"



6001HDP

Made to order. Choose any two accent trims in your choice of colors.

Self Standing Mini Display Panel

10"×16"×3¾"



Silver Metallic

6001HDP-1

Black

6001HDP-6

Sales Kit Half Pack



6001SKH



Sales Kit Full Pack



6001SKF



# Standard System Layouts

 T-guide location (floor mount)  
 Connecting plate (track mount)  
 Note: the use and position of connecting plates may vary, depending on track lengths

## single door




1 standard hardware pack, 1 track = 2× the door width

## single door larger than 4'




1 standard hardware pack, 2 or 3 tracks = 2× the door width, connecting plate(s), extra wall mount kit(s)

## pair of biparting doors

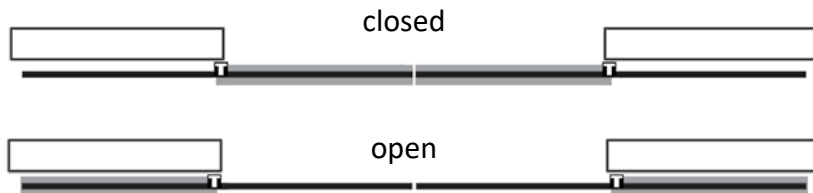

2 standard hardware packs, 2 tracks each 2× the door width, no connecting plate needed

## pair of biparting doors larger than 4' each

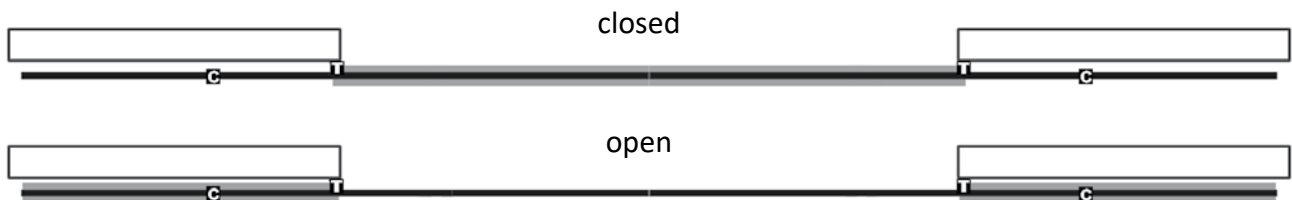

2 standard hardware packs, 4 or 6 tracks each = 2× the door width, connecting plate(s), extra wall mounting kit(s)

# Bypass System Layouts


## 2-door system, clear opening

- T-guide location (floor mount)
- J-guide location (on back door)



1 standard hardware pack, 1 track =  $2\times$  the door width, 1 bypass hardware pack, 1 or 2 tracks =  $3\times$  the door width. Add connecting plate and wall mounting kit for second track if needed. Add bypass spacer kit(s) if needed.

## 4-door system, clear opening

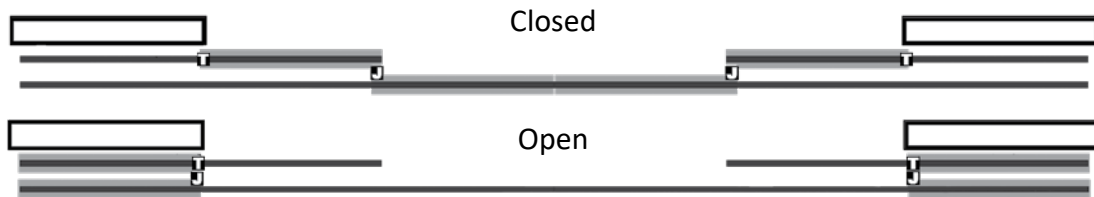

2 standard hardware packs, 2 tracks =  $2\times$  the door width, 2 bypass hardware packs, 2 or 4 tracks =  $3\times$  the door width. Add connection plate and wall mounting kit for over 2 tracks if needed. Add bypass spacer kit if needed.


## 2-door system, pass-through opening



1 standard hardware pack, 1 bypass hardware pack, 2 tracks =  $2\times$  the door width. Add 1 extra T-guide and bypass spacer kit if needed.

## 4-door system, pass-through opening

## 3-door system, pass-through opening

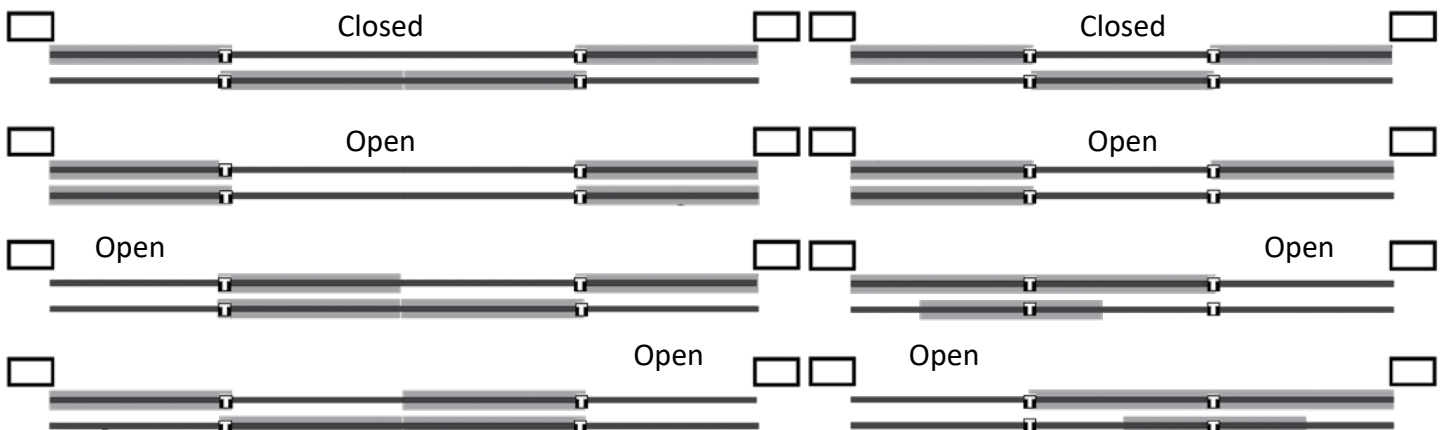

2 standard hardware packs, 2 bypass hardware packs, 4 tracks =  $2\times$  the door width. Add 2 extra T-guides and bypass spacer kits if needed.

2 standard hardware packs, 1 bypass hardware pack, 2 extra T-guides, 2 tracks =  $3\times$  the door width, 2 connecting plates, 1 wall mounting kit. Add bypass spacer kits if needed.


Felt Pads (2)

Standard Hardware Pack +  $\frac{3}{8}$ " or  $1\frac{1}{4}$ " Extension  
Kit installed where casing, base,  
or other trim is greater than  $\frac{3}{8}$ ".

This warranty does not include loss or defects caused by elements outside the control of Goldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, improper installation, or anything else deemed out of the control of Goldberg Brothers, Inc.

# STANDARD SERIES: INSTALLATION GUIDES

## Track Installation

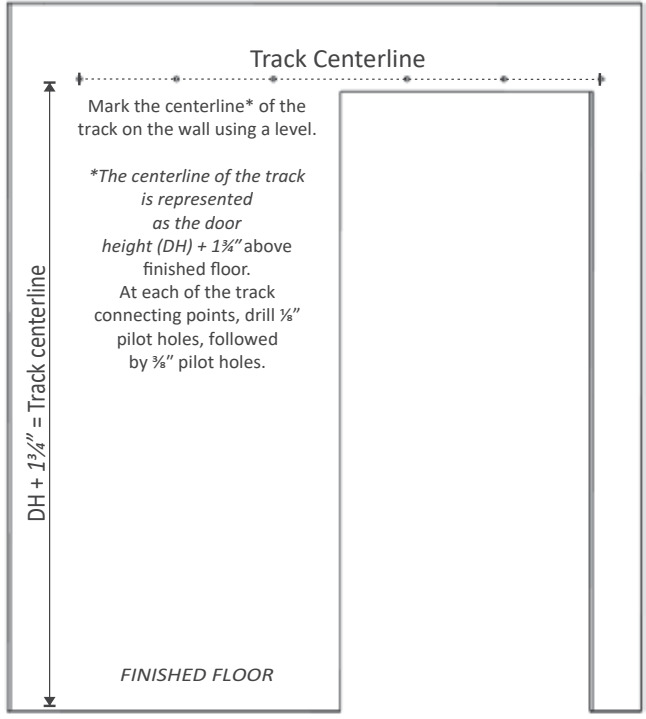

Track Centerline


Mark the centerline\* of the track on the wall using a level.

*\*The centerline of the track is represented as the door height (DH) + 1 3/4" above finished floor.*

At each of the track connecting points, drill 1/8" pilot holes, followed by 3/8" pilot holes.


$DH + 1\frac{3}{4}" = \text{Track centerline}$

FINISHED FLOOR

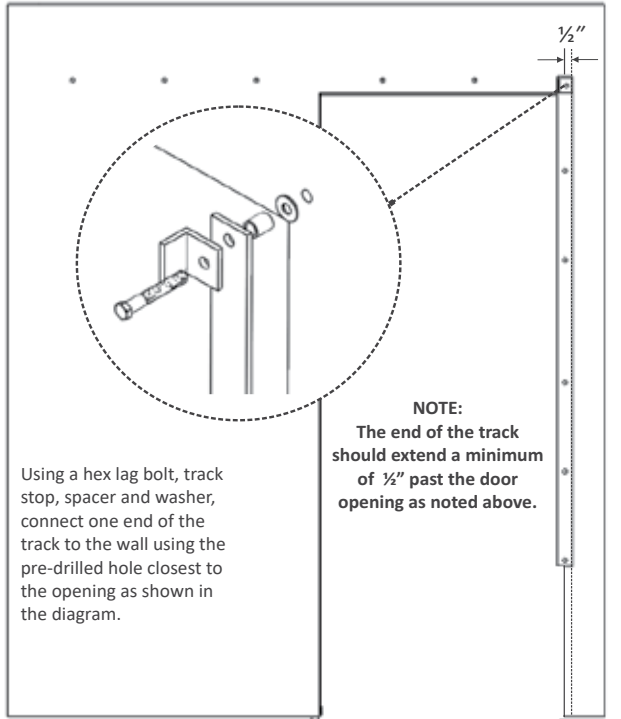


Using a hex lag bolt, track stop, spacer and washer, connect one end of the track to the wall using the pre-drilled hole closest to the opening as shown in the diagram.

**NOTE:**  
The end of the track should extend a minimum of 1/4" past the door opening as noted above.

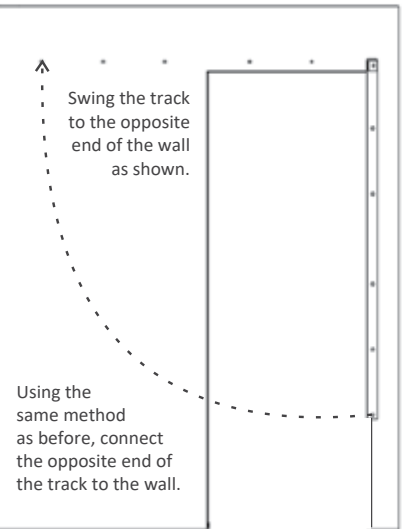


Swing the track to the opposite end of the wall as shown.

Using the same method as before, connect the opposite end of the track to the wall.

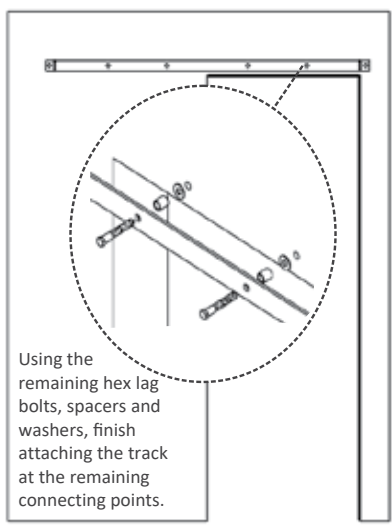


Using the remaining hex lag bolts, spacers and washers, finish attaching the track at the remaining connecting points.

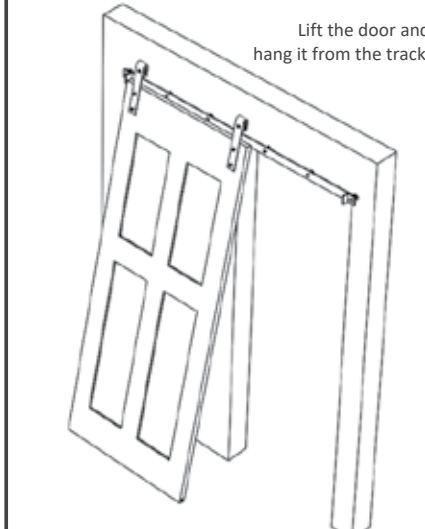

Lift the door and hang it from the track.


## Optional Accessories

**Wall Extension Bolts Set**  
Includes 6 lag bolts and 6 wall spacers




	1/4" Extension	3/8" Extension	1 1/4" Extension
1 1/4" Door	Part #60013E-*	Part #60013EX-*	Part #60013EXX-*
1 3/4" Door	Part #60014E-*	Part #60014EX-*	Part #60014EXX-*
2 1/4" Door	Part #60015E-*	Part #60015EX-*	Part #60015EXX-*

**Track Connecting Plate**  
1 each  
Part #6001C-\*

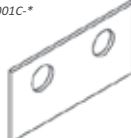


**Door Guide "U"**  
1 set  
Includes 2 "U" guides, 2 wood screws and 1 felt pad  
Part #6001U-\*


**NOTE:** Use the provided T-guide wood screws for U-guide installation.

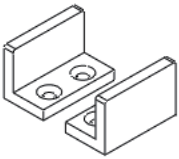


**Sidewall Guide Bracket**  
1 each  
Includes 1 bracket, 4 machine screws, 4 nuts and 1 felt pad  
Part #6001SW-\*

**NOTE:** Use the provided T-guide wood screws for sidewall guide installation.

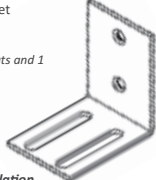



**Soft Stop**  
1 set  
Includes 2 Soft Stop mechanisms, 2 triggers and 4 wood screws  
Part #6001SOFT11 (4'-7" track)  
Part #6001SOFT17 (8'+ track)



**Goldberg Brothers, Inc.**  
10488 W Centennial Rd, Suite 100  
Littleton, CO 80127  
(303) 321-1099

\* Indicates that the related part is available in various colors.



# GOLDBERG BROTHERS, INC.

## Standard Series Top Mount - Installation Instructions

Top mount hangers (2)  
Top mount hanger screws (8)


T-guide (1)  
T-guide screws (2)

### Included Hardware


Washers (6)  
Hex lag bolts (6)  
Anti-jump blocks (2)  
Anti-jump block screws (4)

Spacers (6)  
Felt Pad (1)  
Track stops (2)


### Basic Installation Layouts

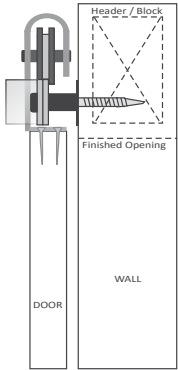


Standard Hardware Pack installed with no casing, base, or other trim.

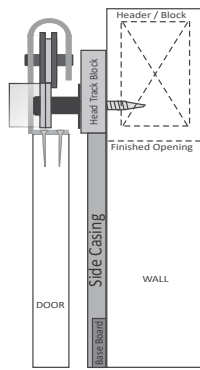

Standard Hardware Pack installed on track trim board that is equal to or thicker than casing, base, or other trim.

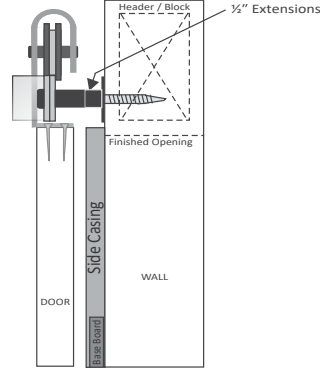



Standard Hardware Pack + 1/2" extension Kit installed where casing, base, or other trim is up to 1/2" thick.

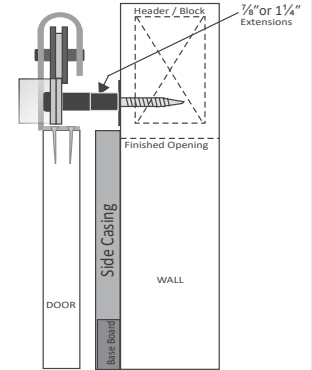

Standard Hardware Pack + 3/8" or 1/4" extension kit installed where casing, base, or other trim is greater than 1/2" thick.

### Door Prep and Hanger Installation


Place the top mount hangers 3/4" from both sides of the top half of the door. The centerline should be 3".

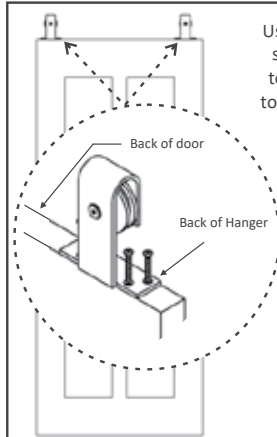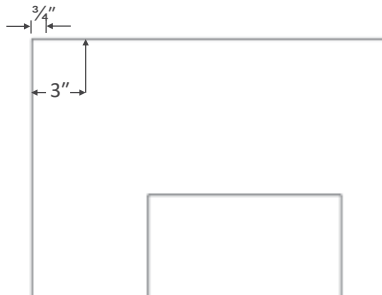


Using the top mount screws, attach the top mount hangers to the door as shown in the diagram.

*Note: Due to varying door thicknesses, make sure the back of the hanger aligns with the back of the door.*


### T-guide Installation

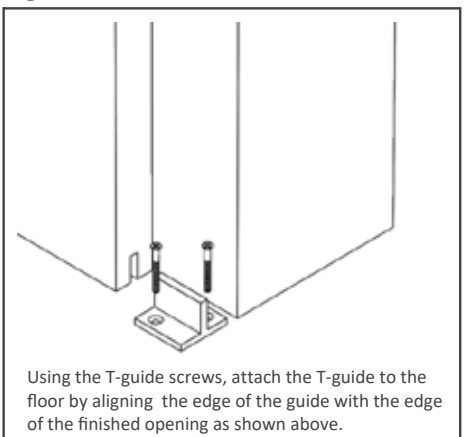

Using the T-guide screws, attach the T-guide to the floor by aligning the edge of the guide with the edge of the finished opening as shown above.

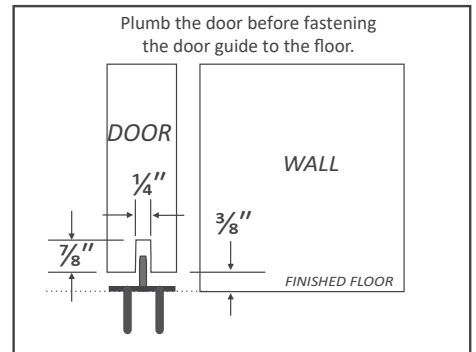

Plumb the door before fastening the door guide to the floor.

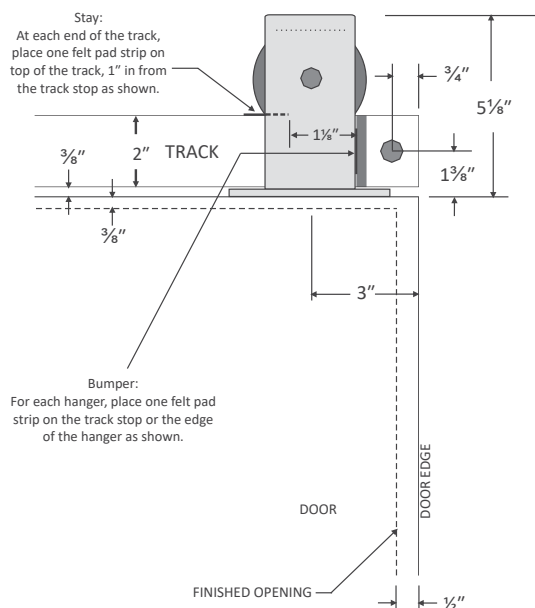

**Stay:**  
At each end of the track, place one felt pad strip on top of the track, 1" in from the track stop as shown.

**Bumper:**  
For each hanger, place one felt pad strip on the track stop or the edge of the hanger as shown.

In the closed position, the door should overlap the wall a minimum of 3/8" at the top and a minimum of 1/2" on both sides.

The edge of the door should align with the end of the track.

Goldberg Brothers barn door track and hardware sets come with a one-year manufacturer's warranty for defective parts under normal installation and use. Warranty is subject to repair or replacement of defective components at manufacturer's discretion and does not include installation costs.






Goldberg Brothers does not warrant the loss of finish at points where roller is in contact with track. Goldberg Barn Track is sold as a rustic finished hardware and Goldberg does not warrant the imperfections seen through the finish in the steel parts. It is part of the look.

With the exception of our stainless steel products, Goldberg Brothers does not warrant any products installed and used outdoors or where they are exposed to weather, running water or water condensation. Under these conditions, rust and other damage will naturally occur.

This warranty does not include loss or defects caused by elements outside the control of Goldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, improper installation, or anything else deemed out of the control of Goldberg Brothers, Inc.

# STANDARD SERIES: INSTALLATION GUIDES

## Track Installation

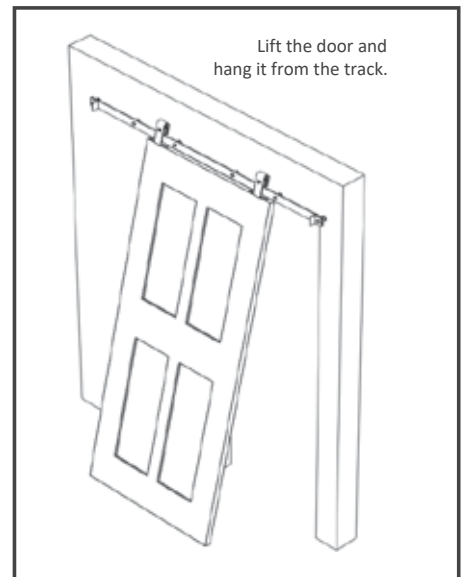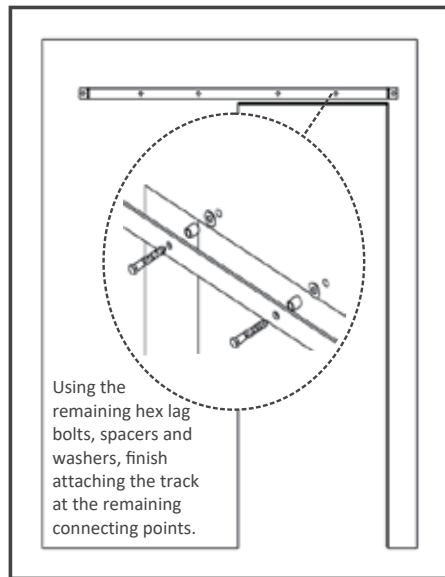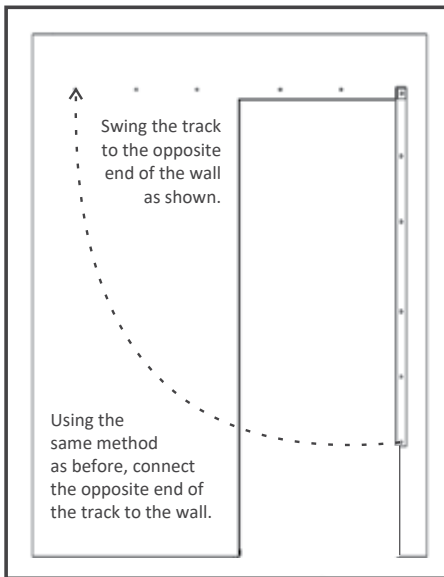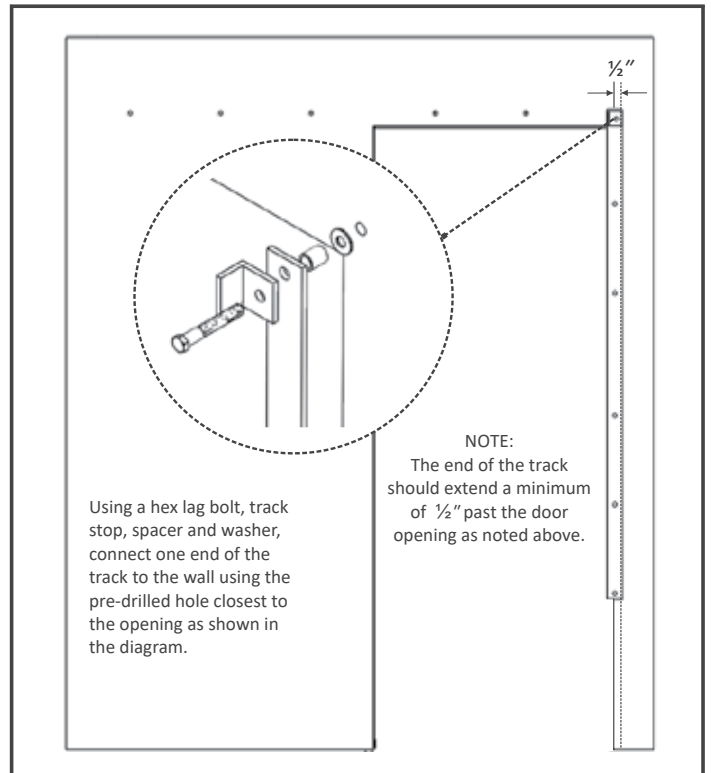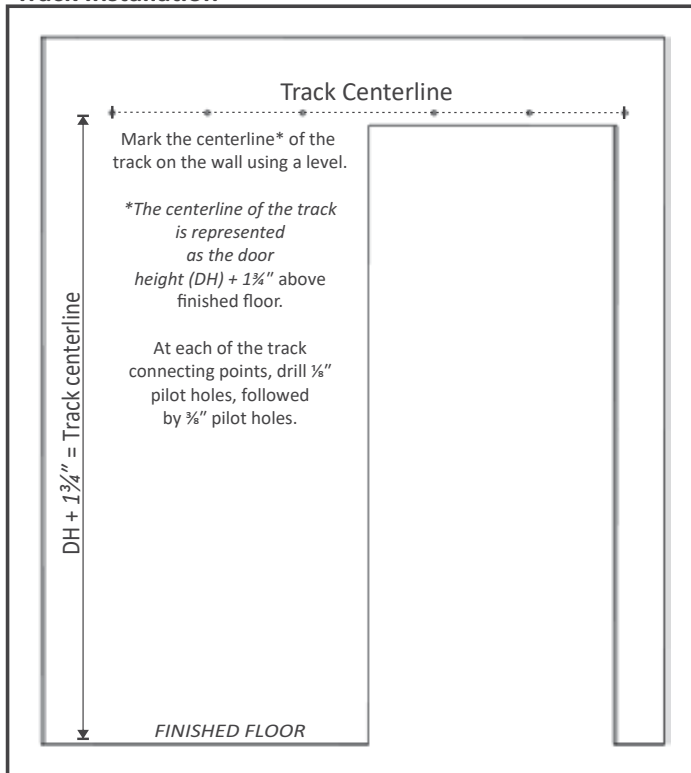

## Optional Accessories

Wall Extension Bolts Set  
Includes 6 lag bolts and 6 wall spacers

	1/2" Extension	3/4" Extension	1 1/4" Extension
1 3/4" Door	Part #60013E-*	Part #60013EX-*	Part #60013EXX-*
1 3/8" Door	Part #60014E-*	Part #60014EX-*	Part #60014EXX-*
2 1/4" Door	Part #60015E-*	Part #60015EX-*	Part #60015EXX-*

Track Connecting Plate  
1 each  
Part #6001C-\*

Door Guide "U"  
1 set  
Includes 2 "U" guides, 2 wood screws and 1 felt pad  
Part #6001U-\*

NOTE: Use the provided T-guide wood screws for U-guide installation.

Sidewall Guide Bracket  
1 each  
Includes 1 bracket, 4 machine screws, 4 nuts and 1 felt pad  
Part #6001SW-\*

NOTE: Use the provided T-guide wood screws for the sidewall guide installation.

Soft Stop  
1 set  
Includes 2 Soft Stop mechanisms, 2 triggers and 4 wood screws  
Part #6001SOFT11 (4'-7" track)  
Part #6001SOFT17 (8'+ track)

Goldberg Brothers, Inc.  
10488 W Centennial Rd, Suite 100  
Littleton, CO 80127  
(303) 321-1099

\* Indicates that the related part is available in various colors.

# GOLDBERG BROTHERS, INC.

## Standard Series Horseshoe Hanger - Installation Instructions

### Included Hardware

Horseshoe hangers (2)  
Track stops (2)

T-guide (1)  
T-guide screws (2)


Carriage bolts (6)  
Lock washers (6)

Washers (6)  
Hex lag bolts (6)


Anti-jump blocks (2)  
Anti-jump block screws (4)

Spacers (6)  
Hex nuts (6)


### Basic Installation Layouts

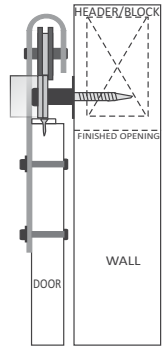


Standard Hardware Pack installed with no casing, base, or other trim.

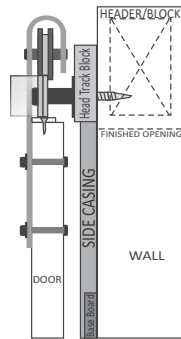

Standard Hardware Pack installed on track trim board that is equal to or thicker than casing, base, or other trim.

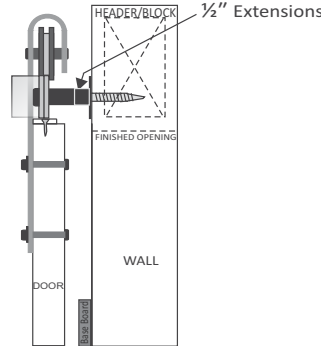



Standard Hardware Pack + 1/2" Extension Kit installed where casing, base, or other trim is up to 1/2" thick.

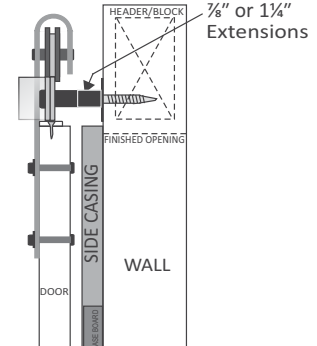

Standard Hardware Pack + 3/8" or 1/4" Extension Kit installed where casing, base, or other trim is greater than 1/2" thick.


### Door Prep and Hanger Installation

At 3" and 9" from both sides of the top half of the door, measure down 1 1/4" and drill 1/8" pilot holes followed by 3/8" pilot holes. 6" from both sides of the top half of the door, measure down 4 1/2" and drill 1/8" pilot holes followed by 3/8" pilot holes.

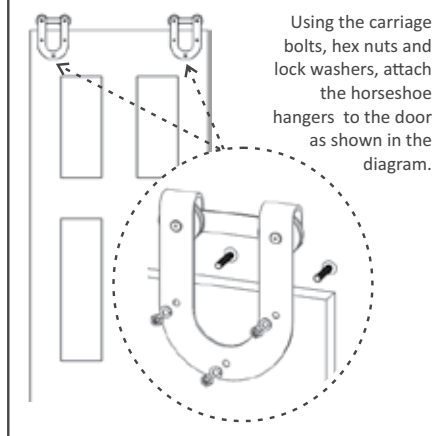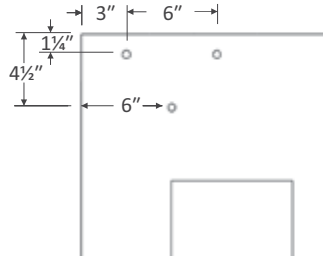


Using the carriage bolts, hex nuts and lock washers, attach the horseshoe hangers to the door as shown in the diagram.


### T-guide Installation

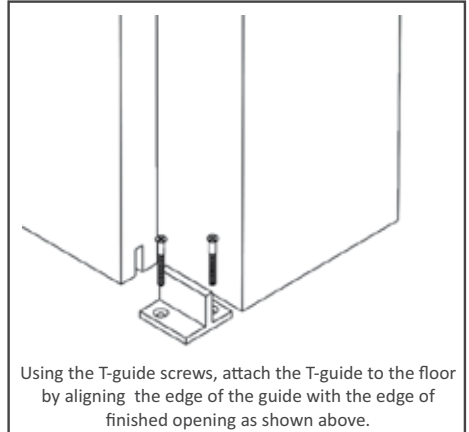

Using the T-guide screws, attach the T-guide to the floor by aligning the edge of the guide with the edge of finished opening as shown above.

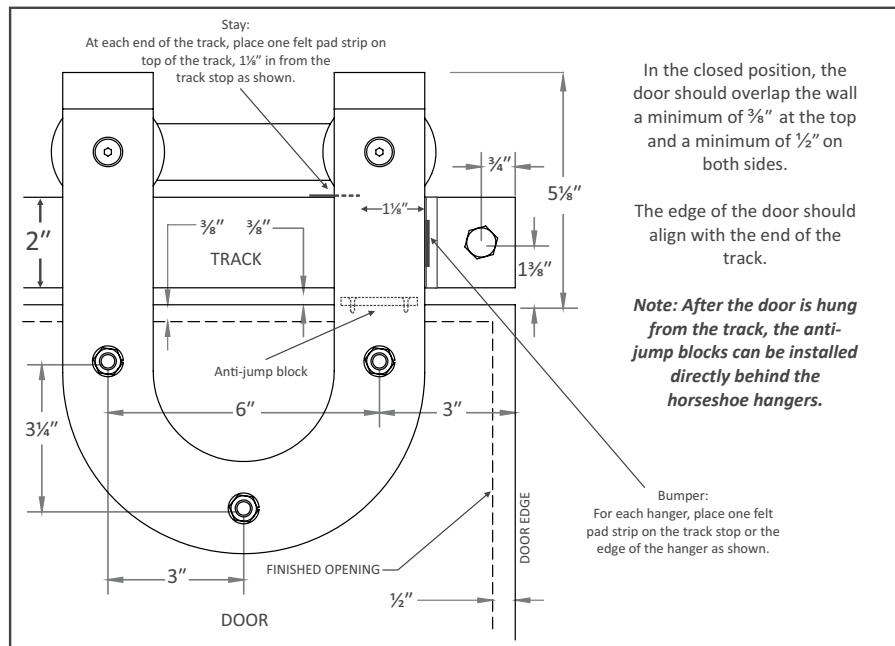

Plumb the door before fastening door guide to floor.

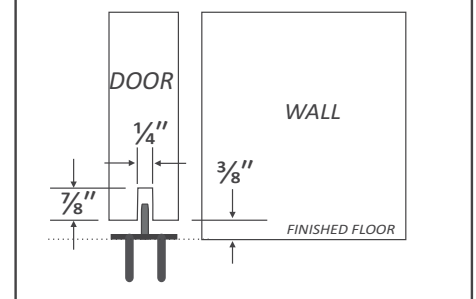

Goldberg Brothers barn door track and hardware sets come with a one-year manufacturer's warranty for defective parts under normal installation and use. Warranty is subject to repair or replacement of defective components at manufacturer's discretion and does not include installation costs.






Goldberg Brothers does not warrant the loss of finish at points where roller is in contact with track. Goldberg Barn Track is sold as a rustic finished hardware and Goldberg does not warrant the imperfections seen through the finish in the steel parts. It is part of the look.

With the exception of our stainless steel products, Goldberg Brothers does not warrant any products installed and used outdoors or where they are exposed to weather, running water or water condensation. Under these conditions, rust and other damage will naturally occur.

This warranty does not include loss or defects caused by elements outside the control of Goldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, improper installation, or anything else deemed out of the control of Goldberg Brothers, Inc.

# STANDARD SERIES: INSTALLATION GUIDES


## Track Installation

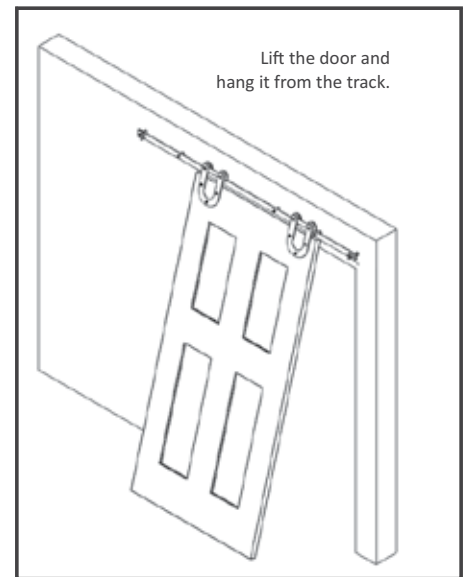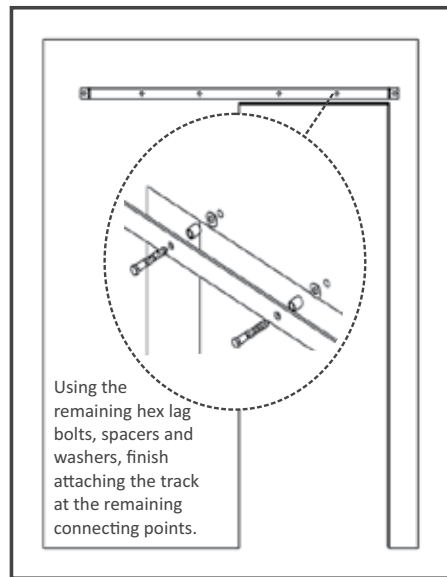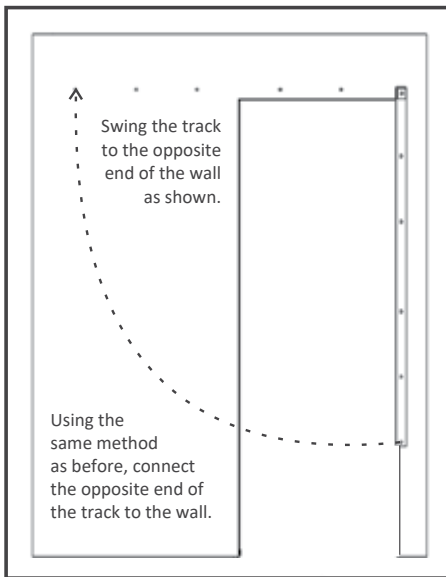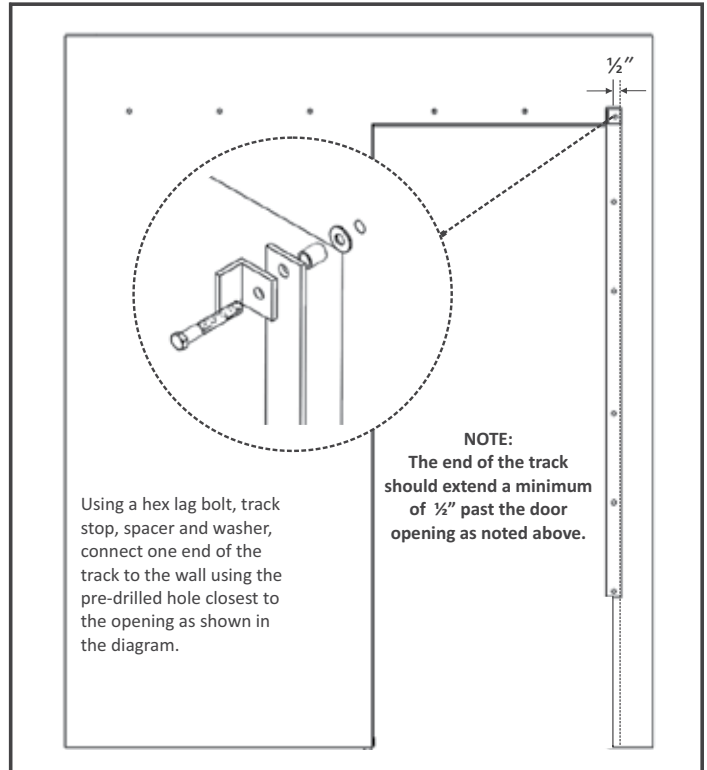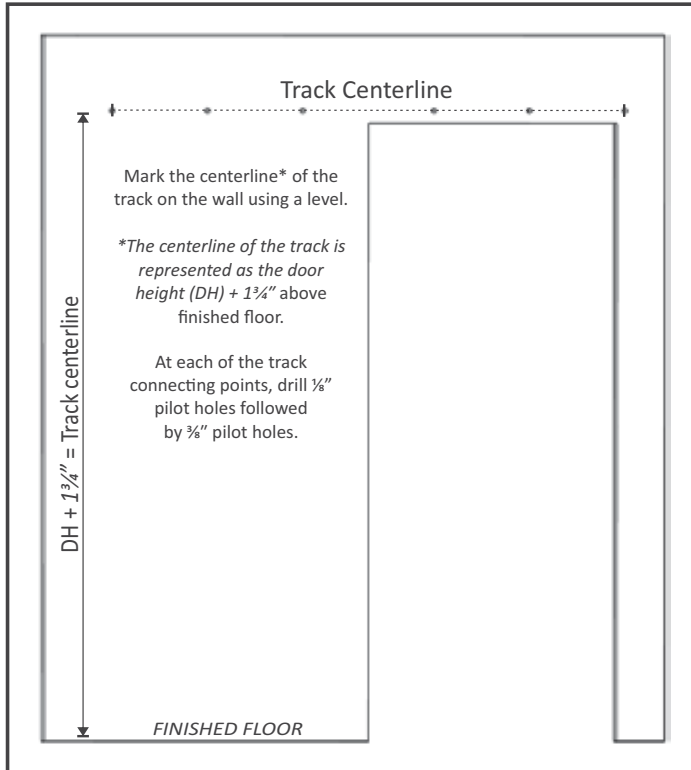

## Optional Accessories


Wall Extension Bolts Set Includes 6 lag bolts and 6 wall spacers			
	1/2" Extension	3/4" Extension	1 1/4" Extension
1 1/2" Door	Part #60013E-*	Part #60013EX-*	Part #60013EXX-*
1 3/4" Door	Part #60014E-*	Part #60014EX-*	Part #60014EXX-*
2 1/4" Door	Part #60015E-*	Part #60015EX-*	Part #60015EXX-*

**Track Connecting Plate**  
1 each  
Part #6001C-\*

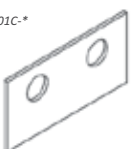


**Door Guide "U"**  
1 set  
Includes 2 "U" guides, 2 wood screws and 1 felt pad  
Part #6001U-\*


**NOTE: Use the provided T-guide wood screws for U-guide installation.**

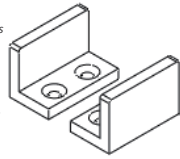


**Sidewall Guide Bracket**  
1 each  
Includes 1 bracket, 4 machine screws, 4 nuts and 1 felt pad  
Part #6001SW-\*

**NOTE: Use the provided T-guide wood screws for sidewall guide installation.**

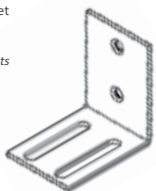



**Soft Stop**  
1 set  
Includes 2 Soft Stop mechanisms, 2 triggers and 4 wood screws  
Part #6001SOFT11 (4'-7" track)  
Part #6001SOFT17 (8'+ track)



**Goldberg Brothers, Inc.**  
10488 W Centennial Rd, Suite 100  
Littleton, CO 80127  
(303) 321-1099

\* Indicates that the related part is available in various colors.



# GOLDBERG BROTHERS, INC.

## Standard Series Bypass - Installation Instructions

Straight strap bypass hangers (2)  
Track stops (2)

J-guide (1)  
J-guide screws (2)

### Included Hardware

Carriage bolts (4)  
Lock washers (4)

Washers (6)  
Hex lag bolts (6)

Felt Pad (1)  
Hex nuts (4)


Spacers (6)  
Grab/push stops (3)

The following instructions detail various install scenarios for the standard Goldberg Brothers, Inc. Standard Series Bypass System. The Standard Series straight strap installation should be completed first.


### Important:

*The center line of the back track's mounting bolts =  $1\frac{3}{4}"$  + Door Height above finished floor.  
The center line of the front track's mounting bolts =  $5\frac{3}{4}"$  higher than back track.*


### Standard Bypass

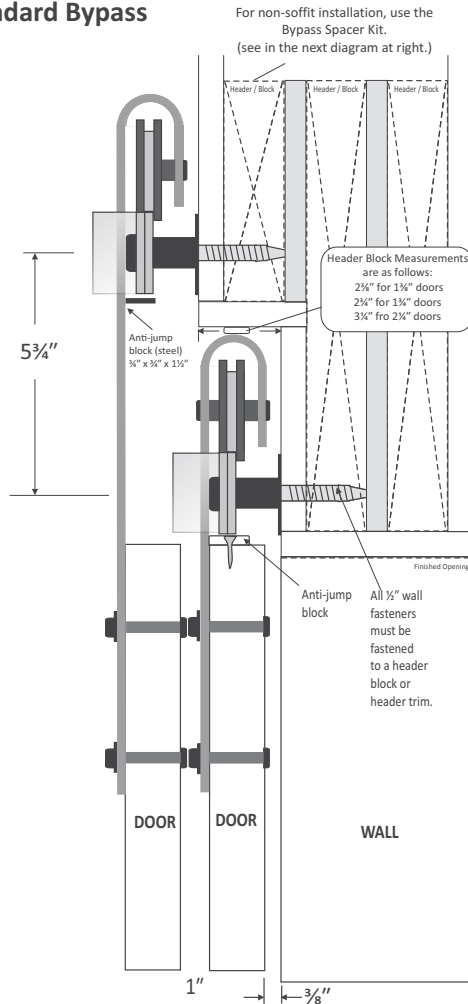


### Optional Bypass Spacer Kit

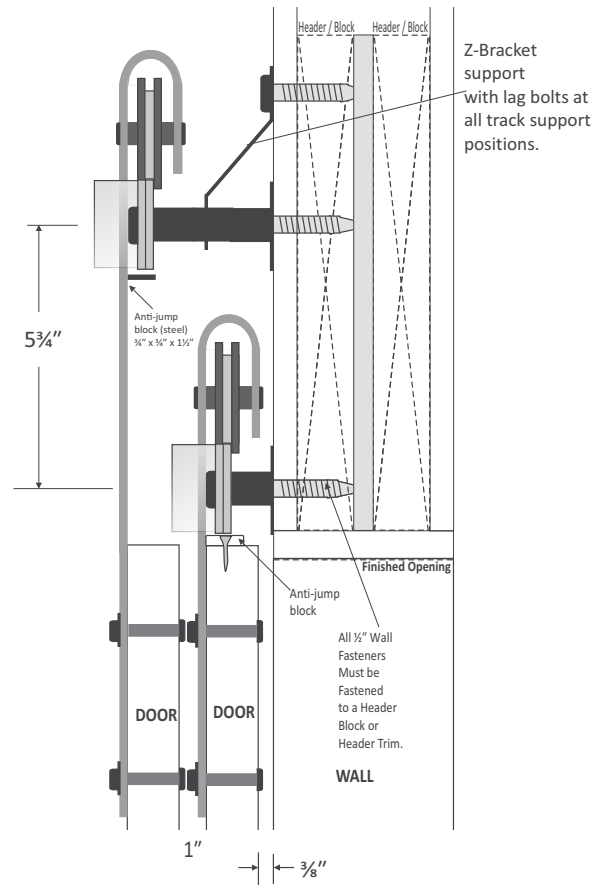


### Bypass layout top view



### Bypass push pull installation

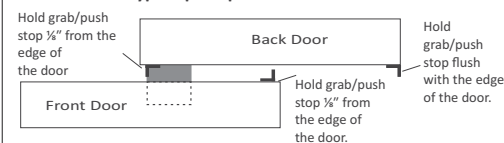

### Bypass push pull installation front view

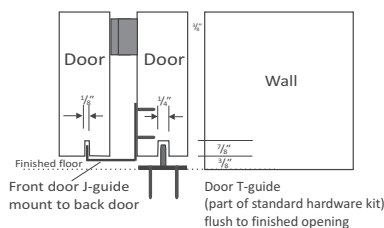


Goldberg Brothers barn door track and hardware sets come with a one-year manufacturer's warranty for defective parts under normal installation and use. Warranty is subject to repair or replacement of defective components at manufacturer's discretion and does not include installation costs.

Goldberg Brothers does not warrant the loss of finish at points where roller is in contact with track. Goldberg Barn Track is sold as a rustic finished hardware and Goldberg does not warrant the imperfections seen through the finish in the steel parts. It is part of the look.

With the exception of our stainless steel products, Goldberg Brothers does not warrant any products installed and used outdoors or where they are exposed to weather, running water or water condensation. Under these conditions, rust and other damage will naturally occur.

This warranty does not include loss of defects caused by elements outside the control of Goldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, improper installation, or anything else deemed out of the control of Goldberg Brothers, Inc.

## STANDARD SERIES: INSTALLATION GUIDES

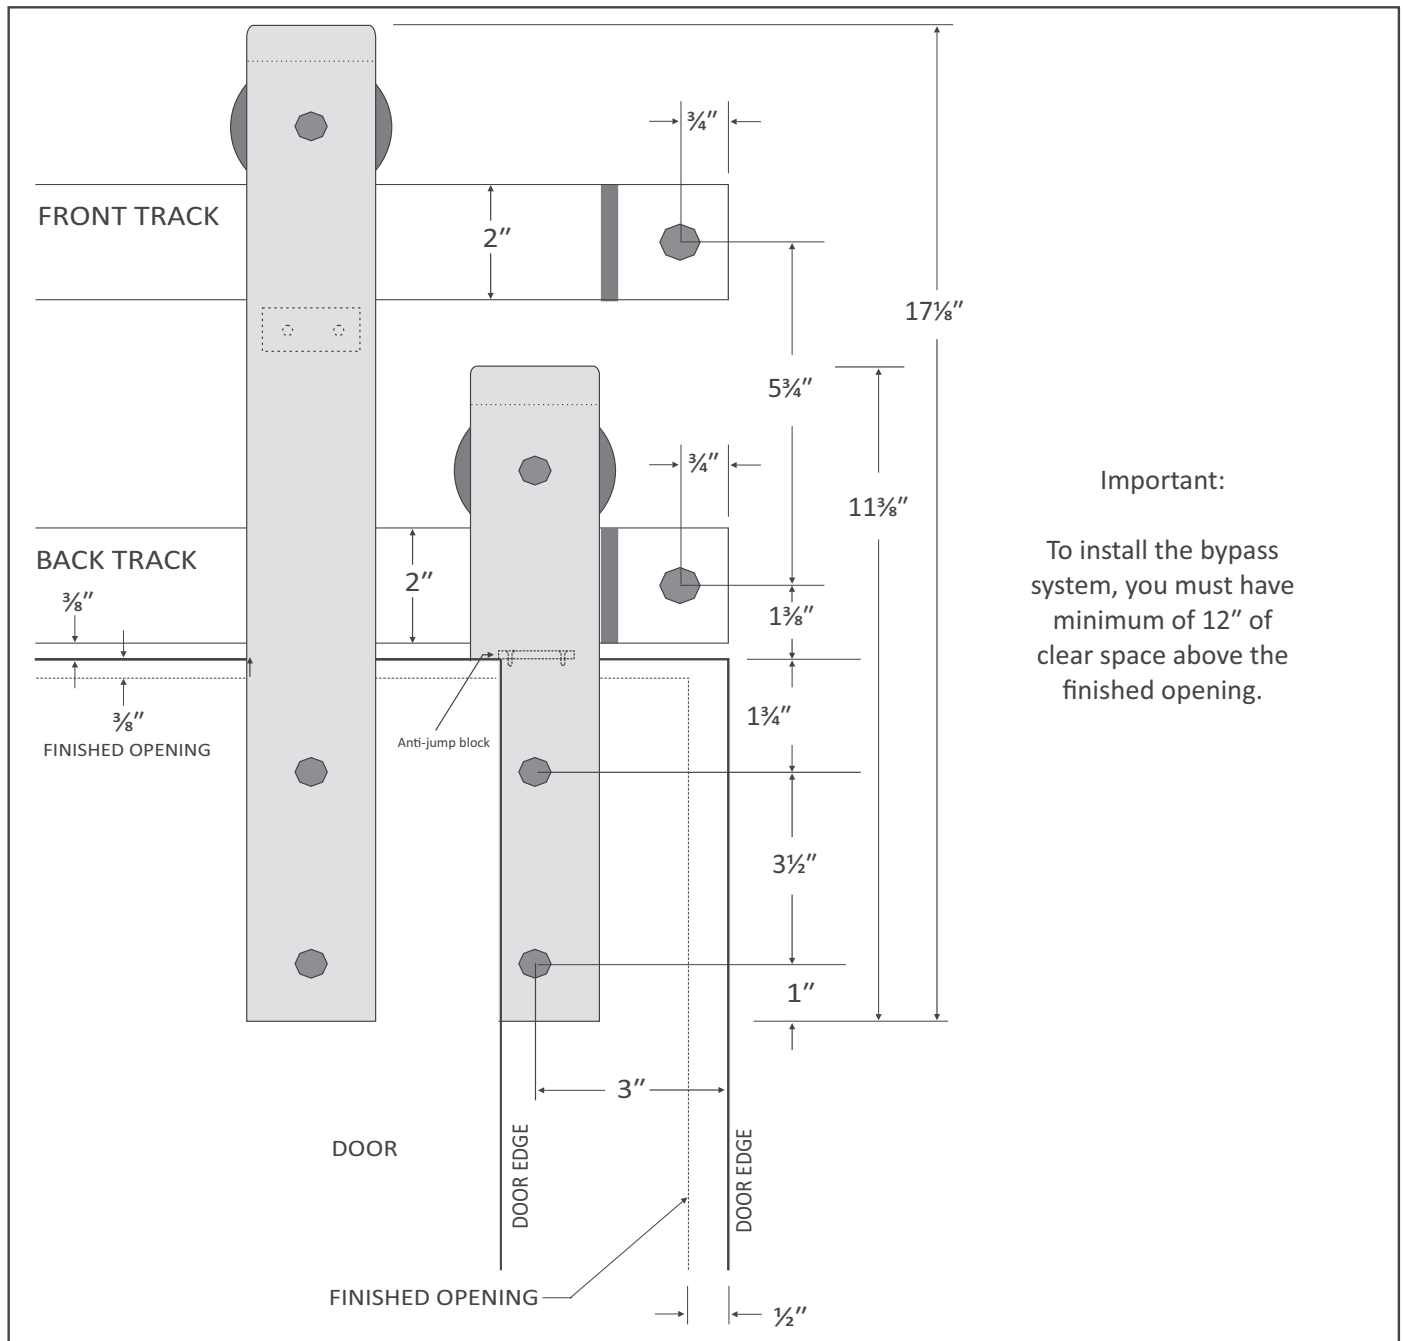

### Important:


To install the bypass system, you must have minimum of 12" of clear space above the finished opening.

### Optional Accessories

Wall Extension Bolts Set  
Includes 6 lag bolts and 6 wall spacers


	1 1/2" Door	1 3/4" Door	2 1/4" Door
3/8" Extension	Part #60013E-*	Part #60013EX-*	Part #60013EXX-*
3/4" Extension	Part #60014E-*	Part #60014EX-*	Part #60014EXX-*
1 1/4" Extension	Part #60015E-*	Part #60015EX-*	Part #60015EXX-*

Track Connecting Plate  
1 each  
Part #6001C-\*

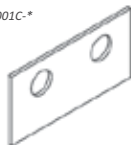



Door Guide "U"  
1 set  
Includes 2 "U" guides, 2 wood screws  
and 1 felt pad  
Part #6001U-\*

**NOTE:** Use the provided T-guide screws for U-guide installation

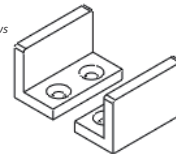

Sidewall Guide Bracket  
1 each  
Includes 1 bracket,  
4 machine screws, 4 nuts  
and 1 felt pad  
Part #6001SW-\*

**NOTE:** Use the provided T-guide screws for sidewall guide installation.

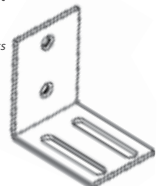


Soft Stop  
1 set  
Includes 2 Soft Stop mechanisms,  
2 triggers and 4 wood screws  
Part #6001SOFT11 (4'-7" track)  
Part #6001SOFT17 (8'+ track)



Goldberg Brothers, Inc.  
10488 W Centennial Rd, Suite 100  
Littleton, CO 80127  
(303) 321-1099



\* Indicates that the related part is available in various colors

# Pull Handles

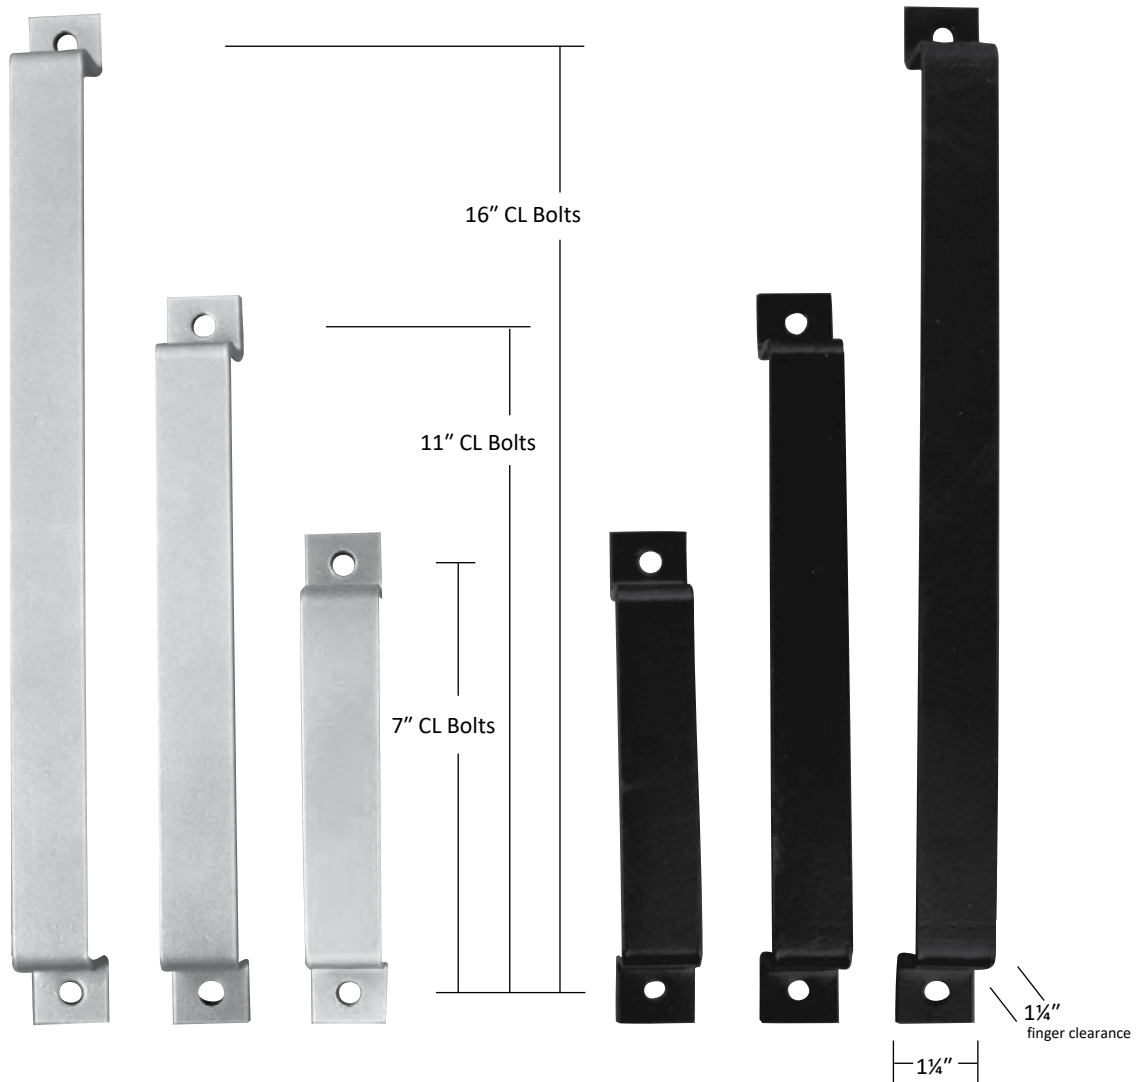

7" Pull Handle	1" 6001PH307-*	1 3/4" 6001PH407-*	2 1/4" 6001PH507-*	Universal 6001PH007-*
11" Pull Handle	1" 6001PH311-*	1 3/4" 6001PH411-*	2 1/4" 6001PH511-*	Universal 6001PH011-*
16" Pull Handle	1" 6001PH316-*	1 3/4" 6001PH416-*	2 1/4" 6001PH516-*	Universal 6001PH016-*


# Flush Pulls

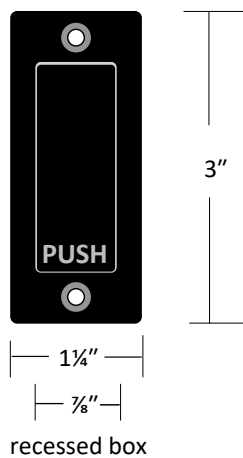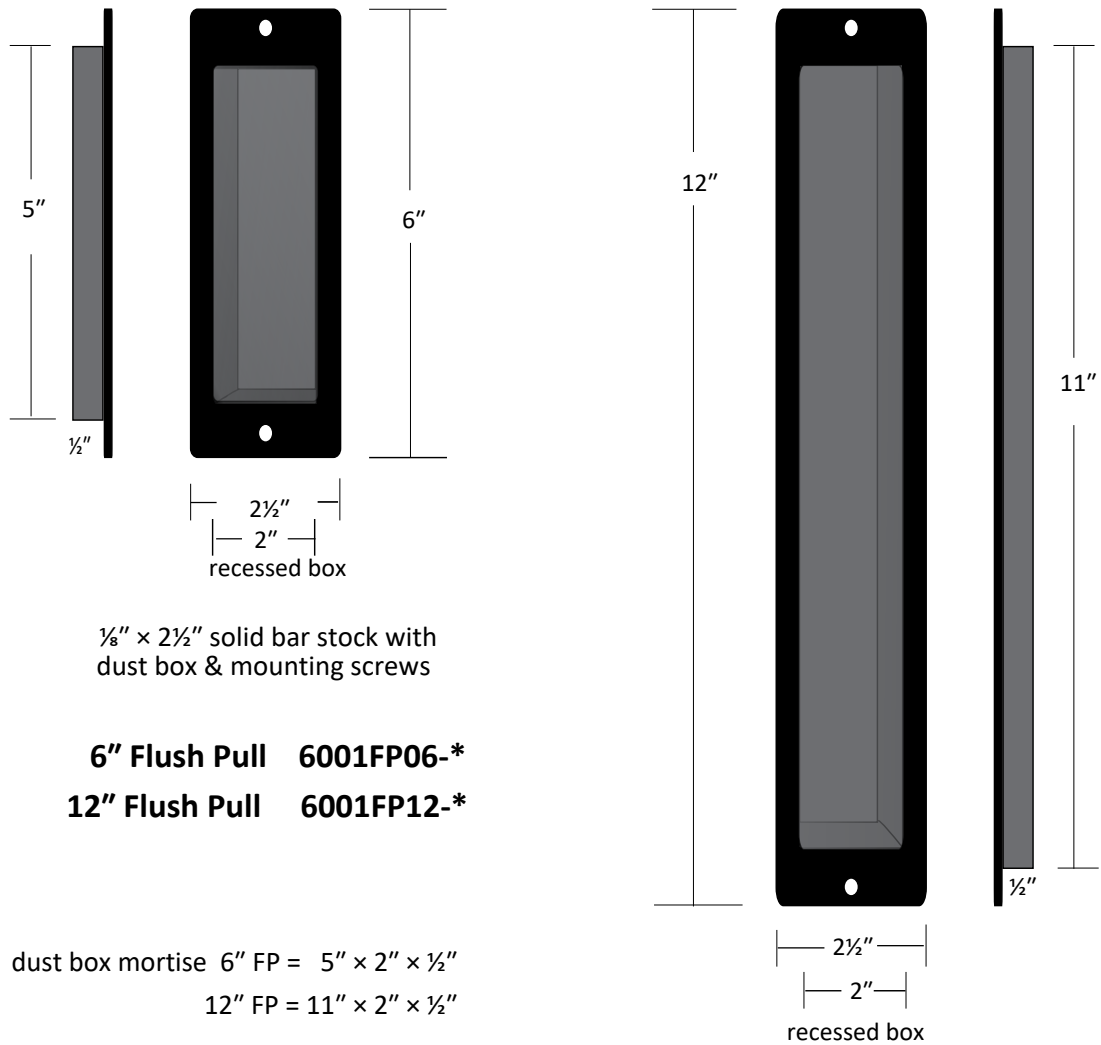

## Privacy Latch

**6001PL-\***

$\frac{3}{16}" \times 1\frac{1}{4}"$  solid bar stock  
includes jamb strike & screws

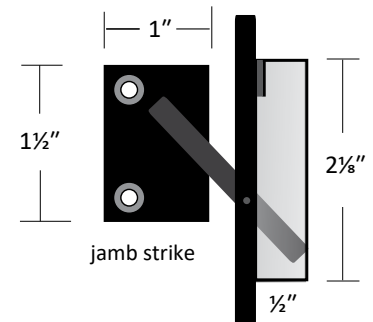

When door is on the outside of the room then the latch mounts to the door.  
When door is on the inside of the room then the latch mounts to the wall.

dust box mortise PL =  $2\frac{1}{8}" \times \frac{7}{8}" \times \frac{1}{2}"$

Replace the \* in the part's catalog number with the code letter for the desired color when ordering. See color codes on inside back cover.



**GOLDBERG BROTHERS**

# **BARN DOOR EDGE WRAP KITS**

Wrap an existing door or build your own! Almost any type of wood can become a beautiful sliding door or shutter panel with Goldberg Brothers Barn Door Edge Wrap. Choose an assortment of individual boards, a set of tongue-and-groove or shiplap slats, decoratively carved wood, or even a reclaimed barn wood panel. Then wrap it with our distinctive, powder-coated steel channels to add a finishing touch to your home.

- Turns almost any wood or composite material into a finished sliding barn door
- Adds rigidity to your door to reduce warping
- Protects the edges of the door from wear and tear
- Available in 16 powder coat colors or raw steel
- Available for door or panel thicknesses from  $\frac{3}{4}$ " up to  $2\frac{1}{4}$ "
- Sold in 4 common sizes up to 8'0"×8'0"
- Easy to cut down to your specific door size
- Factory-built custom sizes available by special order
- Curved door kits available by special order



Each kit includes:

- 4 edge wrap channels
- all necessary mounting screws
- 1 adjustable U guide
- a set of shims\* for use with Goldberg Brothers Standard, MP, or Shutter Series straight strap roller hangers (sold separately)

\*Shims can also be used as drilling templates for mounting roller hangers to the door.

*Some images are not to scale.*

# WARRANTY

## 1-YEAR MANUFACTURER'S WARRANTY

Goldberg Brothers barn door hardware products come with a one-year manufacturer's warranty for defective parts under normal installation and use. Warranty is subject to repair or replacement of defective part(s) at manufacturer's discretion and does not include installation costs. Goldberg Brothers does not warrant the loss of finish at points where roller is in contact with track. Goldberg Brothers barn door hardware is sold as a rustic-finished hardware and Goldberg Brothers does not warrant the imperfections seen through the finish in the steel parts. It is part of the look.

With the exception of our stainless steel products, Goldberg Brothers does not warrant any products installed and used outdoors or where they are exposed to weather, running water or water condensation. Under these conditions, rust and other damage will naturally occur.

This warranty does not include loss or defects caused by elements outside the control of Goldberg Brothers, Inc., such as natural disasters, weather, fire, water leakage, abuse, improper installation, or anything else deemed out of the control of Goldberg Brothers, Inc.


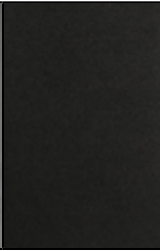













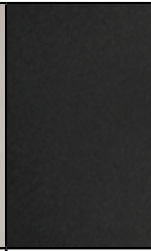



**GOLDBERG BROTHERS**  
BARN DOOR HARDWARE

# STANDARD SERIES HARDWARE COLORS

Products with SKUs that end with a dash and asterisk -\* are available in multiple colors.

Replace the asterisk \* with the desired color code.

ECONOMY COLORS			STANDARD COLORS			UPGRADE COLORS	
							
RAW STEEL (not coated)	MATTE BLACK TEXTURE	BRONZE TEXTURE	BLACK	SILVER METALLIC	ARCH BRONZE	RUSTIC BROWN	JACOB'S GOLD
Color code "0"	Color code "MB"	Color code "BZ"	Color code "6"	Color code "1"	Color code "8"	Color code "4"	Color code "G"

DESIGNER COLORS								
								
PC CHROME	REGAL RED	ROCKET WHITE	BLUE RIBBON	FLINT GRAY TEXTURE	DARK GRAY TEXTURE	WHITE BRONZE TEXTURE	SILVER VEIN	COPPER VEIN

Use color code "D" and write the name of the designer color on the order form.

## PLEASE NOTE:

- Due to variations in printers and display screens, all color representations above are approximate. Color sample cards are available. Ask your Goldberg Brothers sales representative for details.
- Raw steel does not have a protective coating. Rusting will occur.
- Steel components used with Matte Black Texture and Bronze Texture may have minor surface blemishes acquired during the manufacturing process. These superficial variations will be hidden by the powder coating and do not affect product performance.



## **GOLDBERG BROTHERS, INC.**

- **Standard Series barn door hardware**
- **MP Series barn door hardware**
- **Stainless Steel Series barn door hardware**
- **Shutter Series barn door hardware**
- **Barn door hardware accessories**
- **Movie-themed home decor products**
- **Theater projection ports and film reels**
- **Custom metal fabrication**

10488 W. Centennial Rd., Suite 100

Littleton, CO 80127 USA

Phone (303) 321-1099 • Fax (303) 388-0749  
goldbergbrothers.com • goldbergbarntack.com