
QUICK-FIX PRESTO PATCH®

UV LIGHT ACTIVATED FIBERGLASS REINFORCED SELF-ADHESIVE REPAIR PATCH

PREMIUM REPAIR PATCH FOR TRUCK AND TRAILER REPAIRS

- Extremely durable fiberglass reinforced polyester/plastic
- Can be formed around grooves and corners
- Can be drilled, tapped, sanded or painted in less than an hour
- Will not rot or rust
- Resistant against many chemicals, solvents and oils
- Weather and UV resistant
- Temp resistant from -40°C to 200°C
- Bonds to all surfaces except polypropylene*
- No shrinkage or expansion during the application or after curing
- Fast curing
- Available in 2"x3", 6"x9" and 9"x12" sizes

P/N	DESCRIPTION
982-00601	2x3 UV Light Activated Fiberglass Patch with Countertop Display, 48 individual patches
982-00601A	2x3 UV Light Activated Fiberglass Patch, 6 each
982-00602	6x9 UV Light Activated Fiberglass Patch, 12 each
982-00602A	6x9 UV Light Activated Fiberglass Patch, 2 each
982-00603	9x12 UV Light Activated Fiberglass Patch, 6 each
982-00603A	9x12 UV Light Activated Fiberglass Patch, 2 each
982-00600	UV Flashlight

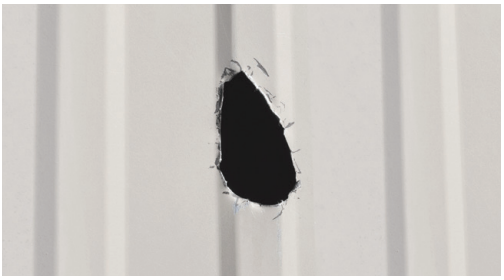

BEFORE: Fix almost any hard surface in minutes.



AFTER PATCH REPAIR: Cures rock hard and resistant against many chemicals, solvents, and oils.

**Not for use on pressure vessels*

APPLYING THE QUICK-FIX PRESTO PATCH® IS EASY



1. Surface should be clean, dry and free of any contaminates. Cut patch into any size without exposing to UV/ sunlight. Place remaining material back in foil protective bag.



2. Remove white backing tape to expose the sticky resin. Apply patch to repair area with sticky side down and press firmly to make sure the patch seals the entire area.



3. Remove the film backing on top side and expose to light. Curing time depends on UV intensity, between 5 - 50 minutes or use a UV light indoors with a minimum of 51 lumens.