


Skaksel

System Installation Guide

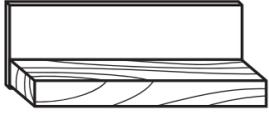

Tools You'll Need

	Drill	
	1/4" Diameter Drill Bit	
	Measuring Tape	
REQUIRED TOOLS	Level	
	Pencil	
	Phillips Screwdriver	

OPTIONAL TOOLS	Wall anchors	
	3/4" Countersink Bit	
	3/16" Diameter Drill Bit	

What's Included

1x	Finished Shelf	
1x	Shelf Bracket	
2x	Set Screw	



Still need help? Speak with a Shelfologist today or see back of installation guide for further motivational support.

CALL A SHEFLOGIST
949.244.1083


CHAT WITH A SHEFLOGIST
hello@shelfology.com

Get more radical! Visit us online at www.shelfology.com for more rad products, tips space transforming inspiration!




1

Position bracket on the wall with the pre-drilled holes and blade along the bottom edge. Align screw holes with as many studs as possible. Use drill to screw in either far left or right hole.

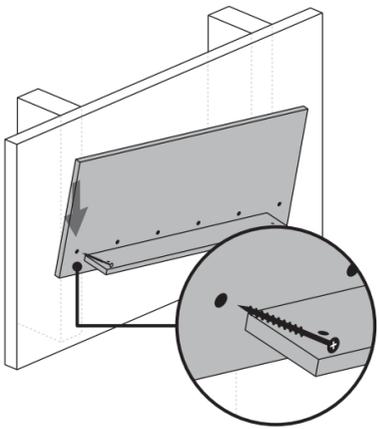


2

Level bracket and set second screw in opposite end screw hole with your drill. If bracket screw holes miss an available stud see **Bro Tip #1** below. If you've already installed blocking behind the length of the backbar, skip to Step 5.

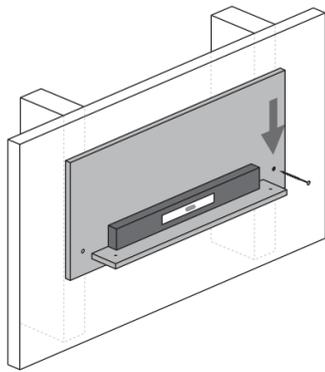


3

While bracket is mounted to wall, mark every remaining empty screw hole with a pencil.

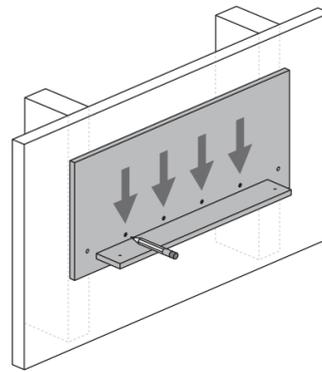


4

Remove bracket from wall to install wall anchors in each marked location that is not on a wall stud. Pre-drill each wall anchor location with 1/4" drill bit to avoid breaking wall anchors.

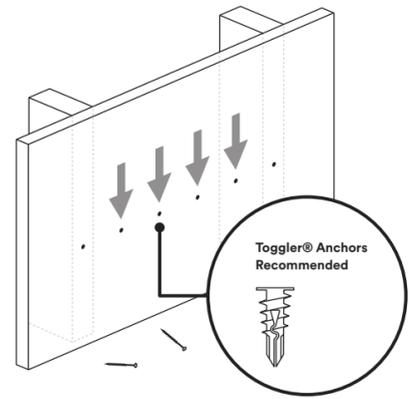


5

Replace bracket, drill screw into each screw hole and confirm bracket is correctly secured to the wall.* See **Bro Tip #2** below.

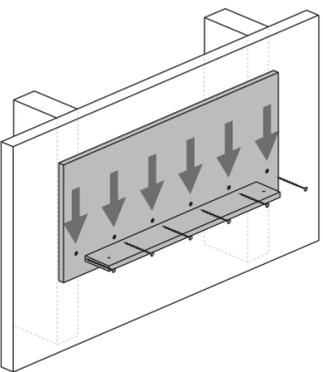


6

Slide wood shelf onto bracket.

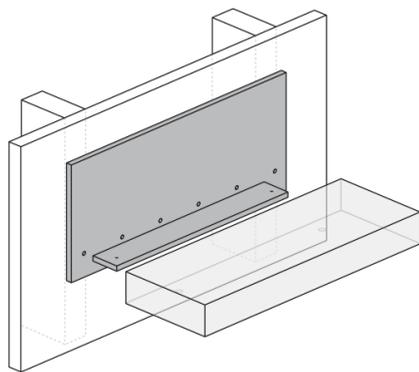

7



Re-install set screws with phillips screwdriver. **Do not use power drill for set screw installation.**

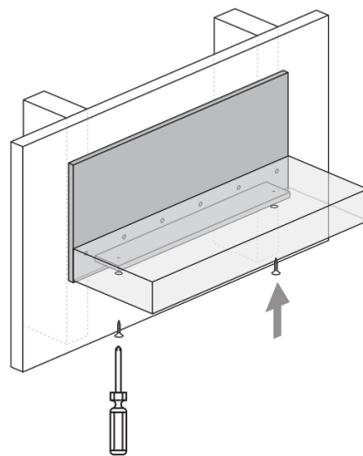

8

Gently place your D&D box collection on shelf.

High fives, you did it! Go share your rad shelf on Instagram: @shelfology #radshelfie

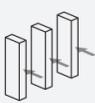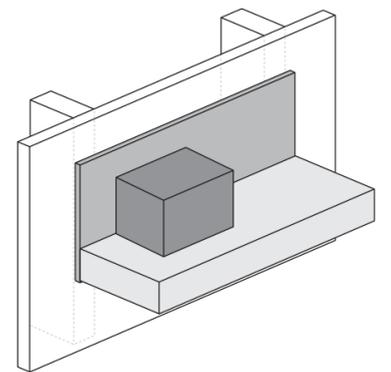

Bro Tip #1 The more studs you drill into, the better. Utilize all studs and blocking available. If a stud is not utilized:



1.1 Mark a new hole on bracket back bar on center of stud.







1.2 Drill through marked hole location on bracket back bar with 3/16" bit.



1.3 Partially drill the same hole with a 3/4" countersink bit.



1.4 Insert and drill screw into stud.

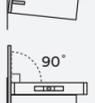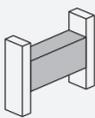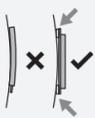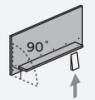

Bro Tip #2 If your wall is not straight, use shims to ensure your bracket is installed straight across the wall face and square to the wall. The shelf and bracket will properly mate **only** if the bracket is straight and plum. Make it plum, yo!

Bro Tip #3 Blocking refers to pieces of wood or other material that run between wall studs in order to provide support and attachment sites for the bracket backbar.

Bro Tip #4 Your shelf should be level from front edge to the wall. If the shelf is still sagging, use shims to adjust the level of the bracket. If you are still unable to fix the sag, call a Shelfologist! 949.244.1083



***WARNING:** Shelf hardware must be correctly installed into studs or wall blocking. Failure to do so may result in sagging shelves, falling objects, or serious injury.

**YOU
GOT
THIS**


Shelfology®