


Models

58054, 59000, 59003, 59004, 59005, 59008, 59009, 59010, 59013, 59014, 59015, 59018, 59019, 59020, 59023, 59024, 59025, 59028, 59029, 59030, 59033, 59034, 59035, 59038, 59039, 59040, 59043, 59044, 59100, 59103, 59104, 59105, 59108, 59109, 59110, 59113, 59114, 59163, 59164, 59165, 59178, 59179, 59180, 59181, 59182, 59183, 59184, 59185, 59186

Note: To order replacement parts specify the **Model #** and **Serial #** of your machine.

Dynorbital-Spirit® Complete Assembly

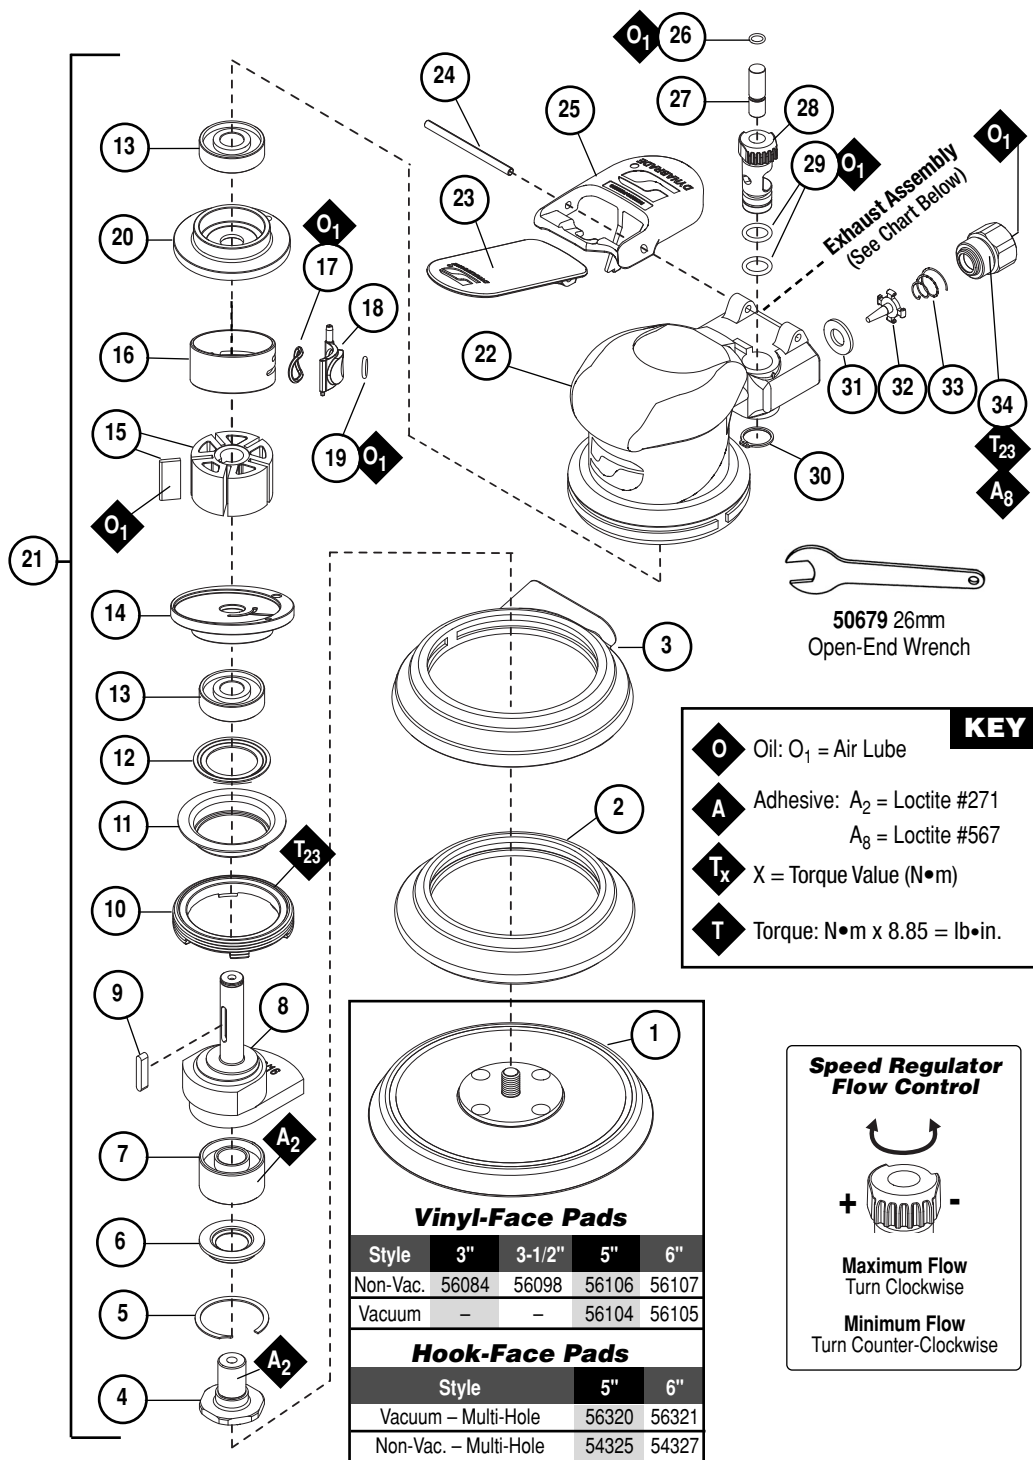

ITEM	P/N	DESCRIPTION	QTY.
1		BACK-UP PADS: (SEE BELOW)	
2	54458 56051	NON-VACUUM SHROUD: 3" & 3-1/2" DIAMETER 5" & 6" DIAMETER	1
3	57084 69362 69363	VACUUM SHROUD: 3" & 3-1/2" DIAMETER 5" DIAMETER 6" DIAMETER	1
4	57069	BALANCER SHAFT	1
5	95630	SNAP RING	1
6	59084	V-SEAL	1
7	56052	BEARING	1
8	-	MOTOR SHAFT BALANCER: Orbit 3" 3-1/2" 5" 6" 3/8" 59122 59070 59071 59072 3/16" 59120 59060 59061 59062 3/32" 59121 59065 59066 59067	1
9	56047	KEY	1
10	59058	LOCK RING	1
11	59057	"TOP HAT" SEAL	1
12	59083	FELT	1
13	58368	BEARING	2
14	59137	FRONT BEARING PLATE	1
15	57113	ROTOR/BLADE SET	1
16	59134	CYLINDER	1
17	95529	O-RING	1
18	59133	CYLINDER SLEEVE ADAPTER	1
19	01024	O-RING	1
20	59138	REAR BEARING PLATE	1
21	-	DROP IN MOTOR ASSEMBLY (SEE CHART - PAGE 4)	1
22	-	HOUSING (SEE CHART - PAGE 4)	1
23	69356 69360 69357	THROTTLE LEVER: 3/8" DIAMETER 3/16" DIAMETER 3/32" DIAMETER	1
24	94590	PIN	1
25	57041	COMFORT PLATFORM	1
26	98459	O-RING	1
27	58363	VALVE STEM	1
28	59075	SPEED REGULATOR	1
29	01025	O-RING	2
30	95697	RETAINING RING	1
31	01464	SEAL	1
32	58365	TIP VALVE	1
33	01468	SPRING	1
34	01494	INLET BUSHING	1
35	69364	SHROUD ADAPTER (5" & 6")	1
36	57083	VACUUM ADAPTER	1
37	96167	DOWEL PIN	1
38	57066	MUFFLER BODY	1
39	95526	O-RING	1
40	59088	VAC NOZZLE	1
41	57067	VAC TUBE	1
42	57093	VACUUM ADAPTER	1
43	56027	MUFFLER INSERT (AR)	1
44	69359	MUFFLER CAP	1

AR - As Required

Exhaust Assemblies

Self Generated Vacuum

Non-Vacuum

Central Vacuum

