

Models:


**10280, 10281, 10282,
10283, 10285, 10287,
10290, 10291, 10292**

Index Key

No.	Part #	Description
1	Screw (4)	
	96539	Models: 10280-85, 90-92
	96080	Model: 10287 Only
2	96538	Lock Washer (8)
3	Pads:	See Chart
4	95344	Screw
5	95935	Washer
6	54552	Bearing
7	57895	Pad Base (Standard)
	57875	Pad Base (w/Clips)
8	57896	Felt Seal
9	94590	Pin (2)
10	57899	Spring (2)
11	57834	Rubber Grip (2)
12	57898	Clip (2)
13	Shaft Balancer	
	57892	Models: 10280-85, 90-91
	57894	Model: 10287
14	56047	Key
15	56046	Lock Ring
16	59057	Front Bearing Seal
17	59083	Felt Washer
18	58368	Bearing (2)
19	57893	Front Bearing Plate
20	57113	Blade (5)/Rotor Set
21	59051	Cylinder (Incl. 01024 O-Ring)
22	01024	O-Ring
23	57891	Rear Bearing Plate
24	98463	Retaining Ring
25	57890	Isolator Post (4)
26	Housing:	See Chart
27	96539	Screw (4)
28	57888	Throttle Lever
29	94590	Pin
30	98459	O-Ring
31	58363	Valve Stem
32	59075	Speed Regulator
33	01025	O-Ring (2)
34	95697	Retaining Ring
35	01464	Seal
36	58365	Tip Valve
37	01468	Spring
38	01494	Inlet Bushing
39	57897	Vacuum Tube
40	96540	Vacuum Port Cover
41	57041	Comfort Platform

Dynabug® II Complete Assembly

HOUSING ASSEMBLY #	MODEL NUMBER
10220	10280
10221	10281
10222	10282
10223	10283
10225	10285
10227	10287
10230	10290
10231	10291
10232	10292

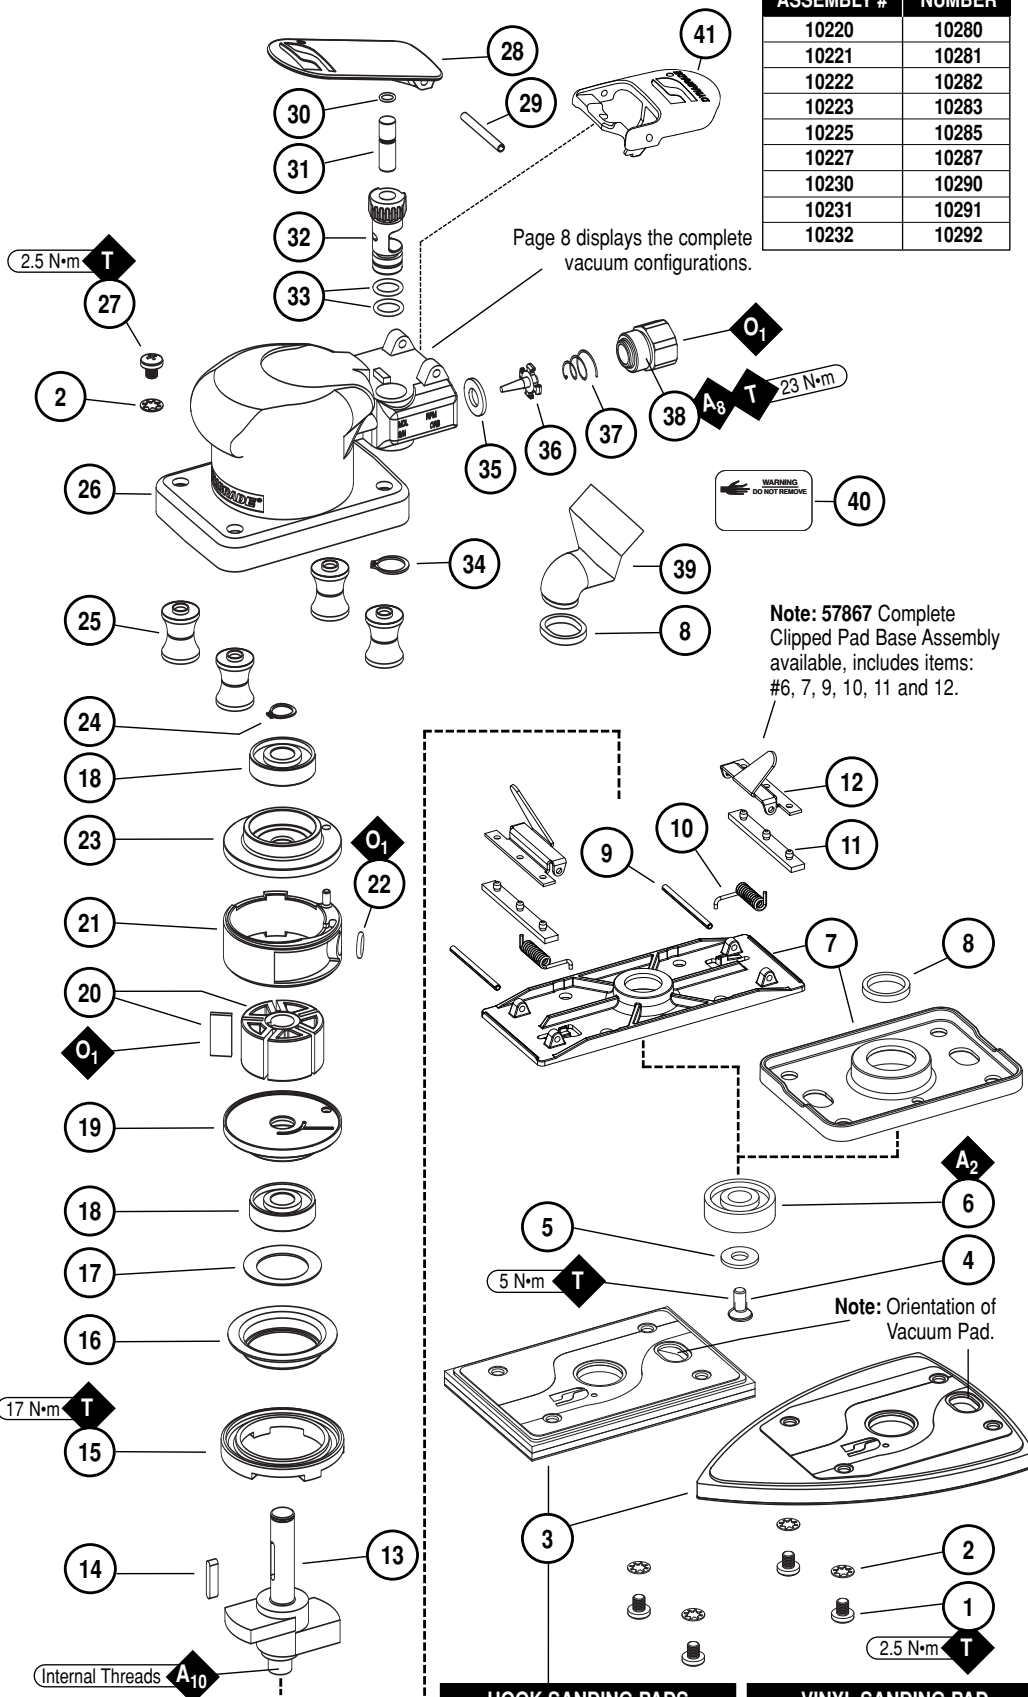

KEY	
O	Oil: O ₁ = Air Lube
A	Adhesive: A ₂ = Loctite #271 A ₈ = Loctite #567 A ₁₀ = Loctite #243
T	Torque: N·m x 8.85 = In. - lbs.

HOOK SANDING PADS	
Model No.	Pad No.
10280	56315
10281	56354
10282	56316
10283	56317
10285	56319
10290	56323
10292	56326

VINYL SANDING PAD	
Model No.	Pad No.
10287	56354
Note: For use with clipped pad base, 68 mm x 175 mm.	
LOOP SANDING PAD	
Model No.	Pad No.
10291	56324